

LIST OF PARTS COMPLETE

-for-

MACHINE NO. 106-7

1002

List of Parts complete
-for-
Machine No. 106-7
Seven Needles, Seven Hooks

No.	Name
*57201	Arm, upper and lower (solid) with 57202
57202	" Oil Tube for oiling 64267
56003	" " " with 52045 for oiling 38458
52045	" " " Packing (braided cotton)
127768	" Rock Shaft
12147	" " " Back Bearing Oil Pad (felt)
64253	" " " Collar with two 624C
624 C 2	" " " " Set Screw
57439	" " " Crank (back) with four 168C
168 C 4	" " " " " Set Screw
38412	" " " " (front) with 443C
127838	" " " " " Pin
443 C	" " " " " Set Screw
12154	" " " Front Bearing Oil Pad (felt)
57207	" Rotary Shaft with 57824
57781	" " " Bushing (intermediate) with 49093 and 64805
49093	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) long
64805	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) short
302 C	Arm Rotary Shaft Bushing (intermediate) Set Screw
54008	" " " Collar with three 1259C
1259 C	" " " " Set Screw
57782	" " " Flanged Bushing (back) with 49093 64805

(braided cotton) short

189 F	3	Arm Rotary Shaft Flanged Dushing (back) Screw
46200		" " " Intermediate Bearing Oil Pad (felt)
57824		" " " Oil Pad (felt)
144 D		" " " Screw
23933		" Side Cover
286 J		" " " Thumb Screw
64259		Balance Wheel (single belt groove) with two 51283C
51283 C	2	" " Set Screw
57211		Cloth Plate (small) with two 57404
57212		" " " Hook
57404	2	" " " Oil Tube
898 F		" " " Screw (large)
691 F	2	" " " Screw (small)
57213		" " " Slide (large)
57214		Cloth Plate (small) Slide (large) complete, Nos. 57213, 57215 and two 725J
57215		Cloth Plate (small) Slide (large) Spring
725 J	2	" " " " " " " Screw
57216		" " " " " (small)
57217		Cloth Plate (small) Slide (small) complete, Nos. 57213, 57218, 57219 and four 665J
57218		Cloth Plate (small) Slide (small) Spring (left)
665 J	2	" " " " " " " " Screw
57219		" " " " " " " (right)
665 J	2	" " " " " " " " S
57438		Cloth Plate (small) complete, Nos. 57211, 57214 and 57217
57200		Cloth Plate (small) 57438 with four 57212
64137		Crank Connecting Rod
60035 C		" " " Ball Screw Stud (upper)

1057 E		"	"	"	"	(upper) Screw
57288		"	"	"	"	Oil Case with 57290, 57291 and four each 185E and 448C
57290						Crank Connecting Rod Oil Case Cap
57291		"	"	"	"	Packing (felt)
185 E	4	"	"	"	"	Screw
448 C	4	"	"	"	"	Set Screw
57223						Face Plate
46111		"	"			Pin
286 J		"	"			Thumb Screw
57224						Feed Bar with two 457C
57225		"	"			Hinge Pin
457 C	2	"	"	"	"	Set Screw
57763						Feed Dog
57293		"	"			Packing .005 in. thick
57294		"	"			.012 in. thick
57321		"	"			.021 in. thick
1255 D		"	"			Screw
*57227		"				Eccentric
*61020		"	"			Body
51061 C	2	"	"			Set Screw
217 E		"	"			Set Screw
7071		"	"	"	"	Washer
57228						Feed Eccentric (adjustable) complete, Nos. 217E, 7071, 50653C, 61020, 57227 and two 51061C
57229						Feed Eccentric Connection
57230		"				Lifting Eccentric with two 624C
57231		"	"	"		Connection
624 C	2	"	"	"		Set Screw
50653 C		"				Regulating Screw

57234		"	"	"	Hinge Pin
57235	2	"	"	"	Bushing
449 C	2	"	"	"	Set Screw
624 C	2	"	"	"	Set Screw
57441	7				Looper (large shank)
57563					Looper Carrier with seven 50370F
157 D		"	"		Screw
57238		"			Eccentric with two 889C
57239		"	"		Connection
57240		"	"	"	Oil Pad (felt)
924 E		"	"	"	Stop Screw
889 C	2	"	"		Set Screw
57868		"			Rock Shaft with two 1147C
57870					Looper Rock Shaft (adjustable) complete, Nos. 57868 and 57869
57242					Looper Rock Shaft Bar
1147 C	2	"	"	"	Set Screw
57838		"	"	"	Connecting Stud with two 1147C
1147 C		"	"	"	Set Screw
57243		"	"	"	Hinge Pin with 860E
860 E		"	"	"	Plug Screw
446 C		"	"	"	Set Screw (left)
446 C		"	"	"	(right)
50370 F	7	"			Set Screw
57244					Needle Bar (hollow)
57761		"	"		57244 with 57762
38456		"	"		Bushing (lower)
1132 E		"	"	"	Set Screw
61042		"	"	"	(upper)

57246	"	"	"	"	Hinge Stud
1520 E	"	"	"	"	" Nut
127777	"	"	"	"	Stud with 209F and two 391E
391 E 2	"	"	"	"	Clamping Screw
57762	"	"	"	"	Clamp with seven 50014C
57250	"	"	"	"	Guard (left) with 50239C
50239 C	"	"	"	"	Set Screw
57423	"	"	"	"	(right) with two 50239C
50239 C 2	"	"	"	"	Set Screw
57251	"	"	"	"	Bar
57252	"	"	"	"	Bracket (left) with 440C
177 C	"	"	"	"	Screw
57253	"	"	"	"	(right) with 440C
177 C	"	"	"	"	Screw
57254	"	"	"	"	Holder
29627	"	"	"	"	Dowel Pin
50154 D 2	"	"	"	"	Screw
440 C 2	"	"	"	"	Set Screw
50014 F 7	"	"	"	"	Set Screw
57255					Presser Bar with 25303
25303	"	"	"	"	Ball size 1/4 in.
61046	"	"	"	"	Bushing (lower)
1133 E	"	"	"	"	Set Screw
38456	"	"	"	"	(upper)
1133 E	"	"	"	"	Set Screw
57257	"	"	"	"	Lifter
57258	"	"	"	"	Hinge Pin
447 C	"	"	"	"	Set Screw
194 D	"	"	"	"	Stop Screw
57259	"	"	"	"	Lifting Bracket with 453C and 1019

57275	"	"	"	Lever with 1904F and 4600
57276	"	"	"	" Connecting Rod
57277	"	"	"	" " Collar with
				two 4650
465 C	2			Presser Bar Lifting Lever Connecting Rod Collar Set
				Screw
24122				Presser Bar Lifting Lever Connecting Rod Spring
45057	"	"	"	" " " " Stop
				Washer
*57273				Presser Bar Lifting Connecting Stud
57279				Presser Bar Lifting Lever Connecting Stud complete,
				Nos. 4500, 1423J, 1904 and 57278
1904				Presser Bar Lifting Lever Connecting Stud Roller
				(roller only)
1423 J				Presser Bar Lifting Lever Connecting Stud Roller
				Cap Screw
453 C				Presser Bar Lifting Lever Connecting Stud Set Screw
57280	"	"	"	" Hook
460 C	"	"	"	" " Set Screw
002 D	"	"	"	" Hinge Screw
38467	"	"		Spring (flat)
38468	"	"	"	Stud
57283	"			Foot 1/4 in. gauge for Plain work
57287	"			" (hinged, adjustable) 1/4 in. gauge for
				gathering
190 J				Presser Foot Screw
574 W				Pressure Regulating Thumb Screw
1339 W	"	"	"	" " Lock Nut
57332				Slack Thread Controller
57183	2	"	"	" Clamp
50004 F		"	"	" Screw
2102	14			Tension Disc
227574	"			Plate with 4500
180 L	"			Position Stud
57113	"			Spring

572573	7	"	Releasing Piece
57262		"	Lever
57267		"	" Connection
193 F		"	" Set Screw
788 D		"	" Hinge Screw
57292	4	"	Pin (large)
54734	3	"	" (small)
127575		"	Plate
301 E	2	"	" Screw
50126 C	7	"	Screw Stud
59534	7	"	Spring
59537	7	"	" Bushing (large)
59538	7	"	" (small)
17547	7	"	Thread Guide
57558			Thread Controller
206 E		"	" Screw
57564	2	"	Eyclet (side of arm)
190 J	2	"	" Screw
57559		"	Take-up
368 E		"	" Adjusting Screw
57272		"	Arm
209 F		"	" Set Screw
57764			Throat Plate for 57763
691 F	2	"	" Screw