




SINGER
141D200A,D300A

SINGER^{*}

D200A & 141D300A





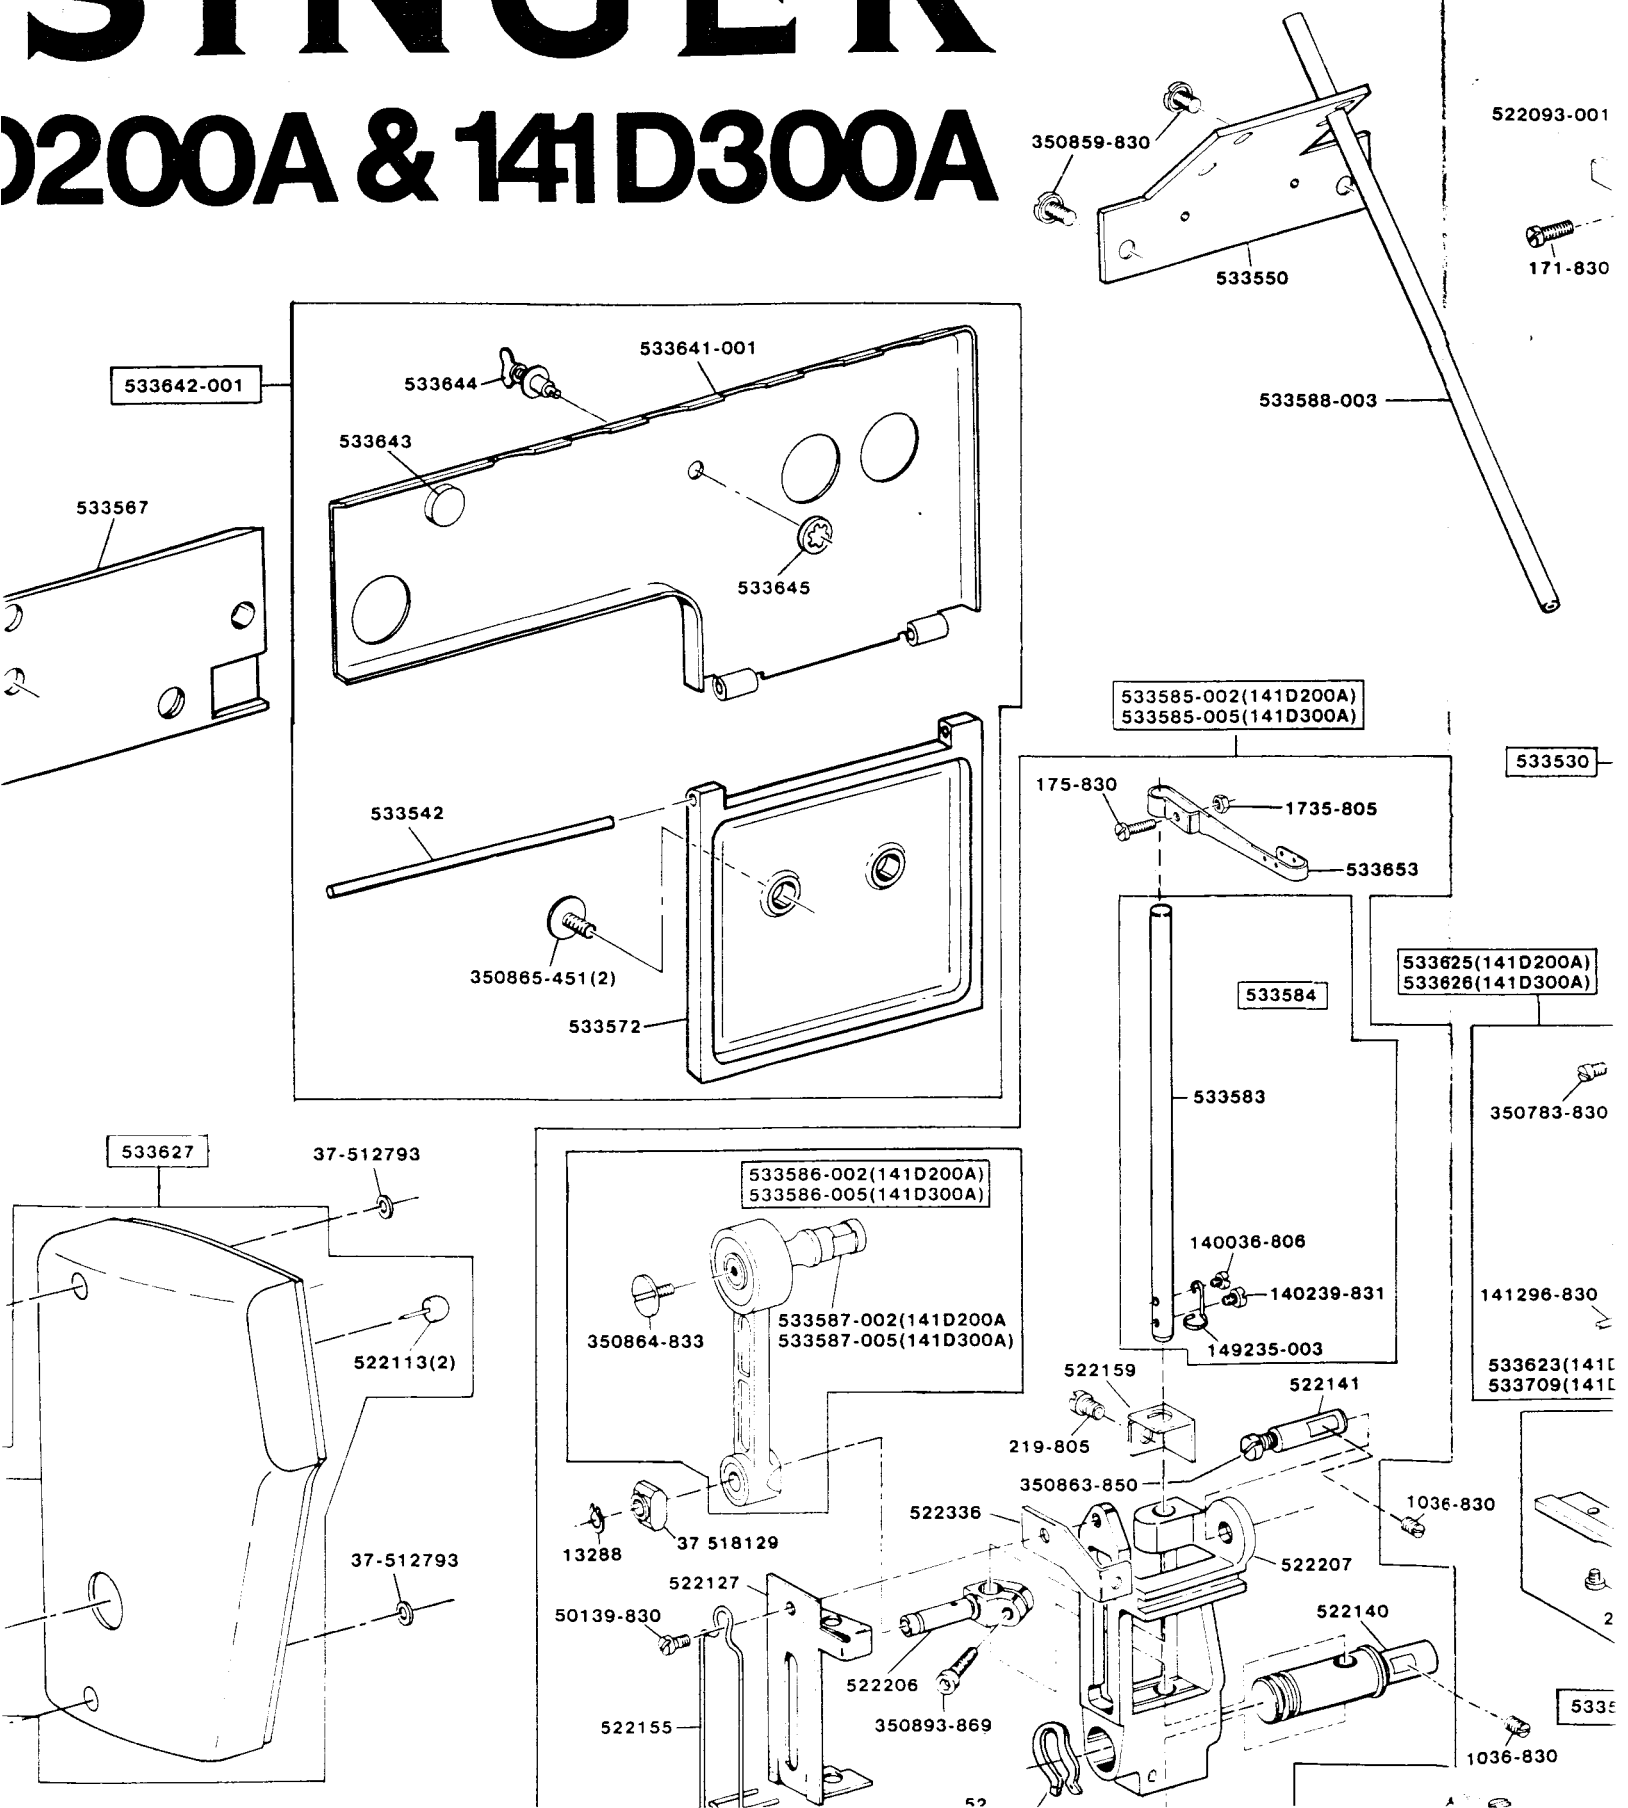


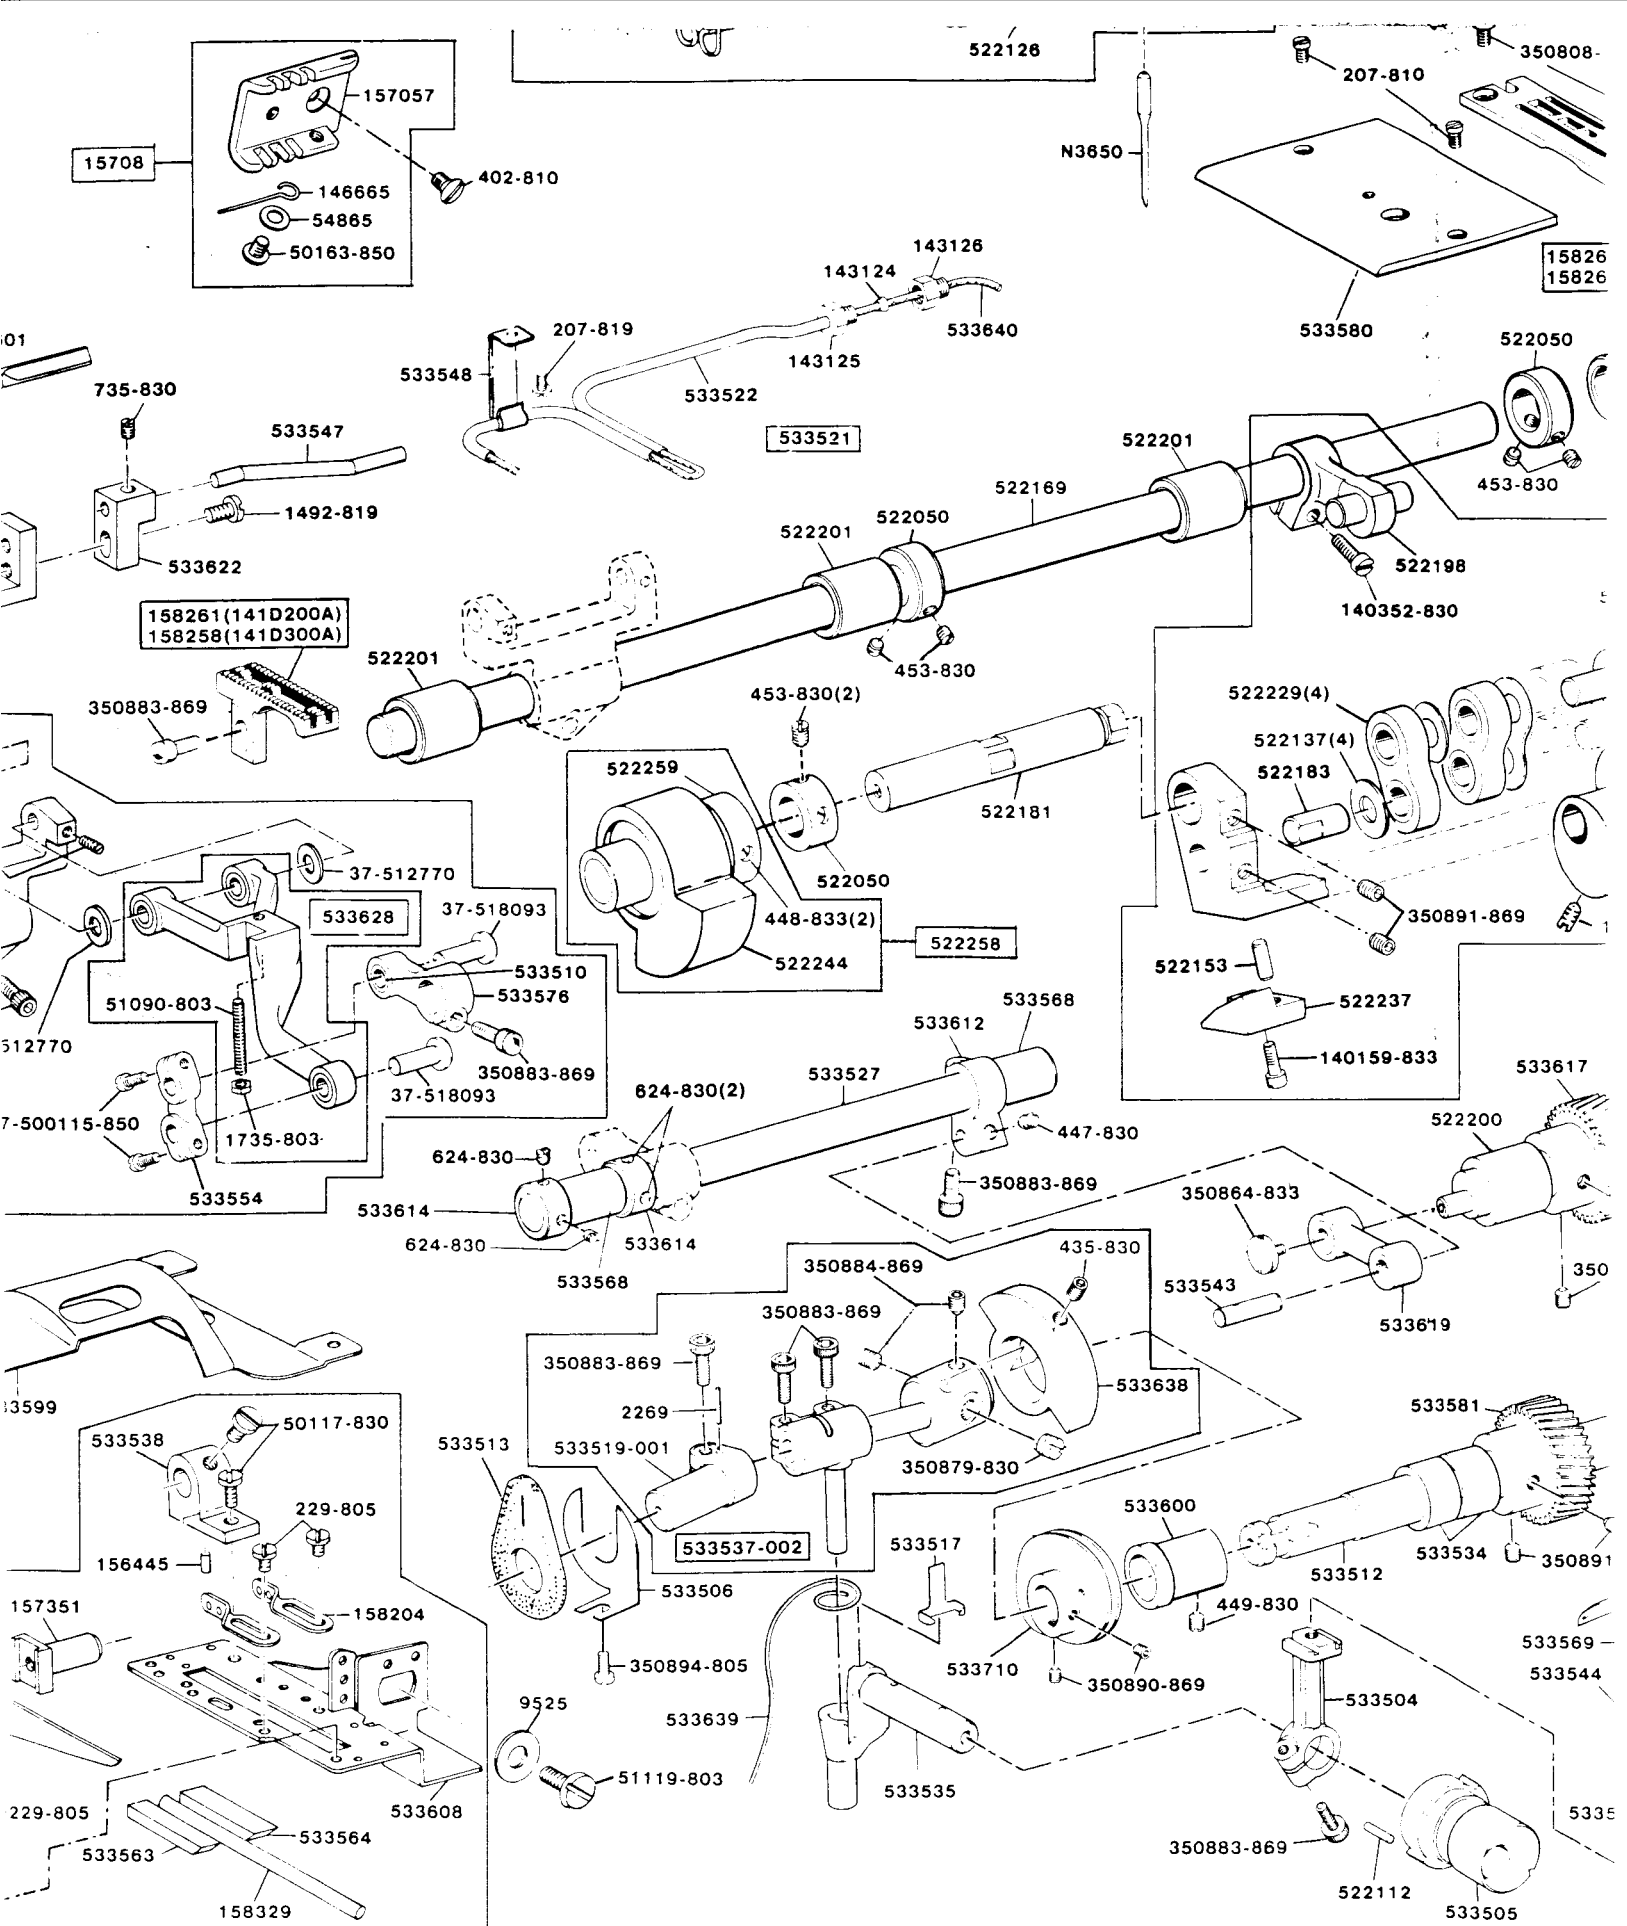

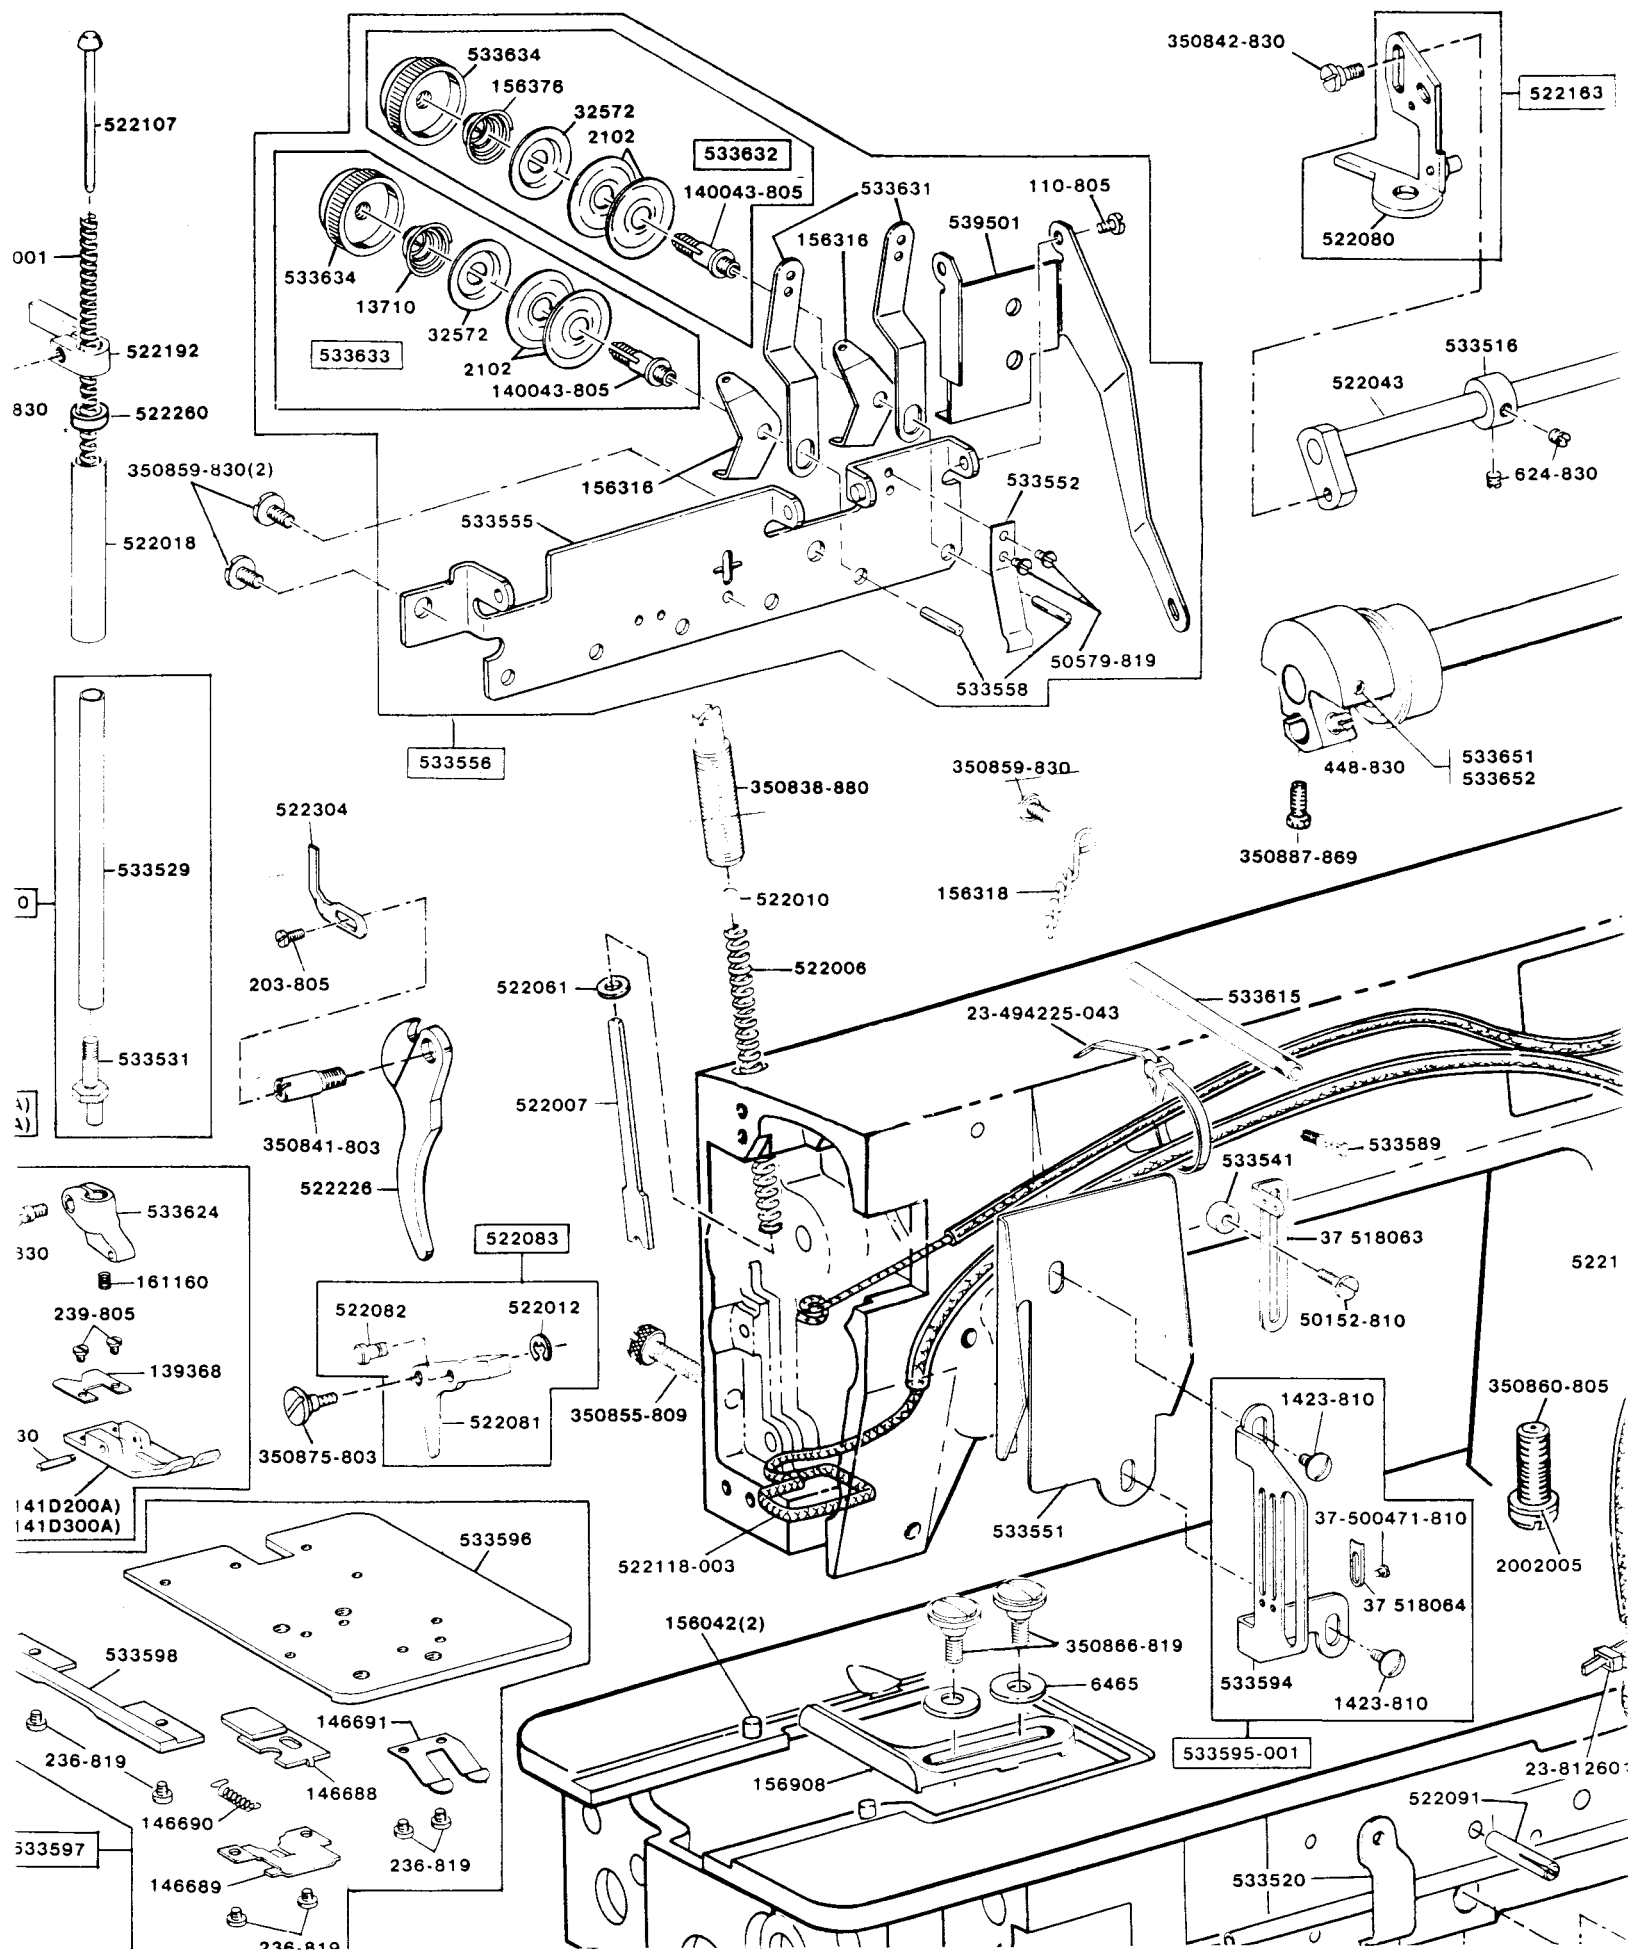

308-806

38262(141D200A)
38260(141D300A)

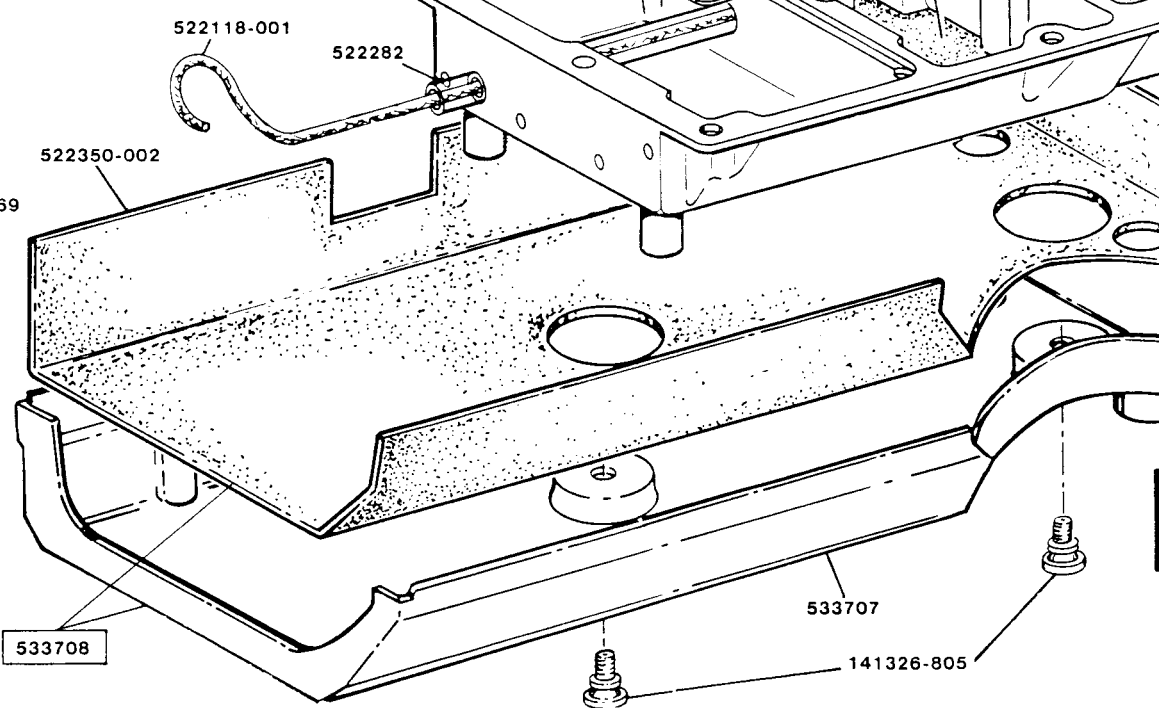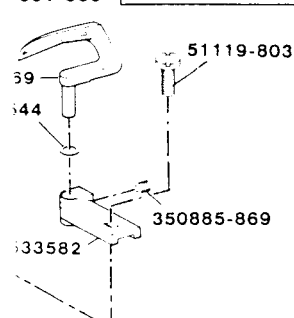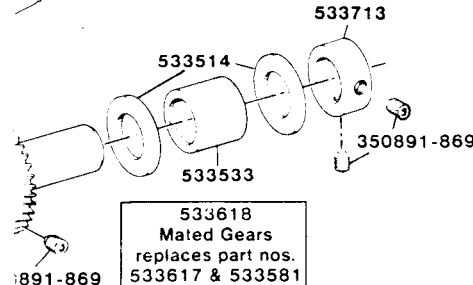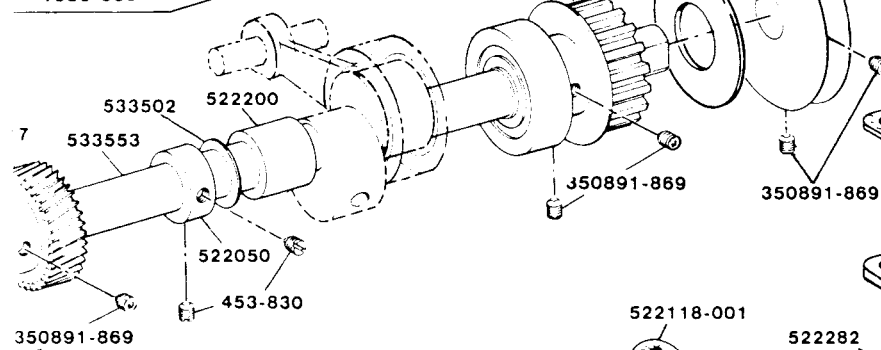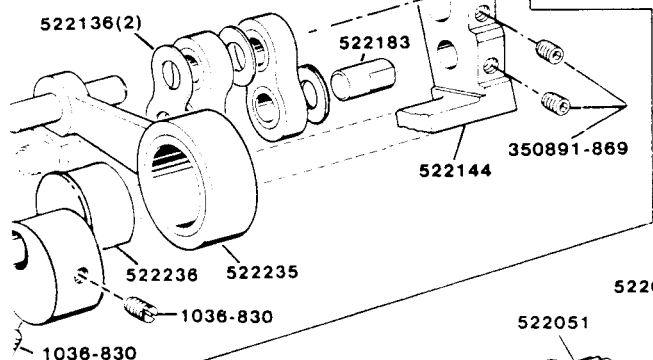

533546

522092
16






522106



533508

205-803



1

533618
Mated Gears
replaces part nos.
533617 & 533581

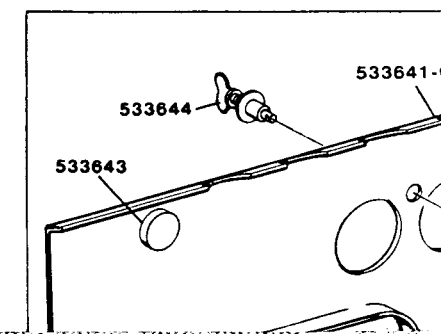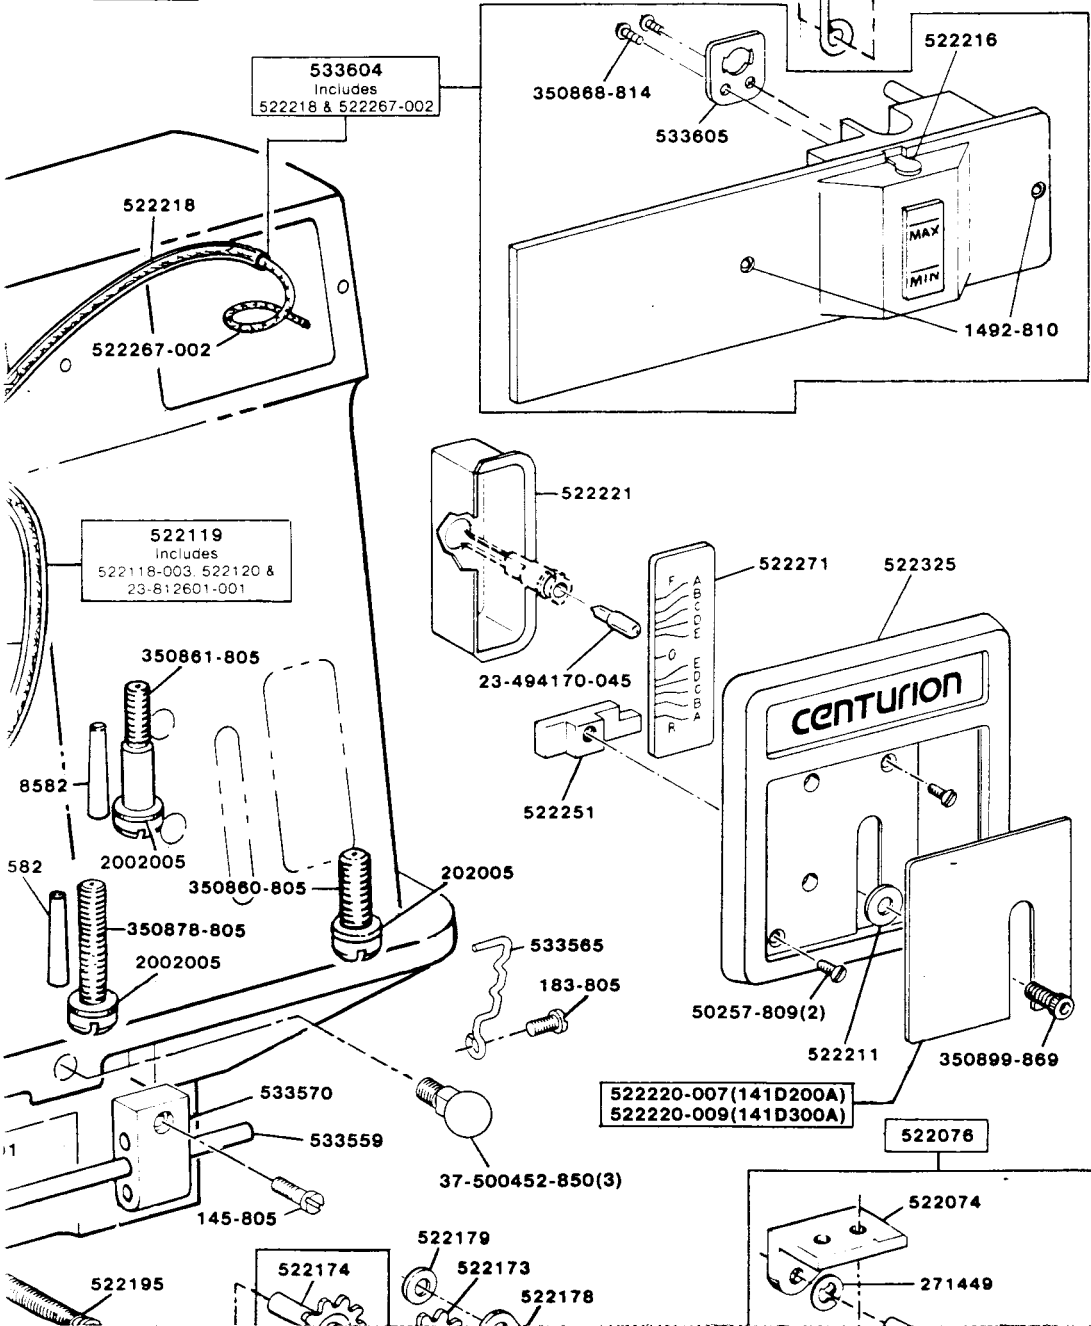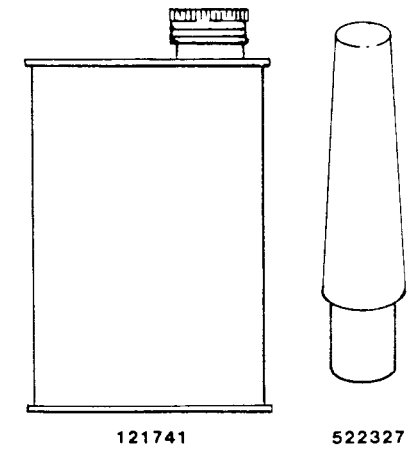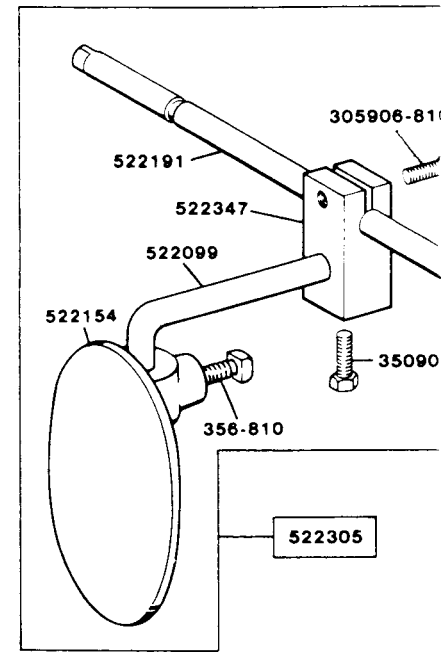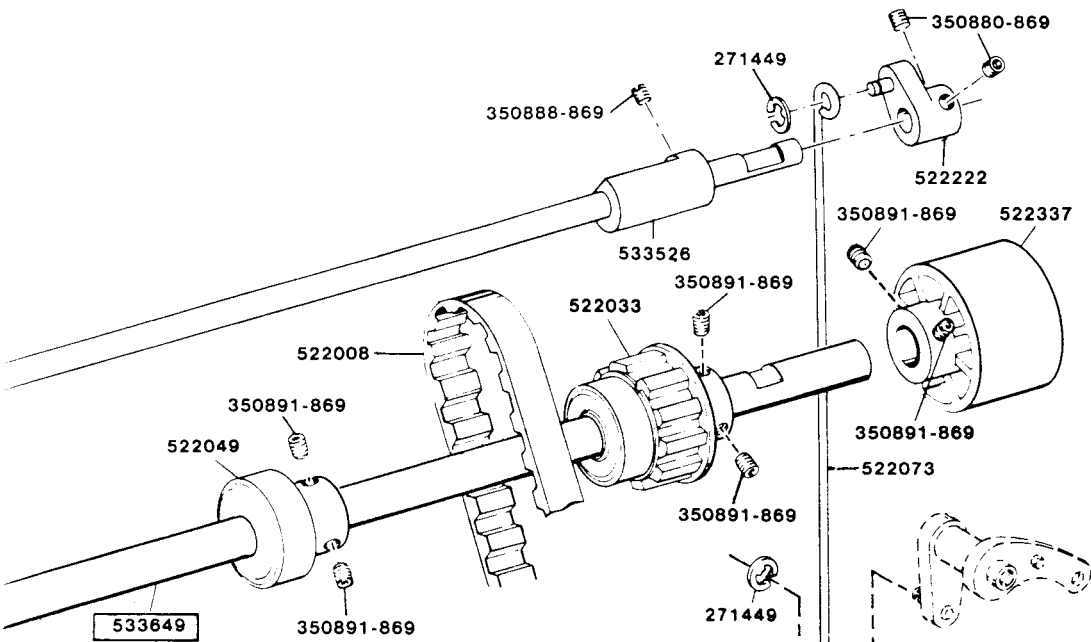

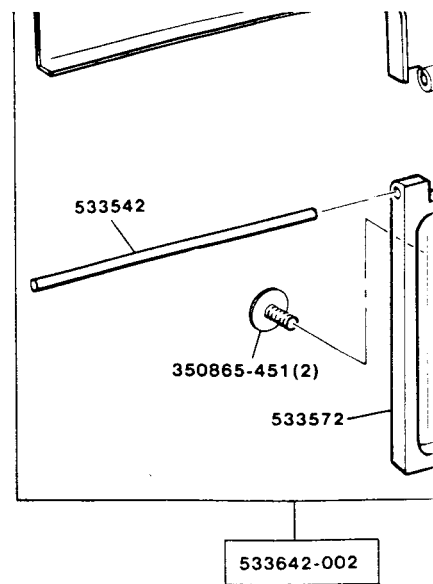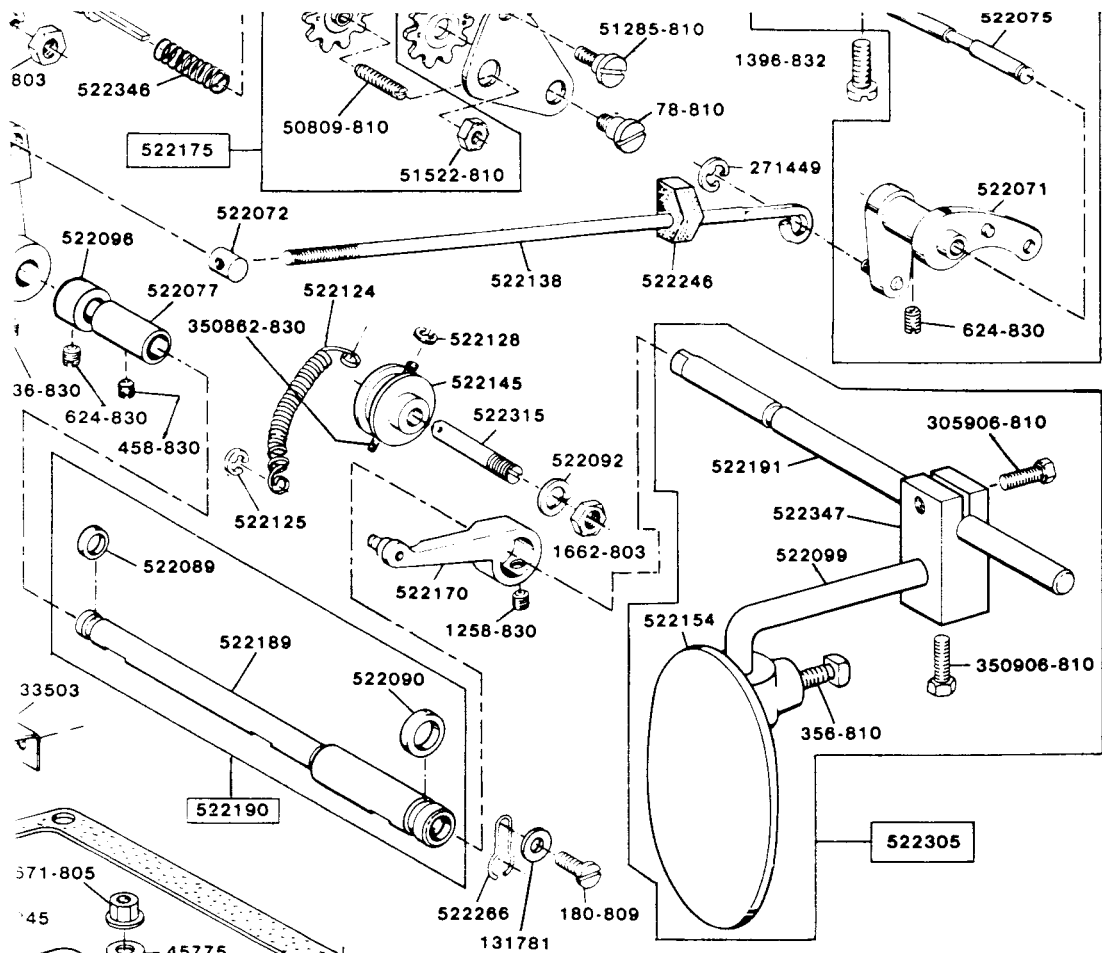




533660-002(142D200A)
533660-003(142D300A)

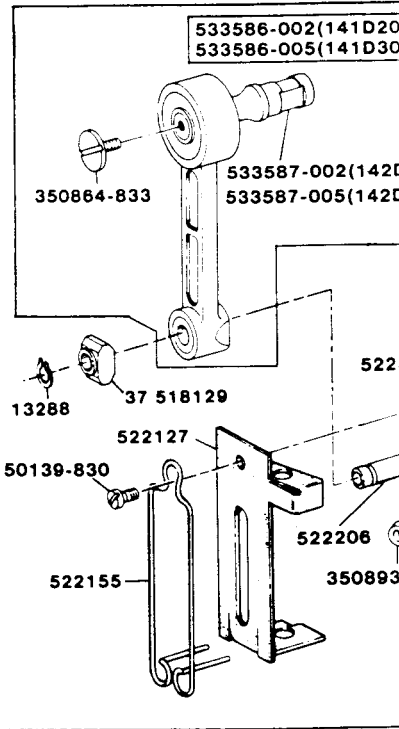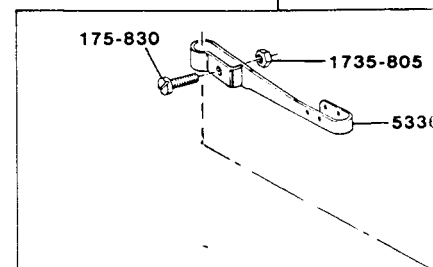

centurion

Form 21644(Rev.777) Printed in U.S.A.

Copyright © 1976 The Singer Company
All Rights Reserved Throughout the World
A Trademark of THE SINGER COMPANY

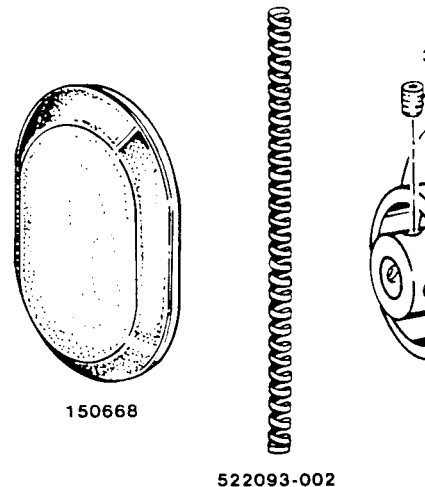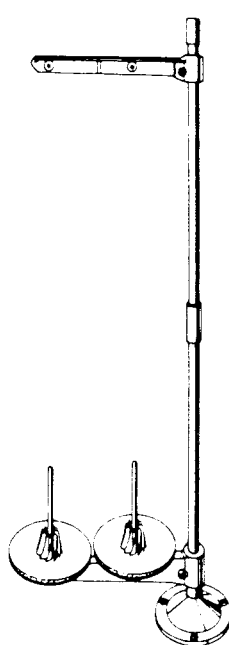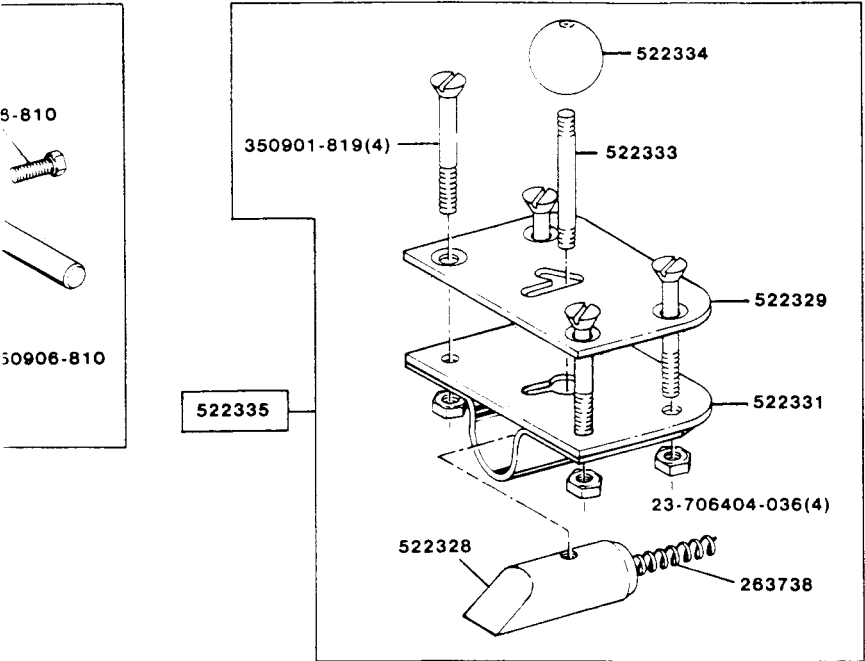

522354
THREAD STAND FOR
141D200A & 141D300A

 
37-518558
FINGER GUARD FOR
141D200A & 141D300A

13-21644
PICTORIAL PARTS LIST


13-21695
OPERATORS GUIDE

13-21633
SERVICE MANUAL


13-21710
CAUTION CARD



 37-518556
FINGER GUARD FOR
141D200A & 141D300A



 
533672
FINGER GUARD FOR
142D200A & 142D300A



533674
FINGER GUARD FOR
142D200A & 142D300A

N-3650 SIZE 16
NEEDLE FOR
141D200A & 142D200A

N-3650 SIZE 19
NEEDLE FOR
141D300A & 142D300A

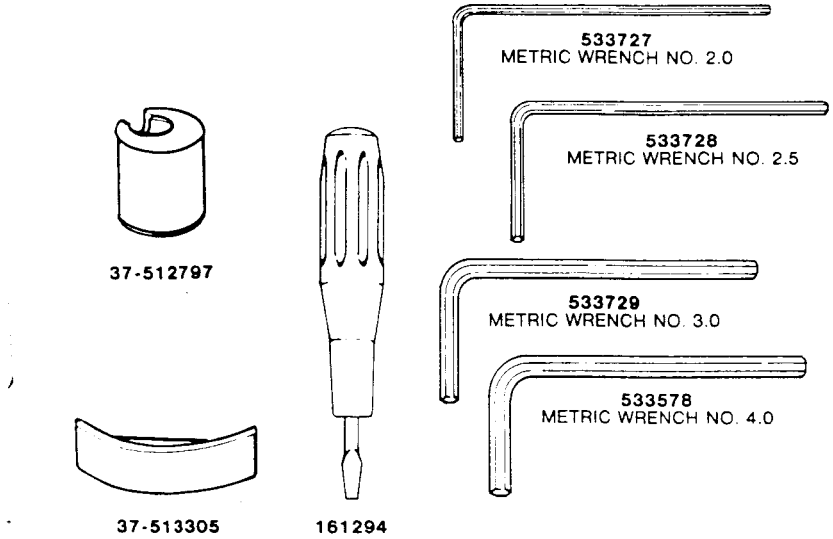

ACCESSORIES

OPTIONAL

142D200A & 142D300A

