

SINGER
236W130

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 236w130

HIGH SPEED, SINGLE NEEDLE, LOCK STITCH, ROUNDED TOP POST,
OBLIQUE UNDER EDGE TRIMMER MACHINE.

FEED WHEEL (BALL BEARING) AND BELT DRIVEN ROLLER PRESSER
FOR SIMULTANEOUSLY STITCHING EDGES AND UNDER TRIMMING
LININGS OF SHOES, SANDALS, SLIPPERS ETC.

MACHINE HAS ROUNDED TOP HOOK POST, FEED POST, SLIDE COVER
AND THROAT PLATE TO FACILITATE STITCHING OPERATIONS ON SHOES.

HOOK TIMING, HOOK POST AND FEED POST ARE ADJUSTABLE FROM
TOP OF BED.

VERTICAL AXIS HOOK WITH METERED LUBRICATION AND
IMPROVED MECHANICAL OPENER.

HOOK DRIVING GEARS AND FEED CLUTCH OPERATED IN OIL BATH.

OIL RESERVOIR IN THE BED FROM WHICH THE HOOK AND
HOOK DRIVING MECHANISM ARE AUTOMATICALLY LUBRICATED.

INTERMITTENT FEED WHEEL (BALL BEARING) ADJUSTABLE FOR WEAR, AND BELT
DRIVEN ROLLER PRESSER, BOTH DRIVEN BY "HORTON" TYPE CLUTCH.

OBLIQUE UNDER TRIMMER OPERATED BY MOTOR DRIVEN MECHANISM.
TRIMMER SPEED IS CONSTANT AND INDEPENDENT OF MACHINE SPEED.

KNIFE MAY BE THROWN INTO OR OUT OF ACTION WITHOUT
STOPPING MACHINE OR MOTOR.

ORDERS MUST SPECIFY NUMBER OF MOTOR REQUIRED
SO CORRECT VOLTAGE, CYCLES AND CONTROL BOX CAN BE
FURNISHED.

MACHINE NO. 236w130

*263601	Arm
263402	Arm Base
204235	Arm Base Position Pin (2)
200004E	Arm Base Screw (3)
202005	Arm Base Screw Washer (3)
263648	Arm Cover (front) (Motor Vent)
200576X	Arm Cover (front) Screw (2)
263405	Arm End Cover
200001C	Arm End Cover Screw (2)
204235	Arm Position Pin (2)
200004E	Arm Screw (3)
202005	Arm Screw Washer (3)
*263406	Arm Shaft
263573	Arm Shaft 263406 with 200333C, 200362C, 200382ALX and 263493
272142	Arm Shaft Ball Bearing (back)
263640	Arm Shaft Bushing (front) with 203100
203100	Arm Shaft Bushing (front) Oil Packing (wick)
200338C	Arm Shaft Bushing (front) Set Screw
263409	Arm Shaft Connection Belt (reinforced neoprene)
263410	Arm Shaft Connection Belt Pulley with 200363ALX, 350492C and two 214206
350492C	Arm Shaft Connection Belt Pulley Position Screw
200363ALX	Arm Shaft Connection Belt Pulley Position Screw Check Screw
200363ALX	Arm Shaft Connection Belt Pulley Set Screw
214206	Arm Shaft Connection Belt Pulley Spring Flange
263412	Arm Top Cover

MACHINE NO. 236wl30

263590	Arm Top Cover Oil Tube with 170168
170168	Arm Top Cover Oil Tube Oil Metering Insert
200194F	Arm Top Cover Screw (3)
*263413	Bed
263414	Bed Cover (bottom) with 350777X, 263459 and 267093
263415	Bed Cover (bottom) Gasket
350777X	Bed Cover (bottom) Oil Screw Plug
200040E	Bed Cover (bottom) Screw (10)
272154	Bed Cover (bottom) Screw Washer (fibre) (10)
263417	Bed Leg (3)
233939	Bobbin
235769	Bobbin Case Base with 202056, 203211 to 203213 and 203216
203211	Bobbin Case Base Latch
*202056	Bobbin Case Base Latch Pin
203212	Bobbin Case Base Latch Plunger
203213	Bobbin Case Base Latch Spring
241676	Bobbin Case Cap with 200594E, 200984C, 235771, 241674, 241675 and two 350405C
263826	Bobbin Case Lever
*203476	Bobbin Case Lever Eccentric
204243	Bobbin Case Lever Eccentric Position Pin
203478	Bobbin Case Lever Slide Stud
263421	Bobbin Case Lever Slide Stud Base (adjustable)
263582	Bobbin Case Lever Slide Stud Base Position Pin
140862AL	Bobbin Case Lever Slide Stud Base Set Screw
241674	Bobbin Case Oiling Felt

MACHINE NO. 236w130

241675	Bobbin Case Oiling Felt Retainer
350405C	Bobbin Case Oiling Felt Retainer Screw
235771	Bobbin Case Tension Spring
200984C	Bobbin Case Tension Spring Regulating Screw
200594E	Bobbin Case Tension Spring Screw
203216	Bobbin Case Washer (cloth)
241677	Bobbin Case complete, Nos. 235769 and 241676
248894	Bracket (underedge)
248895	Bracket (underedge) 248894 with 200077D, 200888, 201142C, 204411 and three 248896
263603	Bracket (underedge) complete, Nos. 200094F, 200577AL, 200904D, 202603, 204233, 204361, 204365, 241633, 248880 to 248882, 248895, 263608, 263610, 263612, 263633, 267263, 350302F and two 200028D
350614X	Bracket (underedge) Screw (2)
144262	Feed Clutch (brake)
263578	Feed Clutch (brake) 144262 with three 263574
1255C	Feed Clutch (brake) Screw (3)
263424	Feed Clutch (brake) Supporting Plate
200911X	Feed Clutch (brake) Supporting Plate Screw (3)
263422	Feed Clutch (drive)
263423	Feed Clutch (drive) 263422 with three 263574
144261	Feed Clutch (drive) Washer
131717	Feed Clutch Roller
68152	Feed Clutch Roller Plunger
131718	Feed Clutch Roller Spring
263579	Feed Clutch Sleeve with two 140409AL
140409AL	Feed Clutch Sleeve Set Screw

MACHINE NO. 236w130

263591	Feed Clutch Thrust Washer
263574	Feed Clutch Wear Plate
263425	Feed Clutch complete, Nos. 144261, 263423, 263458, 263578, 263579, 263591, six each 68152, 131717 and 131718
263426	Feed Driving Connection with four 200274E
200274E	Feed Driving Connection Cap Screw
263427	Feed Driving Connection Tension Spring
263428	Feed Driving Crank with 350175E
140300C	Feed Driving Crank Ball Screw
201616E	Feed Driving Crank Ball Screw Nut
350175E	Feed Driving Crank Pinch Screw
231836	Feed Driving Crank Thrust Washer
263429	Feed Driving Eccentric with 215057
263430	Feed Driving Eccentric Adjusting Eccentric
263431	Feed Driving Eccentric Adjusting Eccentric Latch with 200351C
263432	Feed Driving Eccentric Adjusting Eccentric Latch Hinge Pin
200605C	Feed Driving Eccentric Adjusting Eccentric Latch Hinge Pin Position Screw
263433	Feed Driving Eccentric Adjusting Eccentric Latch Operating Lever with 200394C
200394C	Feed Driving Eccentric Adjusting Eccentric Latch Operating Lever Set Screw
263434	Feed Driving Eccentric Adjusting Eccentric Latch Operating Lever Spring
200351C	Feed Driving Eccentric Adjusting Eccentric Latch Set Screw
215057	Feed Driving Eccentric Adjusting Eccentric Pin
263435	Feed Driving Eccentric Adjusting Eccentric Spring
263436	Feed Driving Eccentric Adjusting Eccentric Spring Adjusting Collar with two 200394C

MACHINE NO. 236w130

200394	Feed Driving Eccentric Adjusting Eccentric Spring Adjusting Collar Set Screw
263567	Feed Driving Eccentric Friction Plate
350548C	Feed Driving Eccentric Friction Plate Adjusting Screw
350477C	Feed Driving Eccentric Friction Plate Adjusting Screw Set Screw
263437	Feed Driving Flange with 200333C, 200346C, 263567, two each 350477C and 350548C
200333C	Feed Driving Flange Position Screw
200346C	Feed Driving Flange Set Screw
263847	Feed Post with 448ALX and two 140321AL
263870	Feed Post 263847 with 249019, 249092, 263453, 263460, 263461, 263607, 263692, 263829, 263849, 350411C and two 237D
263440	Feed Post Adjusting Eccentric Stud with 263441
263441	Feed Post Adjusting Eccentric Stud Retaining Ring
263801	Feed Post Base Cover
200181X	Feed Post Base Cover Screw
263829	Feed Post Cover (side)
237D	Feed Post Cover (side) Screw
201110X	Feed Post Screw (2)
263804	Feed and Hook Post Base Cover Support (back)
263803	Feed and Hook Post Base Cover Support (front)
50559X	Feed and Hook Post Base Cover Support Screw (2)
263830	Feed and Hook Post Cover (back)
263845	Feed and Hook Post Cover (front)
141672F	Feed and Hook Post Cover (back or front) Clamp screw (6)
51023B	Feed and Hook Post Cover (back or front) Screw (8)
263832	Feed and Hook Post Cover Gasket (back or front) (vellumoid) (2)

MACHINE NO. 236w130

263812	Feed and Hook Post Gasket (bottom) (vellumoid)
263592	Feed and Hook Post Screw Washer (fibre) (4)
263605	Feed Wheel
263607	Feed Wheel 263605 with 263450 to 263452, three 200587D and sixty 206417
249092	Feed Wheel Adjusting Stud (eccentric)
140321AL	Feed Wheel Adjusting Stud Set Screw
206417	Feed Wheel Ball, 1/16 in. diameter
263450	Feed Wheel Ball Cone (inside)
263451	Feed Wheel Ball Cone (outside)
263452	Feed Wheel Bevel Gear
263453	Feed Wheel Bevel Gear Driving Pinion
*263454	Feed Wheel Bevel Gear Driving Pinion Coupling (lower) with two 200382ALX
*263455	Feed Wheel Bevel Gear Driving Pinion Coupling (upper) with two 200382ALX
*263456	Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection with two 201052ALX
200133C	Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection Retaining Screw
263457	Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection Stud
201052ALX	Feed Wheel Bevel Gear Driving Pinion Coupling Ball Connection Stud Set Screw
200382ALX	Feed Wheel Bevel Gear Driving Pinion Coupling Set Screw
263692	Feed Wheel Bevel Gear Driving Pinion Coupling complete, Nos. 200133C, 263454 to 263456 and two 263457
263458	Feed Wheel Bevel Gear Driving Pinion Shaft (lower)
267093	Feed Wheel Bevel Gear Driving Pinion Shaft (lower) Needle Bearing

MACHINE NO. 236w130

263459	Feed Wheel Bevel Gear Driving Pinion Shaft (lower) Needle Bearing Oil Seal
200587D	Feed Wheel Bevel Gear Screw
263460	Feed Wheel Bracket with 200041C
263461	Feed Wheel Bracket Extension
448ALX	Feed Wheel Bracket Extension Set Screw
249019	Feed Wheel Bracket Friction Plug
140321AL	Feed Wheel Bracket Friction Plug Set Screw
200041C	Feed Wheel Bracket Pinch Screw
350411C	Feed Wheel Cap Screw
248878	Guide Finger
Note:	Guide Finger 248878 is furnished with this machine unless otherwise specified on order
248879	Guide Finger with projection to guard knife
248880	Guide Finger Bracket with 1724E and 201217D
350302F	Guide Finger Bracket Screw
248881	Guide Finger Clamp Bar
248896	Guide Finger Clamp Bar Bushing
201142C	Guide Finger Clamp Bar Bushing Set Screw
204361	Guide Finger Clamp Bar Latch
200802E	Guide Finger Clamp Bar Latch Hinge Screw
204230	Guide Finger Clamp Bar Latch Spring
204233	Guide Finger Clamp Bar Latch Spring 204230 with 200802E
241625	Guide Finger Clamp Bar Position Guide with 36737, 200078X, 200387C and 204389
200078X	Guide Finger Clamp Bar Position Guide Pinch Screw
200387C	Guide Finger Clamp Bar Position Guide Set Screw
248882	Guide Finger Clamp Bar Position Guide Slide with 1724E and 201217D

MACHINE NO. 236w130

200577AL	Guide Finger Clamp Bar Position Guide Slide Screw
241633	Guide Finger Clamp Bar Position Guide complete, Nos. 241625 and 241626
204365	Guide Finger Clamp Bar Spring
201217D	Guide Finger Clamp Bar Stop Adjusting Screw
1724E	Guide Finger Clamp Bar Stop Adjusting Screw Thumb Nut
241626	Guide Finger Disengaging Lever
36737	Guide Finger Disengaging Lever Friction Ball, 1/8 in. diam.
204389	Guide Finger Disengaging Lever Friction Ball Spring
200904D	Guide Finger Screw
*263462	Hook (sewing)
263463	Hook 263462 with 201253F, 201376C, 241604, 263563 and two 201409F
263464	Hook and Bobbin Case complete, Nos. 241677 and 263463
263465	Hook and Feed Driving Shaft
276045	Hook and Feed Driving Shaft Bushing (back) with 276046
276046	Hook and Feed Driving Shaft Bushing (back) Oil Packing (wick)
200958C	Hook and Feed Driving Shaft Bushing (back) Set Screw
263467	Hook and Feed Driving Shaft Bushing (front) with 272115
272115	Hook and Feed Driving Shaft Bushing (front) Oil Packing (wick)
200958C	Hook and Feed Driving Shaft Bushing (front) Set Screw
263468	Hook and Feed Driving Shaft Connection Belt Pulley with 201254C, 201421C, 214206 and 228842
228842	Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing
263569	Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing Sleeve

MACHINE NO. 236w130

201007C	Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing Sleeve Set Screw
201254C	Hook and Feed Driving Shaft Connection Belt Pulley Position Screw
201421C	Hook and Feed Driving Shaft Connection Belt Pulley Set Screw
214206	Hook and Feed Driving Shaft Connection Belt Pulley Spring Flange
263469	Hook and Feed Driving Shaft Thrust and Timing Collar with 200378C
200378C	Hook and Feed Driving Shaft Thrust and Timing Collar Set Screw
263470	Hook Driving Gear (spiral) with two 797C
263471	Hook Driving Gear (spiral) Retaining Ring
797C	Hook Driving Gear (spiral) Set Screw
263472	Hook Driving Gear (spiral) Sleeve with 200378C and 201220ALX
201220ALX	Hook Driving Gear (spiral) Sleeve Position Screw
200378C	Hook Driving Gear (spiral) Sleeve Set Screw
265522	Hook Driving Pinion with two 200382ALX
200382ALX	Hook Driving Pinion Set Screw
241604	Hook Gib
201376C	Hook Gib Hinge Screw
201253F	Hook Gib Screw
263563	Hook Needle Guard
201409F	Hook Needle Guard Screw
141580ALX	Hook Oil Regulating Screw
234426	Hook Oil Regulating Spring
263833	Hook Post with two 263582

MACHINE NO. 236w130

263834	Hook Post 263833 with 202X, 212D, 141580ALX, 200121E, 203478, 234426, 263421, 263464, 263476, 263478 to 263482, 263568, 263593, 263594, 263826, 265522, 350611X, two each 1448AL and 140862AL
263440	Hook Post Adjusting Eccentric Stud with 263441
263441	Hook Post Adjusting Eccentric Stud Retaining Ring
263802	Hook Post Base Cover
200181X	Hook Post Base Cover Screw
263476	Hook Post Oil Inlet Strainer
212D	Hook Post Oil Inlet Strainer Screw
202X	Hook Post Oil Stop Screw
141581E	Hook Post Oil Stop Screw
244746	Hook Post Oil Stop Screw Seal
201110X	Hook Post Screw (2)
263846	Hook Post Slide
263478	Hook Shaft (vertical)
263479	Hook Shaft (vertical) Bearing (lower)
1448AL	Hook Shaft (vertical) Bearing (lower) Set Screw
263480	Hook Shaft (vertical) Bearing (upper) with 263561
263561	Hook Shaft (vertical) Bearing (upper) Oil Wick
1448AL	Hook Shaft (vertical) Bearing (upper) Set Screw
263593	Hook Shaft (vertical) Oil Packing (wick)
263594	Hook Shaft (vertical) Oil Packing (wick) Spring
350611X	Hook Shaft (vertical) Screw
263568	Hook Shaft (vertical) Sleeve (center) with 200387C
200387C	Hook Shaft (vertical) Sleeve (center) Set Screw

MACHINE NO. 236w130

263481	Hook Shaft (vertical) Thrust Washer
200121E	Hook Shaft (vertical) Thrust Washer Screw
263482	Hook Washer with 203476 and three 204243
248929	Knife
263608	Knife Bar
248896	Knife Bar Bushing
200077D	Knife Bar Bushing Screw
263609	Knife Bar Driving Connection with 200069C, 200089C and 200381C
263610	Knife Bar Driving Connection 263609 with 222013, 263611, 263622 to 263624 and 263627
200069C	Knife Bar Driving Connection Hinge Screw
200381C	Knife Bar Driving Connection Set Screw
263611	Knife Bar Driving Link Hinge Stud
200089C	Knife Bar Driving Link Hinge Stud Pinch Screw
263612	Knife Bar Position Guide with 200031X and 201534X
267263	Knife Bar Position Guide Oiling Wick
200031X	Knife Bar Position Guide Pinch Screw
201534X	Knife Bar Position Guide Pinch Screw Nut
200028D	Knife Bar Position Guide Screw
204411	Knife Bar Sleeve (split)
200043C	Knife Bar Sleeve Set Screw
200888	Knife Bar Sleeve Set Screw 200043C with 201524E
201524E	Knife Bar Sleeve Set Screw Nut
263613	Knife Control Lever with 232348
263614	Knife Control Lever Hinge Stud

MACHINE NO. 236w130

200417C	Knife Control Lever Hinge Stud Set Screw
263615	Knife Control Lever Latch with 200316C
350615C	Knife Control Lever Latch Adjusting Screw
201537X	Knife Control Lever Latch Adjusting Screw Nut
350109C	Knife Control Lever Latch Hinge Screw
40058	Knife Control Lever Latch Spring
217E	Knife Control Lever Latch Spring Screw
206482	Knife Control Lever Latch Spring Screw Washer
200316C	Knife Control Lever Latch Spring Stop Screw
263616	Knife Control Lever Plate with 201537X and 350615C
200064X	Knife Control Lever Plate Screw
263617	Knife Control Lever Position Spring
263618	Knife Control Lever Position Spring Adjusting Plate
232348	Knife Control Lever Position Spring Adjusting Plate Pin
201478C	Knife Control Lever Position Spring Adjusting Plate Screw
206482	Knife Control Lever Position Spring Adjusting Plate Screw Washer
200089C	Knife Control Lever Position Spring Screw
202603	Knife Control Lever Position Spring Screw Washer
263619	Knife Control Lever complete, Nos. 217E, 40058, 201478C, 263613, 263615, 263616, 263618, 350109C, two each 200064X 201706X and 206482
201706X	Knife Control Lever Plate Screw Nut
263620	Knife Driving Belt
*263509	Knife Driving Belt Idler Pulley
263510	Knife Driving Belt Idler Pulley 263509 with 263513
263621	Knife Driving Belt Idler Pulley Adjusting Stud

MACHINE NO. 236w130

200358C	Knife Driving Belt Idler Pulley Adjusting Stud Set Screw
200948C	Knife Driving Belt Idler Pulley Hinge Screw
263513	Knife Driving Belt Idler Pulley Needle Bearing
263622	Knife Driving Connection
263623	Knife Driving Connection Hinge Pin with 272115
272115	Knife Driving Connection Hinge Pin Oiling Wick
200389C	Knife Driving Connection Hinge Pin Position Screw
263624	Knife Driving Connection Plunger with 200693C
200693C	Knife Driving Connection Plunger Screw
222013	Knife Driving Connection Plunger Spring
263625	Knife Driving Eccentric with 200365C and 201052ALX
200365C	Knife Driving Eccentric Position Screw
201052ALX	Knife Driving Eccentric Set Screw
263626	Knife Driving Eccentric Thrust Washer
263627	Knife Driving Link with 200389C
263628	Knife Driving Shaft with 222583
263645	Knife Driving Shaft Belt Pulley (double groove) with two 200351C
200351C	Knife Driving Shaft Belt Pulley Set Screw
263630	Knife Driving Shaft Bracket with 200417C
263646	Knife Driving Shaft Bracket Oil Tube
263647	Knife Driving Shaft Bracket Oil Tube Packing (wick)
232154	Knife Driving Shaft Bracket Position Pin (2)
200050C	Knife Driving Shaft Bracket Screw (2)
263631	Knife Driving Shaft Bushing
200364C	Knife Driving Shaft Bushing Set Screw

MACHINE NO. 236w130

222583	Knife Driving Shaft Oil Packing (wick) (in Shaft)
276046	Knife Driving Shaft Oil Wick (in Arm)
263632	Knife Holder
263633	Knife Holder 263632 with two 200126F
200094F	Knife Holder Screw
202603	Knife Holder Screw Washer
200126F	Knife Screw
263483	Lifting Lever
263484	Lifting Lever Extension
200092C	Lifting Lever Extension Screw
201101C	Lifting Lever Hinge Screw
263485	Lifting Lever Spring
201051C	Lifting Lever Spring Stop Screw (on Lever)
200224C	Lifting Lever Spring Stop Screw (on Arm)
201231C	Lifting Lever Stop Screw
263486	Lifting Lever complete, Nos. 200092C, 201051C, 263483 and 263484
263487	Machine Pulley (aluminum alloy casting) for "V" belt (outside diam. of belt groove 2.9 in.) (rim diam. 5-1/4 in.) with 200327C and 200328C
263488	Machine Pulley 263487 with 272142
200328C	Machine Pulley Position Screw
200327C	Machine Pulley Set Screw
TK-161	Motor
263639	Motor and Belt Guard
200007C	Motor and Belt Guard Screw (2)

MACHINE NO. 236w130

995536	Motor Control Box
263635	Motor Pulley (double grooved) for "V" belt, 1-13/32" and 1-33/64 in. diam. belt grooves, with two 200351C
200351C	Motor Pulley Set Screw
200362C	Motor Set Screw (2)
263636	Motor Terminal Block Lead Wire Cover Plate
200112C	Motor Terminal Block Lead Wire Cover Plate Screw (2)
145X	Motor Terminal Block Screw (furnished with motor)
263560	Needle Bar and Take-up Oiling Wick
228485	Needle Bar and Take-up Oiling Wick Retaining Screw (3)
263489	Needle Bar with 200125ALX, 200175D and 249270
263490	Needle Bar Bushing (lower)
263491	Needle Bar Bushing (upper)
200398C	Needle Bar Bushing Set Screw
263492	Needle Bar Connecting Link
1130E	Needle Bar Connecting Link Cap Screw
263570	Needle Bar Connecting Link Oil Packing (wick)
263571	Needle Bar Connecting Link Oil Packing (wick) Spring Clamp (2)
143057	Needle Bar Connecting Stud with 207E
207E	Needle Bar Connecting Stud Pinch Screw
143058	Needle Bar Connecting Stud Slide Block
*263493	Needle Bar Crank
203172	Needle Bar Crank Friction Washer
200333C	Needle Bar Crank Postion Screw
249270	Needle Bar Thread Guide
200175D	Needle Bar Thread Guide Screw

MACHINE NO. 236w13C

200125ALX	Needle Set Screw
263848	Oil Reservoir Oil Gauge
263849	Oil Reservoir Oil Gauge Plug
263495	Presser Bar Bushing (lower)
263496	Presser Bar Bushing (upper)
200398C	Presser Bar Bushing (upper) Set Screw
202671	Presser Bar Lifter
200666C	Presser Bar Lifter Hinge Screw
263497	Presser Bar Lifting Releasing Lever Bracket
206608	Presser Bar Lifting Releasing Lever Bracket Spring
263498	Presser Bar Position Guide
202338	Presser Bar Position Guide Lever with 200086ALX
200086ALX	Presser Bar Position Guide Lever Pinch Screw
200055C	Presser Bar Position Guide Lever Stop Screw
201671E	Presser Bar Position Guide Lever Stop Screw Nut
200398C	Presser Bar Position Guide Set Screw
350612C	Presser Bar Screw (pressure regulating)
236089	Presser Bar Spring
263499	Presser Bar Spring Stop Rod
351884	Roller Presser, 1 in. diam., 9/64 in. face (fine) (reverse angle) with 1528X, 201699C, 350104C and twenty-eight 206417
263500	Roller Presser Arm
263637	Roller Presser Arm 263500 with 351884
235087	Roller Presser Arm Bracket
235088	Roller Presser Arm Bracket Position Collar with 200362C
228740	Roller Presser Arm Bracket Position Collar Lock Ring

MACHINE NO. 236w130

200362C	Roller Presser Arm Bracket Position Collar Set Screw
202558	Roller Presser Arm Bracket Spring
202559	Roller Presser Arm Bracket Spring Stop
200141F	Roller Presser Arm Bracket Spring Stop Screw
200096D	Roller Presser Arm Screw
206417	Roller Presser Ball, 1/16 in. diameter
201699C	Roller Presser Ball Cone
263504	Roller Presser Bar
350104C	Roller Presser Hinge Screw
1528X	Roller Presser Hinge Screw Nut
263638	Roller Presser and Bar complete, Nos. 200096D, 202558, 202559, 228740, 235087, 235088, 263504, 263637 and two 200141F
263506	Roller Presser Driving Belt (lower)
263507	Roller Presser Driving Belt (lower) Driven Pulley with two 200403C
200403C	Roller Presser Driving Belt (lower) Driven Pulley Set Screw
263508	Roller Presser Driving Belt (lower) Driving Pulley with two 200958C
200958C	Roller Presser Driving Belt (lower) Driving Pulley Set Screw
*263509	Roller Presser Driving Belt (lower) Idler Pulley
263510	Roller Presser Driving Belt (lower) Idler Pulley 263509 with 263513
263511	Roller Presser Driving Belt (lower) Idler Pulley Arm
660C	Roller Presser Driving Belt (lower) Idler Pulley Arm Hinge Screw
263512	Roller Presser Driving Belt (lower) Idler Pulley Arm Spring
200948C	Roller Presser Driving Belt (lower) Idler Pulley Hinge Screw

MACHINE NO. 236w130

263513	Roller Presser Driving Belt (lower) Idler Pulley Needle Bearing
263514	Roller Presser Driving Belt (lower) Idler Pulley and Arm complete, Nos. 200948C, 263510 and 263511
263515	Roller Presser Driving Belt (upper)
263517	Roller Presser Driving Belt (upper) Idler Pulley
263566	Roller Presser Driving Belt (upper) Idler Pulley 263517 with 263565 (2)
263518	Roller Presser Driving Belt (upper) Idler Pulley Bracket
263519	Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod with two 201525E
201525E	Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Nut
201525E	Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Nut Lock Nut
263521	Roller Presser Driving Belt (upper) Idler Pulley Bracket Adjusting Rod Spring
263522	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension with two 263523
263523	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Center
1094D	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Screw (3)
208636	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Screw Washer (3)
263524	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support (back)
263525	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support (front)
201387F	Roller Presser Driving Belt (upper) Idler Pulley Bracket Extension Support Screw (4)
263565	Roller Presser Driving Belt (upper) Idler Pulley Needle Bearing
263526	Roller Presser Driving Belt (upper) Idler Pulley Spindle

MACHINE NO. 236w130

263564	Roller Presser Driving Belt (upper) Idler Pulley Spindle Retaining Ring (2)
201748X	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Lock Nut
263527	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment
263528	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Guide Stud
263529	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Retaining Ring
263530	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Ring
263531	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Spreader Cone
263532	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) complete, Nos. 201748X, 263529 to 263531, four each 263527 and 263528
201110E	Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Stop Screw
263533	Roller Presser Driving Belt Shaft
263534	Roller Presser Driving Belt Shaft Collar with two 200111C
200111C	Roller Presser Driving Belt Shaft Collar Set Screw
268425	Roller Presser Driving Belt Shaft Needle Bearing (lower)
268425	Roller Presser Driving Belt Shaft Needle Bearing (upper)
263537	Stitch Length Indicator with 200347AL
200347AL	Stitch Length Indicator Set Screw
263538	Take-up Lever
263539	Take-up Lever 263538 with 12166, 263543, 263572 and two 263571
263813	Take-up Lever Crank
200362C	Take-up Lever Crank Set Screw

MACHINE NO. 236w13C

200382ALX	Take-up Lever Crank Set Screw
263541	Take-up Lever Guard
200161X	Take-up Lever Guard Screw (2)
12166	Take-up Lever Hinge Stud
263543	Take-up Lever Link
263544	Take-up Lever Link Hinge Stud
200347AL	Take-up Lever Link Hinge Stude Set Screw
263572	Take-up Lever Link Oil Packing (wick)
263571	Take-up Lever Link Oil Packing (wick) Spring Clamp
263545	Take-up Lever Position Plate
244048	Tension Disc (back)
244049	Tension Disc (front)
263546	Tension Release Plunger
263547	Tension Release Washer
263548	Tension Releasing Pin
223438	Tension Spring
263549	Tension Spring Washer
350613F	Tension Stud with 263550
50305C	Tension Stud Set Screw
263550	Tension Stud Washer
201572X	Tension Thumb Nut
263551	Tension complete, Nos. 201572X, 202410, 223438, 244048, 244049, 263547 to 263549, 263552 and 350613F
202410	Thread Controller Spring
263552	Thread Controller Spring Regulator with 50305C
446ALX	Thread Controller Spring Regulator Set Screw

MACHINE NO. 236w190

202412	Thread Guide
210954	Thread Guide (lower)
200582C	Thread Guide (lower) Set Screw
241765	Thread Lubricator Oil Pad (felt)
263554	Thread Lubricator Oil Pad Holder
200137X	Thread Lubricator Oil Pad Holder Screw (2)
263555	Thread Lubricator Plate
200577AL	Thread Lubricator Plate Screw (2)
240034	Thread Retainer
201188C	Thread Retainer Set Screw
263558	Thread Retainer Thread Guide
350559ALX	Thread Retainer Thread Guide Set Screw
263871	Throat Plate Body, for 263873 and 263875
263872	Throat Plate Knife Cutting Plate, 53 elongated needle hole, trims back of the needle .025 in. to right of seam, for 263873
51306E	Throat Plate Knife Cutting Plate Screw
263873	Throat Plate complete, 53 elongated needle hole, trims back of the needle and .025 in. to right of seam, Nos. 263871, 263872 and two 51306E
141664X	Throat Plate Screw (2)

ACCESSORIES

FOR

MACHINE NO. 236w130

202258	Bed Hinge Connection (2)
200570E	Bed Hinge Connection Screw (4)
233939	Bobbin (2)
259462	Bobbin Winder complete
228884	Drip Pan (plastic) complete
228846	Knee Lifter Rock Shaft complete
248929	Knives (3)
41401	Machine Rest Pin (wood)
128x22y	Needles, six, size 14 Narrow Wedge Point with Supplementary Shoulder
120342	Oiler (copper plated)
263577	Pulley Spreader Cone Adjusting Key
4822	Roller Presser Hinge Screw Nut Wrench
228476	Screw Driver (Bobbin Case)
225498	Screw Driver
144465	Wrench (1/8 in. Hex.)
225554	Wrench