


SINGER
261U11,U12,U13

SINGER*

261U/11/12/13

PARTS

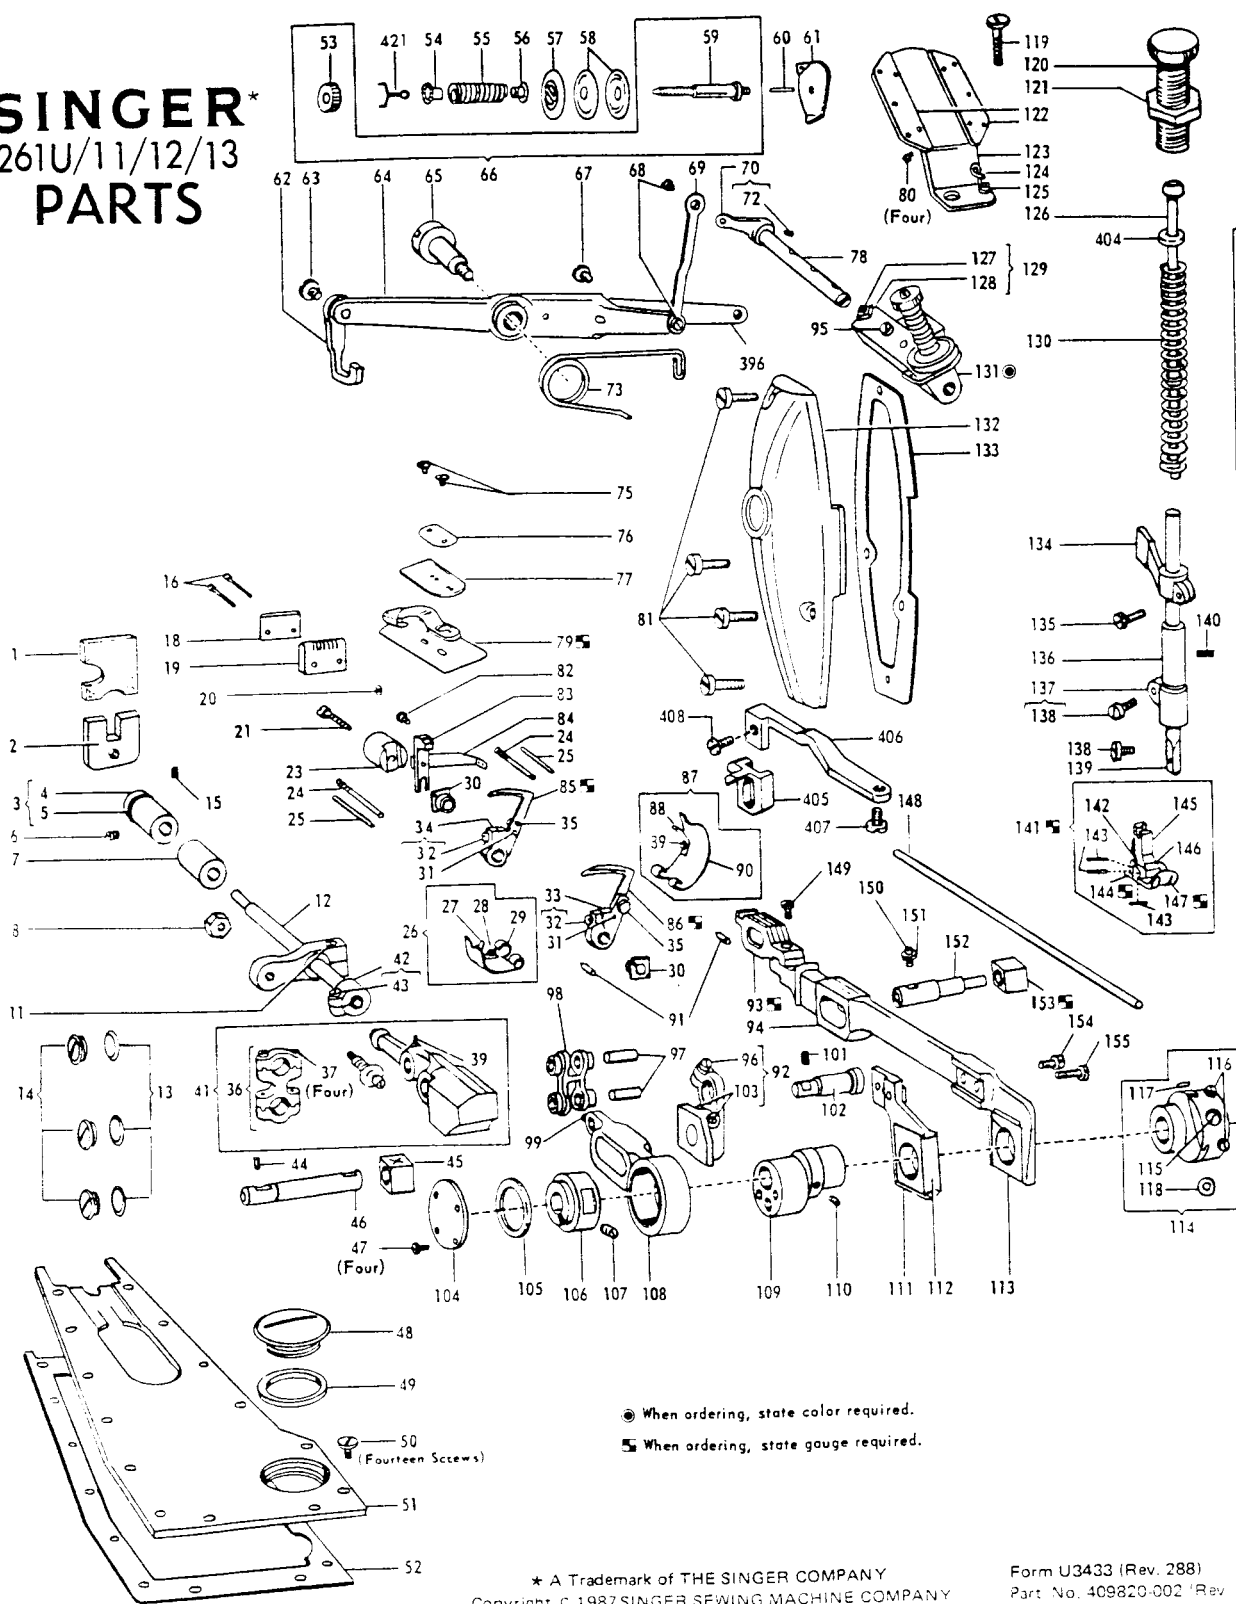


● When ordering, state color required.


■ When ordering, state gauge required.

* A Trademark of THE SINGER COMPANY
Copyright © 1987 SINGER SEWING MACHINE COMPANY
All Rights Reserved Throughout The World

Form U3433 (Rev. 288)
Part No. 409820-002 Rev. 11
Printed in Japan

372827
per. Margret

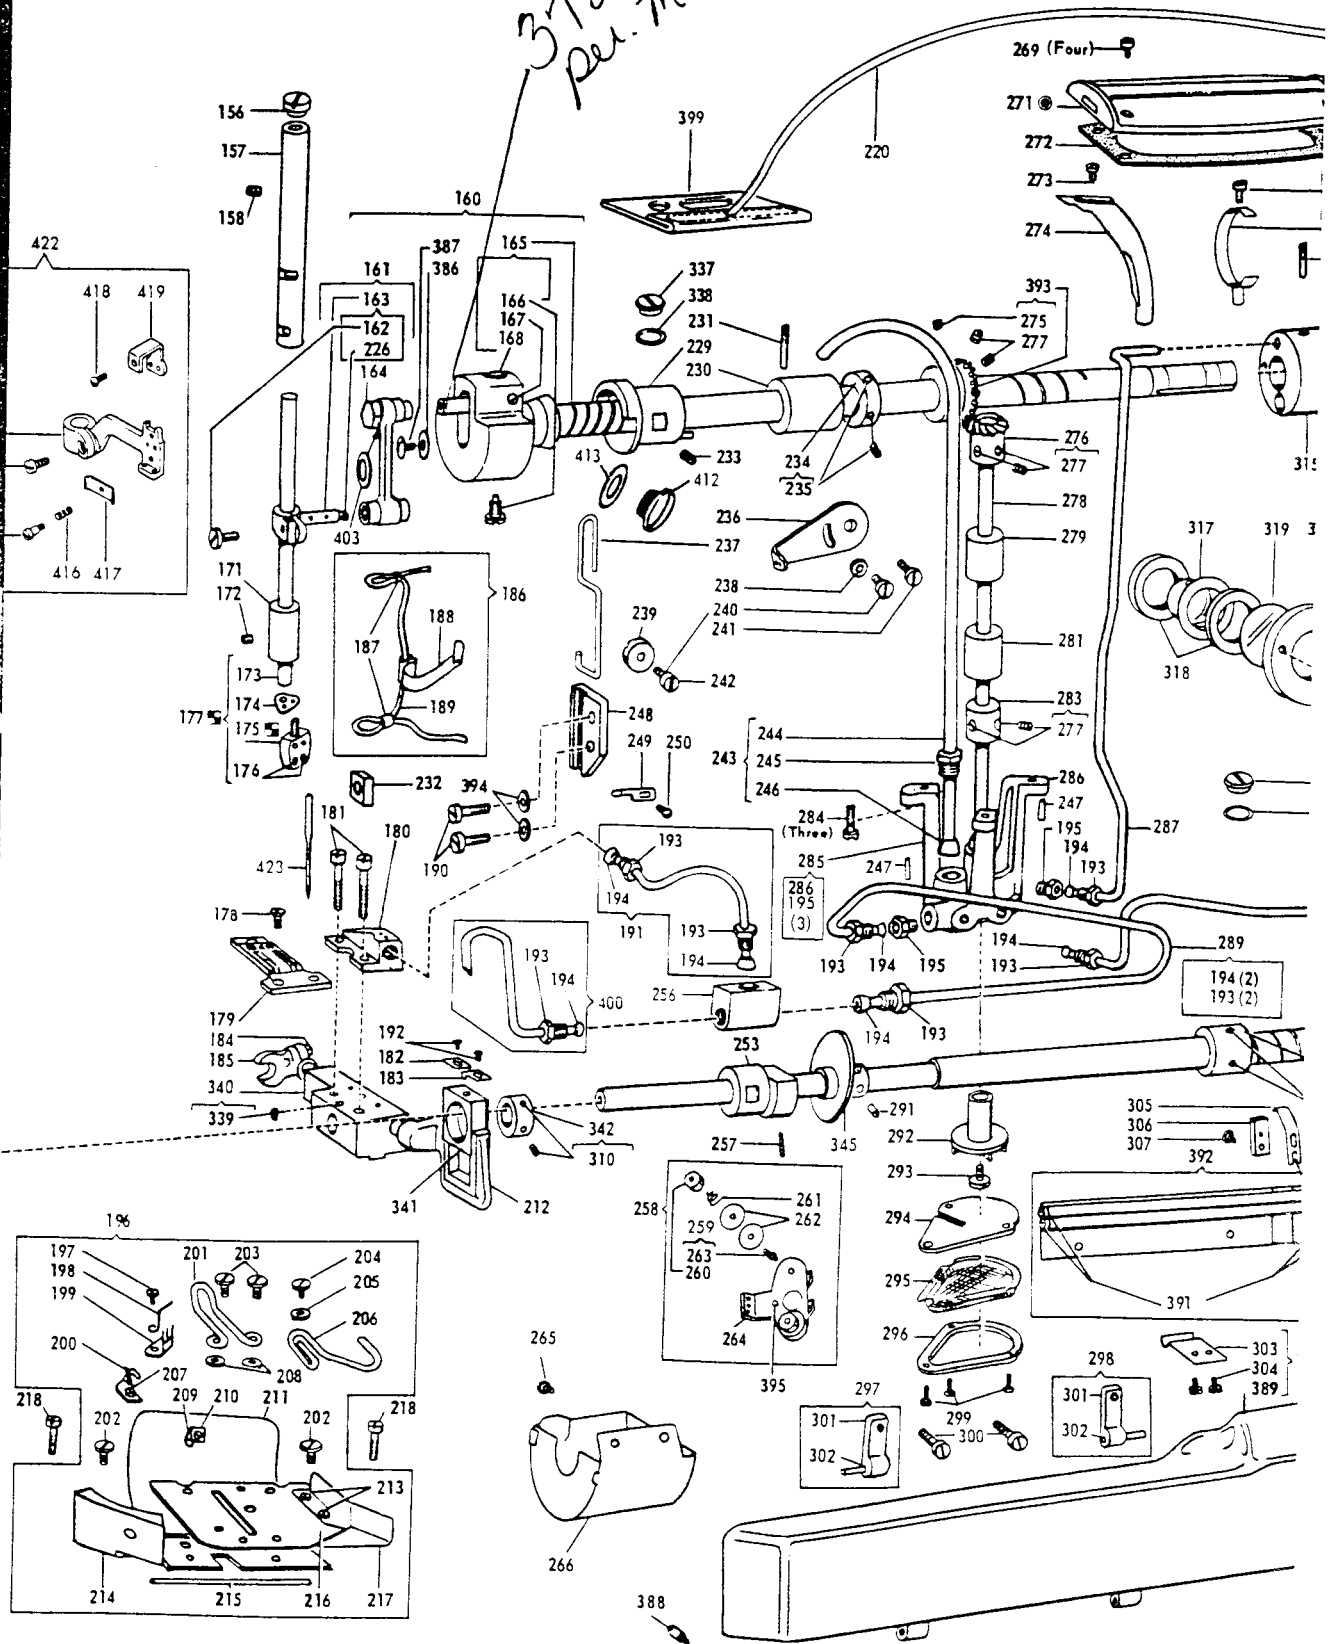

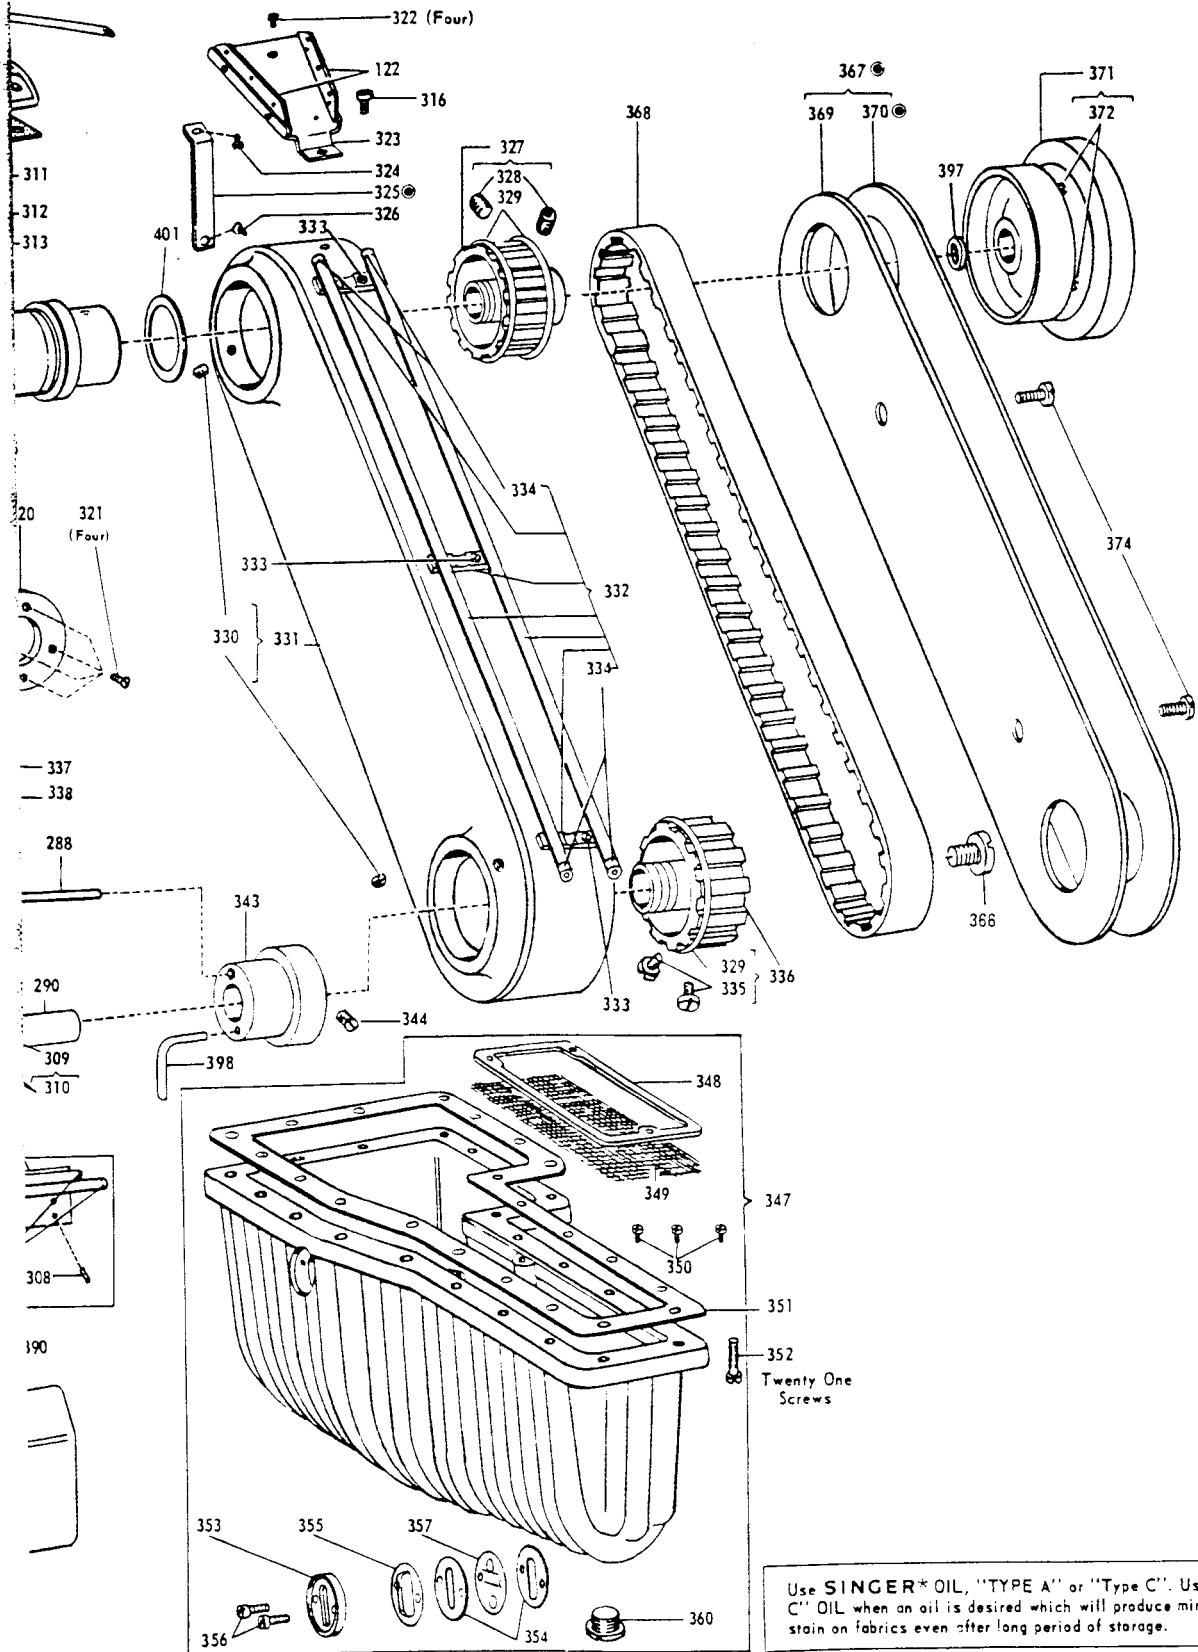

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

CODE	PART NO.	DESCRIPTION	MACHINE VARIETY
1	143646	Bed Cover Reinforcing Plate Gasket	261-11, 12, 13
2	143614	Bed Oil Shield (felt, lower)	261-11, 12, 13
3	143552	Bushing (back) complete, 143485 with 143551	261-11, 12, 13
4	143485	Bushing (back)	261-11, 12, 13
5	143551	Oil Seal (rubber)	261-11, 12, 13
6	443	Set Screw	261-11, 12, 13
7	143486	Bushing (front)	261-11, 12, 13
8	545407	Ball Screw Stud Nut	261-11, 12, 13
11	416005	Clamping Screw	261-11, 12, 13
12	143484	Looper Holder Shaft	261-11, 12, 13
13	139509	Gasket (3)	261-11, 12, 13
14	416042	Oil Plug (3)	261-11, 12, 13
15	454(830)	Set Screw	261-11, 12, 13
16	50225(809)	Screw (2)	261-11, 12, 13
18	139181	Thread Cutter	261-11, 12, 13
19	143524	Thread Cutter Support and Guide	261-11, 12, 13
20	456	Set Screw	261-11, 12, 13
21	416144	Adjusting Screw	261-11, 12, 13
23	139120	Looper Thread Guide Bracket Holder	261-11, 12, 13
24	416149	Screw Stud (2)	261-11, 12, 13
25	143480	Position Pin (2)	261-11, 12, 13
26	143467	Looper Gate (left) 143466 with 143470 and 51282(819), for Throat Plates 3/4 inch wide	261-11, 12,
	143469	Looper Gate (left) 143468 with 143470 and 51282(819), for Throat Plates 7/8 inch wide	261-13
27	143470	Lock Spring	261-11, 12, 13
28	51282(819)	Lock Spring Screw	261-11, 12, 13
29	143466	Looper Gate (left), for Throat Plates 3/4 inch wide	261-11, 12,
29	143468	Looper Gate (left), for Throat Plates 7/8 inch wide	261-13
30	143483	Looper Holder Bushing Eccentric (2)	261-11, 12, 13
31	26276	Looper Position Pin (2)	261-11, 12, 13
32	416055	Looper Holder Clamping Screw (2)	261-11, 12, 13
33	416080	Looper Holder (front)	261-11, 12, 13
34	416079	Looper Holder (back)	261-11, 12, 13
35	140393	Looper Clamping Screw (2)	261-11, 12, 13
36	416127	Driving Arm Connection with four 416132	261-11, 12, 13
37	416132	Cap Screw (4)	261-11, 12, 13
39	1047(830)	Set Screw	261-11, 12, 13
41	32355	Looper Driving Arm complete	261-11, 12, 13
42	416027	Looper Holder Shaft Collar with 416005	261-11, 12, 13
43	416005	Clamping Screw	261-11, 12, 13
44	446(830)	Set Screw	261-11, 12, 13
45	139074	Looper Eccentric Connection Slide Block	261-11, 12, 13
46	416148	Looper Eccentric Connection Slide Block Stud	261-11, 12, 13
47	416136	Bushing Cover Screw (4)	261-11, 12, 13
48	416049	Bed Cover Hole Plug Screw	261-11, 12, 13
49	143435	Bed Cover Hole Plug Screw Gasket	261-11, 12, 13
50	140295	Bed Cover Screw (14)	261-11, 12, 13
51	416068	Bed Cover	261-11, 12, 13
52	143434	Bed Cover Gasket (Cork)	261-11, 12, 13
53	416023	Tension Regulating Thumb Nut (2)	261-11, 12, 13
54	143657	Tension Spring Bushing (large) (2)	261-11, 12, 13
55	131741	Tension Spring (2)	261-12, 13
	143656	Tension Spring (2)	261-11
56	59538	Tension Spring Bushing (small) (2)	261-11, 12, 13
57	32572	Tension Releasing Disc (2)	261-11, 12, 13
58	2102	Tension Disc (4)	261-11, 12, 13
59	416017	Tension Screw Stud (2)	261-11, 12, 13
60	54988	Tension Releasing Pin (2)	261-11, 12, 13
61	131696	Tension Thread Guide (2)	261-11, 12, 13
62	146676	Presser Bar Lifting Bracket Lifter	261-11, 12, 13
63	307(819)	Presser Bar Lifting Bracket Lifter Hinge Screw	261-11, 12, 13
64	416081	Presser Bar Lifting Lever	261-11, 12, 13
65	302(819)	Presser Bar Lifting Lever Hinge Screw	261-11, 12, 13
66	416134	Tension Screw Stud 416017 (2) with 416023 (2)	261-11, 12, 13
67	504176	Presser Bar Lifting Lever Extension Screw (2)	261-11, 12, 13
68	416130	Hinge Screw (2)	261-11, 12, 13
69	146620	Tension Releasing Shaft Crank Connection Link	261-11, 12, 13
70	416028	Tension Releasing Shaft Crank with 504134	261-11, 12, 13
72	504134	Tension Releasing Shaft Crank Set Screw	261-11, 12, 13
73	143511-001	Presser Bar Lifting Lever Spring	261-11, 12, 13
75	1443(802)	Lap Seam Feller Clamping Plate Screw (2)	261-11, 12, 13
76	121449	Lap Seam Feller Clamping Plate	261-11, 12, 13
77	416036	Lap Seam Feller Slide	261-11, 12, 13
78	68003	Tension Releasing Shaft	261-11, 12, 13
79	121586	Lap Seam Feller, Adjustable	261-11, 12, 13
	161427	Lap Seam Feller with Yielding Lower Scroll and Adjustable Top Scroll	261-12
	121629	Lap Seam Feller, Adjustable	261-11, 12, 13
80	229	Screw (4)	261-11, 12, 13
81	140061(809)	Face Plate Screw (lower) (4)	261-11, 12, 13
82	154795	Looper Thread Guide Screw	261-11, 12, 13
83	416086	Looper Thread Guide Bracket	261-11, 12, 13
84	143487	Looper Thread Guide	261-11, 12, 13
85	32819	Looper (back) for 1/8 inch gauge	261-11, 12, 13
	32820	Looper (back) for 5/32 inch and 3/16 inch gauges	261-11, 12, 13
	32821	Looper (back) for 1/4 inch gauges	261-11, 12, 13
86	32822	Looper (front) for 1/8 inch gauge	261-11, 12, 13
	32823	Looper (front) for 5/32 inch and 3/16 inch gauges	261-11, 12, 13

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

	CODE	PART NO.	DESCRIPTION	MACHINE VARIETY
13	327	143672	Arm Rotary Shaft Sprocket Wheel with two each 416054 and 202253	261-11, 12, 13
13	328	416054	Sprocket Wheel Set Screw (2)	261-11, 12, 13
13	329	202253	Sprocket Wheel Spring Flange (2)	261-11, 12, 13
13	330	544322	Bed Rotary Shaft Belt Guard Set Screw (2)	261-11, 12, 13
13	331	416069	Bed Rotary Shaft Belt Guard with two 544322	261-11, 12, 13
13	332	143544	Thread Tube (belt guard) with four 139162	261-11, 12, 13
13	333	416137	Thread Tube (belt guard) Set Screw (3)	261-11, 12, 13
13	334	139162	Thread Tube (belt guard) Bushing (4)	261-11, 12, 13
13	335	416046	Bed Rotary Shaft Sprocket Wheel Set Screw (2)	261-11, 12, 13
13	336	143675	Bed Rotary Shaft Sprocket Wheel with 202253 and two 416046	261-11, 12, 13
13	337	50608(813)	Plug Screw (2)	261-11, 12, 13
13	338	139017	Plug Screw Washer (2)	261-11, 12, 13
13	339	456(830)	Slide Block Stud Set Screw (in 416074)	261-11, 12, 13
13	340	416074	Looper Avoiding Eccentric Forked Connection Bracket with 456(830)	261-11, 12, 13
13	341	143458	Looper Avoiding Eccentric Forked Connection Slide Block	261-11, 12, 13
13	342	416073	Looper Avoiding Eccentric with four 504048	261-11, 12, 13
13	343	143444	Bed Rotary Shaft Bushing, Flanged (right)	261-11, 12, 13
13	344	50422(803)	Bed Rotary Shaft Bushing, Flanged (right) Set Screw	261-11, 12, 13
13	345	416028	Thread (looper) Take-up with two 544306	261-11, 12, 13
13	347	416093	Oil Reservoir complete, Nos. 143509, 143542, 143601, 164133, 164134, 416093, two each 164132, 416008 and three 545109	261-11, 12, 13
13	348	143542	Oil Reservoir Screen Frame	261-11, 12, 13
13	349	143509	Oil Reservoir Screen	261-11, 12, 13
13	350	545109	Oil Reservoir Screen Frame Screw (3)	261-11, 12, 13
13	351	143508	Oil Reservoir Gasket	261-11, 12, 13
13	352	966(819)	Oil Reservoir Screw (21)	261-11, 12, 13
13	353	164134	Oil Reservoir Sight Gauge Window Retainer	261-11, 12, 13
13	354	164132	Gasket (2)	261-11, 12, 13
13	355	164133	Oil Reservoir Sight Gauge Window	261-11, 12, 13
13	356	416008	Oil Reservoir Sight Gauge Window Retainer Screw (2)	261-11, 12, 13
13	357	143601	Sight Gauge Background Disc	261-11, 12, 13
13	360	416053	Oil Reservoir Drain Plug	261-11, 12, 13
13	366	416016	Bed Rotary Shaft Screw (right)	261-11, 12, 13
13	367	139036	Bed Rotary Shaft Belt Guard Cover 139035 with 139037	261-11, 12, 13
13	369	264715	Bed Rotary Shaft Belt	261-11, 12, 13
13	369	139037	Belt Guard Cover Gasket (cork)	261-11, 12, 13
13	370	139035	Belt Guard Cover	261-11, 12, 13
13	371	416121	Machine Pulley with two 51283(830)	261-11, 12
13		416039	Machine Pulley with two 51283(830)	261-13
13	372	51283(830)	Machine Pulley Set Screw (2)	261-11, 12, 13
13	374	545361	Belt Guard Cover Screw (2)	261-11, 12, 13
13	386	143236	Arm Rotary Shaft Screw Plug (front) Washer	261-11, 12, 13
13	387	416145	Arm Rotary Shaft Screw Plug (front)	261-11, 12, 13
13	388	416006	Thread (looper) Take-up Cover Position Screw Stud	261-11, 12, 13
13	389	143521	Thread (looper) Thread Tube Cover	261-11, 12, 13
13	390	143522	Thread (looper) Thread Tube Cover 143521 with 139171 and two 229(309)	261-11, 12, 13
13	391	139167	Thread (looper) Tube Bushing (4)	261-11, 12, 13
13	392	416029	Thread (looper) Tube complete with 20995 and four 139167	261-11, 12, 13
13	393	416118	Arm Rotary Shaft Bevel Gear (right hand spiral) with 549084 and two 545068	261-11, 12, 13
13	394	59456	Slide Block Guide Screw Washer (2)	261-11, 12, 13
13	395	430(830)	Tension (Looper thread) Body Set Screw	261-11, 12, 13
13	396	146609	Presser Bar Lifting Lever Extension	261-11, 12, 13
13	397	143624	Arm Rotary Shaft Sprocket Wheel Oil Retaining Ring	261-11, 12, 13
13	398	143622	Oil Return Tube	261-11, 12, 13
13	399	133243	Oil Removing Tube (head end) Screen	261-11, 12, 13
13	400	416103	Bed Rotary Shaft Bushing (left) Oil Tube, with 143124 and 416064	261-11, 12, 13
13	401	158045	Arm Shaft Sprocket Wheel Spacing Washer	261-11, 12, 13
13	402	416059	Machine Mounting Bracket (long) Screw (2)	261-11, 12, 13
13	403	14475	Needle Bar Connecting Link Screw Cap Disc	261-11, 12, 13
13	404	175032	Presser Bar Spring Washer	261-11, 12, 13
13	405	32381	Needle Guard	261-11, 12, 13
13	406	416014	Needle Guard Holder	261-11, 12, 13
13	407	416135	Needle Guard Screw	261-11, 12, 13
13	408	416141	Needle Guard Screw	261-11, 12, 13
13	412	416058	Arm Hole Plug Screw	261-11, 12, 13
13	413	139017	Arm Hole Plug Screw Washer	261-11, 12, 13
13	415	416007	Thread (needle) Take-up Plate Spring Screw	261-11, 12, 13
13	416	68164	Thread (upper) Take-up Plate Spring	261-11, 12, 13
13	417	54095	Thread (upper) Take-up Plate	261-11, 12, 13
13	418	337	Thread (needle) Take-up Extension Screw	261-11, 12, 13
13	419	139196	Thread (needle) Take-up Extension	261-11, 12, 13
13	420	416031	Thread (needle) Take-up	261-11, 12, 13
13	421	143658	Tension (needle thread) Regulating Thumb Nut Locking Spring	261-11, 12, 13
13	422	416128	Thread (needle) Take-up complete, Nos. 54095, 68164, 139196, 416007, 416033 and 337	261-11, 12, 13
13	423	Cat. 2793-01	Needle (14x25)	261-11
13		Cat. 2793-01	Needle (14x25)	261-12
13		Cat. 3651-05	Needle (14x25)	261-13

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

CODE	PART NO.	DESCRIPTION	MACHINE VARIETY
229	146672	Arm Rotary Shaft Flanged Bushing (front)	261-11, 12, 13
230	152503	Arm Rotary Shaft Bushing (center)	261-11, 12, 13
231	416124	Arm Rotary Shaft Flanged Bushing (center) Set Screw	261-11, 12, 13
232	139111	Needle Bar Connecting Stud Slide Block	261-11, 12, 13
233	416044	Arm Rotary Shaft Flanged Bushing (front) Set Screw	261-11, 12, 13
234	416119	Arm Rotary Shaft Thrust Collar with two 504134	261-11, 12, 13
235	504134	Arm Rotary Shaft Thrust Collar Set Screw (2)	261-11, 12, 13
236	146633	Thread (needle) Eyelet (side of arm)	261-11, 12, 13
237	139198	Thread (needle) Take-up (auxiliary)	261-11, 12, 13
238	7071	Thread (needle) Eyelet (side of arm) Position Screw Washer	261-11, 12, 13
239	54242	Thread (needle) Take-up (auxiliary) Clamp	261-11, 12, 13
240	416133	Thread (needle) Take-up (auxiliary) Clamp Screw	261-11, 12, 13
	416133	Thread (needle) Eyelet (side of arm) Position Screw	261-11, 12, 13
241	416004	Thread (needle) Eyelet (side of arm) Screw	261-11, 12, 13
243	416125	Oil Pipe complete, No. 143503 with 143065 and 416062	261-11, 12, 13
244	143503	Oil Pipe	261-11, 12, 13
245	416062	Oil Pipe Clamping Sleeve Nut	261-11, 12, 13
246	143065	Oil Pipe Clamping Sleeve	261-11, 12, 13
247	143071	Oil Pump Body Position Pin (2)	261-11, 12, 13
248	146908	Needle Bar Connecting Stud Slide Block Guide	261-11, 12, 13
249	143570	Thread Guide (front of arm)	261-11, 12, 13
250	140180(809)	Thread Guide (front of arm) Screw	261-11, 12, 13
253	143645	Bed Rotary Shaft Bushing (intermediate)	261-11, 12, 13
256	416101	Oil Tube Connection	261-11, 12, 13
257	416044	Set Screw	261-11, 12, 13
258	416083	Tension (looper thread) complete, Nos. 416087 two each 143514, 416082 and four 10106	261-11, 12, 13
259	416082	Tension Screw Stud 416051 with 416002 (2)	261-11, 12, 13
260	416009	Tension Regulating Thumb Nut (2)	261-11, 12, 13
261	143514	Tension Spring (2)	261-11, 12, 13
262	10106	Tension Disc (4)	261-11, 12, 13
263	416051	Tension Screw Stud (2)	261-11, 12, 13
264	416087	Tension (looper thread) Body	261-11, 12, 13
265	416136	Oil and Lint Guard Screw (2)	261-11, 12, 13
266	143499	Oil and Lint Guard	261-11, 12, 13
269	416020	Arm Top Cover Screw (4)	261-11, 12, 13
271	416117	Arm Top Cover	261-11, 12, 13
272	146508	Arm Top Cover Gasket	261-11, 12, 13
273	416020	Oil Lead Screw	261-11, 12, 13
274	143370	Oil Lead	261-11, 12, 13
275	549084	Arm Rotary Shaft Bevel Gear Position Screw	261-11, 12, 13
276	416061	Arm Shaft (upright) Bevel Gear (upper), left hand spiral with two 545068	261-11, 12, 13
277	545068	Set Screw (2)	261-11, 12, 13
278	416066	Arm Shaft (upright)	261-11, 12, 13
279	147111-301	Arm Shaft (upright) Bushing (upper)	261-11, 12, 13
281	146505	Arm Shaft (upright) Bushing (lower)	261-11, 12, 13
283	416067	Arm Shaft (upright) Collar with two 545068	261-11, 12, 13
284	545183	Oil Pump Body Screw (3)	261-11, 12, 13
285	416114	Oil Pump Body 416113 with three 416065	261-11, 12, 13
286	416113	Oil Pump Body	261-11, 12, 13
287	416090	Oil Pipe with 143124 and 416064	261-11, 12, 13
288	416126	Oil Pipe with 143124 and 416064	261-11, 12, 13
289	416100	Oil Tube complete with two each 143124 and 416064	261-11, 12, 13
290	143659	Bed Rotary Shaft	261-11, 12, 13
291	544306	Thread (looper) Take-up Set Screw (2)	261-11, 12, 13
292	416063	Oil Pump Impeller	261-11, 12, 13
293	545252	Oil Pump Impeller Locking Screw	261-11, 12, 13
294	146600	Oil Pump Cover	261-11, 12, 13
295	146657	Oil Pump Screen	261-11, 12, 13
296	146653	Oil Pump Screen Frame	261-11, 12, 13
297	139519	Thread (looper) Thread Tube Cover Hinge Plate (left) 139172 with 12162	261-11, 12, 13
298	139520	Thread (looper) Thread Tube Cover Hinge Plate (right) 139172 with 12162	261-11, 12, 13
299	545193	Oil Pump Screen Frame Screw (3)	261-11, 12, 13
300	140061(809)	Cover Hinge Plate Screw (2)	261-11, 12, 13
301	139172	Thread (looper) Thread Tube Cover Hinge Plate (4)	261-11, 12, 13
302	12162	Cover Hinge Pin (2)	261-11, 12, 13
303	139171	Cover Catch	261-11, 12, 13
304	229(809)	Cover Catch Screw (2)	261-11, 12, 13
305	139173	Cover Lock Spring	261-11, 12, 13
306	416030	Cover Lock Spring Reinforcing Plate	261-11, 12, 13
307	416136	Cover Lock Spring Screw (2)	261-11, 12, 13
308	20995	Cover Lock Spring Position Spring	261-11, 12, 13
309	416070	Bed Rotary Shaft Bushing Flanged (right) Spacing Collar with two 504048	261-11, 12, 13
310	504048	Spacing Collar Set Screw (4)	261-11, 12, 13
311	416142	Arm Rotary Shaft Flanged Bushing (back) Oil Pump Tube Holder Screw	261-11, 12, 13
312	146790	Oil Pump Tube	261-11, 12, 13
313	416124	Arm Rotary Shaft Flanged Bushing (back) Set Screw	261-11, 12, 13
314	143641	Arm Rotary Shaft Flanged Bushing (back)	261-11, 12, 13
316	416133	Thread Guide Bracket Screw	261-11, 12, 13
317	146591	Oil Flow Body	261-11, 12, 13
318	143061	Oil Flow Body Gasket (2)	261-11, 12, 13
319	143062	Oil Flow Window	261-11, 12, 13
320	143403	Oil Flow Window (4)	261-11, 12, 13
321	416136	Oil Flow Window Cap Screw (4)	261-11, 12, 13
322	50342(809)	Thread (looper) Thread Guide Screw (4)	261-11, 12, 13
323	416034	Thread (looper) Thread Guide Bracket	261-11, 12, 13
324	416142	Guide Bracket Support Screw (upper)	261-11, 12, 13
325	139125	Guide Bracket Support	261-11, 12, 13
326	416136	Guide Bracket Support Screw (lower)	261-11, 12, 13

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

CODE	PART NO.	DESCRIPTION	MACHINE VARIETY
146	21488	Presser Foot Plate and Yielding Heel Connection	261-11
147	139135	Presser Foot Plate (front)	261-12, 13
148	139281	Thread (looper) Thread Tube (side of bed)	261-11, 12, 13
149	1255(805)	Feed Dog Screw	261-11, 12, 13
150	443(830)	Feed Bar Hinge Pin Set Screw	261-11, 12, 13
151	545407	Feed Bar Hinge Pin Set Screw Lock Nut	261-11, 12, 13
152	416145	Feed Bar Hinge Pin (eccentric)	261-11, 12, 13
153	139046	Feed Bar Hinge Pin Slide Block	261-11, 12, 13
154	504084	Connection Screw (short)	261-11, 12, 13
155	545385	Connection Screw (long)	261-11, 12, 13
156	140440(819)	Needle Bar Bushing (upper) Oil Plug Screw	261-11, 12, 13
157	416112	Needle Bar Bushing (upper)	261-11, 12, 13
158	1133(830)	Needle Bar Bushing (upper) Set Screw	261-11, 12, 13
160	416105	Arm Rotary Shaft 416097 with 416045, 143236 and 416122	261-11
	416106	Arm Rotary Shaft 416098 with 416045, 143236 and 416122	261-12
	416107	Arm Rotary Shaft 416099 with 416045, 143236 and 416122	261-13
161	416122	Needle Bar Connecting Link with 14475, 139533 and 416123	261-11, 12, 13
162	140061	Clamping Screw	261-11, 12, 13
163	416123	Needle Bar Connecting Stud with 140061(805) and 143619	261-11, 12, 13
164	139533	Needle Bar Connecting Link Screw Cap	261-11, 12, 13
165	416097	Arm Rotary Shaft with 504095, 416048 and 504120	261-12
	416098	Arm Rotary Shaft with 504095, 416048 and 504120	261-12
	416099	Arm Rotary Shaft with 504095, 416048 and 504120	261-13
166	504120	Needle Bar Crank Position Screw	261-11, 12, 13
167	504095	Set Screw	261-11, 12, 13
168	416048	Needle Bar Connecting Link Hinge Stud Clamping Screw	261-11, 12, 13
169	51460	Thread (needle) Take-up Clamping Screw	261-11, 12, 13
170	416033	Thread (needle) Take-up with 51460	261-11, 12, 13
171	20799-001	Needle Bar Bushing (lower)	261-11, 12, 13
	20799-002	Needle Bar Bushing (lower)	261-12
172	1133(830)	Needle Bar Bushing (lower) Set Screw	261-11, 12, 13
173	146573	Needle Bar	261-11, 12, 13
174	143497	Needle Clamp Thread Guide	261-11, 12, 13
175	139116	Needle Clamp with two 143497, for gauges 1/8 inch to 1/4 inch (NOTE: State gauge required.)	261-11, 12, 13
176	1498330	Needle Set Screw (2)	261-11, 12, 13
177	143489	Needle Bar complete, for 3/32 inch to 3/16 inch gauges, Nos. 139116 and 146573 (NOTE: State gauge required.)	261-11, 12, 13
178	691(806)	Throat Plate Screw (3)	261-11, 12, 13
179	139538-000	Throat Plate for 1/8 inch and 3/16 inch gauges (NOTE: State gauge required.)	261-11, 12
	22572-012	Throat Plate for 3/16 inch gauge	261-11
	139541-016	Throat Plate for 1/4 inch gauge (NOTE: State gauge required.)	261-11
	139389-000	Throat Plate for 3/16 inch to 1/4 inch gauges (NOTE: State gauge required.)	261-12
	139385-000	Throat Plate for 3/16 inch and 1/4 inch gauges (NOTE: State gauge required.)	261-13
180	416073	Oil Connection	261-11, 12, 13
181	416001	Oil Connection Screw (2)	261-11, 12, 13
182	143459	Slide Block Cover (back)	261-11, 12, 13
183	143460	Slide Block Cover (front)	261-11, 12, 13
184	549030	Forked Connection Crank Clamping Screw	261-11, 12, 13
185	416075	Looper Avoiding Eccentric Forked Connection Crank with 549030	261-11, 12, 13
186	146805	Needle Bar Bushing (lower and upper) Oil Wick complete, Nos. 146703, 146804 and two 146580	261-11, 12, 13
187	146580	Oil Wick Clip (2)	261-11, 12, 13
188	146703	Oil Wick Clamp and Retainer	261-11, 12, 13
189	146804	Needle Bar Bushing Oil Wick	261-11, 12, 13
190	416068	Needle Bar Connecting Stud Slide Block Guide Screw (2)	261-11, 12, 13
191	416102	Bed Rotary Shaft Bushing (left) and Looper Avoid Bracket Oil Tube with two each 143124 and 416064	261-11, 12, 13
192	226(805)	Slide Block Cover Screw (2)	261-11, 12, 13
193	416064	Oil Tube Clamping Sleeve Nut (2)	261-11, 12, 13
194	143124	Oil Tube Clamping Sleeve (2)	261-11, 12, 13
195	416065	Oil Tube Clamping Sleeve Adapter (3)	261-11, 12, 13
196	416085	Thread (looper) Take-up Stripper Plate Bracket 416084 with 240300, 7071, 51282(809), 139145, 139146, 139147, 139148, 139149, 139154, 139155, 139156, 139157, 143517, 416140, 416142 and two each 416137, 416138, 665(809) and 17022	261-11, 12, 13
197	240300	Thread Retainer Screw	261-11, 12, 13
198	139157	Thread Retainer	261-11, 12, 13
199	139156	Thread Separator	261-11, 12, 13
200	139154	Thread Guide (left)	261-11, 12, 13
201	139148	Thread (looper) Take-up Stripper	261-11, 12, 13
202	416138	Thread (looper) Take-up Stripper Plate Screw (2)	261-11, 12, 13
203	416137	Thread (looper) Take-up Stripper Screw (2)	261-11, 12, 13
204	416140	Thread Guide (right) Screw	261-11, 12, 13
205	7071	Thread Guide (right) Screw Washer	261-11, 12, 13
206	139155	Thread Guide (right)	261-11, 12, 13
207	416142	Thread Guide (left) Screw	261-11, 12, 13
208	17022	Stripper Screw Washer (2)	261-11, 12, 13
209	139147	Take-up Cover Lock Spring	261-11, 12, 13
210	51282(809)	Take-up Cover Lock Spring Screw	261-11, 12, 13
211	139145	Thread (looper) Take-up Cover	261-11, 12, 13
212	143455	Looper Avoiding Eccentric Forked Connection	261-11, 12, 13
213	665(809)	Stripper Plate Thread Guard Screw (2)	261-11, 12, 13
214	416084	Stripper Plate Bracket	261-11, 12, 13
215	139146	Take-up Cover Hinge Pin	261-11, 12, 13
216	143517	Stripper Plate	261-11, 12, 13
217	139142	Stripper Plate Thread Guard	261-11, 12, 13
218	416132	Stripper Plate Bracket Screw (2)	261-11, 12, 13
219	156772	Oil Removing Tube (head end)	261-11, 12, 13
220	143619	Solid Oil Wick (felt)	261-11, 12, 13

LIST OF PARTS FOR 261-11, 12 and 13 MACHINES

CODE	PART NO.	DESCRIPTION	MACHINE VARIETY
86	32824	Looper (front) for 1/4 inch gauge	261-11, 12, 13
87	143474	Looper Gate (right) 143473 with 143477 and 51282(819), for Throat Plates 3/4 inch wide	261-11, 12, 13
	143476	Looper Gate (right) 143475 with 143477 and 51282(819), for Throat Plates 7/8 inch wide	261-11, 12, 13
88	143477	Looper Gate (right) Lock Spring	261-11, 12, 13
89	51282(819)	Looper Gate (right) Lock Spring Screw	261-11, 12, 13
90	143473	Looper Gate (right) for Throat Plates 3/4 inch wide	261-11, 12, 13
	143475	Looper Gate (right) for Throat Plates 7/8 inch wide	261-11, 12, 13
91	143478	Looper Gate Hinge Pin (2)	261-11, 12, 13
92	416043	Looper Eccentric Collar and Support with 416020 and two 545390	261-11, 12, 13
93	139537-000	Feed Dog, 21 teeth (16 teeth to the inch), for 1/8 inch and 5/32 inch gauges (NOTE: State gauge required.)	261-11, 12
	22571-012	Feed Dog (14 teeth to the inch), for 3/16 inch gauge, for Chaining-off	261-11
	139540-016	Feed Dog, 19 teeth (14 teeth to the inch), for 1/4 inch gauge (NOTE: State gauge required.)	261-11
	139388-000	Feed Dog, 16 teeth (12 teeth to the inch), for 3/16 inch and 1/4 inch gauges (NOTE: State gauges required.)	261-12
	139414-000	Feed Dog, 11 teeth (8 teeth to the inch), for 3/16 inch to 1/4 inch gauges (NOTE: State gauge required.)	261-13
94	143448	Feed Bar	261-11, 12, 13
95	504091	Plug Screw	261-11, 12, 13
96	416020	Clamping Screw	261-11, 12, 13
97	139065	Link Hinge Pin (2)	261-11, 12, 13
98	139064	Connecting Link	261-11, 12, 13
99	1047(830)	Set Screw	261-11, 12, 13
101	446(830)	Set Screw	261-11, 12, 13
102	139534	Looper Driving Arm Hinge Stud	261-11, 12, 13
103	545390	Set Screw (2)	261-11, 12, 13
104	139030	Bed Rotary Shaft Bushing (left) Cover	261-11, 12, 13
105	143643	Bed Rotary Shaft Bushing (left) "D" Pin	261-11, 12, 13
106	143644	Bed Rotary Shaft Bushing (left)	261-11, 12, 13
107	416044	Set Screw	261-11, 12, 13
108	143462	Looper Eccentric Connection with 143473	261-11, 12, 13
109	416091	Looper Eccentric and Feed Lifting Eccentric with two 545390	261-11, 12, 13
110	545068	Looper Eccentric and Feed Lifting Eccentric Set Screw	261-11, 12, 13
111	416040	Feed Lifting Eccentric Forked Connection	261-11, 12, 13
112	143451	Feed Lifting Eccentric Forked Connection Slide Block	261-11, 12, 13
113	143450	Feed Eccentric Slide Block	261-11, 12, 13
114	416071	Feed Eccentric (adjustable) complete, Nos. 7071, 416139 and two 51061(830)	261-11, 12, 13
115	416139	Feed Eccentric Clamping Washer Screw	261-11, 12, 13
116	51061(830)	Set Screw (2)	261-11, 12, 13
117	416018	Feed Regulating Screw	261-11, 12, 13
118	7071	Feed Eccentric Clamping Washer	261-11, 12, 13
119	416047	Tension Bracket Screw	261-11, 12, 13
120	416052	Pressure Regulating Thumb Screw	261-11, 12, 13
121	416021	Pressure Regulating Thumb Screw Nut	261-11, 12, 13
122	139158	Thread (Looper) Thread Guide (2)	261-11, 12, 13
	139158	Thread (needle) Thread Guide (2)	261-11, 12, 13
123	416032	Thread (needle) Thread Guide Bracket	261-11, 12, 13
124	139177	Thread (needle) Eyelet	261-11, 12, 13
125	416138	Thread (needle) Eyelet Screw	261-11, 12, 13
126	32833	Presser Bar Spring Guide Pin	261-11, 12, 13
127	416003	Stop Screw	261-11, 12, 13
128	545454	Stop Screw Nut	261-11, 12, 13
129	416010	Tension (needle thread) Releasing Shaft Stop Screw 416003 with 545454	261-11, 12, 13
130	146159	Presser Bar Spring	261-11, 12, 13
131	416025	Tension (needle thread) Bracket (NOTE: State color required.)	261-11, 12, 13
132	143447	Face Plate	261-11, 12, 13
133	143543	Face Plate Gasket	261-11, 12, 13
134	416115	Presser Bar Lifting Bracket with 416005	261-11, 12, 13
135	416005	Clamping Screw	261-11, 12, 13
136	146751	Presser Bar Bushing (lower)	261-11, 12, 13
137	416116	Presser Bar Stop with 416134	261-11, 12, 13
138	416134	Clamping Screw	261-11, 12, 13
	416134	Presser Foot Screw	261-11, 12, 13
139	416041	Presser Bar	261-11, 12, 13
140	1133(805)	Presser Bar Bushing (lower) Set Screw	261-11, 12, 13
141	139138-000	Presser Foot (triple hinged) complete, for 1/8 inch and 5/32 inch gauges, Nos. 37160, 139134, 139135, 139137, 146167 and three 26276 (NOTE: State gauge required.)	261-12
	139223-000	Presser Foot (triple hinged) complete, for 3/16 inch and 1/4 inch gauges	261-12
	139420-000	Presser Foot (triple hinged) complete, for 3/16 inch and 1/4 inch gauges	261-12
	21492-005	Presser Foot (triple hinged) complete, for 1/8 inch gauge	261-11
	21492-010	Presser Foot (triple hinged) complete, for 5/32 inch gauge	261-11
	21492-012	Presser Foot (triple hinged) complete, for 3/16 inch gauge	261-11
	21492-016	Presser Foot (triple hinged) complete, for 1/4 inch gauge	261-11
142	37160	Presser Foot Plate Connection Spring	261-12, 13
	21489	Presser Foot Plate and Welding Reel Connection Spring	261-11
143	26276	Hinge Pin (3)	261-12, 13
	26276-004	Hinge Pin	261-11
144	139134	Presser Foot Plate (back) (NOTE: State gauge required.)	261-12, 13
	21487-008	Presser Foot Plate, for 1/8 inch gauge	261-11
144	21487-010	Presser Foot Plate, for 5/32 inch gauge	261-11
	21487-012	Presser Foot Plate, for 3/16 inch gauge	261-11
	21487-016	Presser Foot Plate, for 1/4 inch gauge	261-11
145	139137	Presser Foot Shank	261-11, 13
	21490	Presser Foot Shank	261-11
146	146167	Presser Foot Plate Connection	261-11, 13