

 
 
SINGER

262-2

SINGER®

262-2

PARTS

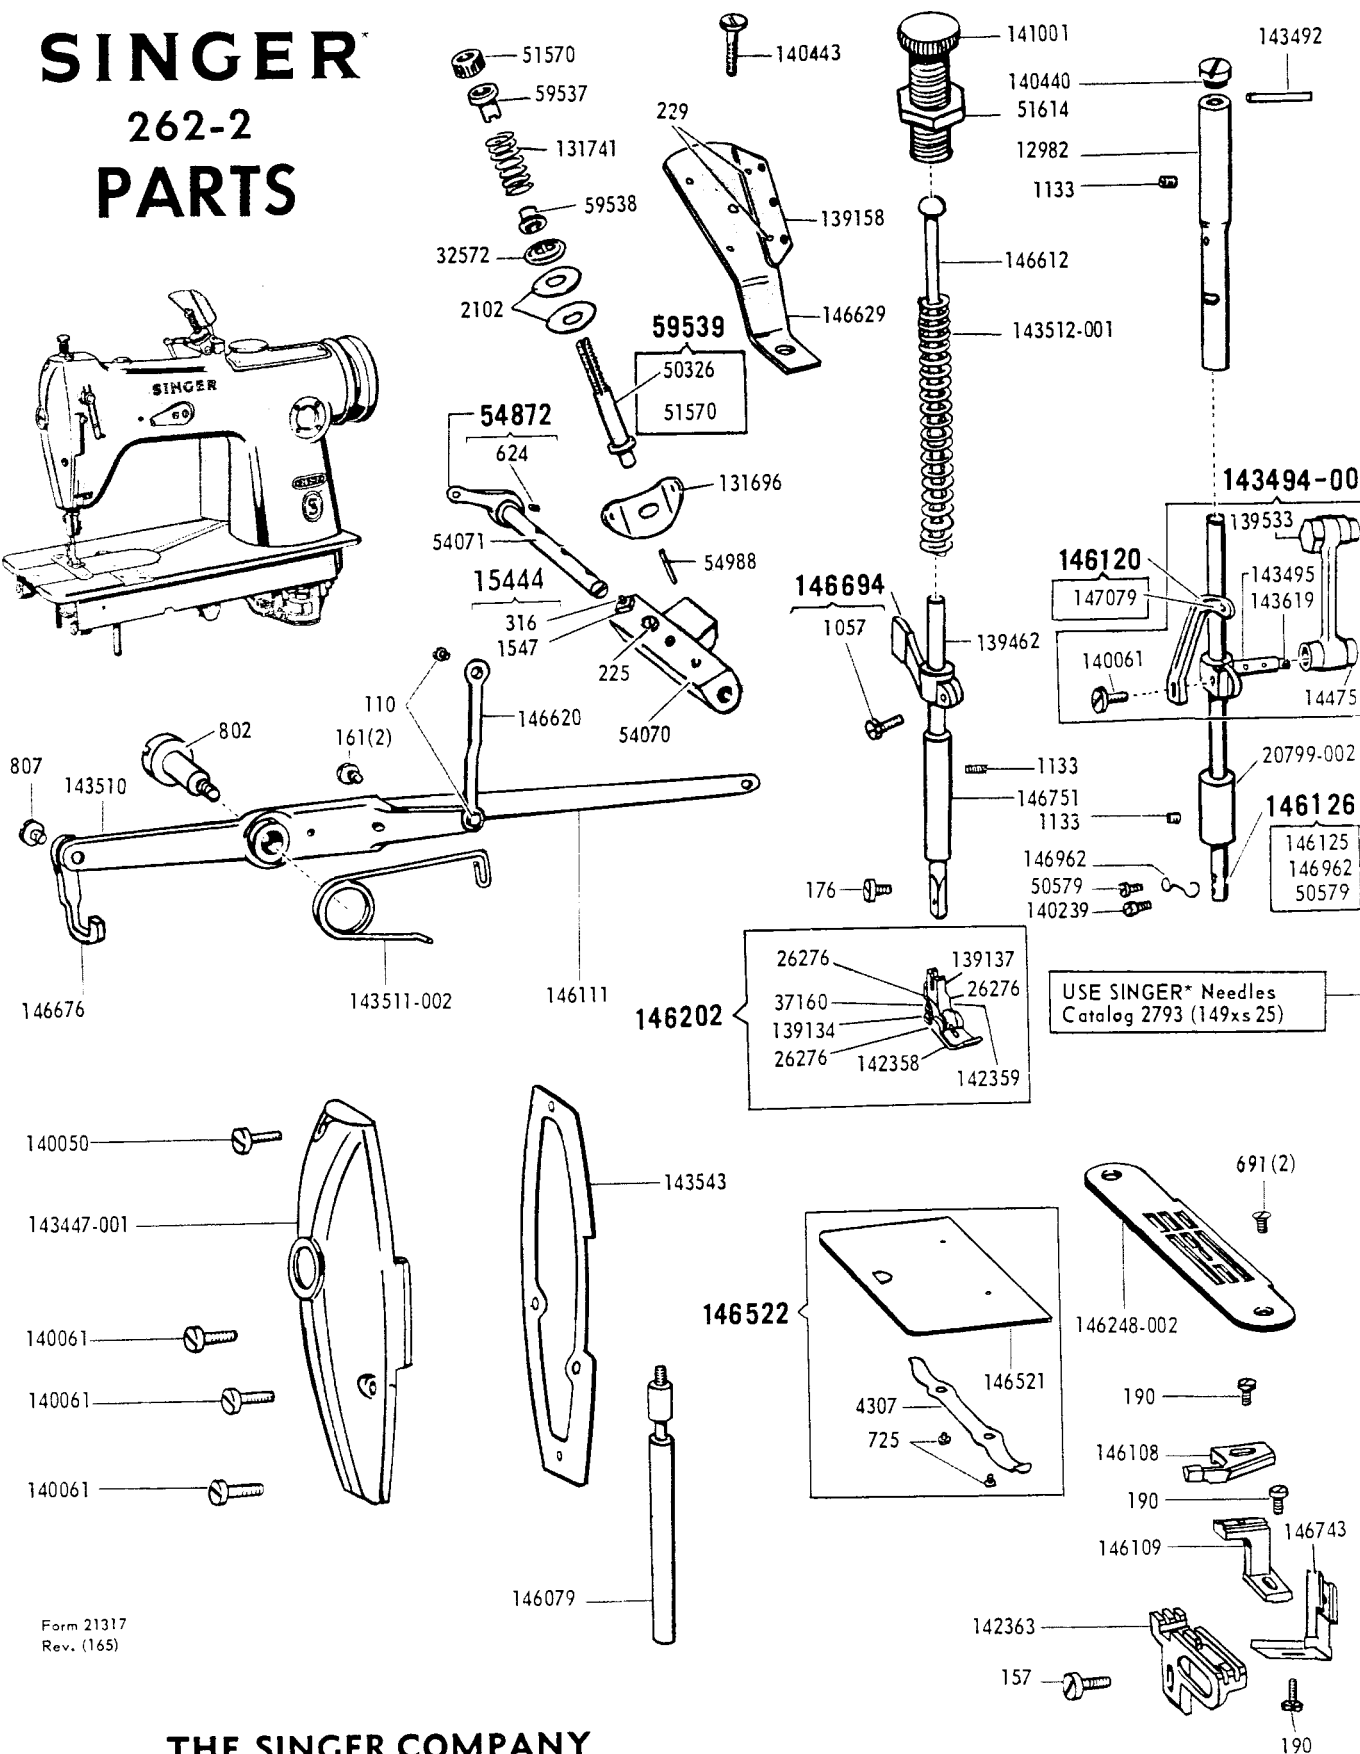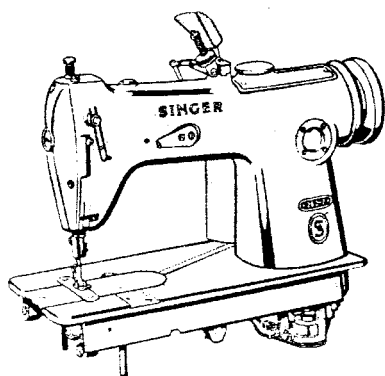

USE SINGER® Needles
Catalog 2793 (149xs 25)

Form 21317
Rev. (165)

 
THE SINGER COMPANY

 
Copyright © 1964 by The Singer Company
Copyright Under International Copyright Union
All Rights Reserved under Inter-American Copyright Union

*A Trademark of THE SINGER COMPANY

Insert in Form 21265(163), Singer Service Manual Class 262

Printed in U. S.

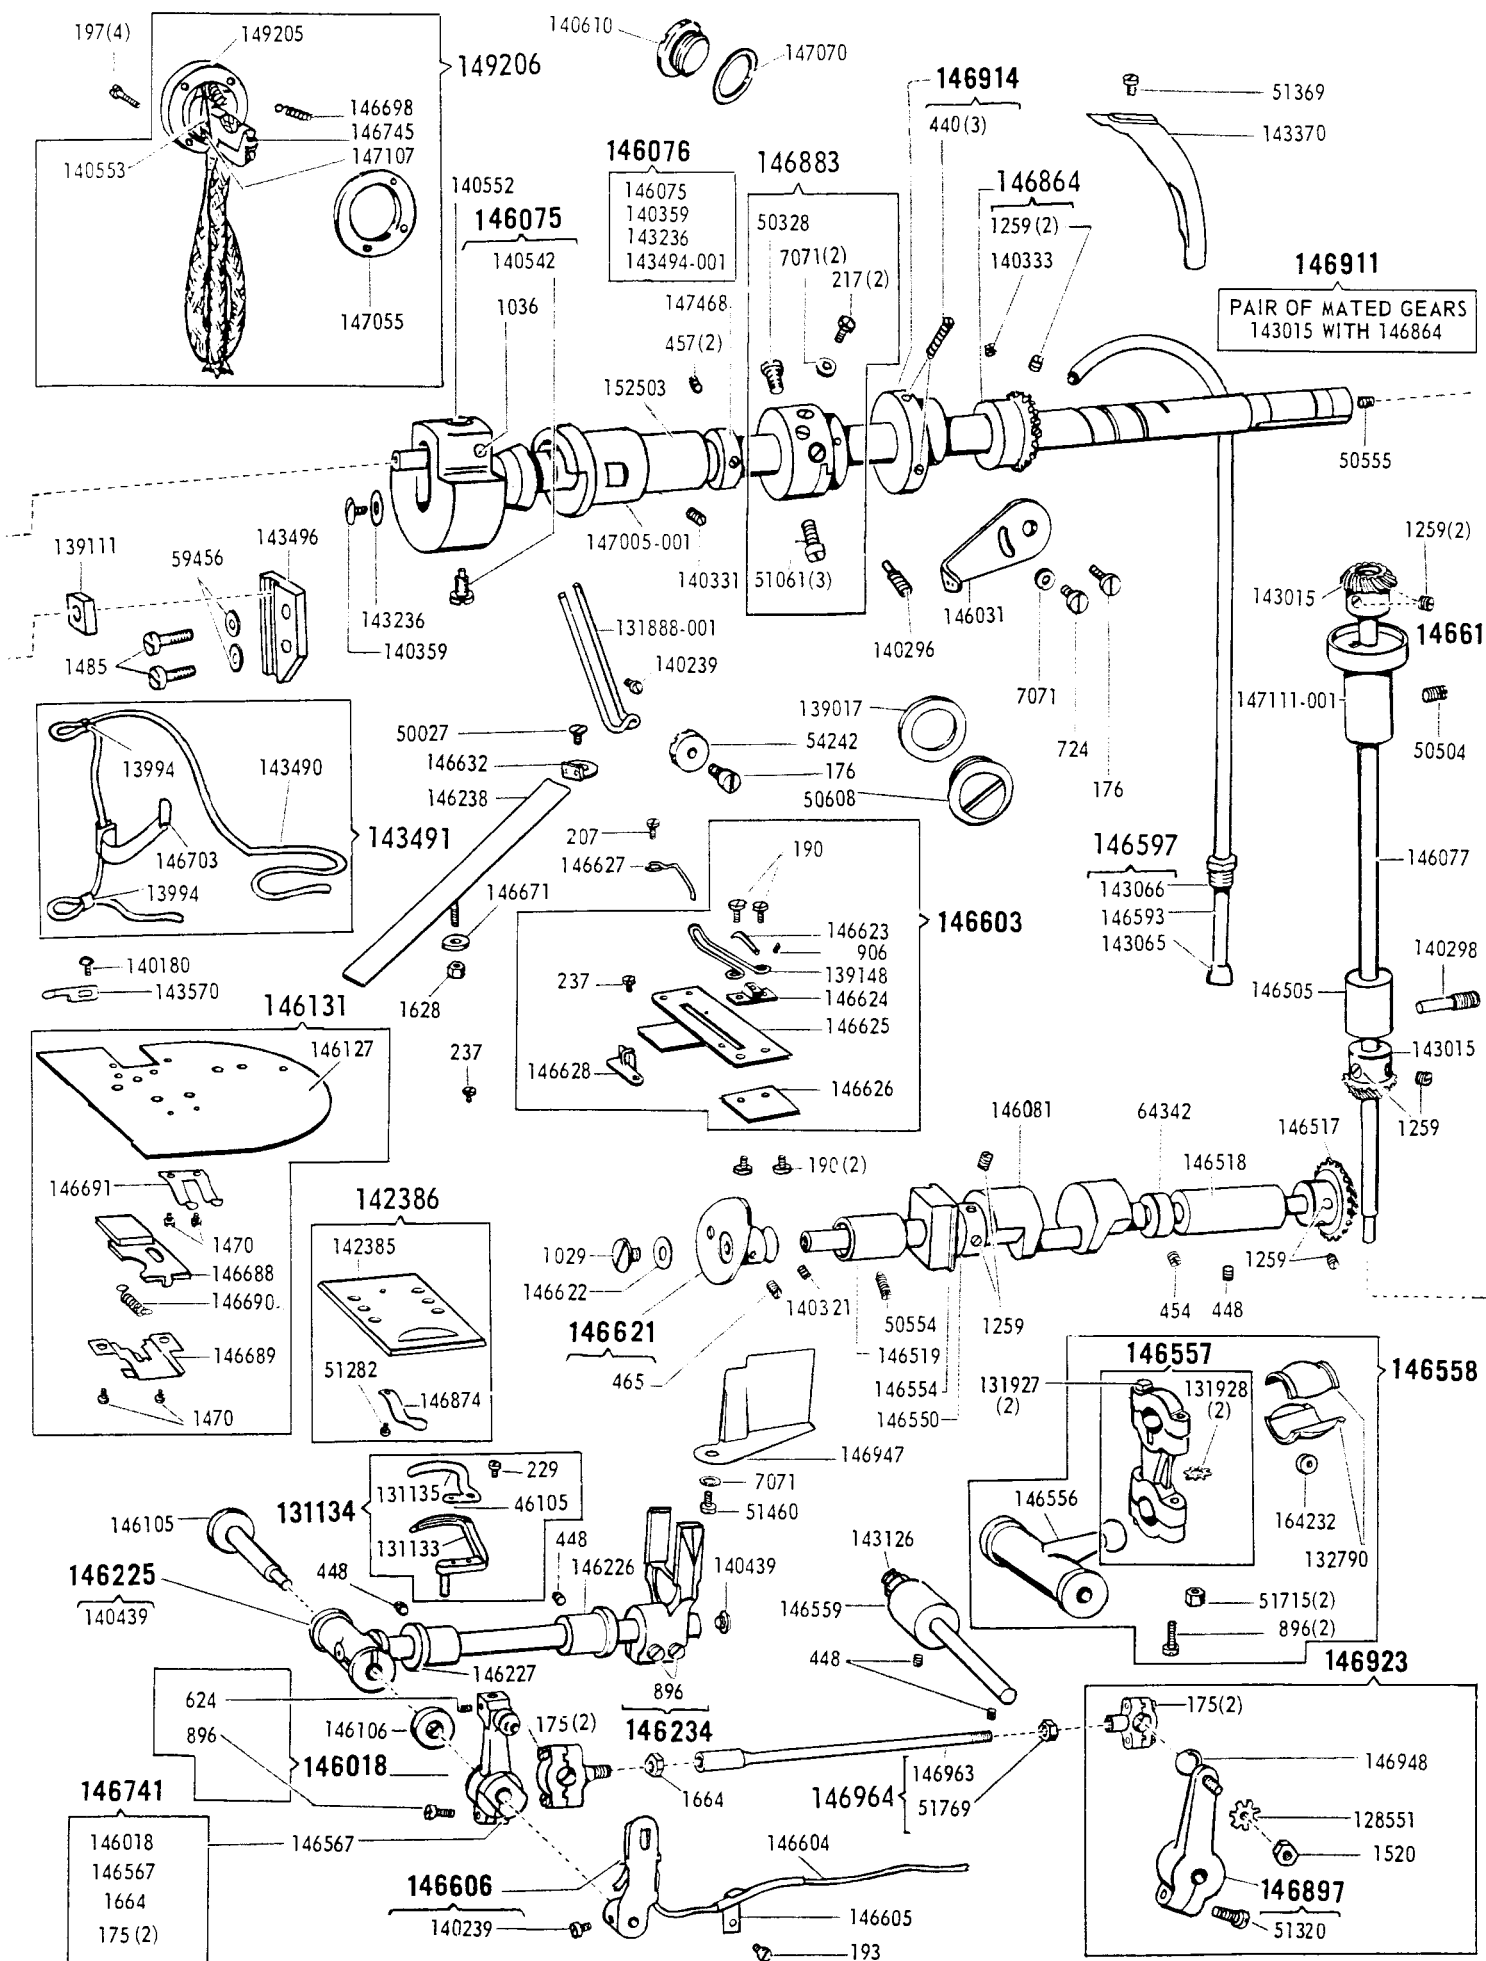

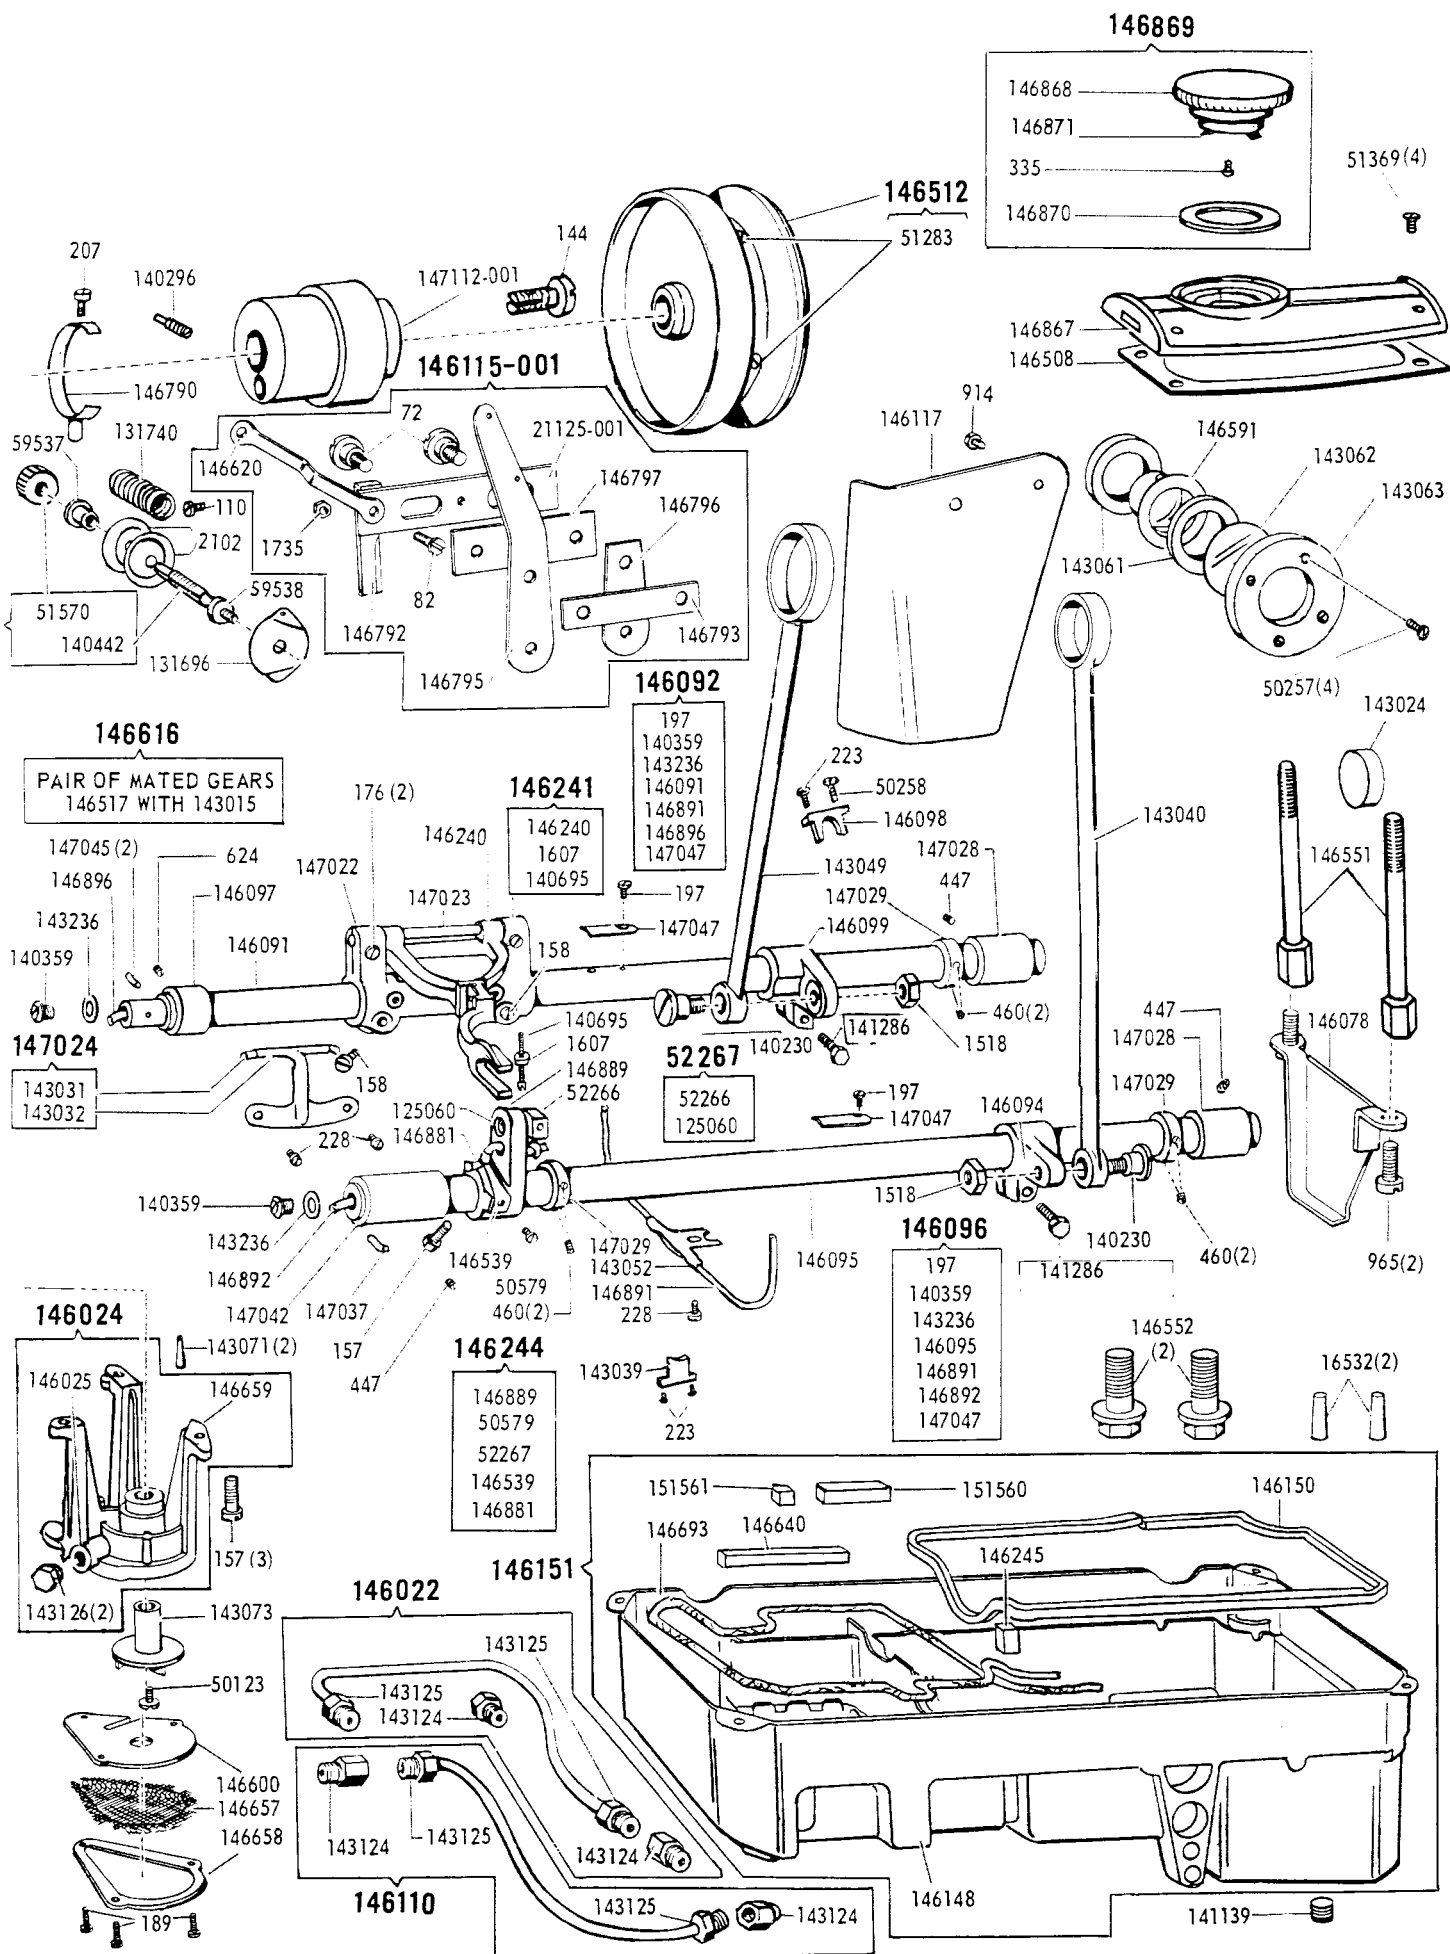

LIST OF PARTS 262-2 MACHINE

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
72(803)	Tension (looper thread) Releaser	896(830)	Looper Holder Clamping Screw	52267	Feed Lifting Rock Shaft Slide Block
82(803)	Tension (looper thread) Releaser and	906(830)	Thread (looper) Take-up Stripper	52266 with 125060	
110(803)	Releaser Slide Screw		Set Screw	54070	Tension (needle thread) Bracket
110(803)	Tension (looper thread) Releaser	914(809)	Tension (looper thread) Thread Guard	54071	Tension (needle thread) Releasing
110(803)	Slide Connecting Link Hinge Screw	965(805)	Screw		Shaft
110(803)	Tension (needle thread) Releasing	1029(809)	Bed Leg (back) Screw (2)	54242	Slack Thread Controller Clamp
	Shaft Crank Connecting Link Hinge	1036(830)	Thread (looper) Take-up Screw	54872	Tension (needle thread) Releasing
	Screw (2)		Needle Bar Connecting Link Hinge		Shaft Crank with 624(830)
144(804)	Arm Shaft (horizontal) Screw (back)	1057(830)	Stud Position Set Screw	54988	Tension (needle thread) Releasing Pin
157(805)	Oil Pump (centrifugal) Body Screw (3)		Presser Bar Guide Bracket Clamping	59359	Tension (needle thread) Screw Stud
157(809)	Feed Dog Screw	1133(830)	Screw		50326(803) with 51570(803)
157(819)	Feed Lifting Rock Shaft Crank (front)	1133(830)	Needle Bar Bushing (lower) Set Screw	59456	Needle Bar Connecting Stud Slide
	Clamping Screw	1133(830)	Needle Bar Bushing (upper) Set Screw		Block Guide Screw Washer (2)
158(805)	Feed Bar Carrier Clamping Screw (2)		Presser Bar Bushing (lower) Set	59537	Tension (looper thread) Spring
161(811)	Presser Bar Lifting Lever Extension		Screw		Bushing (large)
	Screw (2)	1259(830)	Bed Rotary Shaft Bevel Gear Set	59537	Tension (needle thread) Spring
175(830)	Looper Ball Crank Pitman End		Screw (2)	59538	Bushing (large)
175(830)	Bearing (left) Cap Screw (2)	1259(830)	Arm Shaft (upright) Bevel Gear	59538	Tension (looper thread) Spring Bush-
175(830)	Looper Ball Crank Pitman End		(upper) Set Screw (2)		ing (small)
176(809)	Bearing (right) Body Cap Screw (2)	1259(830)	Arm Shaft (horizontal) Bevel Gear		Tension (needle thread) Spring
	Slack Thread Controller Clamp		Set Screw (2)		Bushing (small)
	Screw	1259(830)	Looper Avoiding Eccentric Set Screw	59539	Tension (needle thread) Screw Stud
176(809)	Presser Foot Screw		(2)		50326(803) with 51570(803)
176(809)	Thread (needle) Eyelet (side of arm)	1259(830)	Arm Shaft (upright) Bevel Gear	64342	Bed Rotary Shaft Collar with 454(830)
	Position Screw		(lower) Set Screw (2)	125060	Feed Bar Slide Block Hinge Stud
176(805)	Feed Bar Carrier Hinge Pin Clamping	1470(819)	Bed Slide (right) Latch Guide Screw	126150	Looper Holder Rock Shaft Bracket
	Screw (2)		(2)		Screw Washer (2)
189(805)	Oil Pump (centrifugal) Screen Frame	1470(819)	Bed Slide (right) Spring Screw (2)	128551	Looper Ball Crank Pitman Ball Screw
	Screw (3)	1485(805)	Needle Bar Connecting Stud Slide		Stud (right) Nut Locking Plate
190(805)	Thread (looper) Take-up Stripper		Block Guide Screw (2)	131133	Looper
190(809)	Plate Support: Plate Screw (4)	1518(809)	Feed Rock Shaft Connecting Rod Hinge	131134	Looper 131133 with 129(809) and
	Thread (looper) Take-up Stripper		Screw Nut		131135
	Staple Screw (2)	1518(809)	Feed Lifting Rock Shaft Connecting	131135	Looper Needle Guard with 46105
190(809)	Needle Guard Holder Bracket Screw		Rod Hinge Screw Nut	131696	Tension (looper thread) Thread Guide
190(809)	Needle Guard Holder Screw	1520(809)	Looper Ball Crank Pitman Ball Screw	131696	Tension (needle thread) Thread Guide
190(809)	Needle Guard Screw		Stud (right) Nut	131740	Tension (looper thread) Spring
193(805)	Oil Wick Holder Tube Bracket Screw	1547(809)	Tension (needle thread) Releasing	131741	Tension (needle thread) Spring
197(811)	Oil Removing Wick (head end) Hinge		Shaft Stop Screw Nut	131888-001	Slack Thread Controller
	Plate and Cover Screw (4)	1607(819)	Feed Dog Stop Screw Nut		Looper Ball Crank Connection Cap
197(805)	Feed Lifting Rock Shaft Oil Wick	1628(819)	Thread (looper) Thread Tube Screw	131927	(upper) Screw Stud (2)
	Clamping Plate Screw		Stud Nut	131928	Looper Ball Crank Connection Cap
197(805)	Feed Rock Shaft Oil Wick Clamping	1664(809)	Looper Ball Crank Pitman End		(upper) Screw Stud Nut Lock Washer
	Plate Screw		Bearing (left) Nut		(2)
207(805)	Arm Shaft (horizontal) Flanged Bush-	1735(803)	Tension (looper thread) Releaser and	132790	Looper Ball Crank Connection Ball
	ing (back) Oil Pump Tube Holder Screw		Releaser Slide Link Nut		Sleeve (two pieces)
207(830)	Thread (looper) Take-up Thread	2102	Tension (needle thread) Disc (2)	139017	Arm Hole Plug Screw Washer (for
	Guide (left) Screw	2102	Tension Disc (looper thread) (2)		use with 50608)
217(809)	Feed Eccentric Clamping Washer	4307	Bed Slide (left) Spring	139111	Needle Bar Connecting Stud slide
	Screw (2)	7071	Thread (needle) Eyelet (side of arm)		Block
223(805)	Feed Lifting Rock Shaft Cap Screw (2)		Position Screw Washer	139134	Presser Foot Plate (back) (3/32" to
223(805)	Feed Rock Shaft Cap Screw (short)	7071	Feed Eccentric Clamping Washer (2)		5/32" gauges)
225(819)	Tension (needle thread) Screw Stud	7071	Looper Ball Crank Pitman Rod Oil	139137	Presser Foot Shank
	Hole Plug		Shield Screw Washer	139148	Thread (looper) Take-up Stripper
228(805)	Feed Lifting Rock Shaft and Feed	12982	Needle Bar Bushing (upper)		Staple
	Rock Shaft Oil Wick Holder Screw	13994	Needle Bar Bushing (lower and upper)	139158	Thread (needle) Thread Guide
228(805)	Feed Bar Carrier Oil Wick Holder		Oil Wick Clip (2)	139462	Presser Bar
	Screw (2)	14475	Needle Bar Connecting Link Screw	139533	Needle Bar Connecting Link Screw
229(809)	Looper Needle Guard Screw		Cap Disc (fiber)		Cap
229(809)	Thread (needle) Thread Guide Screw	15444	Tension (needle thread) Releasing	140050(809)	Face Plate Screw (upper)
	(2)		Shaft Stop Screw 110(533) with	140061(809)	Face Plate Screw (lower) (3)
231(805)	Looper Holder Rock Shaft Bracket		1547(809)	140061(805)	Needle Bar Connecting Stud Clamping
	Oil Plug Screw (back)	16532	Arm Dowell Pin (2)		Screw
237(809)	Thread (looper) Take-up Thread	20799-302	Needle Bar Bushing (lower)	140180(809)	Thread Guide (front of arm) Screw
	Guide (right) Screw	21125-301	Tension (looper thread) Releaser	140228(830)	Feed Rock Shaft Crank Clamping
237(809)	Thread (looper) Take-up Stripper		Slide		Screw
	Plate Screw	26276	Presser Foot Plate (back) Hinge Pin	140230(803)	Feed Lifting Rock Shaft Connecting
310(803)	Tension (needle thread) Releasing	26276	Presser Foot Plate (front) Hinge Pin		Rod Hinge Screw
	Shaft Stop Screw	26276	Presser Foot Plate Connection Hinge	140230(803)	Feed Rock Shaft Connecting Rod Hinge
335(819)	Arm Top Cover and Stitch Regulator		Pin		Screw
	Cap Latch Screw	32572	Tension (needle thread) Releasing	140239(830)	Needle Set Screw
440(830)	Feed Lifting Eccentric Set Screw (3)		Disc	140239(809)	Slack Thread Controller Position
447(830)	Feed Lifting Rock Shaft Bushing	37160	Presser Foot Plate Connection Spring		Screw
	(back) Set Screw	46105	Looper Needle Guard Pin	140239(830)	Oil Wick Position Bracket Screw
447(830)	Feed Lifting Rock Shaft Bushing	50027(809)	Thread (looper) Thread Tube Thread	140296(830)	Arm Shaft (horizontal) Flanged Bush-
	(front) Set Screw		Guide Screw		ing (back) Set Screw
447(830)	Feed Rock Shaft Bushing (back) Set	50123(805)	Oil Pump (centrifugal) Impeller Lock-	140296(830)	Arm Shaft (horizontal) Bushing
	Screw		ing Screw		(center) Set Screw
448(830)	Looper Holder Rock Shaft Bushing	50257(809)	Oil Flow Window Cap Screw (4)	140298(830)	Arm Shaft (upright) Bushing (lower)
	(front) Set Screw	50258(805)	Feed Rock Shaft Cap Screw (long)		Set Screw
448(830)	Looper Holder Rock Shaft Bushing	50326(803)	Tension (needle thread) Screw Stud	140321(830)	Bed Rotary Shaft Oil Plug Screw
	(back) Set Screw	50328(803)	Feed Regulating Screw	140331(830)	Arm Shaft (horizontal) Flanged Bush-
448(830)	Looper Ball Crank Hinge Pin Set	50504(830)	Arm Shaft (upright) Bushing (upper)		ing (front) Set Screw
	Screw (2)		Set Screw	140333(830)	Arm Shaft (horizontal) Bevel Gear
448(830)	Bed Rotary Shaft Bushing (back) Set	50554(830)	Bed Rotary Shaft Bushing (front) Set		Position Screw
	Screw		Screw	140359(805)	Arm Shaft (horizontal) Screw Plug
454(830)	Bed Rotary Shaft Collar Set Screw	50555(805)	Arm Shaft (horizontal) Plug Screw		(front)
457(830)	Arm Shaft (horizontal) Thrust Collar	50579(809)	Feed Bar Slide Block Oil Wick Holder	140359(805)	Feed Rock Shaft Oil Plug Screw
	Set Screw (2)		Screw	140439(805)	Feed Lifting Rock Shaft Oil Plug Screw
460(830)	Feed Rock Shaft Collar Set Screw (2)	50579(819)	Needle Bar Thread Guide Screw		Looper Holder Rock Shaft Oil Plug
460(830)	Feed Lifting Rock Shaft Collar Set	50608(813)	Arm Hole Plug Screw (for access to		Screw
	Screw (4)		Needle Bar Bushing Oil Wick)	140440(819)	Needle Bar Bushing (upper) Oil Plug
465(830)	Thread (looper) Take-up Set Screw	51061(830)	Feed Eccentric Body Set Screw (3)		Screw
624(830)	Tension (needle thread) Releasing	51282(819)	Attachment Slide Spring Screw	140442(803)	Tension (looper thread) Screw Stud
	Shaft Crank Set Screw	51283(830)	Machine Pulley Set Screw (2)	140443(809)	Tension (needle thread) Bracket Screw
624(830)	Looper Set Screw	51320(830)	Looper Ball Crank Arm Clamping	140542(830)	Needle Bar Crank Position Screw
624(830)	Feed Rock Shaft Bushing (front) Set		Screw	140552(830)	Needle Bar Connecting Link Hinge
	Screw	51369(813)	Arm Top Cover Screw (4)		Stud Clamping Screw
691(806)	Throat Plate Screw (2)	51460(805)	Oil Lead Screw	140553(805)	Oil Removing Wick (head end) Holder
724(809)	Thread (needle) Eyelet (side of arm)		Looper Ball Crank Pitman Rod Oil		Body Hinge Screw
	Screw		Shield Screw	140610	Arm Hole Plug Screw
725(819)	Bed Slide (left) Spring Screw (2)	51570(803)	Tension (needle thread) Regulating	140640(805)	Looper Holder Rock Shaft Bracket
802(819)	Presser Bar Lifting Lever Hinge		Thumb Nut		Oil Plug Screw (front)
	Screw	51570(803)	Tension (looper thread) Regulating	140695(819)	Feed Dog Stop Screw
807(819)	Presser Bar Guide Bracket Lifter		Thumb Nut	140734(805)	Looper Holder Rock Shaft Bracket
	Hinge Screw	51614(818)	Pressure Regulating Thumb Screw		Screw (2)
896(830)	Looper Ball Crank Connection Cap		Nut	141001(818)	Pressure Regulating Thumb Screw
	(lower) Screw (2)	51715(830)	Looper Ball Crank Connection Cap	141139(869)	Machine Base and Oil Reservoir
896(830)	Looper Avoiding Eccentric Connection		(upper) Screw Stud Nut (2)		Drain Plug
	Clamping Screw (2)	51769(803)	Looper Ball Crank Pitman Rod Nut	141286(805)	Feed Lifting Rock Shaft Crank (back)
		52266	Feed Bar Slide Block		Clamping Screw

PART NO.	DESCRIPTION
142358	Presser Foot Plate (front)
142359	Presser Foot Plate Connection
142363	Feed Dog, for use with 142022 and 14248-001 or 14248-002
142385	Attachment Slide
142386	Attachment Slide complete, Nos. 51282(819), 142385 and 142874
143015	Arm Shaft (upright) Bevel Gear (upper) left hand Spiral with two 1259(830)
143015	Arm Shaft (upright) Bevel Gear (lower) left hand Spiral with two 1259(830)
143024	Bed Hole Plug
143031	Feed Bar Carrier Oil Wick (felt) (For oiling Feed Bar Connecting Link)
143032	Feed Bar Carrier Oil Wick Holder
143039	Feed Lifting Rock Shaft Cap
143040	Feed Lifting Rock Shaft Connecting Rod
143049	Feed Rock Shaft Connecting Rod
143052	Feed Lifting Rock Shaft and Feed Rock Shaft Oil Wick Holder
143061	Oil Flow Body Gasket (2)
143062	Oil Flow Window
143063	Oil Flow Window Cap
143065	Oil Pipe Clamping Sleeve
143066	Oil Pipe Clamping Sleeve Nut
143071	Oil Pump (centrifugal) Body Position Pin (2)
143073	Oil Pump (centrifugal) Impeller
143124	Oil Pipe Clamping Sleeve (4)
143125	Oil Pipe Clamping Sleeve Nut (4)
143126	Looper Holder Rock Shaft Bracket
143126	Oil Pipe Clamping Sleeve Adaptor
143126	Oil Pipe Clamping Sleeve Adaptor for 146024 (2)
143126	Oil Pipe Clamping Sleeve Adaptor (fastened to Looper Ball Crank Hinge Pin)
143236	Feed Rock Shaft Oil Plug Screw Washer (fiber)
143236	Feed Lifting Rock Shaft Oil Plug Screw Washer (fiber)
143236	Arm Shaft (horizontal) Screw Plug, (front) Washer (fiber)
143372	Oil Lead
143447-001	Face Plate
143490	Needle Bar Bushing (lower and upper) Oil Wick
143491	Needle Bar Bushing (lower and upper) Oil Wick complete, Nos. 143490, 146703 and two 13994
143492	Needle Bar Bushing (lower and upper) Oil Wick Guide Tube (inside face of arm)
143494-001	Needle Bar Connecting Link with 139533 and 143495
143495	Needle Bar Connecting Stud with 140061(805) and 143612
143496	Needle Bar Connecting Stud Slide Block Guide
143513	Presser Bar Lifting Lever
143511-002	Presser Bar Lifting Lever Spring
143512-001	Presser Bar Spring
143543	Face Plate Gasket
143570	Thread Guide (front of arm)
143610	Needle Bar Connecting Stud Oil Wick (felt)
144443(804)	Tension (needle thread) Bracket Screw
146013	Looper Holder with 944(830) and 896(830)
146022	Oil Pipe with two each 143124 and 143125 for oiling Looper Rock Shaft Hinge Pin
146024	Oil Pump (centrifugal) Body 146659 with 146025 and two 143126
146025	Oil Pump (centrifugal) Body Plug
146031	Thread (needle) Eyelet (side of arm)
146075	Arm shaft (horizontal) with 1236(830) and 140542(830)
146076	Arm shaft (horizontal) 146075 with 140359, 143236 and 143494-001
146077	Arm Shaft (upright)
146078	Bed Leg (back)
146079	Bed Leg (front, long)
146081	Bed Rotary Shaft
146091	Feed Rock Shaft
146092	Feed Rock Shaft, Nos. 197(805), 140359(805), 143236, 146091, 146891, 146890, 147047 and length of 122" Wicking
146094	Feed Lifting Rock Shaft Crank with 140228(830)
146095	Feed Lifting Rock Shaft
146096	Feed Lifting Rock Shaft, Nos. 197(805), 140359(805), 143236, 146095, 146891, 146892, 147047 and length of 122" Wicking
146097	Feed Rock Shaft Bushing (front)
146098	Feed Rock Shaft Cap
146099	Feed Rock Shaft Crank with 140228(830)
146103	Looper Holder Hinge Pin
146106	Looper Holder Hinge Pin Spacer
146108	Needle Guard
146109	Needle Guard Holder
146110	Oil Pipe with two each 143124 and 143125
146111	Presser Bar Lifting Lever Extension

146115-001	Tension (Looper thread) Releaser, Nos. 82(803), 1735(803), 21125-001, 146620, 146792, 146793, 146795, 146796, 146797 and two 72(803)
146117	Tension (Looper thread) Thread Guard
146120	Thread (needle) Take-up with 147079
146125	Needle Bar (hollow) with 140239(830)
146126	Needle Bar complete, Nos. 50579(819), 146125 and 146962
146127	Bed Slide (right) Body
146131	Bed Slide (right) complete, Nos. 146127, 146688, 146689, 146690, 146691 and four 1470(819)
146148	Machine Base and Oil Reservoir with 141139(869)
146150	Machine Base and Oil Reservoir Gasket
146151	Machine Base and Oil Reservoir 146148 with 146150, 146245, 146640, 146693, 151560 and 151561 (Agents only)
146202	Presser Foot (triple hinged) complete, Nos. 37160, 139134 (3 32" to 5 32" gauges), 139137, 142358, 142359 and three 26276 for use with 142363 and 146248-001 or 146248-002 NOTE: No. 146202 is furnished as regular to the machine.
146225	Looper Holder Rock Shaft with 140439(805)
146226	Looper Holder Rock Shaft Bushing (back)
146227	Looper Holder Rock Shaft Bushing (front)
146234	Looper Avoiding Eccentric Connection (forked) with two 896(830)
146238	Thread (Looper) Thread Tube
146240	Feed Bar
146241	Feed Bar 146240 with 1607(819) and 140675(819)
146244	Feed Lifting Rock Shaft Crank (front) 146244 with 50597(804), 52267, 146539 and 146581
146245	Machine Base and Oil Reservoir Oil Return Wick Position Pad (felt)
146247	Throat Plate for use with 142357 and 146202
146248-002	Throat Plate for use with 146242
146505	Arm Shaft (upright) Bushing (lower)
146508	Arm Top Cover Gasket
146512	Machine Pulley with two 51253(830)
146517	Bed Rotary shaft Bevel Gear, right hand spiral with two 1259(830)
146518	Bed Rotary Shaft Bushing (back)
146519	Bed Rotary Shaft Bushing (front)
146521	Bed Slide (left)
146522	Bed Slide (left) complete, Nos. 4307, 146521 and two 725(819)
146539	Feed Bar Slide Block Oil Wick Holder
146550	Looper Avoiding Eccentric with two 1259(830)
146551	Arm Screw Stud (back) (2)
146552	Arm Screw (front) (2)
146554	Looper Avoiding Eccentric Slide Block
146556	Looper Ball Crank
146557	Looper Ball Crank Connection with two 131428 (Agents only)
146558	Looper Ball Crank Connection with 132700, 146555, 164232 and two 131925 (for Agents only)
146559	Looper Ball Crank Hinge Pin
146567	Looper Holder Bushing (eccentric)
146591	Oil Flow Body
146593	Oil Pipe
146597	Oil Pipe complete from Oil Pump to Arm Shaft (horizontal) Center Bearing 146593 with 143055 and 143086 (Agents only)
146600	Oil Pump (centrifugal) Cover
146603	Thread (Looper) Take-up Stripper Plate 146625 with 237(804), 137148, 146623, 146624, 146626, 146628 and two 190(804)
146604	Oil Wick for oiling Looper Ball Crank Pitman End Bearing (left)
146605	Oil Wick Holder
146606	Oil Wick Position Bracket with 140239(830)
146612	Presser Bar Spring Guide Pin
146616	Pair of Mated Gears for lower Shaft (Nos. 143015 and 146517) (for Agents only)
146618	Tension (Looper thread) Screw Stud 140442(803) with 51570(805)
146620	Tension (Looper thread) Releaser
146620	Slide Connecting Link
146621	Tension (needle thread) Releasing Shaft Crank Connecting Link
146622	Thread (Looper) Take-up with 465(830)
146622	Thread (Looper) Take-up Screw Washer (fiber)
146623	Thread (Looper) Take-up Stripper
146624	Thread (Looper) Take-up Stripper Holder with 465(830)
146625	Thread (Looper) Take-up Stripper Plate

146626	Thread (Looper) Take-up Stripper Plate Support Plate (2) NOTE: One No. 146626 screwed onto Machine Bed.
146627	Thread (Looper) Take-up Thread Guide (left)
146628	Thread (Looper) Take-up Thread Guide (right)
146629	Thread (needle) Thread Guide Bracket
146632	Thread (Looper) Thread Tube Thread Guide
146640	Machine Pad (felt)
146657	Oil Pump (centrifugal) Screen
146658	Oil Pump (centrifugal) Screen Frame
146659	Oil Pump (centrifugal) Body
146671	Thread (Looper) Thread Tube Screw Stud Nut Washer
146676	Presser Bar Guide Bracket Lifter
146688	Bed Slide (right) Latch
146689	Bed Slide (right) Latch Guide
146690	Bed Slide (right) Latch Spring
146691	Bed Slide (right) Spring
146693	Machine Base and Oil Reservoir Oil Return Wick
146694	Presser Bar Guide Bracket with 1057(830)
146698	Oil Removing Wick (head end) Holder Body Spring
146703	Needle Bar Bushing (lower and upper) Oil Wick Clamp and Retainer
146730	Looper Ball Crank Pitman End Bearing (left) and two 175(830) (for Agents only)
146741	Looper Holder 146018 with 1664(809), 146567 and two 175(830)
146743	Needle Guard Holder Bracket
146745	Oil Removing Wick (head end) Holder Body
146751	Presser Bar Bushing (lower)
146790	Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube
146792	Tension (Looper thread) Releaser
146793	Tension (Looper thread) Releaser Fastening Plate
146795	Tension (Looper thread) Uncurler
146796	Tension (Looper thread) Uncurler Plate (back)
146797	Thread (Looper) Uncurler Plate (front)
146864	Arm Shaft (horizontal) Bevel Gear, with 140333(830) and two 1259(830)
146867	Arm Top Cover
146868	Arm Top Cover and Stitch Regulator Cap
146869	Arm Top Cover and Stitch Regulator Cap complete, Nos. 335(819), 146868, 146870 and 146871
146870	Arm Top Cover and Stitch Regulator Cap Gasket
146871	Arm Top Cover and Stitch Regulator Cap Latch
146874	Attachment Slide Spring
146881	Feed Bar Slide Block Oil Wick
146883	Feed Eccentric (adjustable) complete, Nos. 50328(803), two each 217(809), 7071 and three 51061(830)
146889	Feed Lifting Rock Shaft Crank (front) with 137(819)
146891	Feed Rock Shaft Oil Wick
146891	Feed Lifting Rock Shaft Oil Wick
146892	Feed Lifting Rock Shaft Oil Wick (long)
146896	Feed Rock Shaft Oil Wick (long)
146897	Looper Ball Crank Arm with 51320(830)
146911	Pair of Mated Gears for Upper Shaft, Nos. 143015 and 146864 (for Agents only)
146914	Feed Lifting Eccentric with three 440(830)
146919	Looper Ball Crank Pitman Head (right) 146948 with two 175(830) (for Agents only)
146923	Looper Ball Crank Arm 146897 with 1320(809), 123551 and 146919
146947	Looper Ball Crank Pitman Rod Oil Shield
146948	Looper Ball Crank Pitman Ball Screw Stud (right)
146962	Needle Bar Thread Guide
146963	Looper Ball Crank Pitman Rod
146964	Looper Ball Crank Pitman Rod 146963 with 51769(803)
147005-001	Arm Shaft (horizontal) Flanged Bushing (front)
147022	Feed Bar Carrier with two each 158(805) and 176(805)
147023	Feed Bar Carrier Hinge Pin
147024	Feed Bar Carrier Oil Wick Holder 143032 with 143031
147028	Feed Rock Shaft Bushing (back)
147028	Feed Lifting Rock Shaft Bushing (back)
147029	Feed Rock Shaft Collar with two 460(830)
147029	Feed Lifting Rock Shaft Collar with two 460(830) (2)
147037	Feed Lifting Rock Shaft Oil Wick (short) (2) (for Agents)

PART NO.	DESCRIPTION
147042	Feed Lifting Rock Shaft Bushing (front)
147045	Feed Rock Shaft Oil Wick (short) (2) For Agents
147047	Feed Lifting Rock Shaft Oil Wick Clamping Plate
147047	Feed Rock Shaft Oil Wick Clamping Plate
147055	Oil Removing Wick (head end) Hinge Plate and Cover Gasket
147070	Arm Hole Plug Screw Washer (for use with 140610)
147079	Thread (needle) Take-up Thread Eyelet Bushing
147107	Oil Removing Wick (head end)
147109	Looper Holder Rock Shaft Bracket
	Oil Plug Screw (front) Washer (fiber)
147111-001	Arm Shaft (upright) Bushing (upper)
147112-001	Arm Shaft (horizontal) Flanged Bushing (back)
147468	Arm Shaft (horizontal) Thrust Collar with two 457(830)
149205	Oil Removing Wick (head end) Hinge Plate and Cover
149206	Oil Removing Wick (head end) Holder Body complete, Nos. 140553(805), 146698, 146745, 147055, 147107 and 149205
151560	Machine Pad (felt, left back)
151561	Machine Pad (felt, left front)
152503	Arm Shaft (horizontal) Bushing (center)
164232	Looper Ball Crank Connection Ball Sleeve Guide

ACCESSORIES

PART NO.	DESCRIPTION
12361	Machine Hinge Connection (2)
151159	Machine Rest Pad (rubber)
232333(805)	Machine Rest Pad Nail
41564	Machine Rest Pin
120344	Oiler (with spout)
121741	Quart Can (light grade) Oil
120341	Tweezers (curved)
KNEE LIFTER PARTS	
146168	Chain, length 13-1/2 in. with hooks
12501	Chain Pulley
141054(850)	Chain Pulley Hinge Screw Stud
1608(850)	Chain Pulley Hinge Screw Stud Nut
146169	Rock Shaft
146171	Rock Shaft Crank Collar
143283	Rock Shaft Knee Arm
147489	Rock Shaft Knee Arm Hub
2767	Rock Shaft Knee Arm Plate
146236	Rock Shaft Lifting Lever
146768	Rock Shaft Spring
1115(819)	Rock Shaft Spring Screw
147483	Rock Shaft Stop Dog (2)
FOOT LIFTER	
(Furnished on request in place of Knee Lifter Parts)	
150452	Foot Lifter Treadle, complete