


SINGER

281-6

SINGER PARTS 281-6 MACHINE

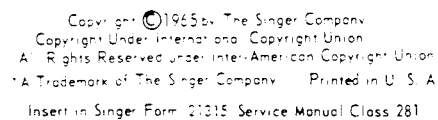

NUMERICAL LIST OF PARTS 281-6 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
53623(809)	Presser Bar Lifting Lever Connecting Rod Nut Lock Nut	140607(819)	Arm Top Cover (back) Stitch Regulator Plunger Hole Plug Screw (for plugging the Plunger hole when the Plunger is removed to prevent tampering with the Stitch Set (for Agents only)	143056	Thread Take-up Lever Roller Bearing(18)	143295	Pair of Gears for Lo Shaft, 143014 and 14 (for Agents only)
64342	Top Gripper Feed Drive Lever (lower and upper) Shaft Collar with 454(830)			143058	Needle Bar Connecting Stud Slide Block	143301-001	Rotating Hook Oil W (felt)
64519	Arm Top Cover (back) Stitch Regulator Plunger Spring			143061	Oil Flow Body Gasket(2)	143326	Needle Bar Connect Stud with 140706(809)
64519	Arm Top Cover (front) Stitch Regulator Plunger Spring	140607(819)	Arm Top Cover (front) Stitch Regulator Plunger Hole Plug Screw (for plugging the Plunger Hole when the Plunger is removed to prevent tampering with the Stitch Set (for Agents only)	143062	Oil Flow Window	143349-001	Rotating Hook Shaft Filter Wick Holder
125320	Rotating Hook Bobbin Case Latch Lever			143063	Oil Flow Window Cap	143351	Rotating Hook Wiper (leather)
140036(803)	Needle Bar Thread Guard Screw			143064	Oil Pipe	143370	Oil Lead
140160(803)	Gripper Feed Holder Connecting Link Hinge Screw	140607(819)	Arm Top Cover (front) Stitch Regulator Plunger Hole Plug Screw (for plugging the Plunger Hole when the Plunger is removed to prevent tampering with the Stitch Set (for Agents only)	143065	Oil Pipe Clamping Sleeve	143373	Bell Crank
140160(803)	Gripper Feed Holder Hinge Screw	140610(819)	Arm Oil Plug Screw	143066	Oil Pipe Clamping Sleeve Nut	143374	Bell Crank Bracket
140228(805)	Feed Lifting Rock Shaft Crank (back) Clamping Screw	140610(819)	Thread Take-up Crank Clamping Screw Hole Plug Screw	143070	Oil Pump (centrifugal) Body with 143126 and Bushing	143375	Bell Crank complete 143104, 143373 and 143374 (for Agents only)
140228(805)	Feed Rock Shaft Crank Clamping Screw	140705(805)	Arm Screw (back)	143071	Oil Pump (centrifugal) Body Position Pin(2)	143378	Stitch Regulator Lock Slide Spring
140230(803)	Feed Lifting Rock Shaft Connecting Rod Hinge Screw	140706(809)	Gripper Feed Holder Stop Screw	143072	Oil Pump (centrifugal) Cover	143378	Top Gripper Feed Regulator Locking Spring
140230(803)	Feed Rock Shaft Connecting Rod Hinge Screw	140788(805)	Needle Bar Connecting Stud Clamping Screw Feed Bar Hinge Pin Clamping Screw(2)	143073	Oil Pump (centrifugal) Impeller	143383	Rotating Hook Oil F Regulating Thumb Spring
140231(803)	Needle Bar Connecting Link Cap Screw	140873(803)	Tension Stud	143074	Oil Pump (centrifugal) Screen	143384	Oil Pipe for Oiling Rotating Hook Shaft (front) Bearing
140232(819)	Oil Wick Holder Screw	140915(830)	Feed Lifting Rock Shaft Crank (front) Clamping Screw	143075	Oil Pump (centrifugal) Screen Frame	143387	Oil Pipe 143384 with 143124 for oiling Rotating Hook Shaft Front Bearing (for Agents only)
140239(830)	Needle Set Screw	141143(803)	Top Gripper Feed Connecting Rod Hinge Screw	143081	Rotating Hook Shaft Bevel Gear (left hand spiral) with two 1259/830	146099	Feed Rock Shaft Cr with 140228(805)
140257(830)	Feed Eccentric Stop Screw (5: stitch) Note: 140257/830 is furnished as regular to machine.	141188(803)	Rotating Hook Oil Flow Regulating Thumb Screw	143082-001	Rotating Hook Shaft Bushing back	146279-001	Gripper Feed Holder Connecting Link
140279(830)	Arm Shaft (horizontal) Flanged Bushing (front) Set Screw	141201(805)	Arm and Bed Leg (back) Screw(2)	143085	Stitch Regulator	146552	Arm Screw (front and intermediate)(2)
140279(830)	Thread Take-up Link Hinge Stud Set Screw	141202(805)	Arm Shaft (horizontal) Screw Plug (front)	143085	Top Gripper Feed Regulator	146591	Oil Flow Body
140296(830)	Arm Shaft (horizontal) Bushing (center) Set Screw	141208(830)	Thread Take-up Crank Clamping Screw	143086	Stitch Regulator Locking Slide	146610	Presser Bar Lifting Lever Spring
140297(830)	Arm Shaft (horizontal) Flanged Bushing (back) Set Screw	141214(803)	Top Gripper Feed Drive Lever Connection Hinge Screw (lower)	143086	Top Gripper Feed Regulator Locking Slide	146698	Oil Removing Wick (head end) Holder B Spring
140333(830)	Feed Lifting Eccentric Position Screw	141214(803)	Top Gripper Feed Drive Lever Connection Hinge Screw (upper)	143087	Stitch Regulator Locking Slide Ratchet Wheel	146745	Oil Removing Wick (head end) Holder B
140343(805)	Machine and Machine Base and Oil Reservoir Screw Hole Plug Screw (for Agents only)	141253(830)	Knee Lifter Rock Shaft Crank Clamping Screw	143087	Top Gripper Feed Regulator Locking Slide Ratchet Wheel	146790	Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube with Holder
140350(803)	Knee Lifter Rock Shaft Crank Adjusting Screw	141253(830)	Knee Lifter Stop Dog Clamping Screw	143088	Stitch Regulator Locking Slide Ratchet Wheel Pin	147005-001	Arm Shaft (horizontal) Flanged Bushing (front) with Oil Drain Tube
140359(805)	Feed Lifting Rock Shaft Oil Screw Plug	143013	Arm Shaft (upright)	143088	Top Gripper Feed Regulator Locking Slide Ratchet Wheel Pin	147011	Arm Top Cover (back) for 147013
140359(805)	Feed Rock Shaft Oil Screw Plug	143014	Arm Shaft (upright) Bevel Gear (lower) right hand spiral with two 1259(830)	143104	Bell Crank Hinge Pin	147013	Arm Top Cover (back) with Stitch Regulator Plunger complete, 13288, 64519, 14701 and 147105
140359(805)	Top Gripper Feed Driving Crank Shaft Oil Plug Screw(2)		Note: To ensure proper functioning of Gears, 143014 will not be supplied separately to Agencies, but will be substituted by Pair of Gears 143295	143109	Presser Bar Lifting Lever Connecting Rod Swivel		Note: 147013 is furnished as regular to machine
140489(803)	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket Screw(2)	143015	Arm Shaft (upright) left hand spiral with two 1259(830)	143124	Oil Pipe Clamping Sleeve	147015	Arm Top Cover (back) Gasket
140542(830)	Needle Bar Crank Position Screw		Note: To ensure proper functioning of Gears, 143015 will not be supplied separately to Agencies, but will be substituted by Pair of Gears 147476	143125	Oil Pipe Clamping Sleeve Nut	147024	Feed Bar Carrier Oil Wick Holder with 147025-001
140549(805)	Stitch Regulator Locking Slide Spring Screw	143016-001	Arm Shaft (upright) Bushing (lower) Bed Hole Plug	143126	Oil Pipe Clamping Sleeve Nut Adaptor	147028	Feed Lifting Rock Shaft Bushing (back and front)(2)
140549(805)	Top Gripper Feed Regulator Locking Slide Spring Screw	143024	Feed Bar Carrier Oil Wick	143134	Stitch Regulator 143085 with 140549/805, 143086 and 143378	147029	Feed Lifting Rock Shaft Collar with two 460
140553(805)	Oil Removing Wick (head end) Holder Body Hinge Screw	143031	Top Gripper Feed Driving Crank Shaft Oil Wick (long)	143134	Top Gripper Feed Regulator 143085 with 140549/805, 143086 and 143378	147029	Feed Rock Shaft Collar with two 460(830)
		143040	Feed Lifting Rock Shaft Connecting Rod	143191	Presser Bar Lifting Lever Connecting Rod Oil Mist Retaining Disc (felt)	147030-001	Feed Lifting Rock Shaft Washer (fiber)
		143049	Feed Rock Shaft Connecting Rod	143196	Needle Bar Oil Wick		Feed Lifting Rock Shaft 147025-001 with 13996, 140359/805, 143236, 147038 and suitable length of 12
		143056	Needle Bar Connecting Link Roller Bearing(18)	143236	Feed Lifting Rock Shaft Oil Screw Plug Washer (fiber)	147037	White Lighter Wick - Feed Lifting Rock Shaft Oil Wick (short) for Agents only (2)
				143236	Feed Rock Shaft Oil Screw Plug Washer (fiber)	147038	Feed Lifting Rock Shaft Oil Wick (long)
				143244	Arm Top Cover (back) Spool Pin with Spool Rest, 3 1/2 in. long	147040-001	Feed Rock Shaft 147040-001 with 139
				143257	Machine Base and Oil Reservoir Gasket (cork)	147041-001	Feed Rock Shaft 147040-001 with 139
				143268-001	Bed Leg (back)		140359(805), 143236
				143280-001	Knee Lifter Rock Shaft		147046 and suitable length of 1229
				143282	Knee Lifter Rock Shaft Crank Adjusting Screw 140350(803) with 51649(809)		White Lighter Wick

NUMERICAL LIST OF PARTS 281-6 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
147042	Feed Rock Shaft Bushing (back)	147161	Tension Releasing Lever Segment	147476	Pair of Gears for Upper Shaft 143015 and 147473 (for Agents only)	149154	Thread Eyelet and Thread Guard (front of arm)
147043	Feed Rock Shaft Bushing (front)	147166	Slack Thread Regulator	147480	Knee Lifter Beil Crank Plunger	149160	Thread Take-up Crank Wearing Plate
147045	Feed Rock Shaft Oil Wick (short) (for Agents only)(2)	147206	Arm Top Cover (front) Gasket	147481	Knee Lifter Rock Shaft 143280-001 with 147482-001, 147483 and 147485	149161	Thread Take-up Lever Guard
147046	Feed Rock Shaft Oil Wick (long)	147222	Top Gripper Feed Driving Crank Shaft	147482-001	Knee Lifter Rock Shaft Crank with 141253(830) and 143282	149168	Needle Bar (hollow) with 140239(830)
147047	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick Clamping Plate	147223	Top Gripper Feed Driving Crank Shaft 147222 with 197(805), 143031, 147047, 147227, two each 140359(805), 143236 and four 147226	147483	Knee Lifter Rock Shaft Stop Dog with 141253(830)	149172	Rotating Hook (Air Cooled) 149142 with 149064, 149065 and three 1367(805)
147050-001	Needle Bar Connecting Link 147492-002 with 143326 (for Agents only)	147224	Top Gripper Feed Driving Crank Shaft Bushing (back)	147485	Knee Lifter Rock Shaft Spring	149173	Rotating Hook (Air Cooled) 149172 with 149063 and 149153 (for Agents only)
147053	Needle Bar Connecting Stud Oil Wick	147225	Top Gripper Feed Driving Crank Shaft Bushing (front)	147486-001	Arm Shaft (horizontal) Bushing (center) Machine Base and Oil Reservoir	149204	Top Gripper Feed Driving Crank (back) with 50443(803)
147055	Oil Removing Wick (head end) Hinge Plate and Cover Gasket	147226	Top Gripper Feed Driving Crank Shaft Oil Wick (short)(4)	147491	Needle Bar Connecting Link	149204	Top Gripper Feed Driving Crank (front) with 50443(803)
147058	Presser Bar Bushing (lower)	147227	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick	149030-002	Top Gripper Feed Drive Lever (upper) with 350719(869)	149205	Oil Removing Wick (head end) Hinge Plate and Cover with Stop and Clip
147070	Thread Take-up Crank Clamping Screw Hole Plug Gasket	147245	Oil Wick Holder complete, and two 147141	149042	Top Gripper Feed Connecting Rod	149206	Oil Removing Wick (head end)
147073	Thread Take-up Lever Link Hinge Stud	147247	Presser Bar Lifter	149046	Top Gripper Feed Regulator Locking Slide		Holder Body complete, 140553(805), 146698, 146745, 147055, 147107 and 149205
147074	Thread Take-up Lever Link Hinge Stud Oil Wick	147250	Presser Bar Lifting Lever Pin	149060	Ratchet Wheel Retaining Collar with 143098 and two 1259(830)	149224	Oil Wick Holder Plug (felt)
147075	Thread Take-up Lever Link Hinge Stud 147073 with 147074	147290	Feed Lifting Rock Shaft Crank (front) with 140915(830) and Hinge Stud	149061	Rotating Hook Bobbin Case	149227	Presser Bar Bushing (lower) Washer
147077	Thread Take-up Lever Guard Gasket	147291	Presser Bar Spring	149063	Rotating Hook Bobbin Case 149060 with 591(806), 1380(805) and 40394	149230	Arm Side Shield
147079	Thread Take-up Lever Thread Eyelet Bushing	147292	Tension Stud 140873(803) with two 1560(803)	149064	Rotating Hook Bobbin Case complete, 592(805), 2974, 2975, 40392, 125320 and 149061	149235-003	Needle Bar Thread Guard
147091	Pressure Regulating Thumb Screw and Presser Bar Guide	147293	Tension complete, 32574, 52083, 52394, 147151, 147152, 147292 and two 2102 (for Agents only)	149066	Rotating Hook Bobbin Case Holder	200364(830)	Arm Top Cover (front) Stitch Regulator
147105	Arm Top Cover (back) Stitch Regulator Plunger	147296	Thread Take-up Lever Oil Guard with 143196 and 147053	149074	Feed Lifting Rock Shaft Crank (back) with 140228(805)	264709	Arm Top Cover (front) Stitch Regulator Plunger Cap Set Screw
147106	Oil Pipe complete from Oil Pump to Arm Shaft (horizontal) Center Bearing, 143064, 143065 and 143066 (for Agents only)	147355	Feed Bar Carrier with two each 158(805) and 140788(805)	149121	Machine Base and Oil Reservoir (large) with Knee Lifter Rock Shaft, 143257, 143280-001, 147480, 147482-001, 147483, 147485 and 147491	272152	Rotating Hook Bobbin
147107	Oil Removing Wick (head end)	147356	Feed Bar Hinge Pin (eccentric)	149124	Rotating Hook Bobbin Case Holder Position Bracket	350719(869)	Top Gripper Feed Drive Lever (lower) Clamping Screw
147108	Oil Removing Wick (head end) Holder Body 146745 with 146698 and 147107 (for Agents only)	147373	Presser Bar Lifting Lever Link		Note: 149124 is furnished as regular to the machine	350719(869)	Top Gripper Feed Drive Lever (upper) Clamping Screw
147111-001	Arm Shaft (upright) Bushing (upper)	147396-003	Face Plate	149141	Rotating Hook (Air Cooled) with Plug, Retaining Disc, Plug Disc, 143301-001 and two 1253(830)		
147112-001	Arm Shaft (horizontal) Flanged Bushing (back) with Oil Hole Plug	147397	Face Plate Gasket				
147114	Needle Bar Bushing (lower) Thread Eyelet	147444	Presser Bar Guide Bracket with 50203(830)				
147131	Rotating Hook Shaft Oil Retaining Collar with two 50429(830)	147445	Presser Bar Lifting Lever with 454(830)				
147139	Machine Pulley small rim diameter (disc power) "V" belt groove 2.9 in. diam., with two 51283(830) Note: 147139 is regularly furnished.	147447	Presser Bar Lifting Bracket with Position Pin				
147141	Oil Wick, 11 in. long for oiling Take-up Lever, Take-up Lever Link, Needle Bar Connecting Link and Thread Take-up Lever Link Hinge Bearing(2)	147468	Arm Shaft (horizontal) Thrust Collar with two 624(830)	149142	Rotating Hook (Air Cooled) 149141 with 143351, 149066 and four 1053(805)		
147151	Tension Releasing Disc	147469	Combination of Feed and Stitch Regulator Parts, 143015, 143040, 143049, 143087, 143134, 147472-002, 147473 and Dummy Shaft (for Agents only)	149145	Rotating Hook (Air Cooled) 149142 with 149065 and three 1367(805) (for Agents only)		
147152	Tension Spring	147470	Feed Bar with Hinge Stud	149148	Rotating Hook Shaft with 149153		
147159	Tension Releasing Lever Body	147471	Feed Bar 147470 with 21478, 147290, 147355, 147356 and two 1423(803)	149149	Rotating Hook Shaft 149148 with 147131		
147160	Tension Releasing Lever Body (adjustable) 147159 with 50123(819) and 147161 (for Agents only)	147472-001	Top Gripper Feed Eccentric with Three 1036(830)	149150-001	Rotating Hook Shaft Bushing (front) with Plug		
		147472-002	Feed Eccentric with 1375(830) and 1036(830)	149152	Rotating Hook Shaft Oil Filter Wick		
		147473	Feed Lifting Eccentric and Arm Shaft (horizontal) Bevel Gear, right hand spiral with 1259(830), 140333(830) and 143088 Note: To ensure proper functioning of Gears, 147473 will not be supplied separately to Agencies, but will be substituted by Pair of Gears 147476	149153	Rotating Hook Shaft Oil Filter complete, 143349-001 and 149152		

NUMERICAL LIST OF PARTS 281-6 MACHINE

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION
69(850)	Presser Bar Lifter Hinge Screw	725(819)	Bed Slide Spring Screw(2)	12431(819)	Bed Slide (for Agents only)	22910	Presser Bar (hollow)
144(804)	Arm Shaft (horizontal) Screw (back)	802(819)	Presser Bar Lifting Lever Hinge Screw	12432	Bed Slide complete, 4307, 12431(819) and two 725(819) for Agents only	22911	Presser Foot (solid), for sewing shirt collars and cuffs, for use with 22903, 22904 and 22914
152(819)	Face Plate Screw(2)	1036(830)	Feed Eccentric Body Set Screw(2)	12990	Needle Bar Bushing (upper)	22912	Thread Take-up Crank and Thread Take-up Lever complete, 22822, 143058, 143326, 140231(803), 147492-002, and eighteen 143056
152(819)	Thread Take-up Lever Guard and Thread Eyelet and Thread Guard Screw (front of arm)	1036(830)	Thread Take-up Crank Set Screw	13288	Arm Top Cover (back) Stitch Regulator Plunger Stop Ring	22913	Thread Take-up Crank and Thread Take-up Lever complete, 22912 and 147075 (for Agents only)
152(819)	Thread Take-up Lever Guard Screw	1053(805)	Rotating Hook Thread Guard Screw(4)	13996	Feed Lifting Rock Shaft Oil Wick with Fastener	22914	Throat Plate (small needle hole) No. 53 Drill needle hole, No. 5 Needle Position, for sewing shirt collars and cuffs, for use with 22903, 22904 and 22911
157(805)	Magnet Retaining Clamp and Oil Pump (centrifugal) Body Screw	1133(830)	Needle Bar Bushing (lower) Set Screw	13996	Feed Rock Shaft Oil Wick with Fastener	22915	Top Gripper Feed Drive Lever (lower) with 350719(869)
157(805)	Oil Pump (centrifugal) Body Screw(2)	1133(830)	Needle Bar Bushing (upper) Set Screw	16709	Arm Side Shield Wick Spring Holder	22945	Gripper Feed Holder and Holder Connecting Link Spacer
158(813)	Beil Crank Bracket Screw(2)	1253(830)	Rotating Hook Set Screw(2)	20437	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket Screw Washer(2)	23099	Presser Bar Lifting Lever Connecting Rod
158(805)	Feed Bar Carrier Clamping Screw(2)	1259(830)	Arm Shaft upright Bevel Gear (lower) Set Screw(2)	20798-001	Needle Bar Bushing (lower)	32574	Tension Releasing Pin
185(809)	Gripper Feed Screw	1259(830)	Arm Shaft upright Bevel Gear (upper) Set Screw(2)	21090	Top Gripper Feed Drive Lever (lower and upper) Shaft Bracket	40392	Rotating Hook Bobbin Case Latch
189(805)	Oil Pump (centrifugal) Screen Frame Screw(4)	1259(830)	Feed Lifting Eccentric Set Screw	21091	Top Gripper Feed Drive Lever Connection	40393	Rotating Hook Bobbin Case Latch Hinge 2974, 40392 and 125320 (for Agents only)
190(809)	Presser Foot Screw	1259(830)	Rotating Hook Shaft Bevel Gear Set Screw(2)	21093	Top Gripper Feed Drive Lever (lower and upper) Shaft	40394	Rotating Hook Bobbin Case Tension Spring
190(805)	Slack Thread Regulator Screw	1259(830)	Top Gripper Feed Regulator Locking Slide Ratchet Wheel Retaining Collar Set Screw(2)	21095	Combination of Top Gripper Feed Parts, 1662(819), 141143(803), 143087, 143134, 147472-001, 149040, 149046, two 149204 and Dummy Shaft	50117(830)	Arm Side Shield Screw(2)
197(819)	Oil Removing Wick (head and) Hinge Plate and Cover Screw(4)	1259(830)	Rotating Hook Shaft Bushing (back) Set Screw	21398-001	Needle Bar (hollow) complete, 140036(803), 149168 and 149235-003	50117(830)	Feed Dog Screw(2)
197(805)	Top Gripper Feed Driving Crank Shaft Feeder Oil Wick Clamping Plate Screw	1285(830)	Rotating Hook Shaft Bushing (front) Set Screw	21478	Feed Bar Connecting Link	50123(805)	Oil Pump (centrifugal) Impeller Locking Screw
207(805)	Arm Shaft (horizontal) Flanged Bushing (back) Oil Sump Tube Holder Screw	1285(830)	Rotating Hook Shaft Bushing (back) Set Screw	22557	Magnet for removing iron particles from oil	50123(819)	Tension Releasing Lever (adjustable) Screw
217(805)	Thread Take-up Lever Oil Guard Screw	1361	Needle (Size No. 14)	22558	Magnet Retaining Clamp	50190(809)	Guide Thumb Screw
228(805)	Feed Bar Carrier Oil Wick Holder Screw(2)	1367(805)	Rotating Hook Section Screw(3)	22557	Magnet Retaining Clamp 22558 with 22557	50203(803)	Presser Bar Guide Bracket Clamping Screw
233(805)	Rotating Hook Oil Flow Regulating Thumb Screw Spring Screw	1275(830)	Feed Eccentric Body Position Screw	22589	Arm Top Cover (front)	50257(819)	Oil Flow Window Cap Screw(4)
440(830)	Top Gripper Feed Driving Crank Shaft Bushing (front) Set Screw	1380(805)	Rotating Hook Bobbin Case Tension Spring Screw	22590	Arm Top Cover (front) with Stitch Regulator Plunger complete, 22589, 22591, 54519 and 264709	50305(803)	Tension Stud Set Screw
448(830)	Thread Take-up Spring Regulator Set Screw	1423(803)	Feed Bar Connecting Link Cap Screw(2)	22591	Arm Top Cover (front) Stitch Regulator Plunger	50429(830)	Rotating Hook Shaft Oil Retaining Collar Set Screw(2)
454(830)	Presser Bar Lifting Lever Pin Set Screw	1518(809)	Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut	22766	Arm Side Shield Wick (16 in. long)	50443(803)	Top Gripper Feed Driving Crank (back) Clamping Screw
454(830)	Top Gripper Feed Drive Lever (lower and upper) Collar Set Screw	1547(819)	Gripper Feed Holder Connecting Link Hinge Screw Nut	22770	Arm Side Shield complete 16709, 22766 and 149230	50443(803)	Top Gripper Feed Driving Crank (front) Clamping Screw
457(830)	Top Gripper Feed Driving Crank Shaft Bushing (back) Set Screw	1547(819)	Gripper Feed Holder Connecting Link Hinge Screw Nut	22776	Arm Side Shield Oil Wick Holder 22770 and 147245	50555(805)	Arm Shaft (horizontal) Plug Screw(2)
460(830)	Feed Lifting Rock Shaft Collar Set Screw(4)	1560(803)	Tension Regulating Thumb Nut	22812	Thread Take-up Crank with Thread Take-up Lever, Link 149160, 147079, and eighteen 143056 for Agents only	51283(830)	Machine Pulley Set Screw(2)
460(830)	Feed Rock Shaft Collar Set Screw(2)	1560(803)	Tension Regulating Thumb Nut Lock Nut	22902	Arm Shaft (horizontal) with Crank 1036(830) and 140542(830)	51369(813)	Arm Top Cover (back) Screw(4)
591(806)	Rotating Hook Bobbin Case Tension Regulating Screw	1662(819)	Top Gripper Feed Connecting Rod Hinge Screw Nut	22903	Feed Dog 22 teeth per inch, for sewing shirt collars and cuffs, for use with 22904, 22911 and 22914	51369(813)	Arm Top Cover (front) Screw(4)
592(805)	Rotating Hook Bobbin Case Latch Stop Screw	1662(819)	Top Gripper Feed Drive Lever Connection Hinge Screw (lower) Nut	22904	Gripper Feed, 22 teeth (diagonal) per inch, for sewing shirt collars and cuffs, for use with 22903, 22911 and 22914	51369(805)	Oil Lead Screw
624(830)	Arm Shaft (horizontal) Thrust Collar Set Screw(2)	1662(819)	Top Gripper Feed Drive Lever Connection Hinge Screw (upper) Nut	22905	Gripper Feed Holder	51485(809)	Gripper Feed Holder Spring Screw Stud
624(830)	Feed Lifting Rock Shaft Bushing (back and front) Set Screw(2)	2070	Presser Bar Spring Washer	22906	Gripper Feed Holder Spring	51614(809)	Pressure Regulating Thumb Screw Lock Nut
624(830)	Feed Rock Shaft Bushing (back) Set Screw	2102	Tension Disc(2)	22907	Gripper Feed Holder Stop	52083	Thread Take-up Spring Regulator with 50305(803)
624(830)	Feed Rock Shaft Bushing (front) Set Screw	2974	Rotating Hook Bobbin Case Latch Lever Fulcrum Pin			52394	Thread Take-up Spring Thread Retainer
624(830)	Thread Retainer Set Screw	2975	Rotating Hook Bobbin Case Latch Spring			52454	Thread Retainer
691(850)	Throat Plate Screw(2)	4307	Bed Slide Spring			53623(809)	Presser Bar Lifting Lever Connecting Rod Nut
704(809)	Rotating Hook Bobbin Case Holder Position Bracket Screw	8582	Arm Dowel Pin(2)	22905	Gripper Feed Holder		
		12329	Tension Releasing Lever Spring	22906	Gripper Feed Holder Spring		
		12393	Tension Releasing Lever Hinge Pin	22907	Gripper Feed Holder Stop		

SIN
281.

