





SINGER

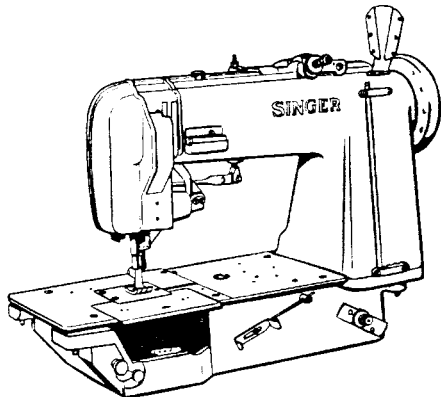

300W104 PARTS

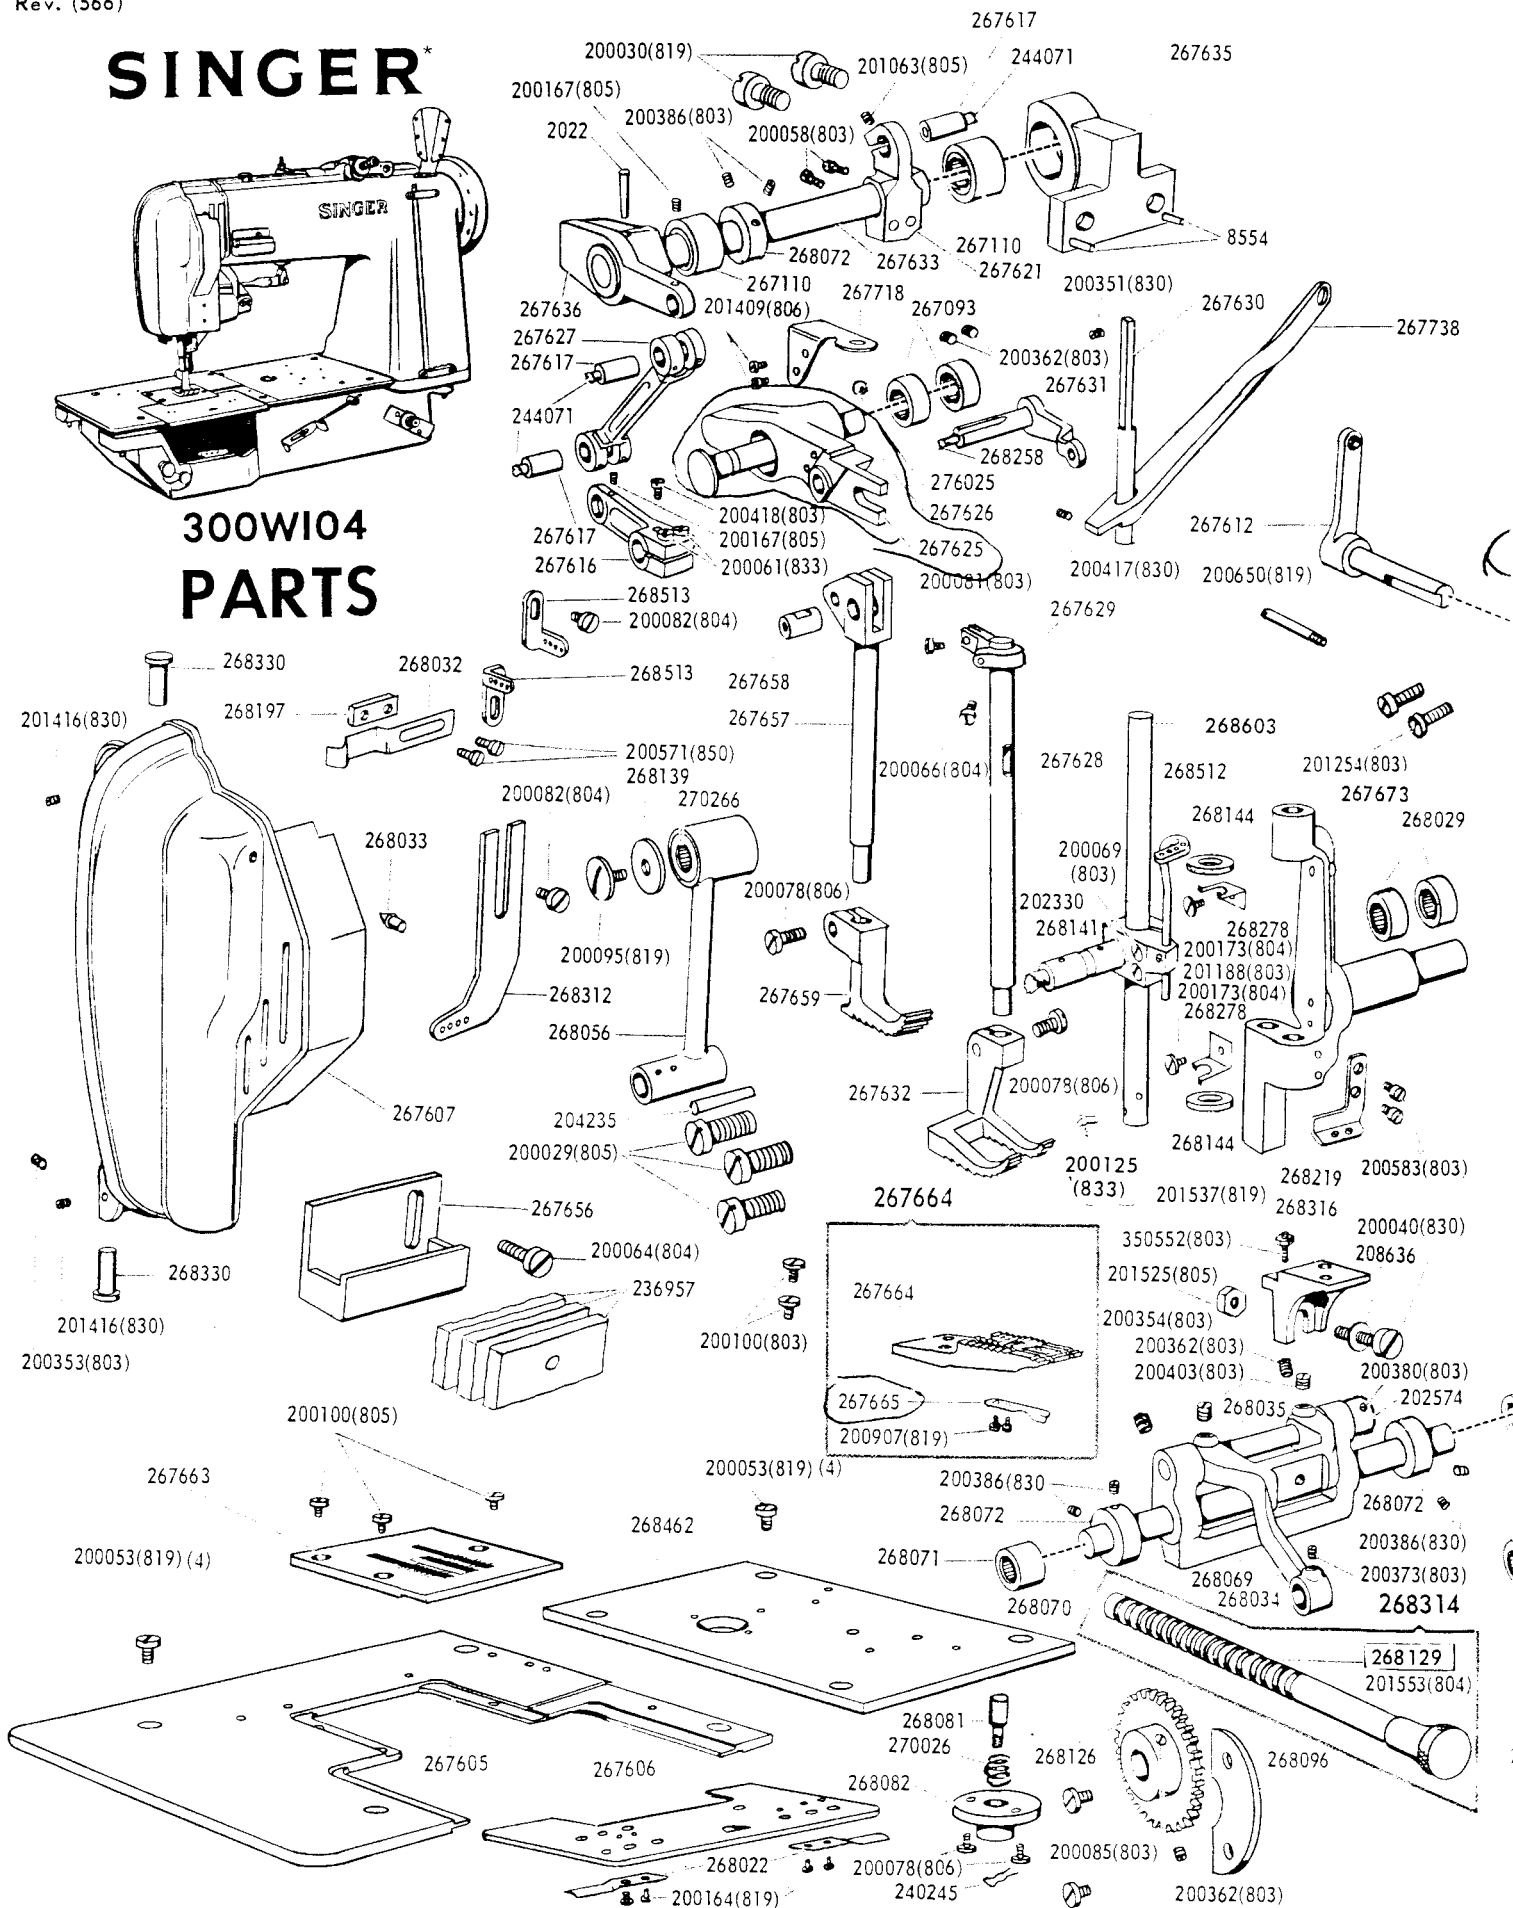

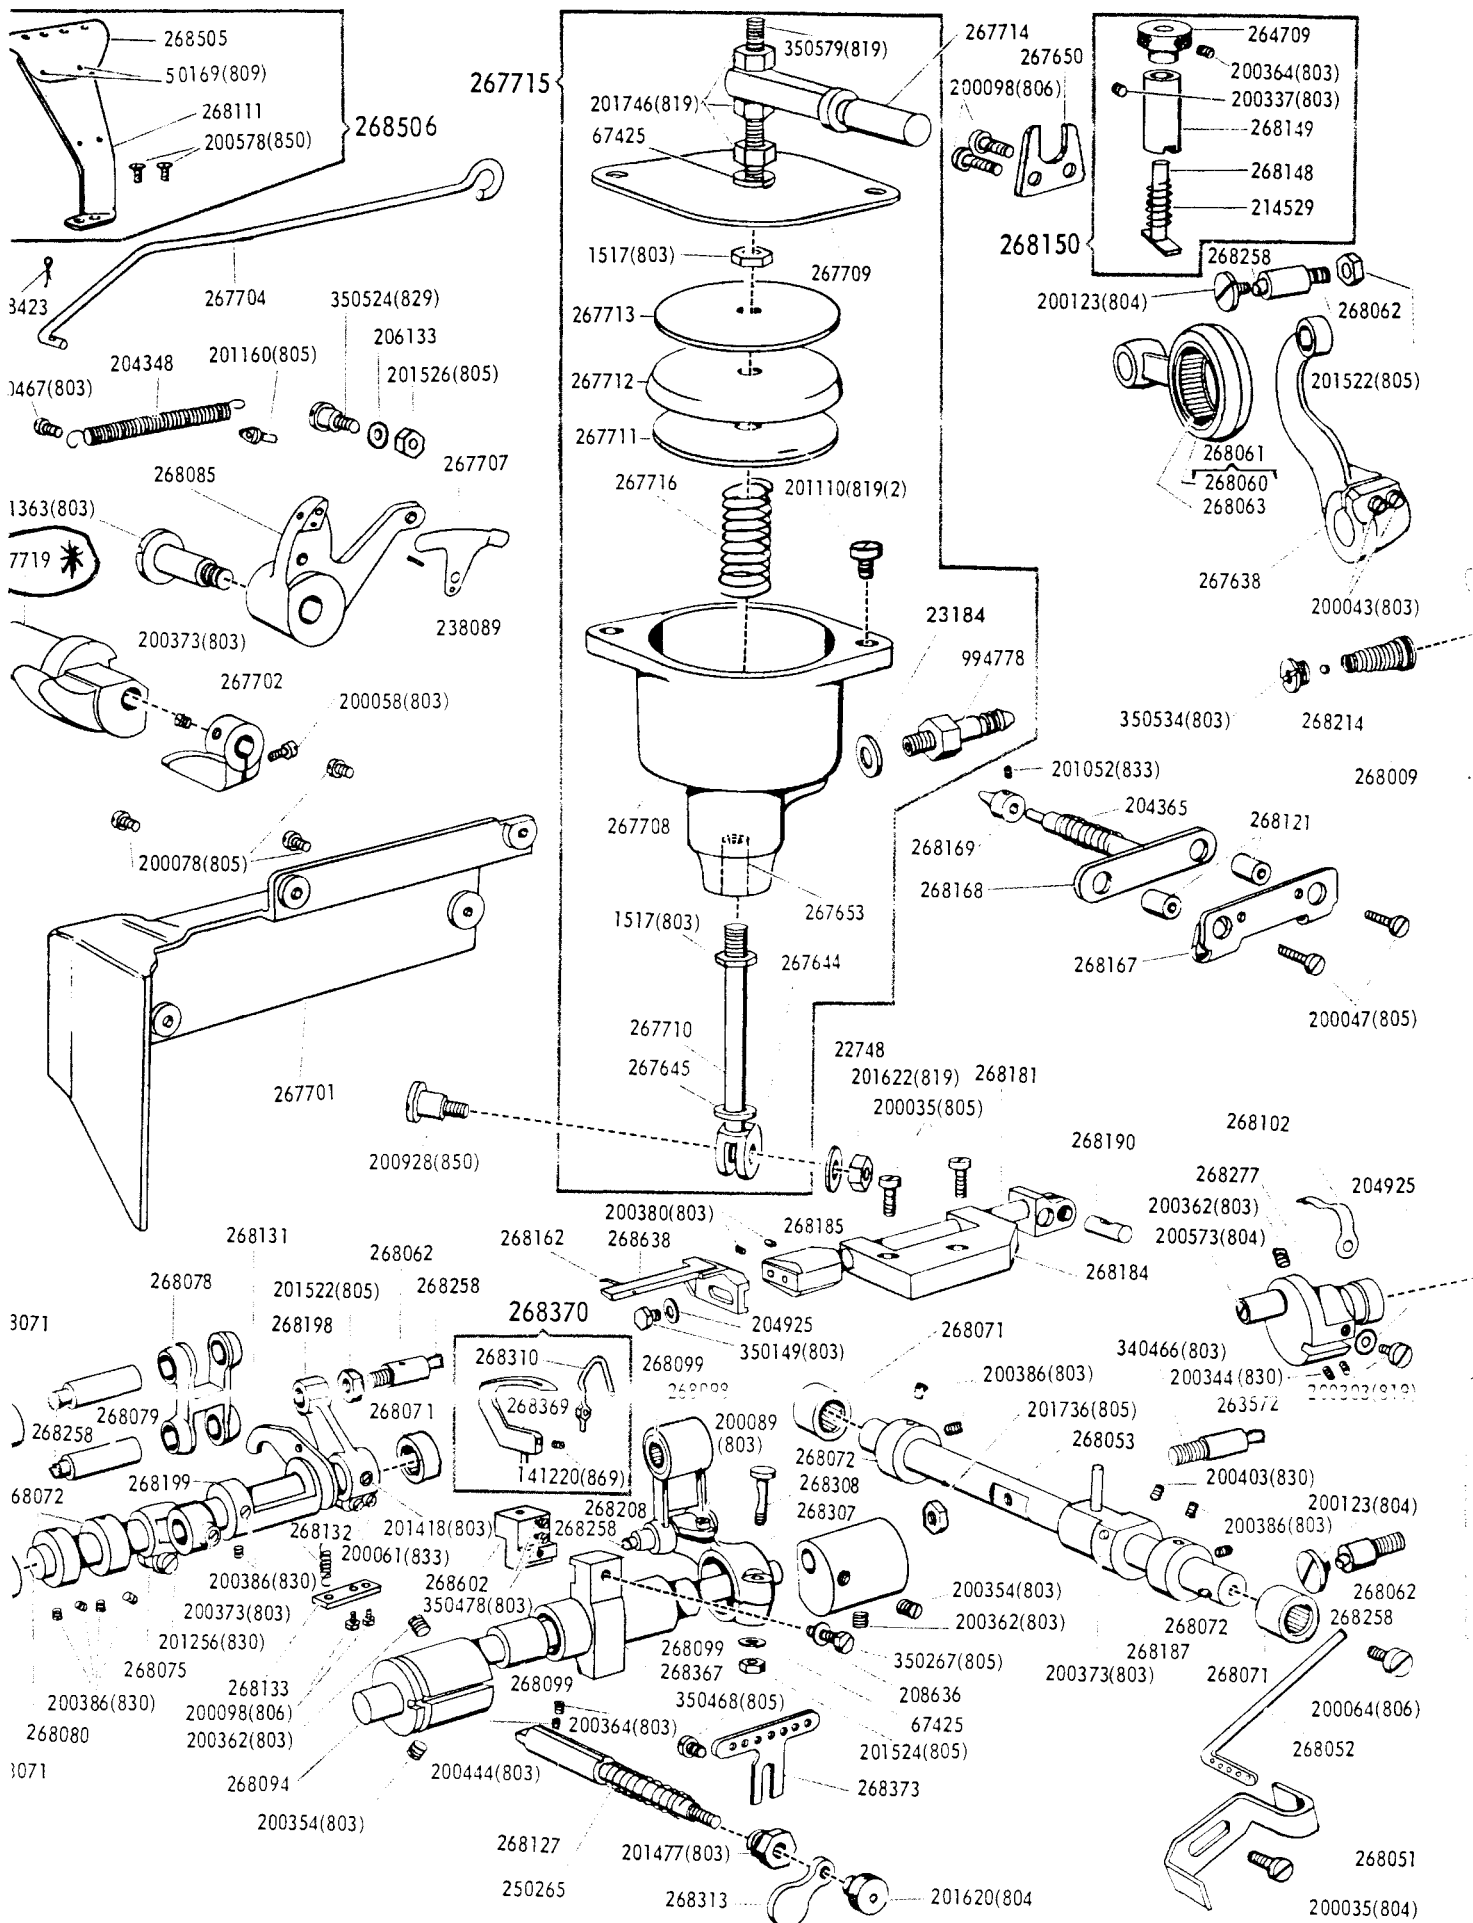

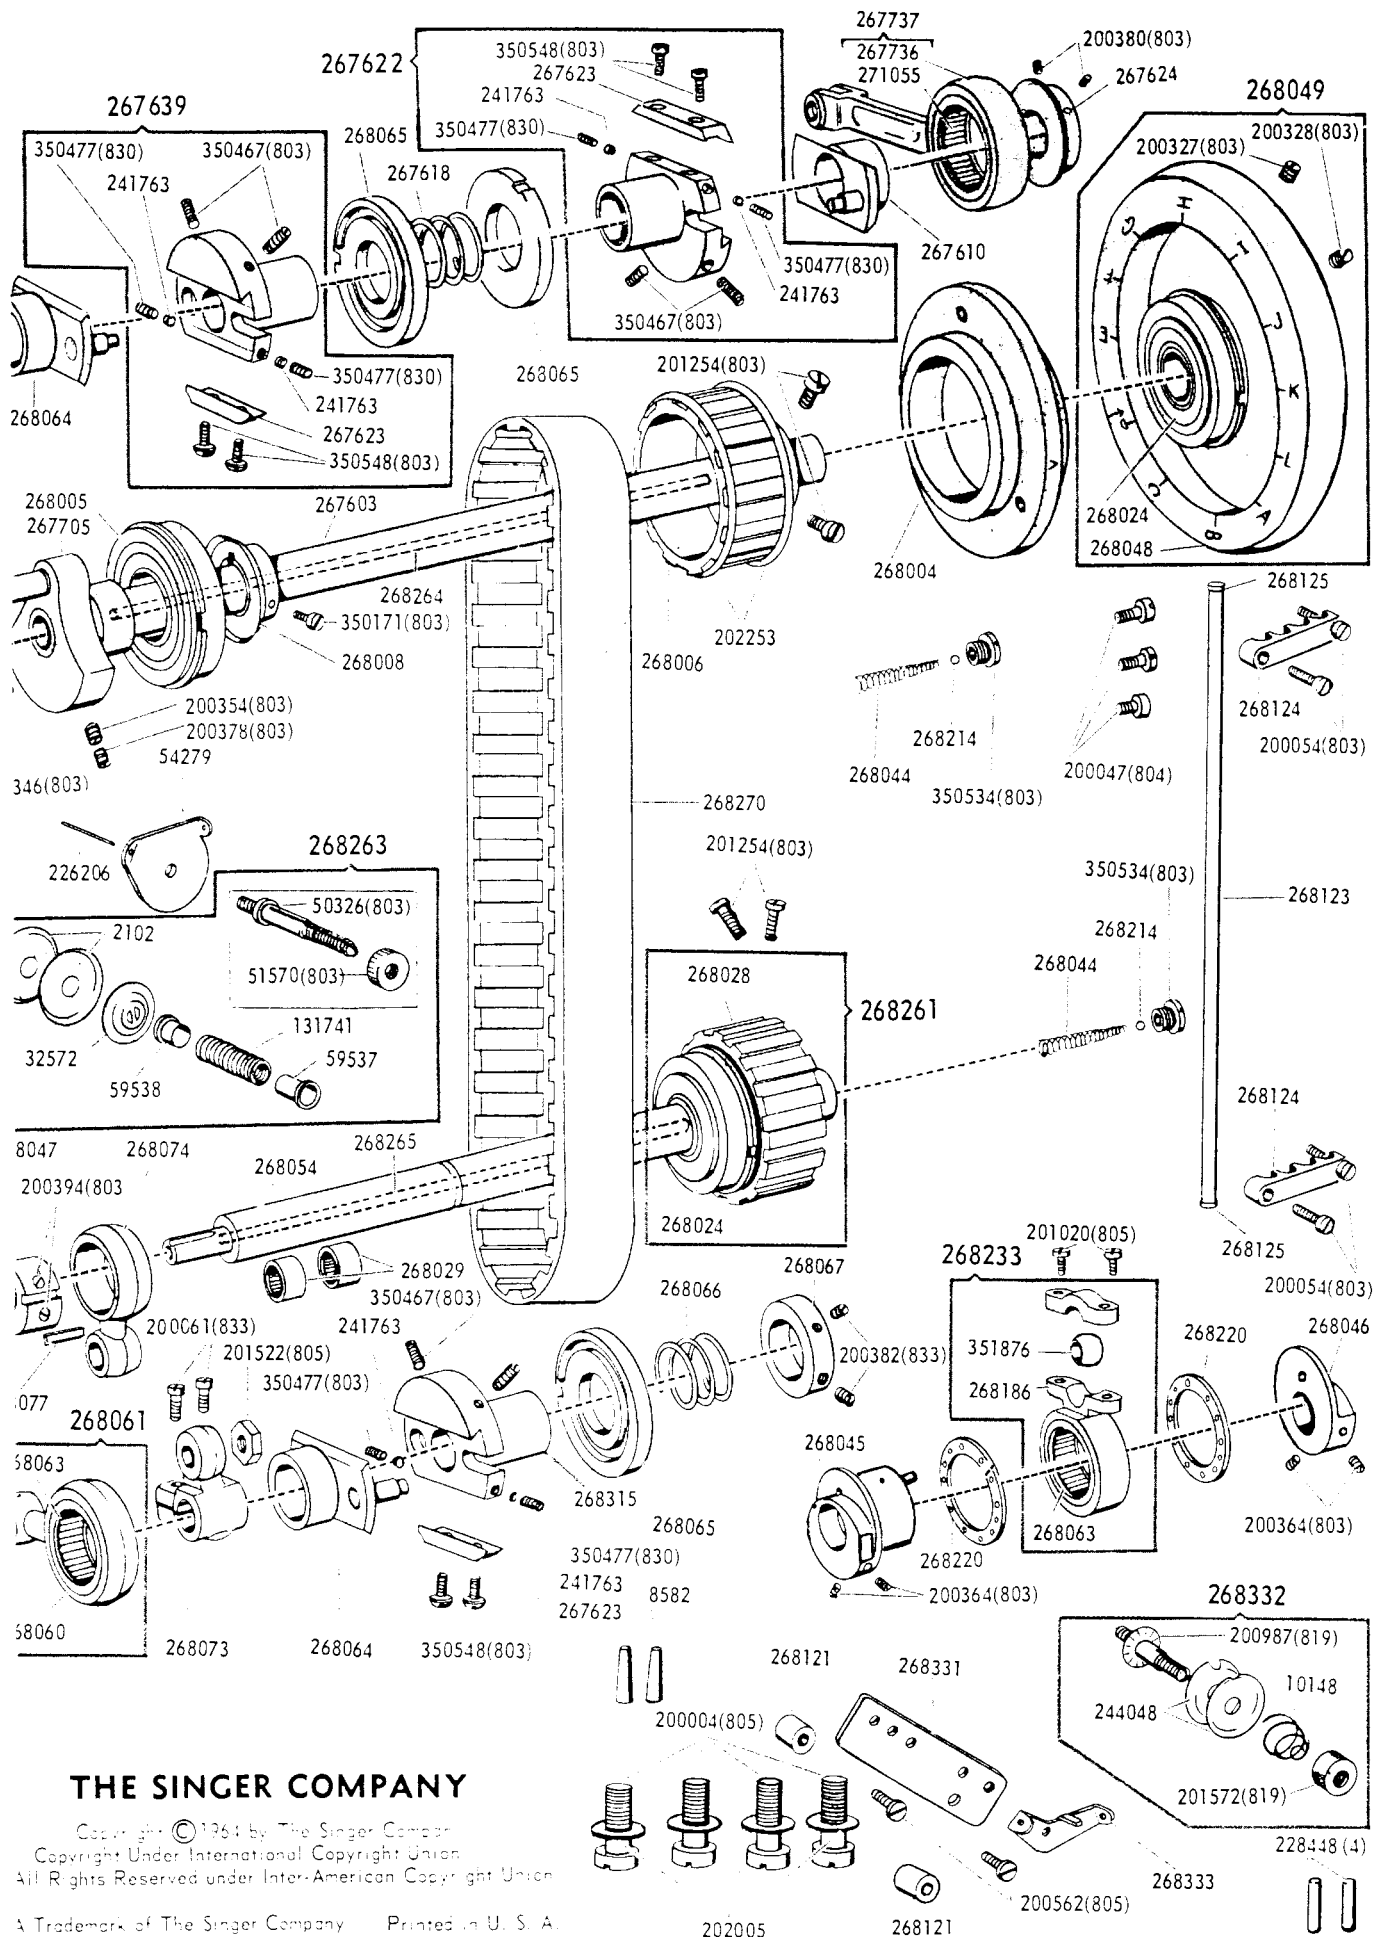

THE SINGER COMPANY

Copyright © 1964 by The Singer Company
 Copyright Under International Copyright Union
 All Rights Reserved under Inter-American Copyright Union

A Trademark of The Singer Company Printed in U. S. A.

NUMERICAL LIST OF PARTS 300W104 MACHINE

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1517(803)	Presser Bar Pressure Cylinder	200362(803)	Looper Driving Crank Set Screw	204235	Arm Head Position Pin
2022	Plunger Nut (2)	200362(803)	Looper Throw-out Gear Set Screw (2)	204348	Foot Lifter Lever Spring
2102	Lifting Rock Shaft Crank Pin	200364(803)	Spreader Driving Eccentric Counter-balance Set Screw (2)	204365	Needle Thread Tension Releaser Spring
8554	Lifting Rock Shaft Bracket Position Pin (2)	200364(803)	Spreader Driving Eccentric Set Screw (2)	204925	Looper Driving Crank Oil Hole Cover
8582	Arm Position Pin (2)	200364(803)	Looper Throw-out Gear Locking	204925	Screw Washer
10148	Looper Thread Tension Spring	200364(803)	Plunger Stop Screw Set Screw	206133	Spreader Screw Washer
268129	Looper Throw-out Rack Rod	200364(803)	Needle Bar Rock Frame Regulating Stud Cap Set Screw	206133	Foot Lifter Lever Rod Hinge Screw Washer
268314	Looper Throw-out Rack Rod 268129 with 201553(804)	200373(803)	Feed Lifting Link Hinge Pin Set Screw (2)	208636	Feed Dog Shank Screw Washer
22748	Presser Bar Spring Arm Hinge Screw Washer	200373(803)	Foot Lifter Arm Set Screw	208636	Looper Holder Screw Washer
32572	Needle Thread Tension Releasing Disc	200373(803)	Spreader Driving Crank Position Screw	214529	Needle Bar Rock Frame Regulating Stud Spring
50169(809)	Looper Thread Guide (top of Arm) Bracket Screw (2)	200378(803)	Needle Bar Crank Position Screw Check Screw	226206	Needle Thread Tension Releasing Pin
50326(803)	Needle Thread Tension Stud	200380(803)	Feed Bar Hinge Pin Collar Set Screw	228448	Machine Locating Stud (4)
51570(803)	Needle Thread Tension Thumb Nut	200380(803)	Lifting Eccentric Spacing Collar Set Screw (2)	236957	Thread Lubricator Oil Pad (felt) (3)
54279	Needle Thread Tension Thread Guide (double)	200390(803)	Spreader Holder Set Screw (2)	238089	Needle Thread Tension Releasing Plate Pin
59537	Needle Thread Tension Spring Bushing (front)	200382(833)	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw (2)	240245	Feed Regulating Stud Retaining Spring
59538	Needle Thread Tension Spring Bushing (back)	200386(830)	Feed Driving Rock Shaft Collar Set Screw (4)	241763	Feed Driving Eccentric Friction Plate
59539	Needle Thread Tension Stud 50326(803) with 51570(803)	200396(803)	Feed Lifting Rock Shaft Collar Set Screw (4)	241763	Screw Set Screw Packing (brass) (2)
67425	Looper Carrier Crank Clamping Stud Washer	200396(803)	Lifting Rock Shaft Collar Set Screw (2)	241763	Lifting Eccentric Friction Plate (2)
67425	Presser Bar Pressure Cylinder Support Stud Nut Lock Washer	200386(830)	Looper Throw-out Safety Latch Collar Set Screw (2)	244048	Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set
131741	Needle Thread Tension Spring	200386(803)	Spreader Driving Rock Shaft Collar Set Screw (4)	244071	Screw Packing (brass) (2)
141223(869)	Needle Guard Set Screw	200394(803)	Feed Lifting Eccentric Set Screw (2)	244071	Looper Thread Tension Disc (2)
200004(805)	Arm Screw (4)	200403(803)	Feed Bar Set Screw (2)	244071	Lifting Eccentric Connection Hinge Pin Oil Packing (wick)
200029(805)	Arm Head Screw (3)	200403(803)	Spreader Driving Crank Set Screw	250265	Lifting Link Hinge Pin Oil Packing (wick)
200030(819)	Lifting Rock Shaft Bracket Screw (2)	200417(830)	Lifting Presser Bar Guide Rod Set Screw (lower)	2063572	Looper Throw-out Gear Locking Plunger Spring
200035(804)	Looper Thread Guide Screw	200417(830)	Lifting Crank Set Screw	2063572	Spreader Driving Rock Shaft Screw Stud Oil Packing (wick)
200035(805)	Spreader Bar Bearing Screw (2)	200444(803)	Looper Throw-out Gear Locking Plunger Stop Screw	206709	Needle Bar Rock Frame Regulating Stud Cap with 200364(803)
200040(830)	Feed Dog Shank Screw	200562(805)	Looper Thread Tension Bracket Screw (2)	207043	Lifting Lever Needle Bearing (2)
200043(803)	Needle Bar Rock Frame Driving Arm Pinch screw (2)	200571(850)	Face Plate Lock Spring Screw (2)	207119	Lifting Rock Shaft Needle Bearing (2)
200047(804)	Arm Shaft Ball Bearing (back) Housing Screw (3)	200571(850)	Looper Driving Crank Oil Stop Screw	207693	Arm Shaft with 206099, 206044, 206204, two each 206214 and 350534(803)
200047(805)	Needle Thread Tension Bracket Screw (2)	200578(804)	Looper Thread Guide (top of arm) Bracket Screw (2)	207693	Bed Plate (left)
200055(819)	Bed Plate Screw (8)	200578(804)	Needle Bar Rock Frame Thread Guide Screw (2)	207693	Bed Plate Slide with two 206022 and four 200164(819)
200054(803)	Looper Thread Tension Clamp Screw (4)	200582(803)	Foot Lifter Crank Stop Screw Stud	207697	Face Plate with 200353(803), 206033 and two 201416(830)
200058(803)	Foot Lifter Arm Pinch Screw	200650(819)	Loop Deflector Screw (2)	207610	Lifting Eccentric
200058(803)	Lifting Eccentric Connection Crank Pinch Screw (2)	200907(819)	Presser Bar Spring Arm Hinge Screw	207612	Foot Lifter Crank
200061(833)	Feed Driving Rock Shaft Crank Pinch Screw (2)	200928(850)	Looper Thread Tension Stud	207612	Lifting Crank with 200167(805), 200418(803) and two 200061(833)
200061(833)	Feed Lifting Rock Shaft Crank Pinch Screw (2)	200947(819)	Spreader Driving Connection Cap Screw (2)	207617	Lifting Eccentric Connection Hinge Pin with 244071
200061(833)	Lifting Crank Pinch Screw	201022(805)	Needle Thread Tension Releaser Cap Set Screw	207617	Lifting Link Hinge Pin with 244071 (2)
200064(806)	Looper Thread Take-up Rod Nut Screw	201052(803)	Lifting Eccentric Connection Hinge Pin Pinch screw	207618	Lifting Eccentric Adjusting Disc Spring
200064(804)	Thread Lubricator Screw	201063(805)	Presser Bar Pressure Cylinder Cap Screw (2)	207621	Lifting Eccentric Connection Crank with 201063(805) and two 200353(803)
200066(803)	Lifting Presser Bar Guide Block Pinch Screw	201115(819)	Foot Lifter Lever Spring Screw Eye	207622	Lifting Eccentric Flange with 207623, two each 241763, 350467(803), 350477(830) and 350544(803)
200074(805)	Arm Side Cover Screw (3)	201160(805)	Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw	207623	Feed Driving Eccentric Friction Plate
200075(806)	Feed Regulating Stud Socket Screw (2)	201254(803)	Arm Shaft Connection Belt Pulley Set Screw (2)	207623	Eccentric Friction Plate
200078(806)	Lifting Presser Foot Pinch Screw	201254(803)	Bed Shaft Connection Belt Pulley Set Screw (2)	207623	Lifting Eccentric Friction Plate
200078(806)	Vibrating Presser Foot Pinch Screw	201254(803)	Presser Bar Spring Arm Fulcrum Set Screw (2)	207624	Lifting Eccentric Spacing Collar with two 200380(803)
200081(803)	Lifting Presser Bar Guide Block Adjusting Screw	201254(803)	Feed Lifting Crank Pinch Screw	207625	Lifting Lever with two 207043
200082(804)	Needle Thread Guide Screw (2)	201254(803)	Foot Lifter Lever Hinge Screw	207626	Lifting Lever Hinge Stud
200085(803)	Looper Carrier Shaft Bushing (left) Position Plate Screw (2)	201254(803)	Presser Bar Spring Arm Ball Bearing Retainer Screw (2)	207627	Lifting Link
200089(803)	Looper Carrier Crank Hinge Pin Pinch Screw	201409(806)	Face Plate Hinge Stud Set Screw (2)	207628	Lifting Presser Bar
200095(819)	Needle Bar Connecting Link Cap Washer Screw	201416(803)	Feed Lifting Rock Shaft Crank Position Screw	207628	Lifting Presser Bar Guide Block with 200064(804) and 200061(803)
200098(806)	Looper Throw-out Safety Latch Spring Bracket Screw (2)	201477(803)	Looper Throw-out Gear Locking Plunger Screw Bushing	207630	Lifting Presser Bar Guide Rod
200098(806)	Presser Bar Pressure Cylinder Support Retainer Screw (2)	201522(805)	Feed Driving Connection Hinge Stud Nut	207631	Lifting Presser Bar Lifting Crank with 206254
200100(803)	Feed Dog Screw (2)	201522(805)	Feed Lifting Connection Hinge Stud Nut	207632	Lifting Presser Foot with 200078(806)
200100(805)	Throat Plate Screw (3)	201522(805)	Needle Bar Rock Frame Driving Connection Hinge Stud Nut	207633	Lifting Rock Shaft
200123(804)	Feed Driving Connection Cap Screw	201522(805)	Looper Carrier Crank Clamping Stud Nut	207634	Lifting Rock Shaft 207633 with 2022 and 207610
200123(804)	Needle Bar Rock Frame Driving Connection Cap Screw	201524(805)	Feed Dog Shank Screw Lock Nut	207635	Lifting Rock Shaft Bracket
200125(833)	Needle Set Screw	201525(805)	Foot Lifter Lever Rod Hinge Screw Nut	207636	Lifting Rock Shaft Crank with 200167(805)
200144(819)	Bed Plate Slide Spring Screw (4)	201537(819)	Feed Dog Shank Adjusting Screw Lock Nut	207673	Needle Bar Rock Frame
200167(805)	Lifting Link Hinge Pin Set Screw (2)	201553(804)	Looper Throw-out Rack Rod Thumb Nut	207638	Needle Bar Rock Frame Driving Arm with two 200343(803)
200173(804)	Needle Bar Oiling Feet Holder Screw (2)	201572(819)	Looper Thread Tension Thumb Nut	207638	Needle Bar Rock Frame Driving Eccentric Flange with 207623, two each 241763, 350467(803), 350477(830) and 350544(803)
200303(819)	Looper Driving Crank Oil Hole Cover Screw	201620(804)	Looper Throw-out Gear Locking Plunger Thumb Nut	207644	Presser Bar Spring Arm Fork
200327(803)	Machine Pulley Set Screw	201622(819)	Presser Bar Spring Arm Hinge Screw Nut	207645	Presser Bar Spring Arm Fork Lock Washer (injection)
200328(803)	Machine Pulley Position Screw	201734(819)	Spreader Driving Rock Shaft Screw Stud Nut	207650	Presser Bar Pressure Cylinder Support Retainer
200337(803)	Needle Bar Rock Frame Regulating Stud Sleeve Set Screw	201746(819)	Presser Bar Pressure Cylinder Support Stud Nut (3)	207653	Presser Bar Pressure Cylinder Plunger Bushing
200344(803)	Looper Driving Crank Position Screw (2)	202005	Arm Screw Washer (4)	207657	Thread Lubricator with three 206057
200346(803)	Needle Bar Crank Set Screw	202025	Arm Shaft Connection Belt Pulley Spring Flange (2)	207657	Vibrating Presser Bar
200351(803)	Lifting Presser Bar Guide Rod Set Screw (upper)	202330	Needle Bar Connecting Stud Oil Packing (wick)	207658	Vibrating Presser Bar Hinge Stud
200351(803)	Face Plate Hinge Stud Set Screw (long)	202574	Feed Bar Hinge Pin Collar with 200364(803)	207659	Vibrating Presser Foot with 200078(806)
200354(803)	Feed Driving Rock Frame Position Screw			207661	Throat Plate
200354(803)	Looper Carrier Shaft Bushing Position Screw (2)			207664	Feed Dog, 46 needle hole, with 207605 and two 206007(819), for 207653
200354(803)	Needle Bar Crank Position Screw			207665	Loop Deflector
200363(803)	Feed Driving Rock Frame Set Screw			207666	Arm Side Cover
200363(803)	Lifting Lever Hinge Stud Set Screw (2)				
200363(803)	Looper Carrier Shaft Bushing Set Screw (2)				

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
267702	Foot Lifter Arm with 200058(803) and 200373(803)	268069	Feed Driving Rock Frame with 200354(803) and 200362(803)	268258	Looper Carrier Crank Hinge Pin Oil Packing (wick)
267704	Foot Lifter Lever Rod with 248423	268070	Feed Driving Rock Shaft	268258	Needle Bar Rock Frame Driving Connection Hinge Stud Oil Packing (wick)
267705	Needle Bar Crank with 200346(803), 200354(803) and 200378(803)	268071	Feed Driving Rock Shaft Needle Bearing (2)	268261	Bed Shaft Connection Belt Pulley 268028 with 268024
267706	Needle Bar Crank 267705 with 268005	268071	Feed Lifting Rock Shaft Needle Bearing (2)	268263	Needle Thread Tension complete, Nos. 32572, 59537, 59538, 59539, 131741 and two 2102
267707	Needle Thread Tension Releasing Plate (adjustable)	268072	Feeder Driving Rock Shaft Needle Bearing (2)	268264	Arm Shaft Oil Control Rod (wood)
267708	Presser Bar Pressure Cylinder with Presser Bar Pressure Cylinder with 267653	268072	Feed Driving Rock Shaft Collar with two 200386(830) (2)	268265	Bed Shaft Oil Control Rod (wood)
267709	Presser Bar Pressure Cylinder Cap	268072	Feed Lifting Rock Shaft Collar with two 200386(803) (2)	268270	Arm Shaft Connection Belt (reinforced neoprene)
267710	Presser Bar Pressure Cylinder Plunger	268072	Lifting Rock Shaft Collar with two 200386(803)	268277	Looper Driving Crank with 200362(803), 200573(804) and two 200344(830)
267711	Presser Bar Pressure Cylinder Plunger Disc	268072	Feeder Driving Rock Shaft Collar with two 200386(803) (2)	268278	Needle Bar Oiling Feat Holder (2)
267712	Presser Bar Pressure Cylinder Plunger Washer (leather)	268073	Feed Driving Rock Shaft Crank with two 200061(833)	268307	Looper Carrier Crank with 200089(803)
267713	Presser Bar Pressure Cylinder Plunger Washer (steel)	268074	Feed Lifting Connection	268308	Looper Carrier Crank Clamping Stud
267714	Presser Bar Pressure Cylinder Support	268075	Feed Lifting Crank with 200373(803) and 201256(830)	268310	Needle Guard
267715	Presser Bar Pressure Cylinder complete, Nos. 67425, 267644, 267645, 267708, 267709, 267710, 267711, 267712, 267713, 267716, 350579(819), 931758, 994778, two each 1517(803), 201110(819) and three 201746(819)	268077	Feed Lifting Eccentric Lubricating Pad (wood)	268312	Needle Thread Guide (on Arm Head)
267716	Presser Bar Spring	268078	Feed Lifting Link	268313	Looper Throw-out Gear Locking Plunger Handle
267718	Presser Bar Spring Arm Ball Bearing Retainer	268079	Feed Lifting Link Hinge Pin with 268258 (2)	268315	Feed Driving Flange with 267623, two each 241763, 350467(803), 350477(830) and 350548(803)
267719	Presser Bar Spring Arm Fulcrum	268080	Feed Lifting Rock Shaft	268316	Feed Dog Shank with 201517(819) and 350522(803)
267736	Lifting Eccentric Connection	268081	Feed Regulating Stud	268330	Face Plate Hinge Stud (2)
267737	Lifting Eccentric Connection 267736 with 271055	268082	Feed Regulating Stud Socket	268331	Looper Thread Tension Bracket
267738	Presser Bar Spring Arm	268083	Foot Lifter Lever with 238089	268332	Looper Thread Tension complete, Nos. 10148, 200987(819), 201572(819) and two 244048
268004	Arm Shaft Ball Bearing (back) Housing	268084	Looper Carrier Shaft 268093 with 268095 and 268097	268333	Looper Thread Tension Thread Guide
268005	Arm Shaft Ball Bearing (front)	268085	Looper Carrier Shaft Bushing (left)	268367	Looper Carrier
268006	Arm Shaft Connection Belt Pulley with two each 201254(803) and 200253	268096	Position Plate	268368	Looper Carrier 268367 with two 268044
268006	Arm Shaft Oil Slinger with 350171(803)	268098	Looper Driving Connection	268369	Looper with 141220(804)
268009	Arm Shaft Oil Stop Ball Spring (front)	268101	Looper Driving Crank Oil Hole Cover	268371	Looper and Needle Guard complete, Nos. 200319 and 268364
268012	Bed Plate Slide Spring (2)	268111	Looper Thread Guide (top of Arm) Bracket	268373	Looper Thread Guide (on bed at looper) for all gauges from 3/16 to 1/2 inches
268024	Arm Shaft Ball Bearing (back)	268121	Looper Thread Tension Bracket Spacing Collar (2)	268402	Bed Plate (right)
268024	Bed Shaft Ball Bearing	268121	Needle Thread Tension Bracket Spacing Collar (2)	268405	Looper Thread Guide (top of Arm)
268028	Bed Shaft Connection Belt Pulley with two 201254(803)	268123	Looper Thread Tube with two 268125	268406	Looper Thread Guide (top of Arm) Bracket 268111 with 268505 and two 351494(830)
268029	Bed Shaft Needle Bearing (2)	268124	Looper Thread Tube Thread Bushing (2)	268512	Needle Thread Guide (on Needle Bar Connecting Stud)
268029	Needle Bar Rock Frame Needle Bearing (2)	268125	Looper Thread Tube Thread Bushing (2)	268513	Needle Thread Guide (on side of Arm) (2)
268032	Face Plate Lock Spring	268126	Looper Throw-out Gear with two 200362(803)	268602	Looper Holder with two 350476(803)
268033	Face Plate Lock Stud	268127	Looper Throw-out Gear Locking Plunger		
268034	Feed Bar with 200175(803) and two 200403(830)	268131	Looper Throw-out Safety Latch	268606	Spreader with 268102
268035	Feed Bar Hinge Pin	268132	Looper Throw-out Safety Latch Spring	270026	Feed Regulating Stud Spring
268044	Arm Shaft Oil Stop Ball Spring (rear)	268133	Looper Throw-out Safety Latch Spring Bracket	270206	Needle Bar Connecting Link Needle Bearing (2)
268044	Bed Shaft Oil Stop Ball Spring	268603	Needle Bar	271055	Lifting Eccentric Connection Needle Bearing
268045	Spreader Driving Eccentric with two 200364(803)	268134	Needle Bar Connecting Link Cap Washer	270025	Presser Bar Spring Arm Ball Bearing
268046	Spreader Driving Eccentric Counter-balance with two 200364(803)	268141	Needle Bar Connecting Stud with 201446, 201447 and two 200064(833)		
268047	Feed Lifting Eccentric with 268077 and two 200394(803)	268144	Needle Bar Oiling Feat (2)	268423	Foot Lifter Lever Rod Cutter Pin
268048	Machine Pulley (aluminum alloy casting) for 1 1/2" belt (outside diameter of belt groove 2.9 inches) with 200327(803) and 200328(803)	268145	Needle Bar Rock Frame Regulating Stud	340400(803)	Spreader Driving Rock Shaft Screw Stud with 261572
268049	Machine Pulley 268048 with 268024	268149	Needle Bar Rock Frame Regulating Stud Sleeve	350144(803)	Spreader screw
268051	Looper Thread Guide	268150	Needle Bar Rock Frame Regulating Stud complete, Nos. 214529, 264704, 268148 and 268149	350171(803)	Arm Shaft Oil Slinger Set screw
268052	Looper Thread Take-up Rod	268162	Spreader Point	350207(803)	Looper Holder screw
268053	Spreader Driving Rock Shaft with 201446(806)	268167	Needle Thread Tension Bracket	350467(803)	Feed Driving Flange Set screw (2)
268054	Bed Shaft with 268044, 268214, 268265 and 350534(803)	268168	Needle Thread Tension Releaser	350467(803)	Foot Lifter Lever (back) Spring Screw
268056	Needle Bar Connecting Link 268055 with two 270206	268169	Needle Thread Tension Releaser Cap with 201052(833)	350467(803)	Lifting Eccentric Flange Set screw (2)
268060	Feed Driving Connection	268181	Spreader Bar	350467(803)	Needle Bar Rock Frame Driving Eccentric Flange Set screw (2)
268060	Needle Bar Rock Frame Driving Connection	268184	Spreader Bar Bearing	350468(803)	Looper Thread Guide (on bed at looper) screw
268061	Feed Driving Connection Hinge Stud with 268063	268185	Spreader Holder with two 200380(803)	350477(830)	Feed Driving Eccentric Friction Plate screw Set screw (2)
268061	Needle Bar Rock Frame Driving Connection 268060 with 268063	268186	Spreader Driving Connection with two 201052(803)	350477(830)	Lifting Eccentric Friction Plate Screw Set screw (2)
268062	Feed Driving Connection Hinge Stud with 268253	268187	Spreader Driving Crank with 200373(803) and 200403(830)		Needle Bar Rock Frame Driving Eccentric Friction Plate Screw Set screw (2)
268062	Feed Lifting Connection Hinge Stud with 268253	268190	Spreader Driving Pin	350478(803)	Looper Set screw
268062	Needle Bar Rock Frame Driving Connection Hinge Stud with 268253	268197	Face Plate Lock Spring Plate	350478(803)	Looper Adjusting screw
268063	Feed Driving Connection Needle Bearing	268198	Feed Lifting Rock Shaft Crank with 201418(803) and two 200061(833)	350524(819)	Foot Lifter Lever Rod Hinge Screw
268063	Needle Bar Rock Frame Driving Connection Needle Bearing	268199	Looper Throw-out Safety Latch Collar with two 200380(830)	350534(803)	Arm Shaft Oil Stop Ball Screw (2)
268064	Feed Driving Eccentric	268208	Looper Carrier Crank Hinge Pin with 268253	350534(803)	Bed Shaft Oil Stop Ball Screw
268064	Needle Bar Rock Frame Driving Eccentric	268214	Arm Shaft Oil Stop Ball 5/32 in. diam. (2)	350546(803)	Feed Driving Eccentric Friction Plate Screw (2)
268065	Lifting Eccentric Adjusting Disc	268214	Bed Shaft Oil Stop Ball	350548(803)	Lifting Eccentric Friction Plate Screw (2)
268065	Needle Bar Rock Frame Driving Eccentric Adjusting Disc	268216	Looper Driving Connection 268098 with 268099	350548(803)	Needle Bar Rock Frame Driving Eccentric Friction Plate screw (2)
268066	Feed Driving Eccentric Adjusting Disc Spring	268219	Needle Bar Rock Frame Thread Guide	350552(803)	Feed Dog Shank Adjusting screw
268067	Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382(853)	268220	Spreader Driving Eccentric Thrust Washer (2)	350579(819)	Presser Bar Pressure Cylinder Support Stud
		268233	Spreader Driving Connection 268186 with 268063 and 351876	351876	Spreader Driving Rock Shaft Screw Stud Ball Roller
		268258	Feed Driving Connection Hinge Stud Oil Packing (wick)	23184	Presser Bar Pressure Cylinder Hose Connection Washer
		268258	Feed Lifting Connection Hinge Stud Oil Packing (wick)	94775	Presser Bar Pressure Cylinder Hose Connection
		268258	Feed Lifting Link Hinge Pin Oil Packing (wick) (2)		
		268258	Lifting Presser Bar Lifting Crank Oil Packing (wick)		

ACCESSORIES

PART NO.	DESCRIPTION
994719	Air Compressor for Electric Transmitters Nos. S47 and S69
995475	Air Filter
160137	Air Hose
265307	Bed Hinge Connection (2)
350598	Bed Hinge Connection Screw (4)
228731	Drip Pan
200019	Drip Pan Screw (4)
232365	Foot Lifter Treadle Chain 41-1/2 in. long
268340	Looper Threading Wire
228452	Machine Base Oil Drain Jar complete
228444	Machine Cushion (neoprene)
228733	Machine Rest (left)
228734	Machine Rest (right)
41400	Machine Rest Pin
Cat. No.	
4112	Needles (62 x 59) Size 23 (6)
267722	Presser Bar Pressure Control Valve complete
228491	Pressure Oiler
228745	Thread Unwinder complete
120341	Tweezers
21887	Wrench