

SINGER

410W110

Form 3026w
(350)
Printed in U. S. A.

SINGER**

410w110







** A TRADE MARK OF
THE SINGER MANUFACTURING COMPANY



Copyright, U. S. A., 1941, 1942, 1946 and 1950
by The Singer Manufacturing Co.
All Rights Reserved for all Countries


18280 - 1/2

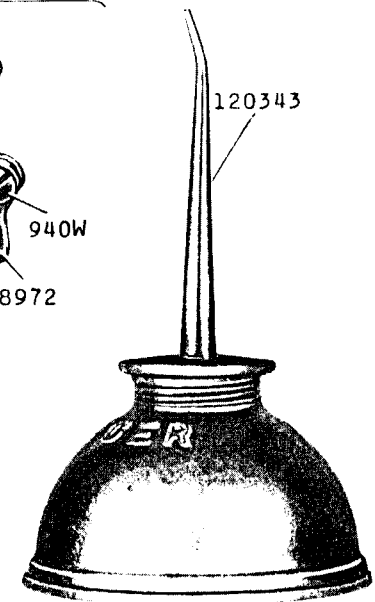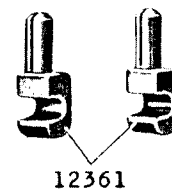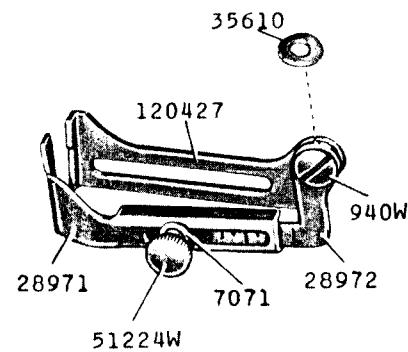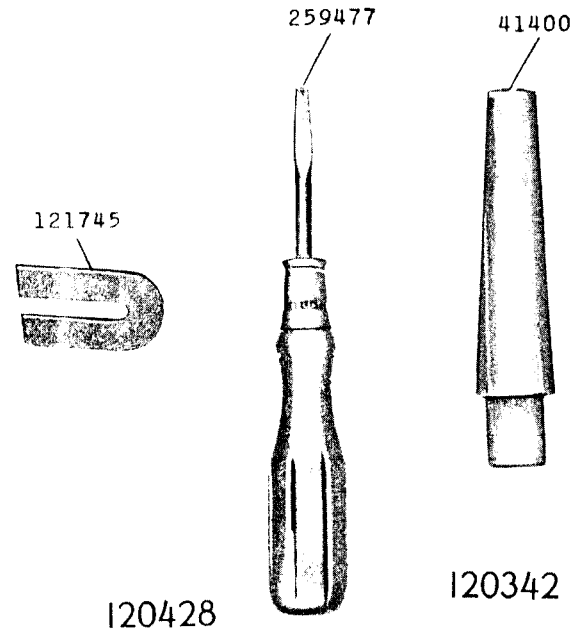

271106


271111

271104

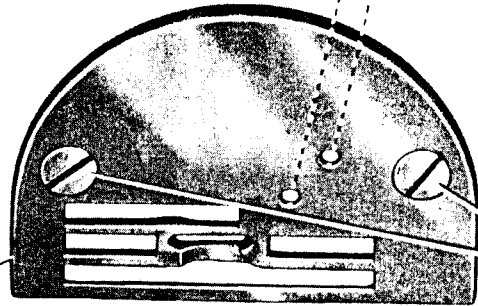

691F

271103

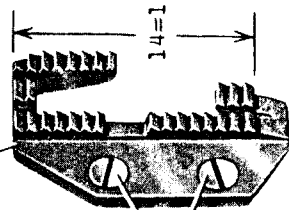

50117E


200136D



271105

26231

271042

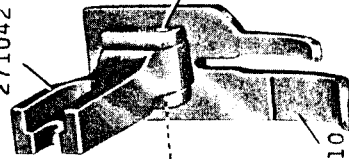


271110

18286

18332 - 3/8


270009

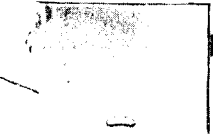

200363AL

270257

 200434C



270048

350499XC



270271




50190W


270039

200041X

270039

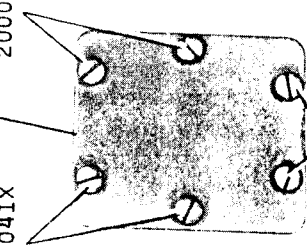


200041X

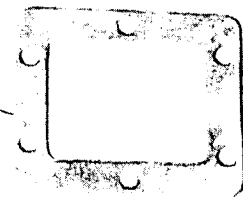

204235




200004E

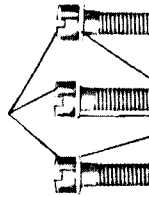


2020C5

270002

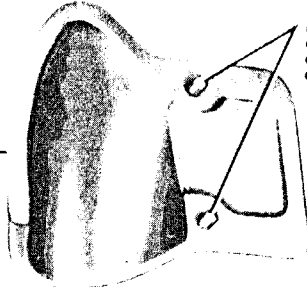

200041X

18457 - 1/2

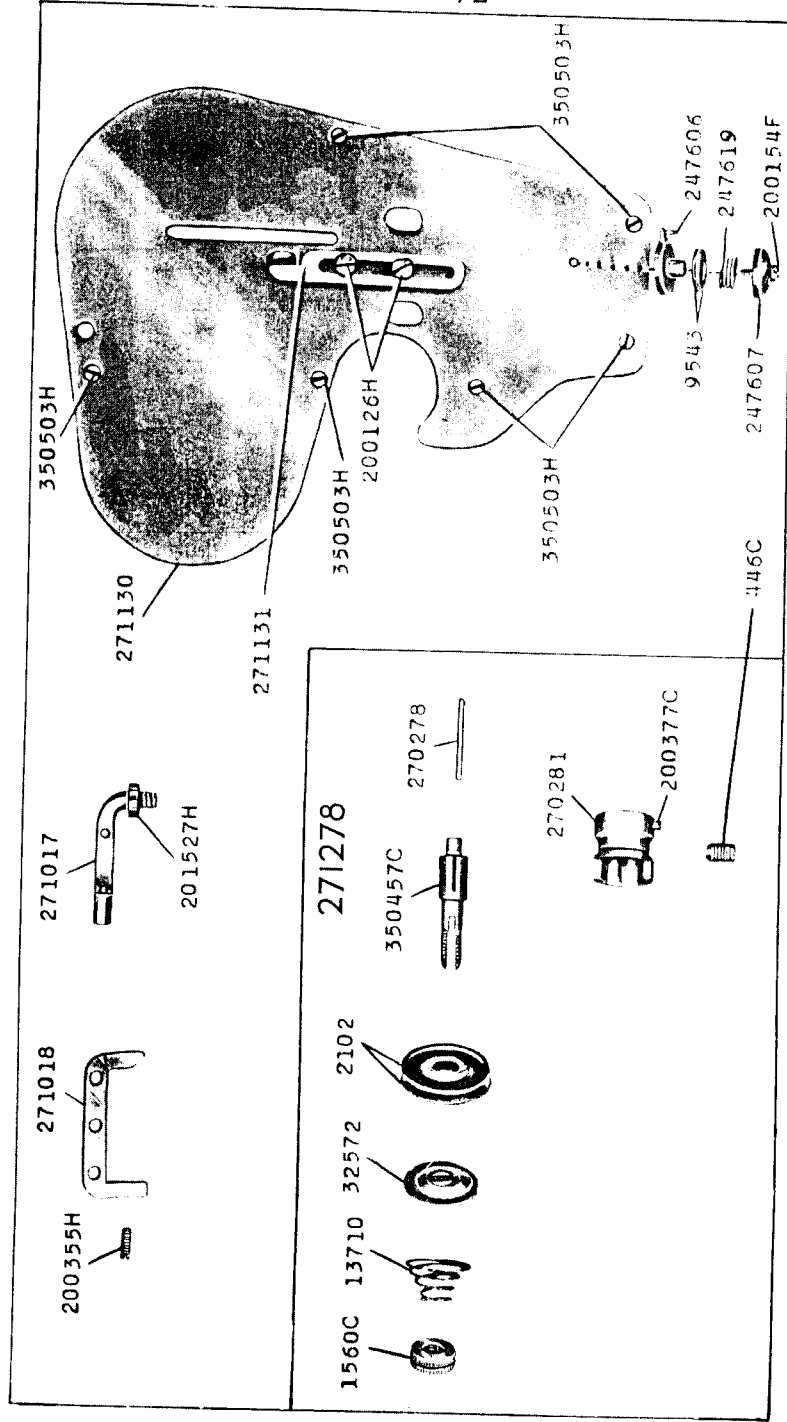

18458 - 3/8

