


SINGER

457 UTT-Parts

SINGER

457 UTT

PARTS FOR CLASS 457 G 41, 45, 403, 405, 413
433, 435 AND 445 IF NOT STATED OTHERWISE

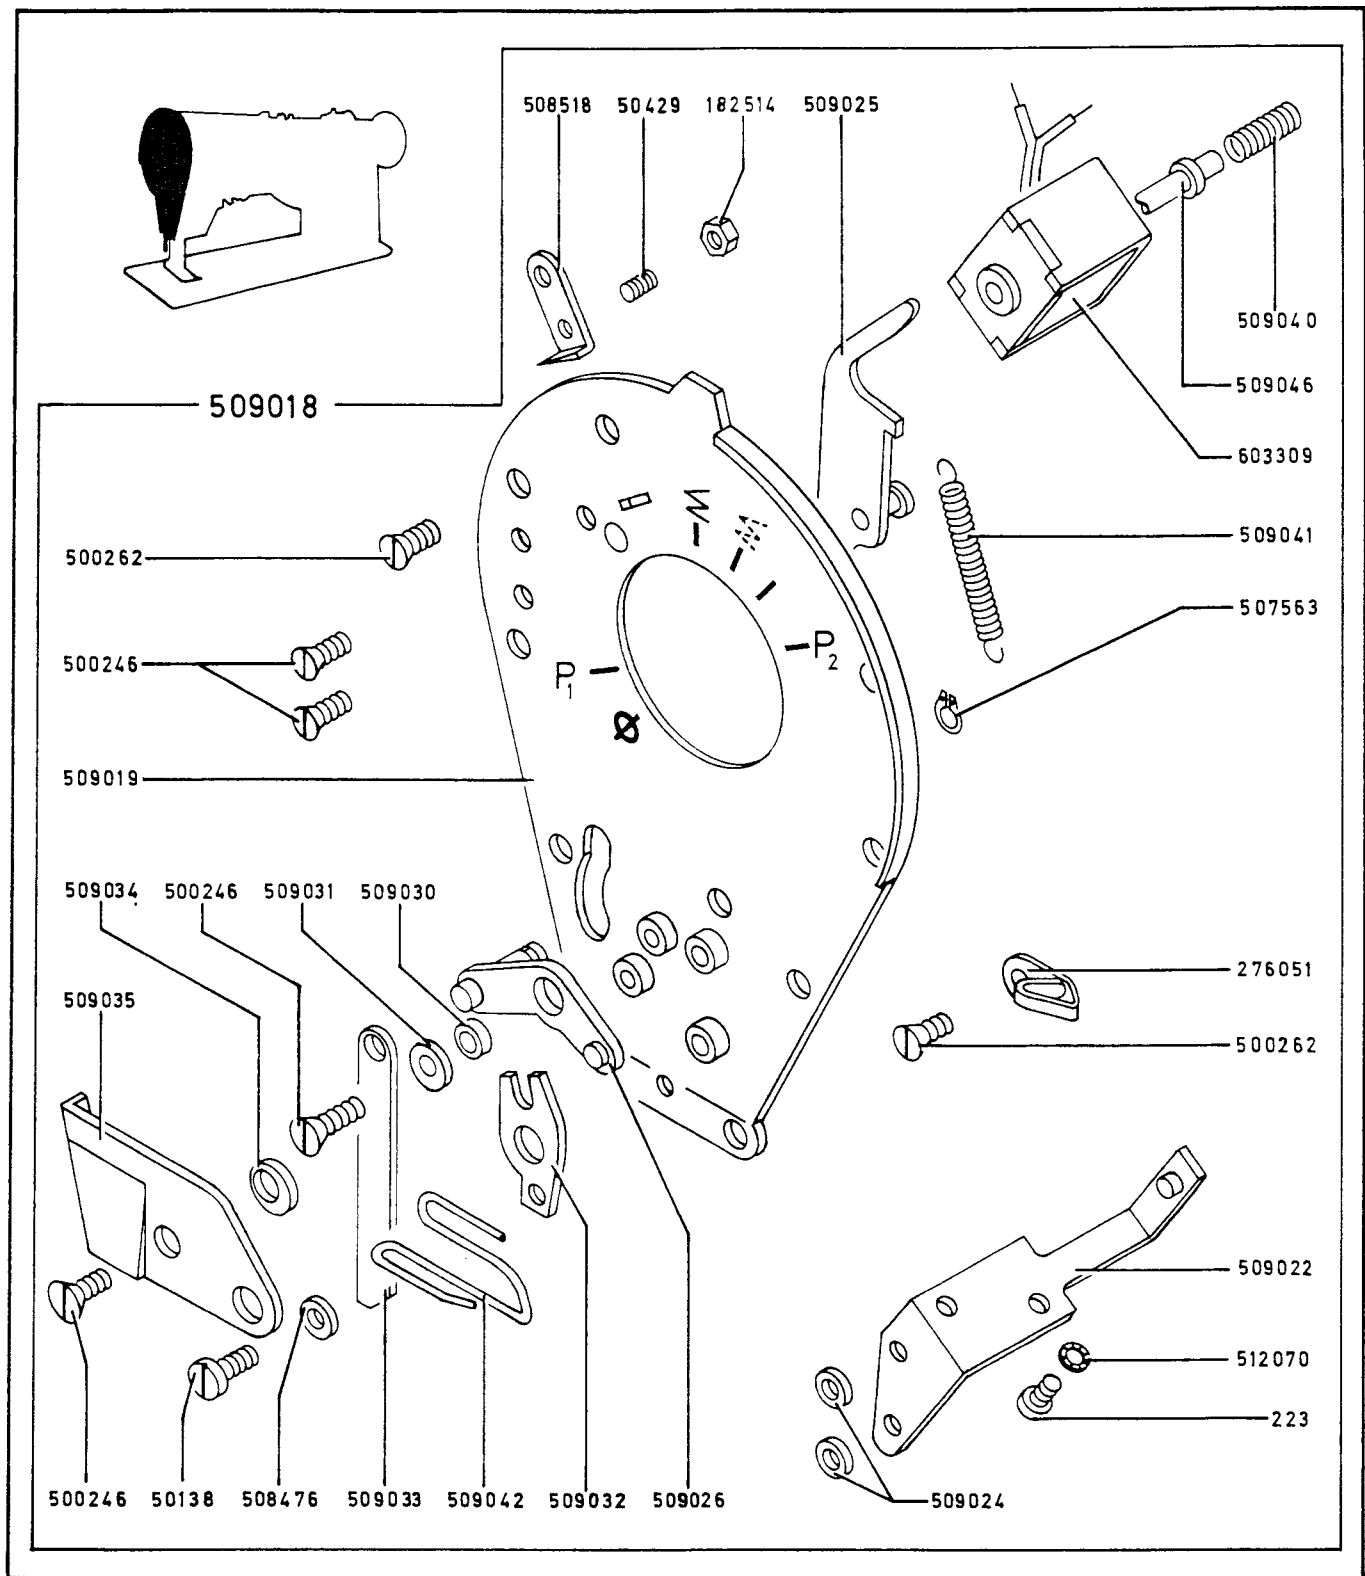




457 UTT - 100 (1170)

223-850
50138-850
50429-833
182514-850
276051
500246-850
500246-850
500246-850
500262-833
500262-833
507563
508476
508518
509018
FACE PLATE SOLENOID SCREW (2)
FACE PLATE THREAD PULLER SCREW
THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW
THREAD CUTTER (ON FACE PLATE) ADJUSTING SCREW NUT
THREAD CUTTER THREAD GUIDE (ON FACE PLATE)
FACE PLATE SCREW
FACE PLATE COVER PLATE SCREW
FACE PLATE SOLENOID BRACKET SCREW (2)
THREAD CUTTER THREAD GUIDE (ON FACE PLATE) SCREW
THREAD CUTTER SCREW
FACE PLATE TRIP PAWL SAFETY WASHER
FACE PLATE THREAD PULLER WASHER
FACE PLATE (ON FACE PLATE)
FACE PLATE CPL. NOS. 050138, 050429, 182514, 276051,
500246, 500246, 500262, 500262, 507563, 508476, 508518,
509019, 509022, 509025, 509026, 509030, 509031, 509032,
509033, 509034, 509035, 509040, 509041, 509042, 509046,
603309 AND TWO EACH 223, 500246, 509024 AND 512070

509019
509022
509024
509025
509026
509030
509031
509032
509032
509033
509034
509035
509040
509041
509042
509046
512070
603309
FACE PLATE
FACE PLATE SOLENOID BRACKET
FACE PLATE SOLENOID BRACKET WASHER (2)
FACE PLATE TRIP PAWL
FACE PLATE LEVER
FACE PLATE WASHER
FACE PLATE WASHER
FACE PLATE LEVER
FACE PLATE CONNECTION LINK
FACE PLATE ECCENTRIC DISC
FACE PLATE COVER PLATE
FACE PLATE PRESSURE SPRING (COIL)
FACE PLATE RETURN SPRING (COIL)
FACE PLATE THREAD PULLER
FACE PLATE STUD
FACE PLATE SOLENOID THRUST WASHER (2)
FACE PLATE SOLENOID

PART NO. DESCRIPTION

PART NO. DESCRIPTION

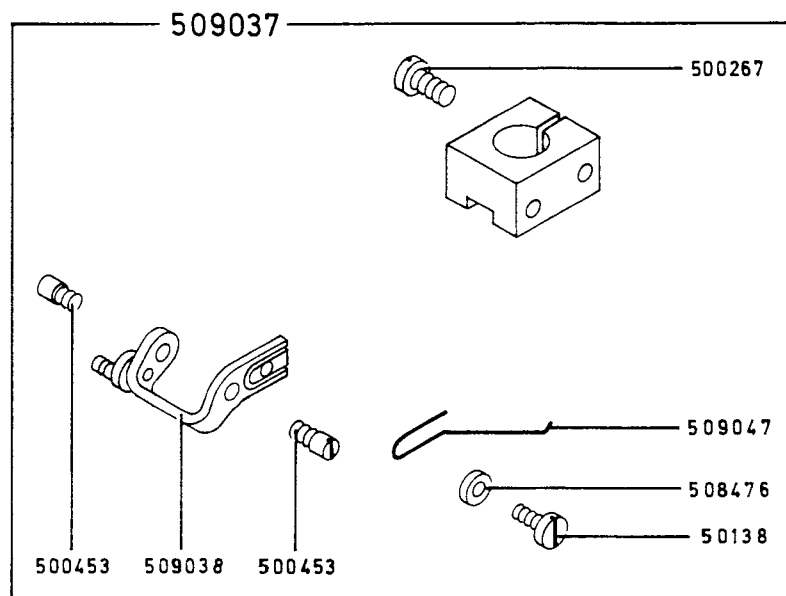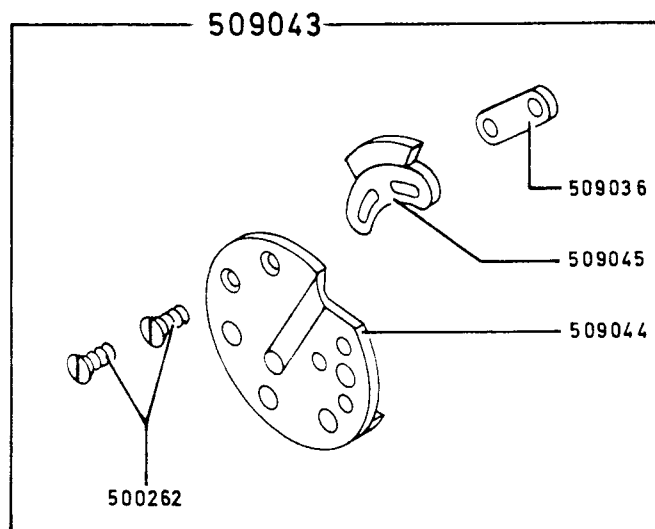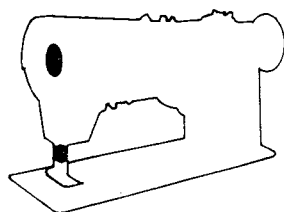


457 UTT - 200 (1170)

50138-850 CLAMPING PIECE SCREW
500262-833 ROTARY TAKE UP MOUNTING DISC SCREW (2)
500267-850 CLAMPING PIECE SCREW
500453-833 CLAMPING PIECE YOKE SCREW (2)
507563 SAFETY WASHER
508476 CLAMPING PIECE WASHER
509036 ROTARY TAKE UP MOUNTING DISC SCREW
509037 CLAMPING PIECE CPL. NOS. 50138, 500267, 508476,
509038, 509047 AND TWO EACH 500453

509038 CLAMPING PIECE YOKE
509043 ROTARY TAKE UP MOUNTING DISC CPL. NOS. 509036,
509044, 509045 AND TWO EACH 500262
509044 ROTARY TAKE UP MOUNTING DISC
509045 ROTARY TAKE UP MOUNTING DISC CATCH
509047 CLAMPING PIECE THREAD WIPER

PART NO. DESCRIPTION

PART NO. DESCRIPTION

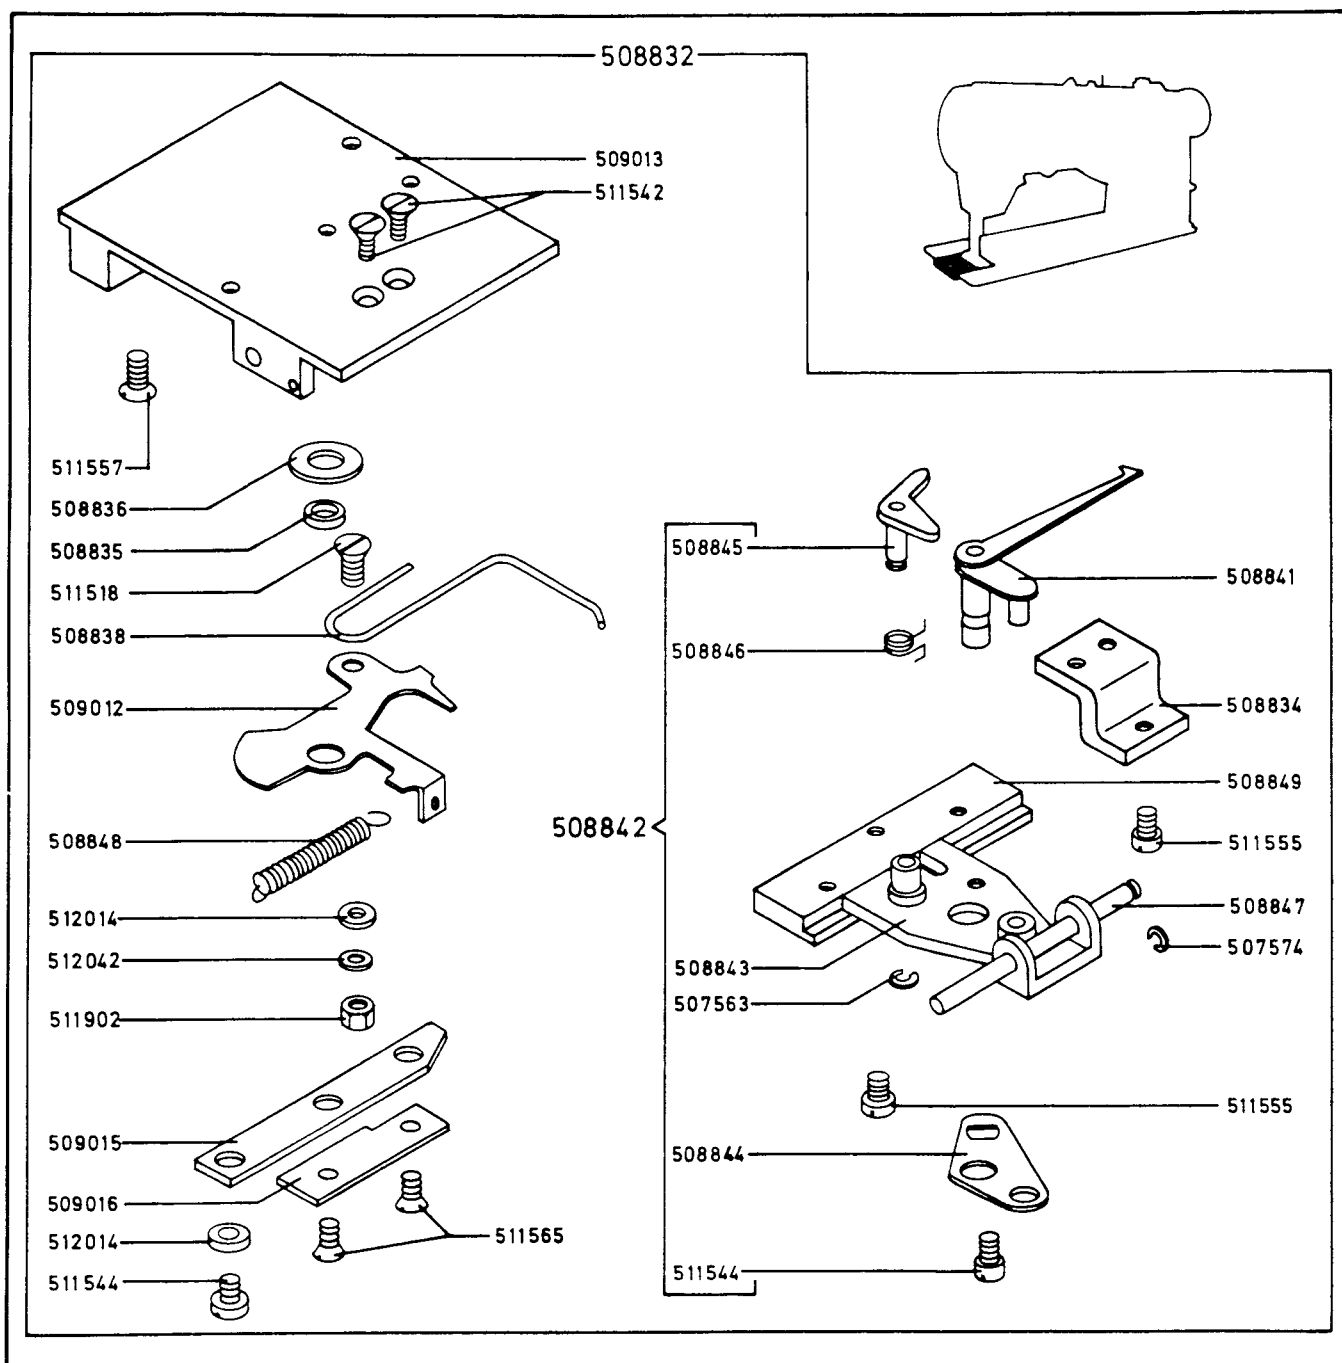


457 UTT - 300 (1170)

507563	KNIFE OPENING PAWL RETAINING RING
507574	THREAD PULLER CARRIAGE SHAFT RETAINING RING
508832	THREAD PULLING AND TRIMMING UNIT CPL. NOS. 507574, 508834, 508835, 508836, 508838, 508841, 508842, 508847, 508848, 508849, 509012, 509013, 509015, 509016, 511518, 511544, 511902, 512042 AND TWO EACH 511542, 511555, 511557, 511565 AND 512014
508834	PIVOTING KNIFE STOP
508835	PIVOTING KNIFE BUSHING
508836	PIVOTING KNIFE SPACER
508838	THREAD POSITIONING WIRE
508841	THREAD PULLER FINGER
508842	THREAD PULLER CARRIAGE CPL. NOS. 507563, 508843 TO 508846 AND 511544
508843	THREAD PULLER CARRIAGE
508844	THREAD PULLER FINGER STOP PLATE
508845	KNIFE OPENING PAWL
508846	KNIFE OPENING PAWL RETURN SPRING

508847	THREAD PULLER CARRIAGE SHAFT
508848	PIVOTING KNIFE BIAS SPRING
508849	THREAD PULLER CARRIAGE RETAINING PLATE
509012	PIVOTING KNIFE
509013	BED SLIDE
509015	COUNTER KNIFE
509016	COUNTER KNIFE RETAINING PLATE
511518-850	THREAD POSITIONING WIRE SECURING SCREW
511542-850	PIVOTING KNIFE STOP SECURING SCREW (2)
511544-850	THREAD PULLER FINGER STOP PLATE SECURING SCREW (2)
511555	BED SLIDE SECURING SCREW (2)
511557-850	THREAD PULLER CARRIAGE RETAINING PLATE SECURING SCREW (2)
511565-850	KNIFE RETAINING PLATE SECURING SCREW (2)
511902-850	THREAD POSITIONING WIRE SECURING NUT
512014	THREAD POSITIONING WIRE WASHER (2)
512042	THREAD POSITIONING WIRE TENSION WASHER

PART NO. DESCRIPTION

PART NO. DESCRIPTION

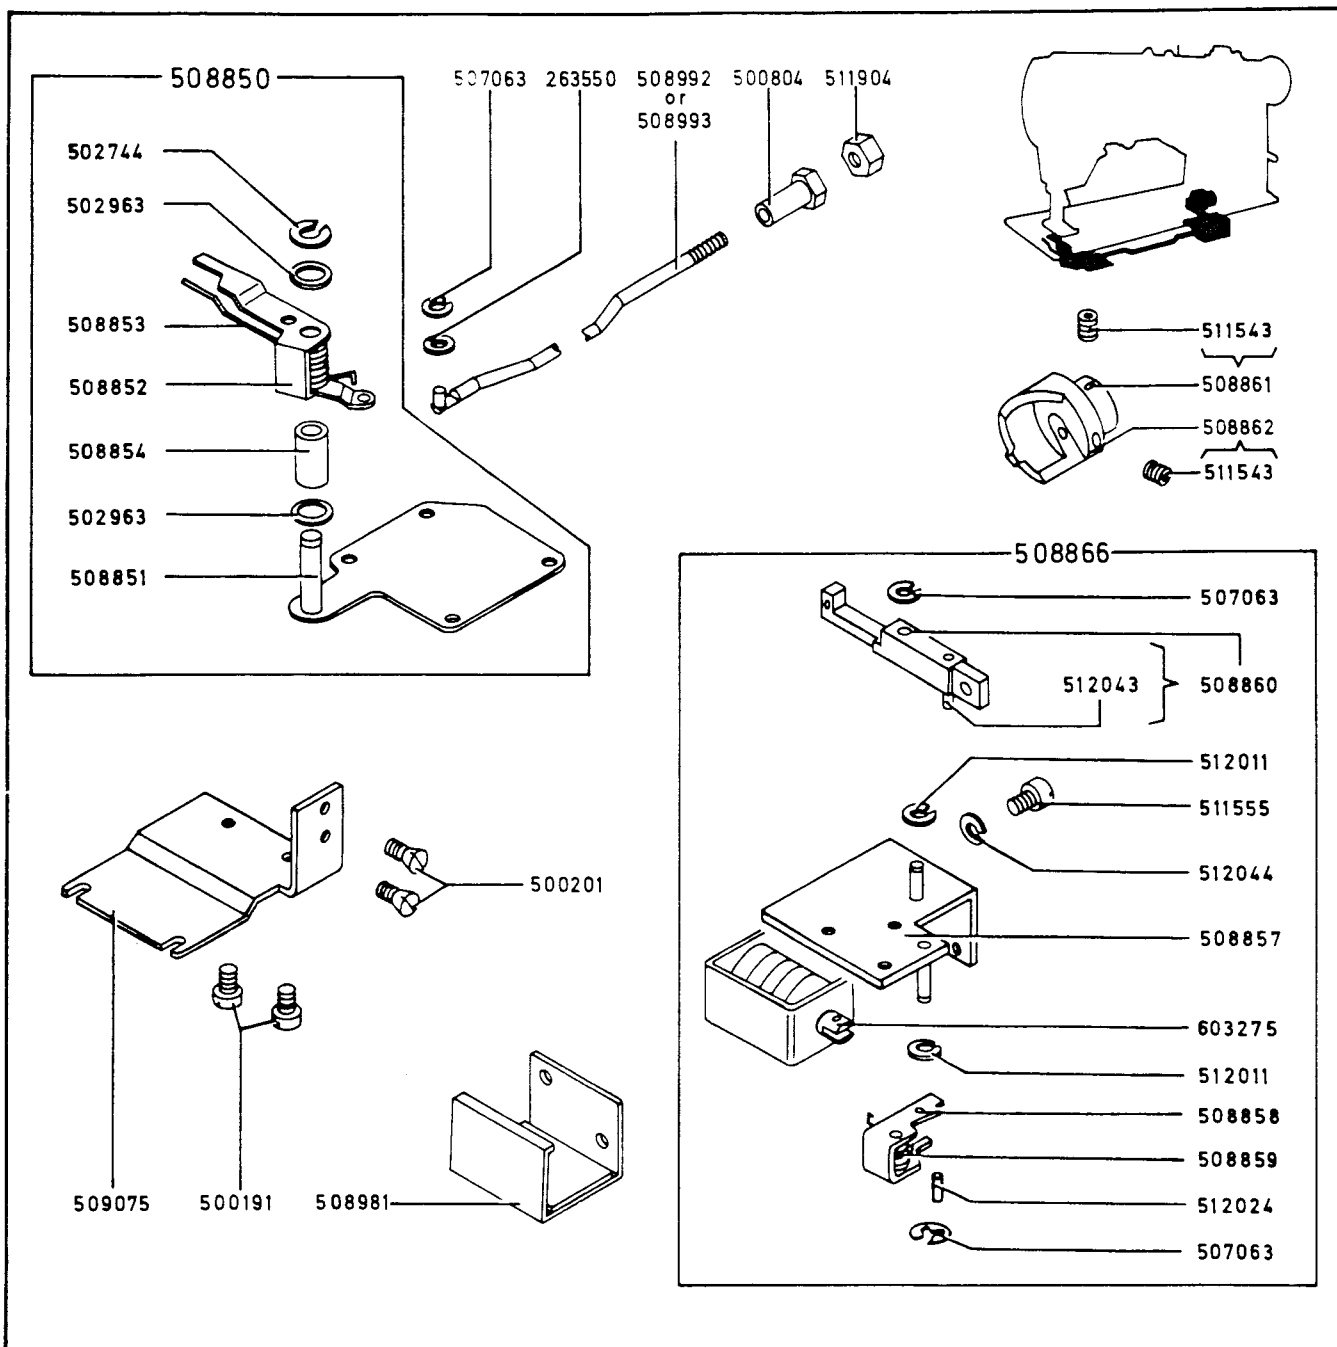


457 UTT - 400 (1170)

263550	THREAD PULLER CONNECTING ROD RETAINING RING WASHER
500191-850	THREAD PULLER RELEASING SOLENOID MOUNTING SCREW (2) (457 G 41, 45 MACHINES ONLY)
500201-850	THREAD PULLER RELEASING SOLENOID MOUNTING BRACKET PLATE SCREW (2) (SHORT ARM MACHINE) (457 G 41, 45 MACHINES ONLY)
500804	THREAD PULLER CONNECTING ROD ADJUSTING SCREW
502744	THREAD PULLER RETURN LEVER RETAINING RING
502963	THREAD PULLER RETURN LEVER WASHER (2)
507063	THREAD PULLER CONNECTING ROD RETAINING RING
507063	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING RING
507063	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING PAWL RETAINING RING
508850	THREAD PULLER ACTUATING MECHANISM WITH 502744, 502963, 508851, 508852, 508853 AND 508854
508851	HOOK SHAFT GEAR BOX COVER
508852	THREAD PULLER RETURN LEVER
508853	THREAD PULLER ACTUATING SPRING
508854	THREAD PULLER RETURN LEVER BUSHING
508857	THREAD PULLER RELEASING SOLENOID MOUNTING BRACKET
508858	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING PAWL
508859	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING PAWL RETURN SPRING
508860	THREAD TRIMMER CONTROL CAM FOLLOWER WITH 512043
508861	THREAD TRIMMER CONTROL CAM POSITIONING COLLAR WITH TWO 511543

508862	THREAD TRIMMER CONTROL CAM WITH TWO 511543
508866	THREAD PULLER RELEASING SOLENOID MOUNTING BRACKET CPL. NOS. 508857, 508858, 508859, 508860, 512024, 603275 AND TWO EACH 507063, 511555, 512011 AND 512044
508981	THREAD PULLER RELEASING SOLENOID COVER
508992	THREAD PULLER CONNECTING ROD (SHORT ARM MACHINE) (457 G 41, 45 MACHINES ONLY)
508993	THREAD PULLER CONNECTING ROD (LONG ARM MACHINE) EXCEPT FOR THE 457 G 41, 45 MACHINES
509075	THREAD PULLER RELEASING SOLENOID MOUNTING BRACKET PLATE (SHORT ARM MACHINE) (457 G 41, 45 MACHINES ONLY)
511543-850	THREAD TRIMMER CONTROL CAM POSITIONING COLLAR SET SCREW (2)
511543-850	THREAD TRIMMER CONTROL CAM SET SCREW (2)
511555-850	THREAD PULLER RELEASING SOLENOID MOUNTING SCREW (2)
511904-850	THREAD PULLER CONNECTING ROD ADJUSTING SCREW LOCK NUT
512011	THREAD TRIMMER CONTROL CAM FOLLOWER SPACER
512011	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING PAWL WASHER
512024	THREAD TRIMMER CONTROL CAM FOLLOWER RETAINING PAWL ROLL PIN
512043	THREAD TRIMMER CONTROL CAM FOLLOWER PIN
512044	THREAD PULLER RELEASING SOLENOID MOUNTING SCREW LOCK WASHER (2)
603275	THREAD PULLER RELEASING SOLENOID

PART NO. DESCRIPTION

PART NO. DESCRIPTION

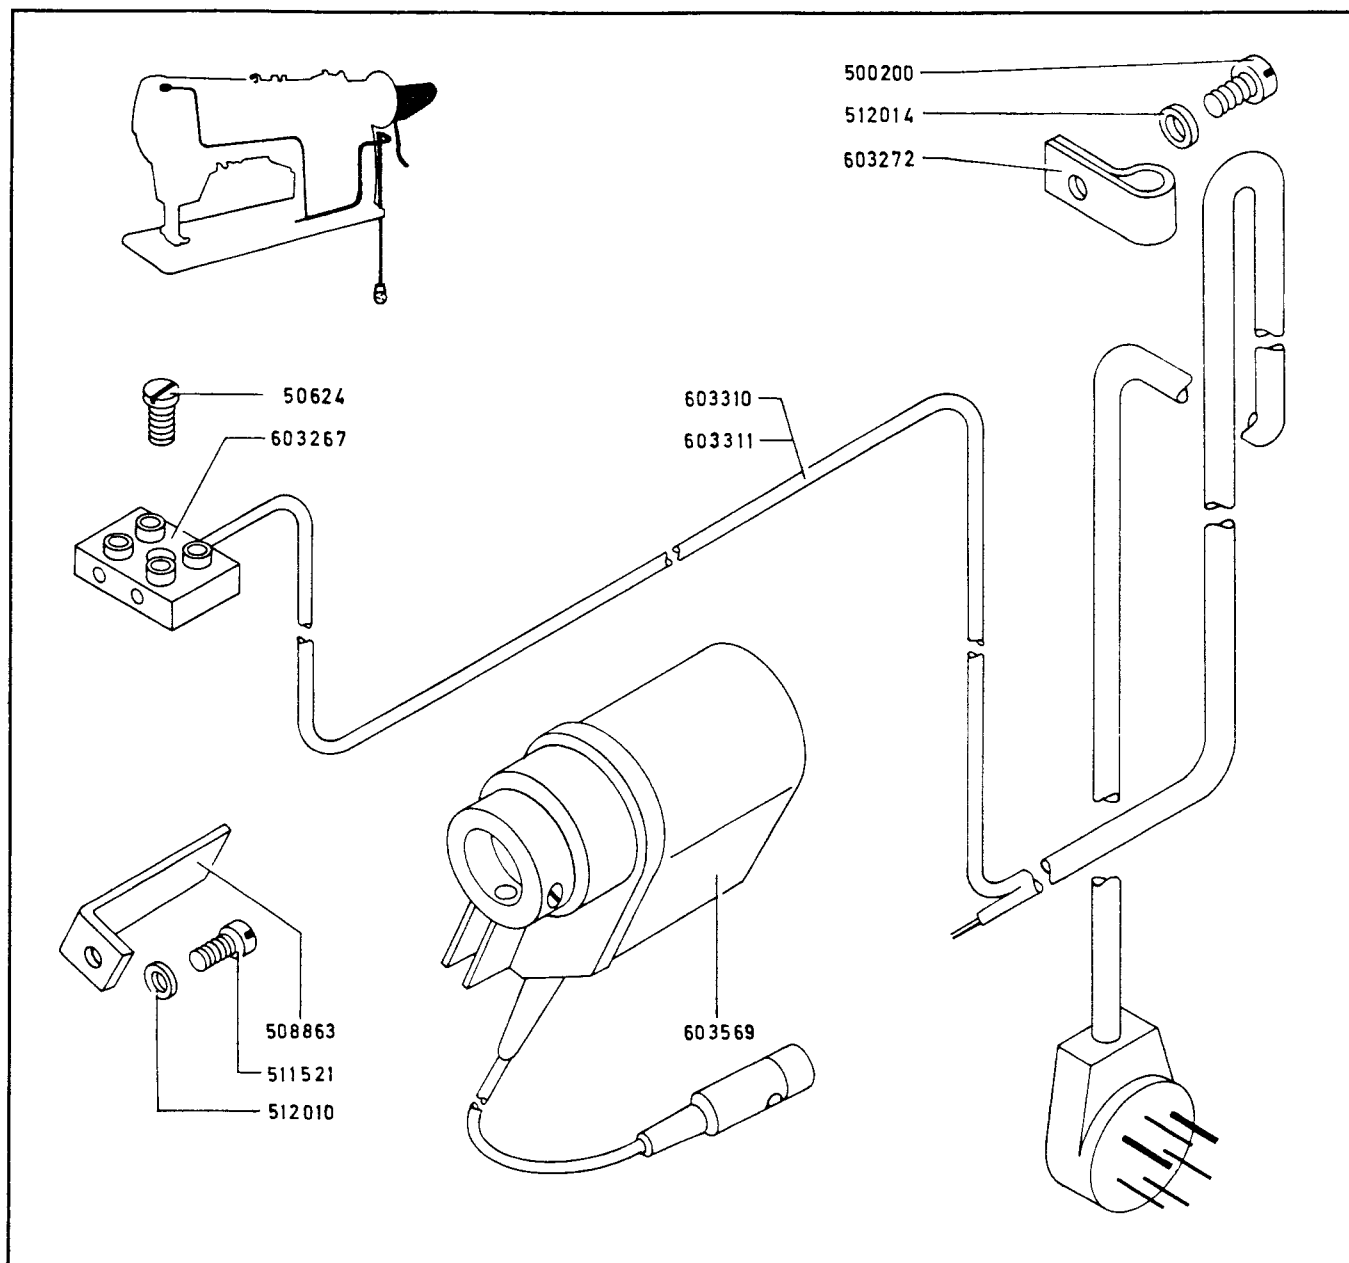


457 UTT - 500 (1170)

50624-833	ELECTRIC TERMINAL SECURING SCREW
500200-850	CABLE CLAMP SCREW
508863	SYNCHRONIZER BRACKET
511521-850	SYNCHRONIZER BRACKET SECURING SCREW
512010	SYNCHRONIZER BRACKET SECURING SCREW WASHER
512014	CABLE CLAMP SCREW WASHER
603267	ELECTRIC TERMINAL (UPPER)

603272	CABLE CLAMP (LARGE)
603310	WIRE HARNESS (SHORT ARM MACHINE) (457 G 41, 45 MACHINES ONLY)
603311	WIRE HARNESS (LONG ARM MACHINE) (EXCEPT FOR THE 457 G 41, 45 MACHINES)
603569	COMMUTATOR SENSOR

PART NO. DESCRIPTION

PART NO. DESCRIPTION

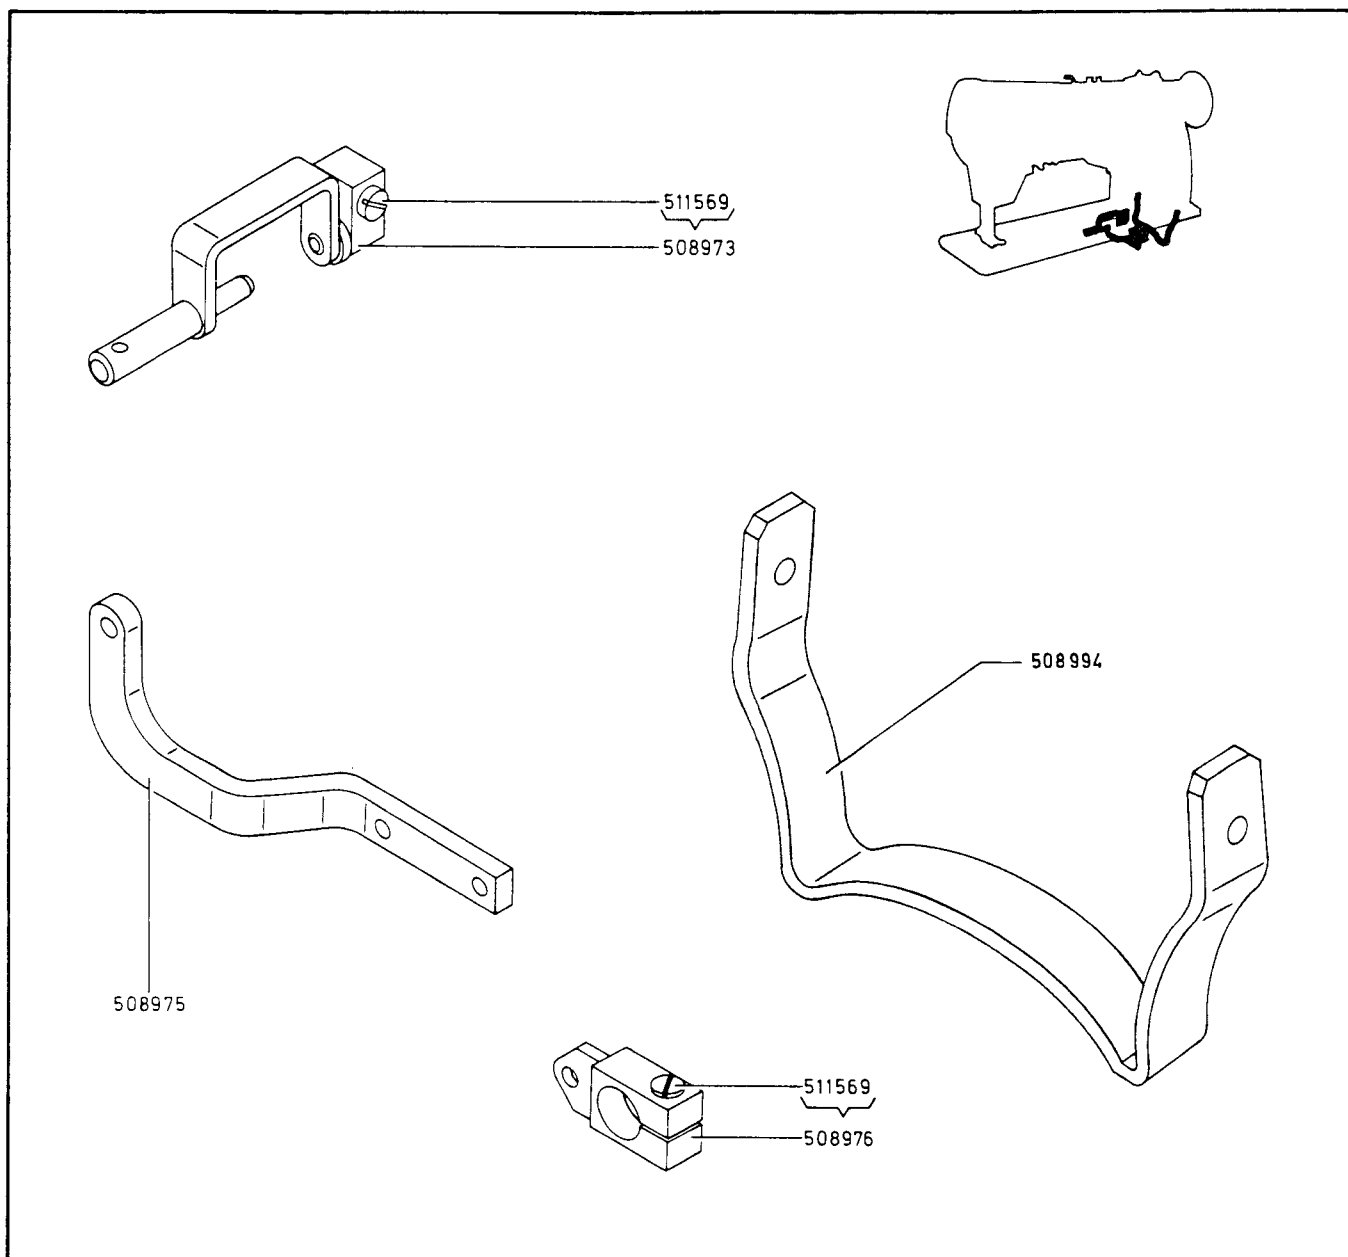


457 UTT - 600 (1170)

508973	FEED REGULATING CONNECTION SHAFT BRACKET WITH 511569 (457 G 403, 413, 433 MACHINES ONLY)
508975	FEED REGULATING SHAFT INDICATOR LEVER FOOT CONTROL SHIFTING LEVER (DIFFERENTIAL) (457 G 413 MACHINE ONLY)
508976	DIFFERENTIAL REGULATING FOOT CONTROL SHAFT CRANK WITH 511569 (457 G 413 MACHINE ONLY)


508994	MACHINE LEG (REAR) (SHORT ARM MACHINE) (457 G 41, 45 MACHINES ONLY)
511569-850	FEED REGULATING CONNECTION SHAFT BRACKET PINCH SCREW (457 G 403, 413, 433 MACHINES ONLY)
511569-850	DIFFERENTIAL REGULATING FOOT CONTROL SHAFT CRANK PINCH SCREW (457 G 413 MACHINES ONLY)

PART NO. DESCRIPTION

PART NO. DESCRIPTION

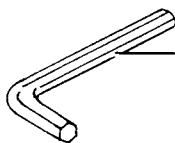

512045

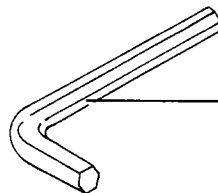

512046

457 UTT - 700 (1170)

ACCESSORIES

512045	HEXAGON WRENCH
512046	HEXAGON WRENCH

PART NO.	DESCRIPTION
----------	-------------

PART NO.	DESCRIPTION
----------	-------------