 



SINGER

460/13

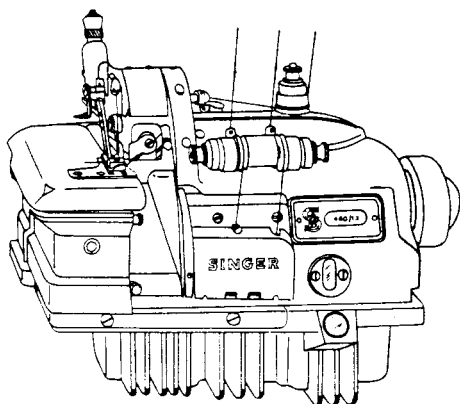

SINGER^{*}

 
460/13

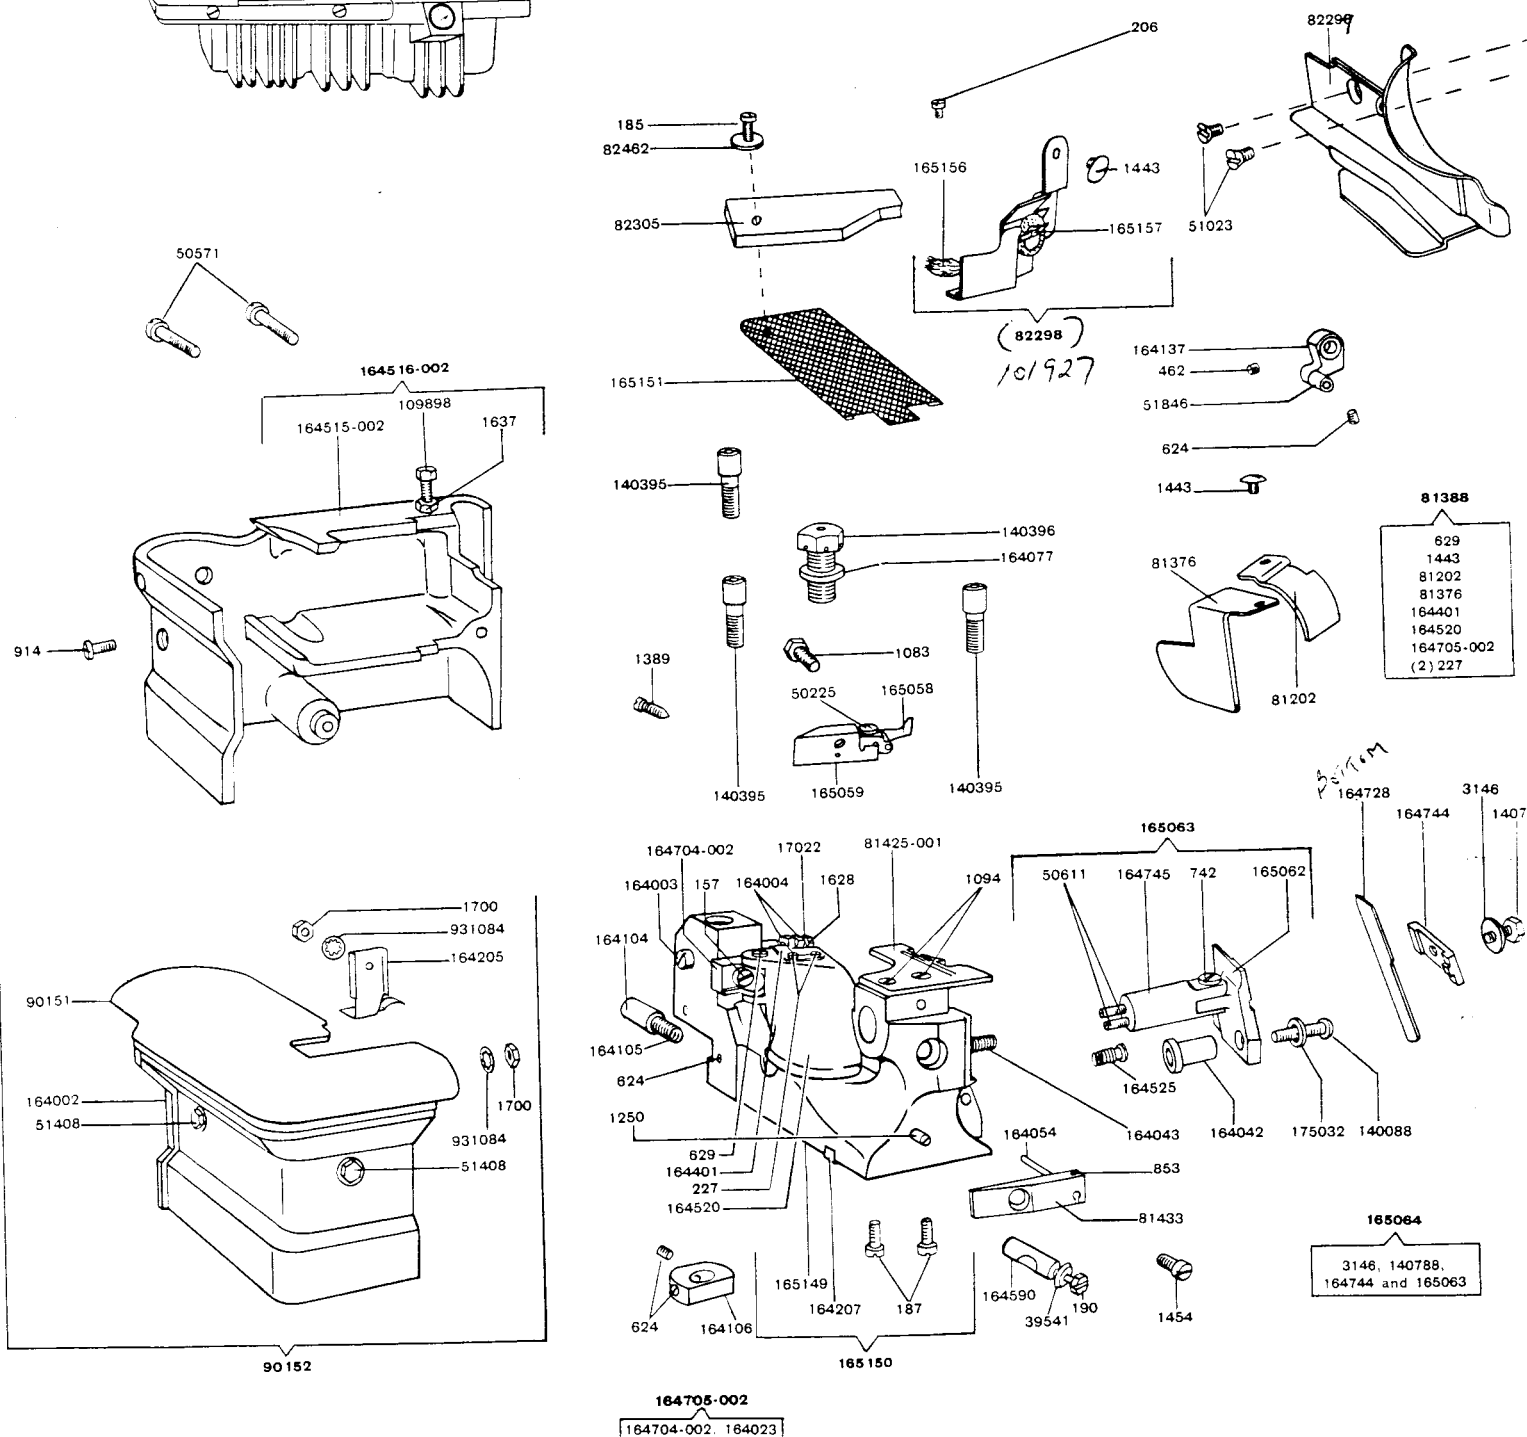

LIST OF PARTS FOR 460/13 MACHINE

Part No.	Description
145(809)	Oil Cooler Cover Screw
157(803)	Feed Eccentric Cover Bracket Screw
157(830)	Needle Driving Shaft Crank Connection Cap (lower) Screw
157(803)	Oil Reservoir Screw
171(830)	Needle Driving Shaft Crank Connection Cap (upper) Screw
185(809)	Machine Frame Bracket Oil Screen Screw
187(805)	Machine Frame Bracket Key Screw
187(805)	Thread (looper, right hand) Stripper and Take-up Screw
190(805)	Knife (stationary) and Needle Guard Holder Adjusting Stud Cap Screw
190(805)	Thread (looper) Take-up Screw (lower)
198(809)	Knife (movable) Holder Screw
206(809)	Machine Frame Oil Splash Guard (Internal) Screw (bottom)
227(809)	Feed Eccentric Cover Latch Spring Screw
330(809)	Machine Frame Top Cover Oil Lead Screw
332(809)	Thread (looper) Plate Cover Spring Screw
442(830)	Looper (right hand) Carrier Connecting Link Adjusting Screw (front) Stop Screw
447(830)	Knife (movable) Lever Bearing Set Screw (long)
447(830)	Knife (movable) Lever Guide Holder Thread Tube Set Screw (Machine Frame End)
447(830)	Knife (movable) Lever Hinge Stud Set Screw (back)
448(830)	Machine Pulley Set Screw
460(830)	Knife (movable) Lever Guide Thread Tube Set Screw
460(830)	Looper (left hand) Carrier Screw Set Screw
460(830)	Thread Eyelet (needle thread) Set Screw
462(830)	Presser Bar Lifting Bracket Set Screw (short)
624(830)	Cloth Plate Plunger Set Screw
624(830)	Cloth Plate Position Coiler Set Screw
624(830)	Knife (movable) Lever Bearing Set Screw (short)
624(830)	Machine Frame Oil Tube Set Screw
624(830)	Presser Bar Lifting Bracket Set Screw (long)
624(830)	Thread (looper, right hand) Tube Set Screw
629(810)	Feed Eccentric Cover Hinge Screw
691(803)	Machine Frame Wearing Plate Screw
735(830)	Lint Stripper Screw
742(806)	Knife (stationary) and Needle Guard Holder Screw
853(830)	Looper (left hand) Thread Tube Set Screw
896(830)	Thread (looper) Plate Screw
904(830)	Looper (right hand) Position Collar Set Screw
914(809)	Machine Frame Cover (back) Screw (short)
1036(830)	Machine Frame Rotary Shaft Bushing (front) Set Screw
1036(830)	Machine Frame Rotary Shaft Counterbalance Set Screw
1083(803)	Looper (left hand) Driving Shaft Crank Clamping Screw
1083(803)	Looper (left hand) Carrier Holder Clamping Screw
1083(803)	Looper (right hand) Driving Lever Clamping Screw
1083(803)	Looper (right hand) Driving Shaft Crank Clamping Screw
1083(803)	Needle Driving Shaft Crank Clamping Screw
1083(805)	Needle Guard Holder Screw
1094(806)	Throat Plate Screw
1100(830)	Feed (back) Dog Section (right) Screw
1143(830)	Knife (movable) Lever Hinge Stud Set Screw (top)
1209(809)	Chip Guard Screw (lower)
1250(830)	Cloth Plate Lock Spring Screw Stud
1324(830)	Looper (left hand) Carrier Screw
1324(830)	Looper (left hand) Driving Shaft Crank Key Screw
1324(805)	Looper (right hand) Driving Shaft Crank Key Screw
1324(809)	Oil Cooler Screw (short)
1389(830)	Feed Bar Hinge Pin Set Screw
1423	Knife (movable) Lever Guide and Needle Thread Bridge Bracket Screw
1423	Knife (movable) Lever Guide and Needle Thread Eyelet Screw
1443(819)	Oil Reservoir Lint Guard (back) Clamping Screw
1443(819)	Oil Reservoir Lint Guard (front) Clamping Screw
1423(809)	Thread (looper, right hand) Thread Eyelet Screw
1443(809)	Feed Eccentric Cover Bracket Oil Cover Screw
1443(809)	Machine Frame Oil Splash Guard (Internal) Screw (top)
1443(809)	Thread (looper, right hand) Stripper and Take-up Eyelet (adjustable) Screw
1443(809)	Thread (looper) Take-up Screw (upper)

Part No.	Description
1443(809)	Thread (needle) Controller Screw
1454(806)	Feed (back) Dog Screw
1454(806)	Feed (front) Dog Screw
1454(805)	Throat Plate Guide Screw
1485(809)	Machine Frame Oil Drip Sight Gauge Window Retainer Screw
1607(809)	Thread (looper, right hand) Thread Eyelet (stationary) Nut
1628(803)	Feed Bar Slide Block (back) Nut
1628(809)	Looper (right hand) Carrier Connecting Link Adjusting Screw (front) Stop Screw Nut
1637(819)	Presser Bar Lifting Lever Stop Screw Nut
1671(803)	Feed (back) Bar Connection Hinge Screw Stud Nut
1671(803)	Feed (front) Bar Connection Hinge Screw Stud Nut
1698(809)	Machine Frame Oil Lead Screw Nut
1700(809)	Cloth Plate Extension Screw Nut
1700(809)	Cloth Plate Lock Spring Nut
1700(809)	Cloth Plate Position Screw Nut
1700(809)	Looper (right hand) Locking Screw Stud Nut
1700(809)	Presser Bar (swing-out) Lifting Screw Stud Nut
2102	Tension (heavy) Disc
2102	Tension (light) Disc
3146	Knife (stationary) Clamping Gib Screw Washer
17022	Feed Bar Slide Block (back) Nut Washer
17022	Thread (looper, right hand) Stripper and Take-up Screw Washer
39541	Knife (stationary) and Needle Guard Holder Adjusting Stud Cap Screw Washer
39541	Machine Frame Oil Lead Screw Washer
45057	Looper (left hand) Driving Shaft Crank Key Screw Washer
45057	Looper (right hand) Driving Shaft Crank Key Screw Washer
50060(810)	Presser Bar (swing-out) Opening Lever Hinge Screw
50073(809)	Knife (movable) Lever Cover and Presser Bar (upright) Housing Screw
50133(803)	Tension (heavy) Screw Stud
50133(803)	Tension (light) Screw Stud
50169(809)	Presser Bar Guide Screw (not illustrated)
50225(809)	Needle Guard Screw
50225(809)	Presser Foot Clamping Plate Screw
50318	Knife (movable) Hinge Cover Screw
50318(818)	Thread (looper) Plate Thread Bushing Screw
50379(806)	Looper (left hand) Set Screw
50504(830)	Oil Cooler Plug Screw
50571(809)	Machine Frame Cover (back) Screw (long)
50611(803)	Knife (stationary) and Needle Guard Holder Position Screw
51023(818)	Machine Frame Oil Splash Guard (top) Screw
51139(809)	Oil Cooler Screw (long)
51306(805)	Presser Foot Chain Knife Screw
51332(803)	Machine Frame Rotary Shaft Bushing (intermediate) Set Screw
51362(830)	Presser Bar (swing-out) Pivot Screw Locking Plate Screw
51369(803)	Machine Frame Rotary Shaft Ball Bearing Housing Screw
51369(809)	Machine Frame Top Cover Screw
51408(830)	Cloth Plate Extension Screw
51408(830)	Cloth Plate Position Screw
51768	Needle Clamping Nut
51846	Presser Bar Lifting Bracket Roller and Stud
59456	Looper (left hand) Carrier Holder Washer
59537	Tension (heavy) Spring Bushing
59537	Tension (light) Spring Bushing
81201-014	Feed (back) Eccentric
81201-014	Feed (front) Eccentric
81202	Feed Eccentric Cover Bracket Oil Cover
81203	Looper (left hand) Driving Shaft Bushing (front)
81204	Looper (right hand) Driving Shaft Bushing (front)
81206	Machine Frame Oil Drip Sight Gauge (background) Disc
81207	Machine Frame Oil Drip Sight Gauge Tube and Support
81209-002	Machine Frame Oil Lead Tube Support
81223	Machine Frame Rotary Shaft Ball Sleeve (two pieces)
81224	Machine Frame Rotary Shaft Oil Hole Plug
81225	Machine Frame Rotary Shaft Oil Metering Pin (Internal)
81226-002	Machine Frame Top Cover Oil Lead Oil Agitator (right hand)
81227	Oil Cooler
81228	Machine Cushion (large)
81231	Machine Mounting Post
81232	Oil Reservoir Oil Sump Screen Cover
81233	Oil Agitator (left hand)
81237	Oil Reservoir Lint Guard (back)
81238	Oil Reservoir Oil Sump Screen
81263	Feed Eccentric Cover Bracket Splash Guard
81376	Machine Frame Top Cover 164101 with 330(809), 81226-002 and two 164418
81382-002	Feed Eccentric Cover, Nos. 629(810), 1443(809), 81202, 81376, 164401, 164520, 164705-002 and two 227(809)
81388	

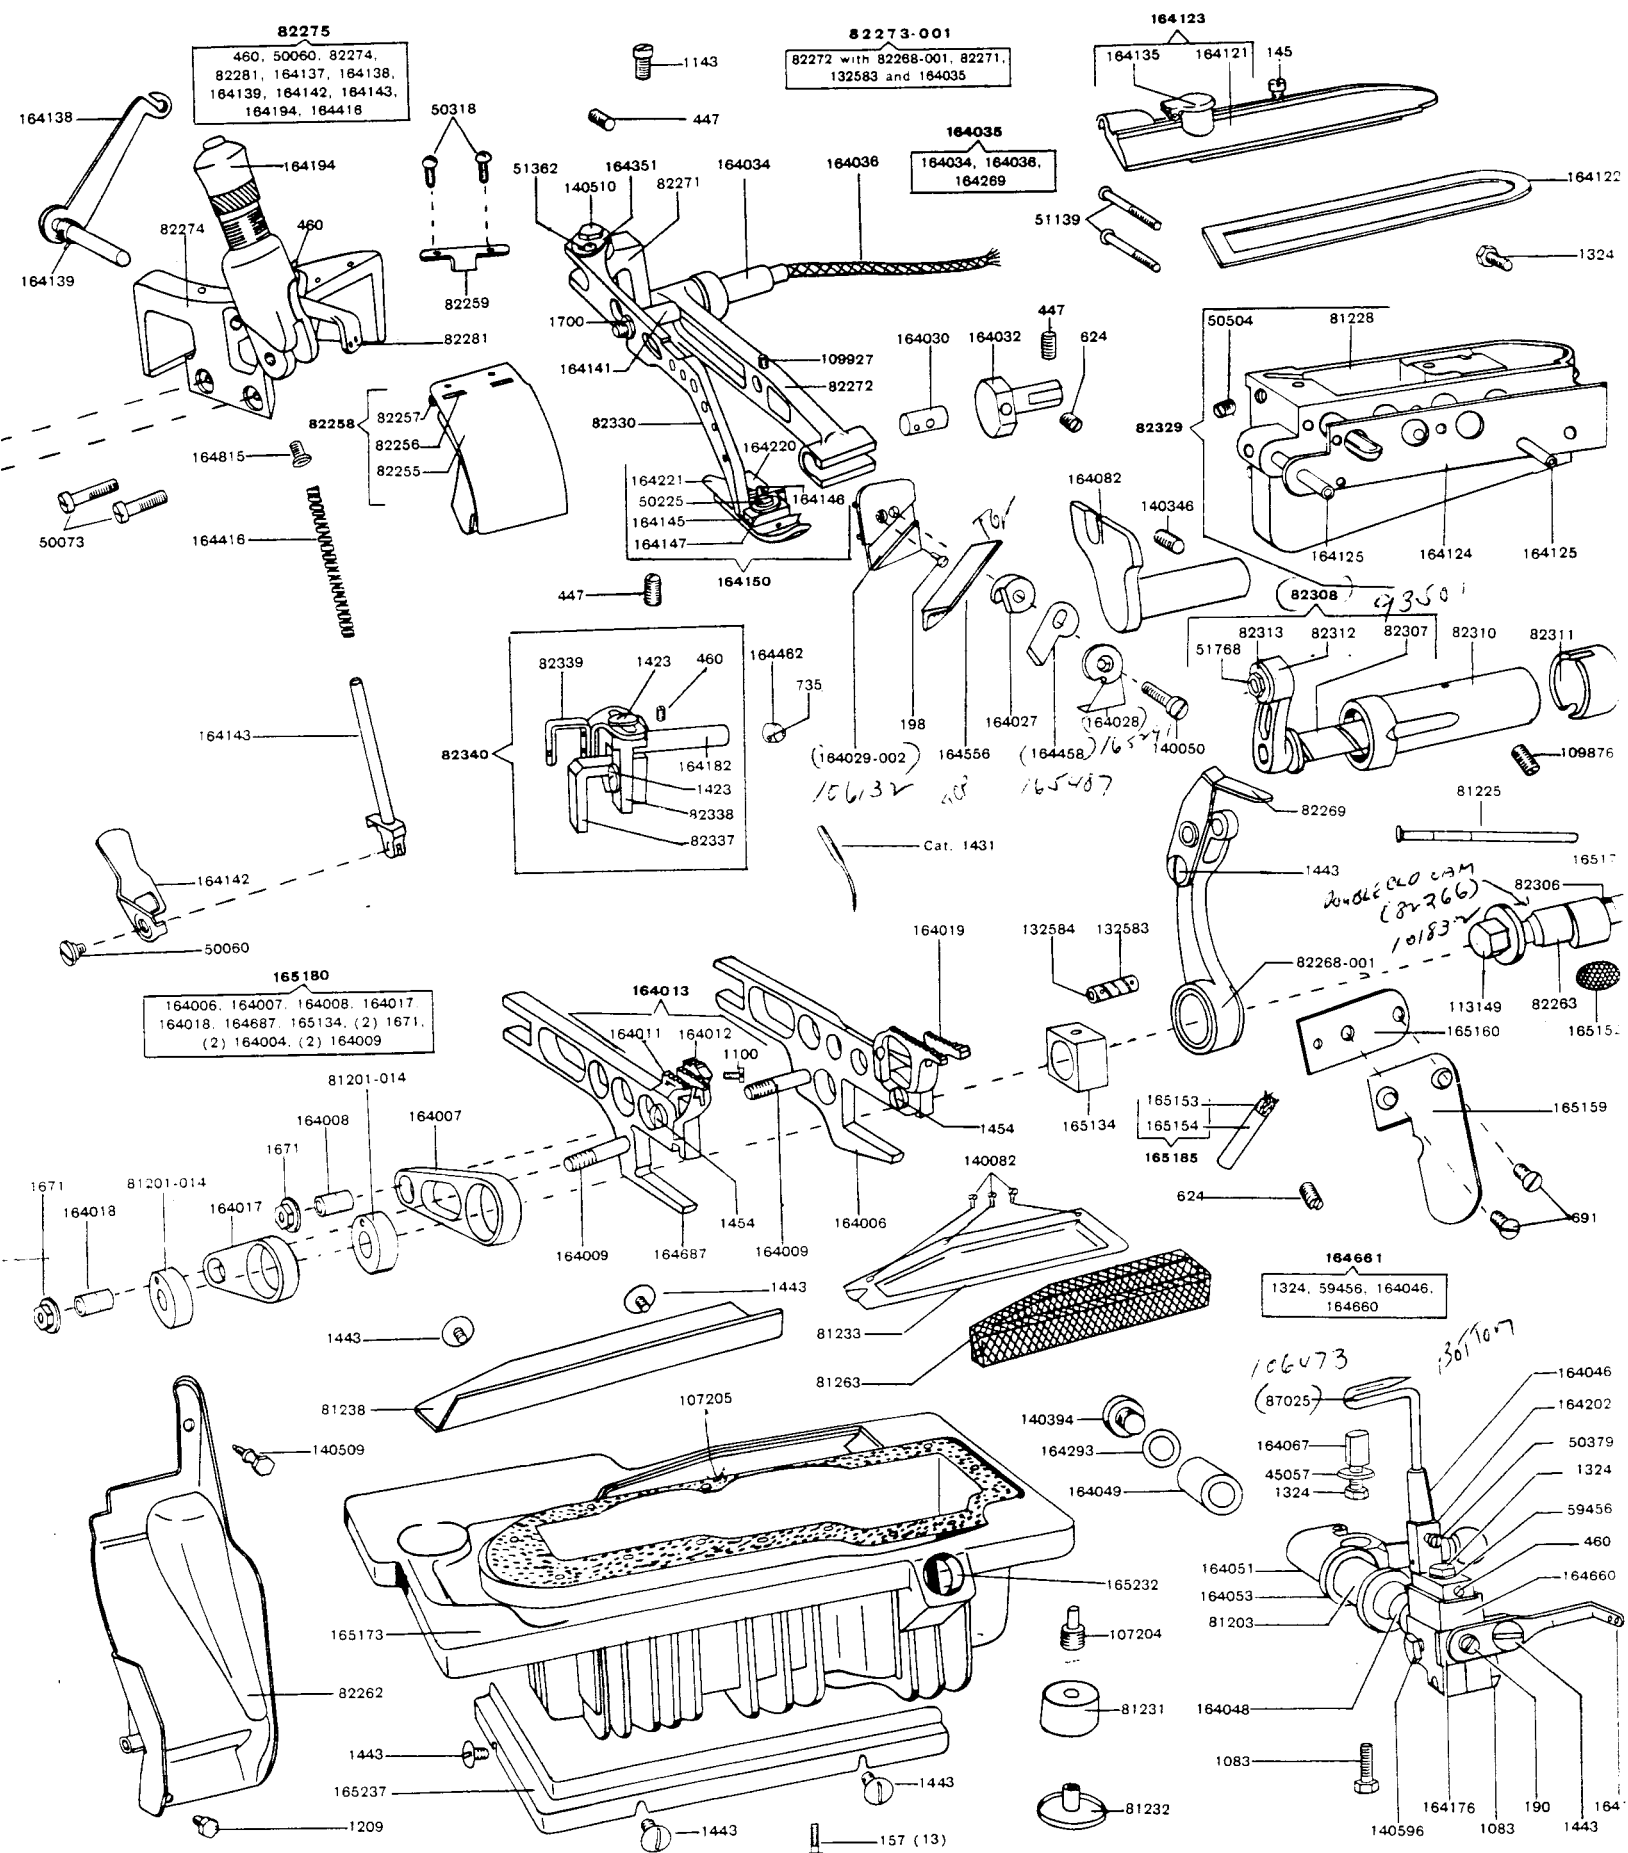 

Part No.	Description
81425-001	Throat Plate
81433	Throat Plate Guide with 853(830)
82255	Knife (movable) Hinged Cover
82256	Knife (movable) Hinged Cover Hinge
82257	Knife (movable) Hinged Cover Pin
82258	Knife (movable) Hinged Cover 82255 with 82256 and 82257
82259	Knife (movable) Hinged Cover Spring
82262	Chip Guard
82263	Feed Lifting and Knife (movable) Eccentric
82268-001	Thread (needle) Controller Lever
82269	Thread (needle) Controller
82271	Presser Bar Bracket
82272	Knife (movable) Lever with 109927(869)
82273-001	Knife (movable) Lever 82272 with 82268-001, 82271, 132583 and 164035
82274	Knife (movable) Lever Cover and Presser Bar (upright) Housing with 460(830)
82275	Knife (movable) Lever Cover and Presser Bar (upright) Housing complete Nos. 50060(810), 82281, 82274, 460(830), 164137, 164138, 164139, 164142, 164143, 164194 and 164416
82281	Thread Eyelet (needle thread)
82291	Looper (right hand) Carrier
82292	Looper (right hand) Carrier Connecting Link
82293	Looper (right hand) Carrier 82291 with two 109927(869) and 165182-002
82295	Looper (right hand) Driving Lever complete
82297	Machine Frame Oil Lead
82298	Machine Frame Oil Splash Guard (internal) complete
82299	Machine Frame Oil Splash Guard (top)
82301	Machine Frame Rotary Shaft
82303	Machine Frame Rotary Shaft 82301 with 81224, 82306, 164215-001, 164216-001, 165245, two each 81223 and 164232
82305	Machine Frame Bracket and Cover (back) Gasket
82306	Machine Frame Rotary Shaft Key
82307	Needle Driving Shaft with 82309
82308	Needle Driving Shaft 82307 with 51768(803), 82312 and 82313
82309	Needle Stop Pin
82310	Needle Driving Shaft Bushing
82311	Needle Driving Shaft Bushing Cap
82312	Needle Holder
82313	Needle Holder Washer
82329	Oil Cooler, Nos. 81228, 50504(830) and two 164125
82330	Presser Bar (swing-out)
82333	Thread (looper) Plate complete, Nos. 1423(809), 1443(809), 1607(809), 50318(818), 164449, 164163, 164165, 164166, 164167, 164173, 164206 and two each 332(809) and 164171
82337	Knife (movable) Lever Guide
82338	Knife (movable) Lever Guide and Needle Thread Bridge Bracket
82339	Knife (movable) Lever Guide and Needle Thread Bridge Eyelet
82340	Knife (movable) Lever Guide 82337 with 460, 82338, 82339, 164182 and two 1423
82462	Machine Frame Bracket Oil Screen Screw Washer
87025	Looper (left hand)
87027	Looper (right hand)
90151	Cloth Plate
90152	Cloth Plate with Extension complete, Nos. 90151, 164002, 164205, two 931084 and three each 1700(809) and 51408(830)
107204	Oil Reservoir Drain Plug
107205	Oil Reservoir Gasket
109795(803)	Looper (right hand) Carrier Connecting Link Adjusting Screw (front)
109796(803)	Looper (right hand) Carrier Connecting Link Adjusting Sleeve Cap Screw (back)
109875(803)	Machine Frame Rotary Shaft Bushing (front) By Pass Oil Control Screw
109876	Needle Driving Shaft Bushing Locating Screw
109898(803)	Presser Bar Lifting Lever Stop Screw
109925(830)	Looper (left hand) Driving Shaft Crank Connection Cap (lower) Screw
109925(830)	Looper (right hand) Driving Shaft Crank Connection Cap (lower) Screw
109927(869)	Knife (movable) Lever Hinge Pin Set Screw
109927(869)	Looper (right hand) Carrier Connecting Link Hinge Pin Set Screw
109927(869)	Looper (right hand) Carrier Hinge Pin Set Screw
113149	Machine Frame Rotary Shaft Nut
132583	Knife (movable) Lever Hinge Pin
132584	Knife (movable) Lever Hinge Pin Oil Wick
132584	Looper (right hand) Carrier Connecting Link Hinge Pin Oil Wick
132584	Looper (right hand) Carrier Hinge Pin Oil Wick
139026	Machine Frame Rotary Shaft Ball Bearing
140050(803)	Knife (movable) Clamp Screw

Part No.	Description
140082(805)	Oil Reservoir Oil Sump Screen Cover Screw
140088(805)	Knife (stationary) and Needle Guard Holder Sleeve Screw
140088(813)	Machine Frame Oil Lead Screw
140159(830)	Looper (left hand) Driving Shaft Crank Connection Cap (upper) Screw
140159(830)	Looper (right hand) Driving Shaft Crank Connection Cap (upper) Screw
140346(830)	Machine Frame Oil Plug Bracket Set Screw
140393(830)	Looper (left hand) Carrier Holder Set Screw (right) (not illustrated)
140394(805)	Looper (left hand) Driving Shaft Bushing (back) Cap Screw
140394(805)	Looper (right hand) Driving Shaft Bushing (back) Cap Screw
140395(805)	Machine Frame Bracket Screw (small)
140396(805)	Machine Frame Bracket Screw (large)
140416(819)	Machine Pulley Cap Screw
140509(809)	Chip Guard Screw (upper)
140510(803)	Presser Bar (swing-out) Pivot Screw
140596(830)	Looper (left hand) Carrier Holder Set Screw (left)
140596(830)	Looper (right hand) Driving Lever Set Screw
140596(830)	Needle Driving Shaft Crank Set Screw
140788(803)	Knife (stationary) Clamping Gib Screw
164002	Cloth Plate Extension
164003	Feed Bar Hinge Pin (eccentric)
164004	Feed Bar Slide Block (back)
164006	Feed (front) Bar with 164010
164007	Feed (back) Bar Connection
164008	Feed (back) Bar Connection Bearing
164009	Feed (back) Bar Connection Hinge Screw Stud
164009	Feed (front) Bar Connection Hinge Screw Stud
164010	Feed (back) Bar Connection Hinge Screw Stud Position Pin (not illustrated)
164010	Feed (front) Bar Connection Hinge Screw Stud Position Pin
164011	Feed (back) Dog Section (left)
164012	Feed (back) Dog Section (right)
164013	Feed (back) Dog complete, Nos. 1100(830), 164011 and 164012
164017	Feed (front) Bar Connection
164018	Feed (front) Bar Connection Bearing
164019	Feed (front) Dog
164023	Feed Eccentric Oil Wick
164027	Knife (movable) Clamp
164028	Knife (movable) Guard (lower)
164029-002	Knife (movable) Holder
164030	Knife (movable) Holder Screw Bearing
164032	Knife (movable) Lever Bearing
164034	Knife (movable) Lever Hinge Stud
164035	Knife (movable) Lever Hinge Stud 164034 with 164036 and 164269
164036	Knife (movable) Lever Hinge Stud Oil Wick (long)
164042	Knife (stationary) and Needle Guard Holder Sleeve
164043	Knife (stationary) and Needle Guard Holder Spring
164046	Looper (left hand) Carrier with 460(830), 50379(806) and 164202
164048	Looper (left hand) Driving Shaft
164049	Looper (left hand) Driving Shaft Bushing (back)
164049	Looper (right hand) Driving Shaft Bushing (back)
164051	Looper (left hand) Driving Shaft Crank with 1083(803)
164052-001	Looper (left hand) Driving Shaft Crank Connection with two each 109925(830) and 140159(830)
164052-001	Looper (right hand) Driving Shaft Crank Connection with two each 109925(830) and 140159(830)
164053	Looper (left hand) Driving Shaft Crank Thrust Bearing
164053	Looper (right hand) Driving Shaft Crank Thrust Bearing
164054	Looper (left hand) Thread Tube
164062-001	Looper (right hand) Driving Lever with 1083(803) and two 140596(830)
164063	Looper (right hand) Driving Shaft
164066	Looper (right hand) Driving Shaft Crank with 1083(830)
164067	Looper (left hand) Driving Shaft Crank Key
164067	Looper (right hand) Driving Shaft Crank Key
164068	Looper (right hand) Locking Screw Stud
164071	Machine Pulley Cap
164077	Machine Frame Bracket Screw (large) Washer (fiber)
164082	Machine Frame Oil Plug Bracket
164091	Thread (looper, right hand) Stripper and Take-up with 164555
164096	Machine Frame Rotary Shaft Counterbalance with 1036(830)
164098	Machine Frame Rotary Shaft Oil and Ball Bearing Grease Retainer
164099	Machine Frame Rotary Shaft Screw Stud
164100	Machine Frame Rotary Shaft Thrust Bearing
164101	Machine Frame Top Cover
164102	Machine Frame Top Cover Gasket
164104	Cloth Plate Plunger
164105	Cloth Plate Plunger Spring

81382-002

330, 81226-002, 164101,
(2) 164418



164160

 
164160
or
164162

51369

164101

51369

164418



164162

164286

81226-002

 
164162 164285

82303

81224, 82301, 82306,
164215-001, 164216-001,
165245, (2) 81223,
(2) 164232

330

164102

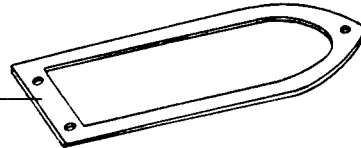

164155

59537

164161
or
164157

164158

2102

50133

164155

59537

164161
or
164157

164158

2102

50133

164115

165245

(81223)

165240

1083

171

140159

140596

164114

140159

164052-001

109925

81223

164232

1036

109875

81237

109796

1628

442

87027

164219

1700

82291

82292

165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

109925

51332

164096

164100

1036

81237

109796

1628

442

87027

164219

1700

82291

82292

165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

165182-002

109795

82293

82291, (2) 109927,
(2) 165182-002

132584

165145-002

109927

165145-002

132584

Part No.	Description
164106	Cloth Plate Position Collar with two 624(830)
164114	Needle Driving Shaft Crank with 1083(803) and two 140596(830)
164115	Needle Driving Shaft Crank Ball
164121	Oil Cooler Cover
164122	Oil Cooler Cover Gasket
164123	Oil Cooler Cover 164121 with 164135
164124	Oil Cooler Gasket
164125	Oil Cooler Oil Pipe (Outlet) (left and right)
164132	Machine Frame Oil Drip Sight Gauge Window Gasket
164133	Machine Frame Oil Drip Sight Gauge Window
164134	Machine Frame Oil Drip Sight Gauge Window Retainer
164135	Oil Cup (for filling machine)
164137	Presser Bar Lifting Bracket with 462(830), 624(830) and 51646
164138	Presser Bar Lifting Lever
164139	Presser Bar Lifting Lever Spring
164141	Presser Bar (swing-out) Lifting Screw Stud
164142	Presser Bar (swing-out) Opening Lever
164143	Presser Bar (upright)
164144	Presser Bar (upright) Spring (not illustrated)
164145	Presser Foot Body
164146	Presser Foot Chaining-off Finger
164147	Presser Foot Clamping Plate
164149	Presser Foot Guide (not illustrated)
164150	Presser Foot with Chain Cutter, complete, Nos. 50169(809), 50225(809), 51306(805), 164145, 164146, 164147, 164149, 164220 and 164221
164155	Tension (heavy) Regulating Thumb Nut
164155	Tension (light) Regulating Thumb Nut
164156	Tension (heavy) Screw Stud
164156	Tension (light) Screw Stud
164157	Tension (light) Spring
164158	Tension (heavy) Spring Cover
164158	Tension (light) Spring Cover
164159	Tension (needle thread) Thread Guide
164160	Tension (light) complete, Nos. 59537, 164156, 164157, 164158 and two 2102
164161	Tension (heavy) Spring
164162	Tension (heavy) complete, Nos. 59537, 164156, 164158, 164161 and two 2102
164163	Thread (looper, right hand) Stripper and Take-up Eyelet (adjustable)
164165	Thread (looper, right hand) Thread Eyelet (stationary)
164166	Thread (looper, right hand) Tube
164167	Thread (looper) Plate with 624(830)
164168	Thread (looper) Plate Cover
164169	Thread (looper) Plate Cover Hinge
164170	Thread (looper) Plate Cover Hinge Pin
164171	Thread (looper) Plate Cover Spring
164173	Thread (looper) Plate Thread Bushing
164175	Thread (looper) Take-up (left)
164176	Thread (looper) Take-up Plate
164182	Knife (movable) Lever Guide Holder Thread Tube
164194	Pressure Regulating Thumb Screw
164202	Looper (left hand) Stop Pin
164205	Cloth Plate Lock Spring
164206	Thread (looper) Plate Cover 164168 with 164169 and 164170
164207	Machine Frame Bracket Key
164215-001	Looper (left hand) Driving Shaft Crank 164051 with 164052-001
164216-001	Looper (right hand) Driving Shaft Crank 164066 with 164052-001
164219	Looper (right hand) Position Collar with 904(830)
164220	Presser Foot Chain Cutter Friction Plate
164221	Presser Foot Chain Knife
164231	Machine Pulley with two 448(830)
164232	Machine Frame Rotary Shaft Ball Sleeve Guide
164269	Knife (movable) Lever Hinge Stud Oil Wick (short) (not illustrated)
164285	Tension (looper thread) Thread Guide (left)
164286	Tension (looper thread) Thread Guide (right)
164293	Looper (left hand) Driving Shaft Bushing (back) Cap Screw Washer
164293	Looper (right hand) Driving Shaft Bushing (back) Cap Screw Washer
164351	Presser Bar (swing-out) Pivot Screw Locking Plate
164401	Feed Eccentric Cover Latch Spring
164416	Presser Bar (upright) Spring (heavy)
164418	Tension Thread Eyelet
164449	Thread (looper, right hand) Thread Eyelet (movable)
164458	Knife (movable) Guard (upper)
164462	Lint Stripper with 735(830)
164515-002	Machine Frame Cover (back)
164516-002	Machine Frame Cover (back) 164515-002 with 1637(819) and 109898(803)
164520	Feed Eccentric Cover
164525	Knife (stationary) and Needle Guard Holder Spring Stud
164555	Thread (looper, right hand) Stripper and Take-up Guide Wire
164556	Knife (movable)
164590	Knife (stationary) and Needle Guard Holder Adjusting Stud

Part No.	Description
164660	Looper (left hand) Carrier Holder with 1083(803), 140393(803) and 140596(830)
164661	Looper (left hand) Carrier Holder 164660 with 1324(830), 59456 and 164046
164687	Feed (back) Bar with 164010
164704-002	Feed Eccentric Cover Bracket
164705-002	Feed Eccentric Cover Bracket 164704-002 with 164023
164728	Knife (stationary)
164744	Knife (stationary) Clamping Gib
164745	Knife (stationary) and Needle Guard Holder Body with two 50611(803)
164815	Presser Bar (upright) Spring Spacing Collar
165058	Needle Guard
165059	Needle Guard Holder
165062	Knife (stationary) and Needle Guard Holder
165063	Knife (stationary) and Needle Guard Holder (adjustable) complete, Nos. 742(806), 164745 and 165062
165064	Knife (stationary) and Needle Guard Holder (adjustable) with Gib, complete, Nos. 3146, 140788(803), 164744 and 165063
165134	Feed Bar Slide Block (front)
165142	Looper (right hand) Carrier Connecting Link Adjusting Sleeve (not illustrated)
165145-002	Looper (right hand) Carrier Connecting Link Hinge Pin
165145-002	Looper (right hand) Carrier Hinge Pin
165149	Machine Frame Bracket
165150	Machine Frame Bracket 165149 with 164207 and two 187(805)
165151	Machine Frame Bracket Oil Screen
165152	Machine Frame Oil Screen
165153	Machine Frame Oil Tube
165154	Machine Frame Oil Tube Wick
165156	Machine Frame Oil Splash Guard (internal) Oil Wick
165157	Machine Frame Oil Splash Guard (internal) Oil Wick Fastener
165159	Machine Frame Wearing Plate
165160	Machine Frame Wearing Plate Spacer
165170	Machine Frame Rotary Shaft Bushing (front)
165171	Machine Frame Rotary Shaft Bushing (intermediate)
165173	Oil Reservoir with 165232
165180	Feed (back) and (front) Bars complete, Nos. 164006, 164007, 164008, 164017, 164018, 164687, 165134, two each 1671(803), 164004 and 164009
165182-002	Looper (right hand) Carrier Connecting Link Hinge Pin 165145-002 with 132584
165182-002	Looper (right hand) Carrier Hinge Pin 165145-002 with 132584
165185	Machine Frame Oil Tube Nos. 165153 and 165154
165232	Oil Reservoir Oil Sight Gauge (Lucite)
165237	Oil Reservoir Lint Guard (front)
165238	Machine Frame Rotary Shaft Ball Bearing Housing
165239	Machine Frame Rotary Shaft Ball Bearing Housing Gasket
165240	Machine Frame Rotary Shaft Bushing (intermediate) Oil Screen
165245	Needle Driving Shaft Crank Connection with 164115
175032	Knife (stationary) and Needle Guard Holder Sleeve Screw Washer
931084	Cloth Plate Extension Screw Nut
931089	Lock Washer
931089	Cloth Plate Lock Spring Nut Lock Washer

PARTS CHART

FOR

SINGER

460/13

MACHINE