

SINGER

61W30

PRICE LIST

OF

PARTS



MACHINE No. 61w30

THE SINGER MANUFACTURING COMPANY

INDEX

	PAGE
ACCESSORIES.....	14
BOBBIN WINDER.....	14
FEED DOGS.....	16
KNEE LIFTER PARTS.....	15
MACHINE NO. 61w30.....	7
NUMERICAL LIST OF PARTS.....	19
PRESSER FEET.....	16
ROLLER PRESSERS.....	17
THROAT PLATES.....	18

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 61w30

For Leather. Has Roller Presser

No.	Plate	Name	Each
*202242	---	Arm	\$ ---
*203170	---	" 202242 and Bed 202532 with two 204235, three each 200010E and 202005	---
202247	10667	Arm Cap	35
200278H	10244	" " Screw	05
202248H	10244	" " " Washer	05
204235	10668	" Position Pin	02
200010E	10245	" Screw	06
202005	10245	" " Washer	01
202249	13351	" Shaft with 200357E and 203100	1 50
202243	13351	" " Bushing (back) with 202244	75
202244	---	" " " Oil Packing (wick)	02
200338C	10244	Arm Shaft Bushing (back) Set Screw	04
202245	10667	" " " (front) with 202036 and 202260	55
202260	---	Arm Shaft Bushing (front) Oil Packing (wick)	01
200502H	10246	Arm Shaft Bushing (front) Oil Packing Thumb Screw	25
202036	10668	Arm Shaft Bushing (front) Position Pin	04
200338C	10244	" " " " Set Screw	04
202530	13351	" " Connection Belt	60
202252	10244	" " " " Pulley with 200327E, 200602E and two 202253	1 00
200602E	10244	Arm Shaft Connection Belt Pulley Position Screw	10
200327E	10244	Arm Shaft Connection Belt Pulley Set Screw	04
202253	10244	Arm Shaft Connection Belt Pulley Spring Flange	15
203100	---	Arm Shaft Oil Packing (wick)	01
200357E	10244	" " " " Stop Screw	03
202255	13351	Balance Wheel with 200328C and 200335C	85
200328C	10244	" " Position Screw	04
200335C	10244	" " Set Screw	04
*202532	---	Bed with 202872	---
202258	12153	" Hinge Connection (2)	08

No.	Plate	Name	Each
206723	—	Hook and Bobbin Case complete, Nos. 202533 and 206722	\$3 50
206852	13361	Hook Gb	60
200614c	11671	" " Hinge Screw	02
200596f	11671	" " Screw	02
203101	—	" Oil Wick	01
*202320	—	" Shaft, 11 $\frac{1}{8}$ in. long	—
202321	10245	" " Bushing (back)	45
200346c	10245	" " " Set Screw	03
202322	10245	" " " (front)	45
200346c	10245	" " " Set Screw	03
202323	10244	" " Connection Belt Pulley with 202324 and two 201018c	60
201018c	13361	Hook Shaft Connection Belt Pulley Set Screw	03
202324	10244	Hook Shaft Connection Belt Pulley Spring Flange	08
202260	—	Hook Shaft Oil Packing (wick) (2)	01
206775	11671	" " Pin	01
206751	11671	" Washer	05
200145n	11671	" " Screw	02
202445	10936	Knee Lifter Connection Lever with 202446	07
202786	—	" " " " 202445 with 200224n, 200262n, 202447 and 202449 ..	45
200224n	10248	Knee Lifter Connection Lever Hinge Screw	12
202447	10936	Knee Lifter Connection Lever Lifting Rod with 202302	06
202302	10248	Knee Lifter Connection Lever Lifting Rod Cotter Pin	01
202446	10246	Knee Lifter Connection Lever Pin	03
202449	10936	" " Lifting Lever	10
200262n	10248	" " " " Hinge Screw ..	10
202326	10248	Needle Bar with 200141f	80
202327	10248	" " Bushing	50
203123	—	" " " 202327 with 202326 ...	1 30
200352c	10248	" " " Set Screw	03
202331	10248	" " Connecting Link	1 25
202332	10668	" " " " Oil Guard	10
200161b	10247	" " " " " " " Screw	04
202333	10248	Needle Bar Connecting Link Stud with 202254	25
202254	—	Needle Bar Connecting Link Stud Oil Packing (wick)	01
200374c	10668	Needle Bar Connecting Link Stud Set Screw	02
*206891	—	Needle Bar Connecting Stud	—

No.	Plate	Name	Each
202329	10248	Needle Bar Connecting Stud 206891 with 200086c and 202330	\$ 35
202330	—	Needle Bar Connecting Stud Oil Packing (wick)	01
200086c	10248	Needle Bar Connecting Stud Pinch Screw	03
202328	13352	" " Crank with 200335c, 200428c, 202333 and two 200374c	1 00
203117	—	Needle Bar Crank 202328 with 202329, 202331 and 202398 to 202400	4 30
203172	10248	Needle Bar Crank Friction Washer	05
200428c	10248	" " " Position Screw	08
200335c	10244	" " " Set Screw	04
200141f	10248	" Set Screw	02
202336	10249	Presser Bar Bushing	35
200352c	10248	" " " Set Screw	03
202339	10249	" " Lifter	25
200653c	10249	" " " Hinge Screw	06
202340	10249	" " Lifting Releasing Lever Bracket	1 10
200260b	10249	Presser Bar Lifting Releasing Lever Bracket Guide Screw	12
202342	10249	Presser Bar Lifting Releasing Lever Bracket Spring (spiral)	02
202337	10249	Presser Bar Position Guide	30
202338	10249	" " " " Lever with 200086c	30
200086c	10248	Presser Bar Position Guide Lever Pinch Screw	03
200352c	10248	Presser Bar Position Guide Set Screw ..	03
202378	13361	" " Spring (heavy)	05
202346	10249	" " " Stop Rod	05
200492n	10249	" " Thumb Screw (pressure regulating)	25
200475n	10668	Presser Bar Thumb Screw Thumb Set Screw	08
202355	10668	Presser Bar Thumb Screw Thumb Set Screw Packing (brass)	01
201923	10920	Roller Presser, 11 in. diam., $\frac{5}{8}$ in. face (fine), with 200548c and 201534n	40
202839	10920	Roller Presser Arm	20
206886	—	" " " 202839 with 201923 ..	60
202560	10920	" " " Bracket (swing)	60
206887	—	" " " " 202560 with 200096b and 206886	1 20
200675c	13361	Roller Presser Arm Bracket Position Screw Stud	05
202558	10920	Roller Presser Arm Bracket Spring	02
202559	10920	" " " " " Stop	05

Parts for Machine No. 61w30

No.	Plate	Name	Each
200141F	10248	Roller Presser Arm Bracket Spring Stop Screw	\$ 02
200096D	13361	Roller Presser Arm Screw	03
202557	10920	" " Bar	80
200548F	13361	" " Hinge Screw	10
201534H	13361	" " " " Nut	03
202840	10920	Roller Presser and Bar complete, Nos. 200675C, 202557 to 202559, 206887 and two 200141F	2 15
202068	12153	Spool Holder Base	15
200575H	10668	" " " Screw	05
204296	12153	" " Wire	10
200079H	10668	" " " Hinge Screw	02
204297	12153	Spool Holder complete, Nos. 200079H, 202068 and 204296	25
202397	10668	Take-up (auxiliary)	15
200842E	10668	" " " Screw	10
202398	10247	" Lever	1 20
202399	10247	" " Driving Stud with 202277 ..	25
202277	—	" " " " Oil Packing (wick)	01
202400	10247	Take-up Lever Hinge Stud with 202423 ..	25
202423	—	" " " " Oil Packing (wick)	01
200383C	10246	Take-up Lever Hinge Stud Set Screw ..	02
202401	10247	" " Oiling Felt	02
200132E	10247	" " " " Screw	02
202402	10247	Tension Disc (back)	05
202403	10247	" " (front)	10
202404	10247	" Release Plunger	05
202405	10247	" " Washer	15
202407	10247	" Spring	05
200625F	10247	" Stud with 204925	15
200081C	10247	" " Set Screw	02
204925	10668	" " Washer	01
201572B	13361	" Thumb Nut	04
202409	10252	Tension complete, Nos. 200625F, 201572B, 202402, 202403, 202405, 202407 and 202410	55
202410	10252	Thread Controller Spring	03
202411	10252	" " " Stop	10
200132E	10247	" " " " Screw ..	02
202413	10252	" Guide	05
202414	10252	" "	03
202415	10252	" "	10
202417	10252	" "	02
200582H	10252	" " Screw	02
200355H	10272	" " Set Screw	03

Parts for Machine No. 61w30

No.	Plate	Name	Each
200368H	10668	Thread Guide Set Screw	\$ 02
202091	10252	" Retainer Sleeve	05
202092	10252	" " Spring	01
204058H	10252	" " Stud	07
200368H	10668	" " " Set Screw	02
204059	10668	Thread Retainer complete, Nos. 202091, 202092 and 204058H	15
202820	13362	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534, 202619 and two 200583H	75
202534	10668	Throat Plate Bobbin Case Stop	25
202619	10668	" " " " " Position Pin	Per 100 25
200583H	10668	Throat Plate Bobbin Case Stop Screw ..	02
202872	10668	" " Position Pin	Per 100 25
200577H	10245	" " Screw (2)	02

ACCESSORIES

No.	Plate	Name	Each
200157B	13361	Attachment Screw	\$ 05
202265	11671	Bobbin (5)	08
225497	12153	" Case Screw Driver	10
61 x 4	—	Needles, three each, sizes 14 and 16, Per doz.	20
225180	—	Drip Pan (short) with four wood screws ½ in., No. 5	25
41400	12153	Machine Rest Pin (wood)	04
36578	12153	Oil with 36579	10
36579	12153	" Spout, 3 in. long	06
225487	13361	Roller Presser Hinge Screw Nut Wrench	08
225498	12153	Screw Driver, 7½ in. long	15
225554	12153	Wrench (steel)	10

BOBBIN WINDER

Swing Automatic, Right Hand

202470	10271	Bobbin Winder Base	15
202471	10271	" " Frame	15
200221D	10272	" " " Hinge Screw	12
202472	10271	" " " Spring	05
200161D	10247	" " " " Screw	04
202473	10271	" " Pulley with 200380c	20
200380c	10272	" " " Set Screw	02
202474	10271	" " Spindle	15
202475	10272	" " Stop Latch	10
200056E	10272	" " " " Screw	03
202477	10272	" " " " Thumb Lever	15
200299H	10272	" " " " " "	05
		Hinge Screw	05
200299H	10272	Bobbin Winder Stop Latch Thumb Lever Joint Screw	05
201537H	10272	Bobbin Winder Stop Latch Thumb Lever Joint Screw Nut	03
202478	10272	Bobbin Winder Stop Latch Trip Lever	10
200299H	10272	" " " " " "	05
		Hinge Screw	05
202479	10271	Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202475, 202477, 202478, three 200299H and two round head wood screws 1½ in., No. 14	1 35
202480	10271	Bobbin Winder Spool Holder Base with 200355H and 202484	15

Accessories

15

No.	Plate	Name	Each
202481	10271	Bobbin Winder Spool Holder Base Spool Pin	\$ 05
202482	10272	Bobbin Winder Spool Holder Tension Disc (lower or upper)	02
200011E	10272	Bobbin Winder Spool Holder Tension Disc Screw	05
200355H	10272	Bobbin Winder Spool Holder Tension Disc Screw Set Screw	03
202483	10272	Bobbin Winder Spool Holder Tension Disc Spring (brass)	01
202484	10272	Bobbin Winder Spool Holder Tension Disc Thread Guide	01
202485	10271	Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13H	35
202264	—	Bobbin Winder and Spool Holder com- plete, Nos. 202479 and 202485	1 65

KNEE LIFTER PARTS

227781	10936	Knee Lifter Rock Lever with 200522c and 200529c	35
227782	—	Knee Lifter Rock Lever 227781 with two each 202451 and 202452	50
227783	—	Knee Lifter Rock Lever 227782 with 202985 and 227784	85
202453	10936	Knee Lifter Rock Lever Knee Plate with 200526c	17
202985	—	Knee Lifter Rock Lever Knee Plate 202453 with 202455	25
202455	10936	Knee Lifter Rock Lever Knee Plate Arm (short)	10
200522c	13361	Knee Lifter Rock Lever Knee Plate Arm Set Screw	06
200526c	13361	Knee Lifter Rock Lever Knee Plate Set Screw	05
202451	10936	Knee Lifter Rock Lever Lug with two wood screws ¾ in., No. 13H	05
202452	13361	Knee Lifter Rock Lever Lug Hinge Pin	02
227784	10936	" " " " Rod, 3 in. long, with 227785	06
*227785	—	Knee Lifter Rock Lever Rod Cap or Oil Guard	—
200529c	13361	Knee Lifter Rock Lever Rod Set Screw (Other Knee Lifter Parts are listed with parts of machine head).	05

THROAT PLATES

No.	Plate	Name	Each
202819	13362	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534, 202619 and two 200583H, for 202283, 207051 and 207052	\$ 75
202820	13362	Throat Plate, 50 needle hole, for needle sizes 14 and 15, with 202534, 202619 and two 200583H, for 202285, 202813 and 203138	75
206798	13362	Throat Plate, 46 needle hole, for needle sizes 16 and 18, with 202534, 202619 and two 200583H, for 202285, 202813 and 203138	75

PLATE 10244—FULL SIZE

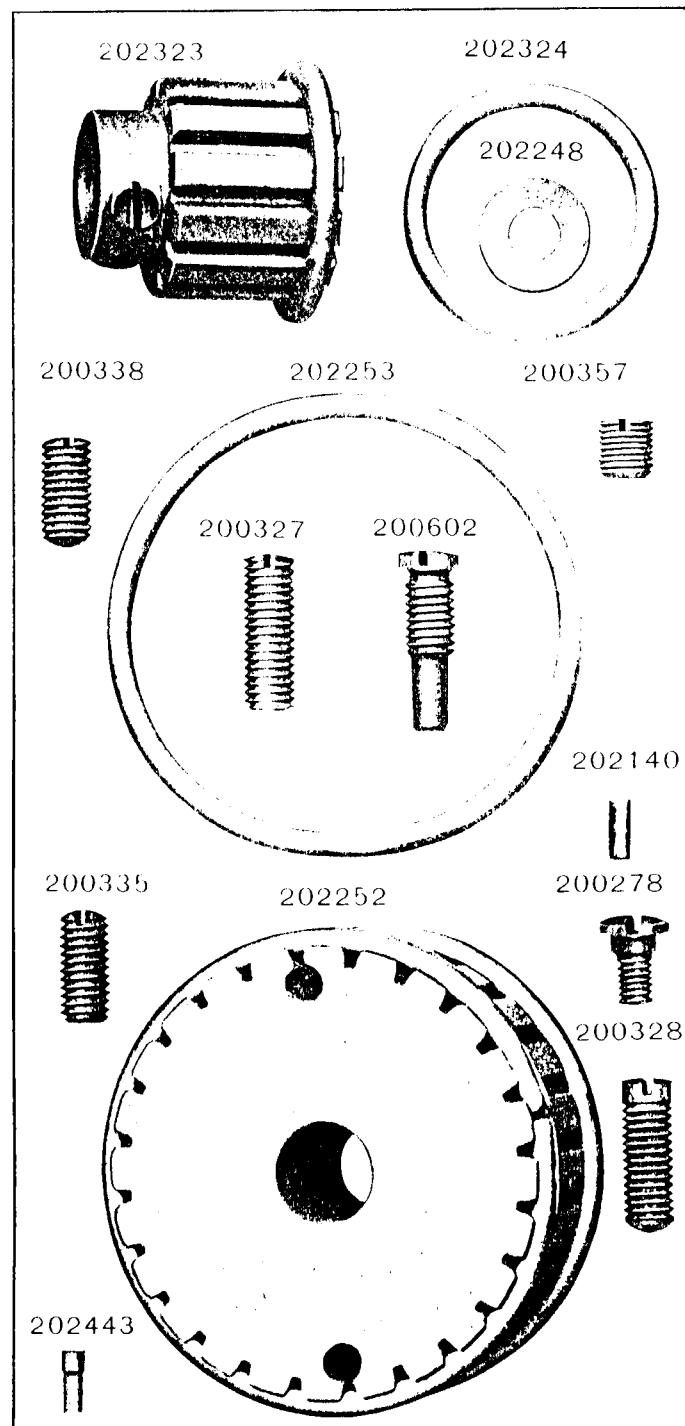 


PLATE 10245—FULL SIZE

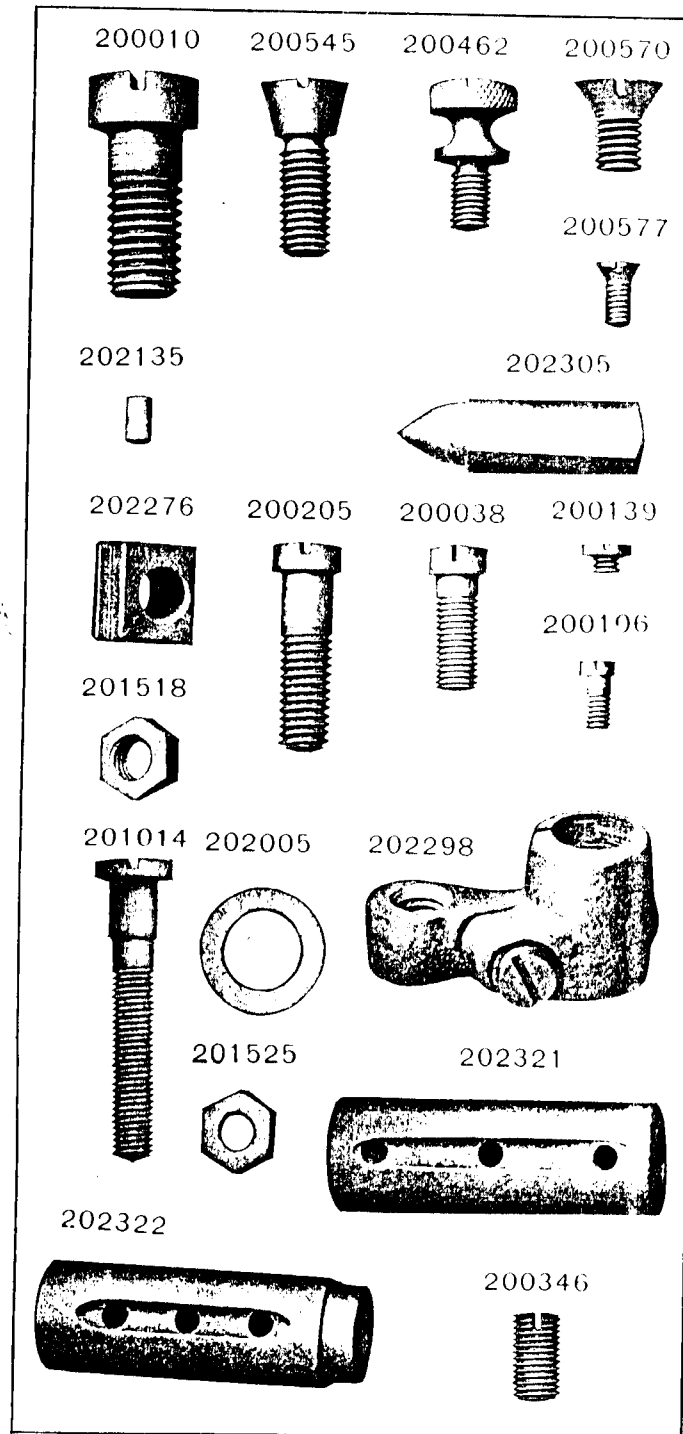 


PLATE 10246—FULL SIZE

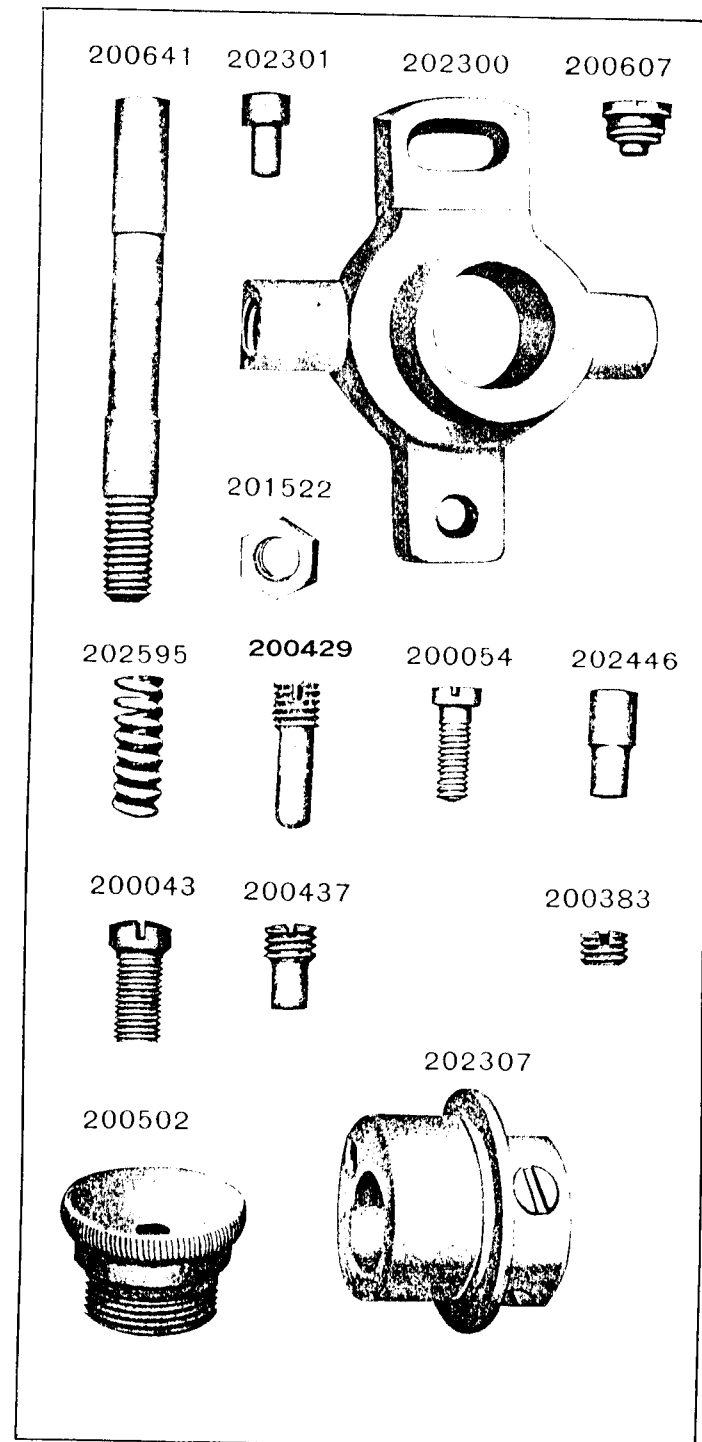 


PLATE 10247—FULL SIZE

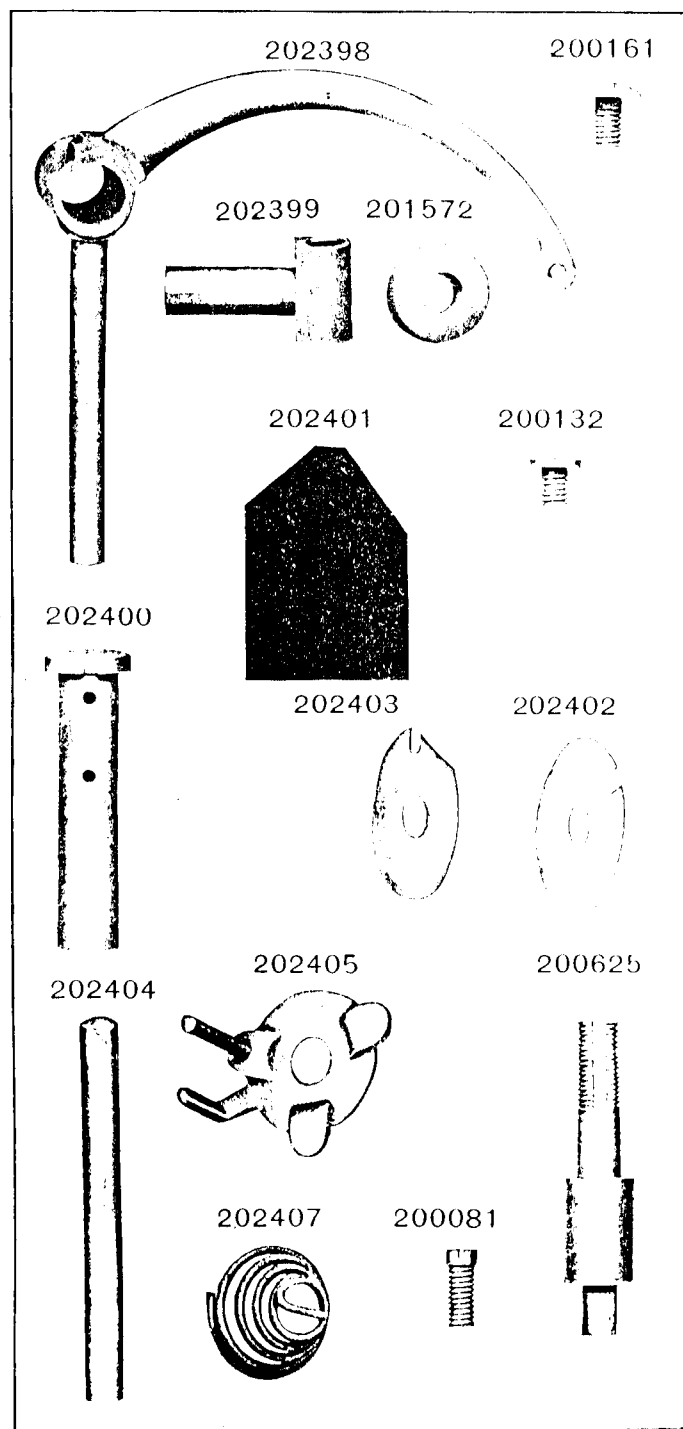 


PLATE 10248—FULL SIZE

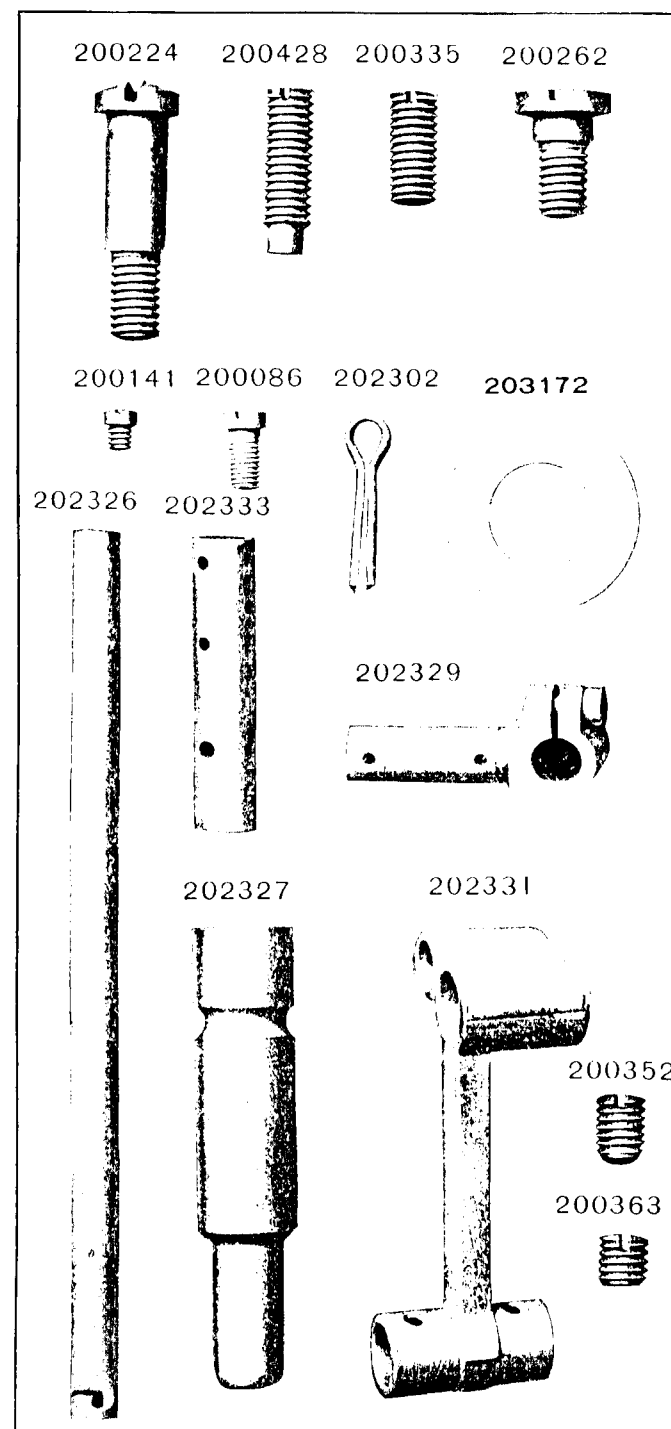 


PLATE 10249—FULL SIZE

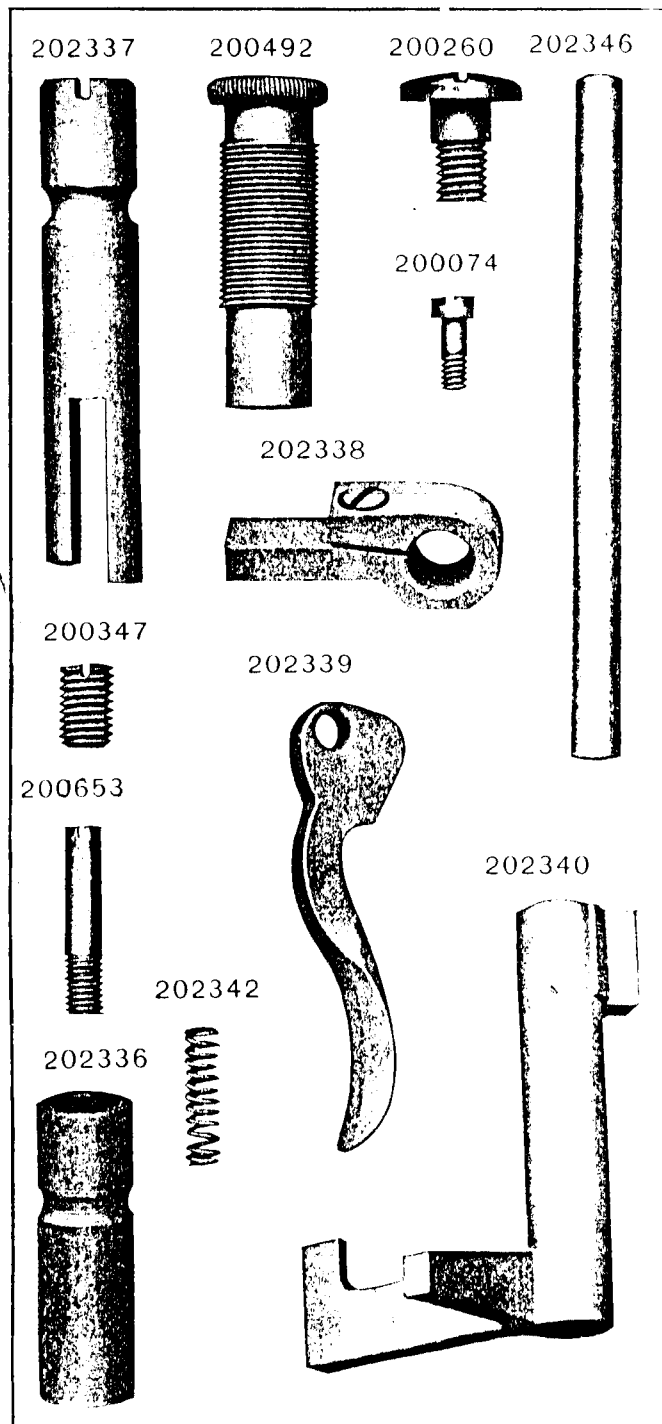 


PLATE 10252—FULL SIZE

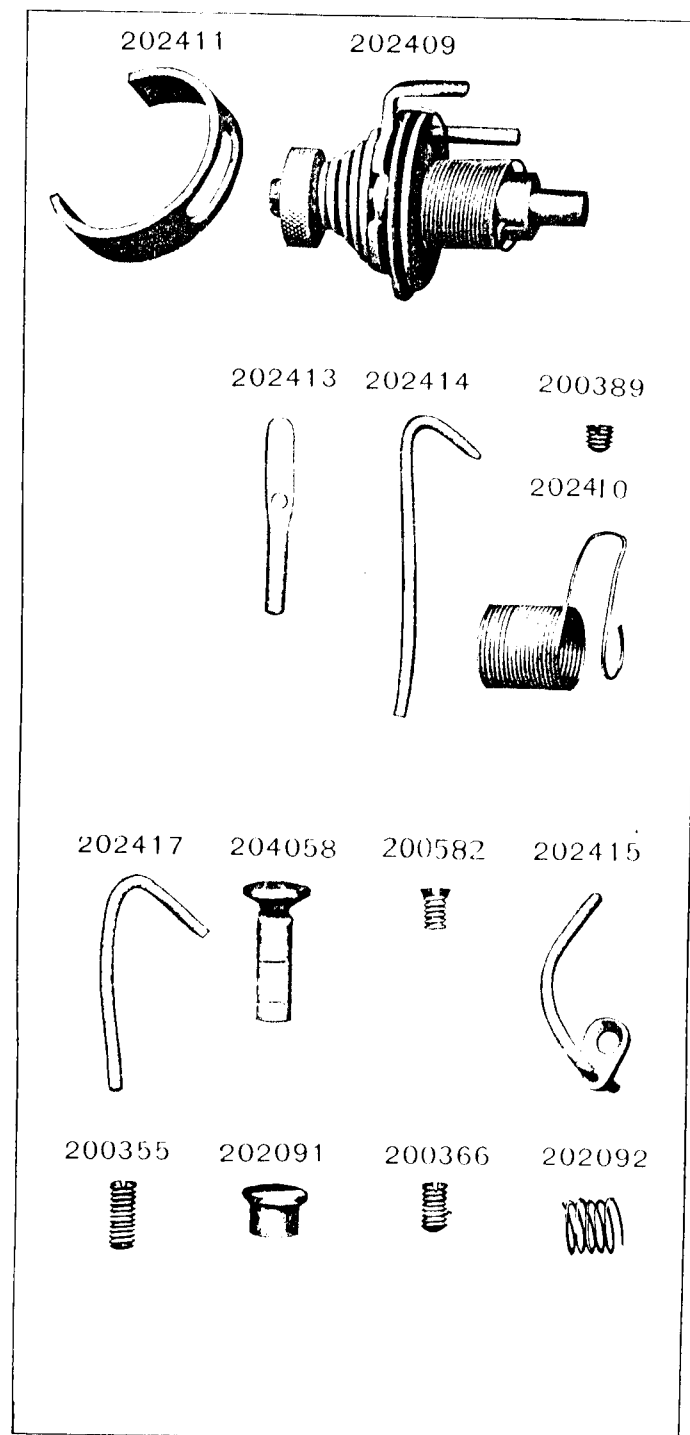 


PLATE 10271--ONE-HALF SIZE

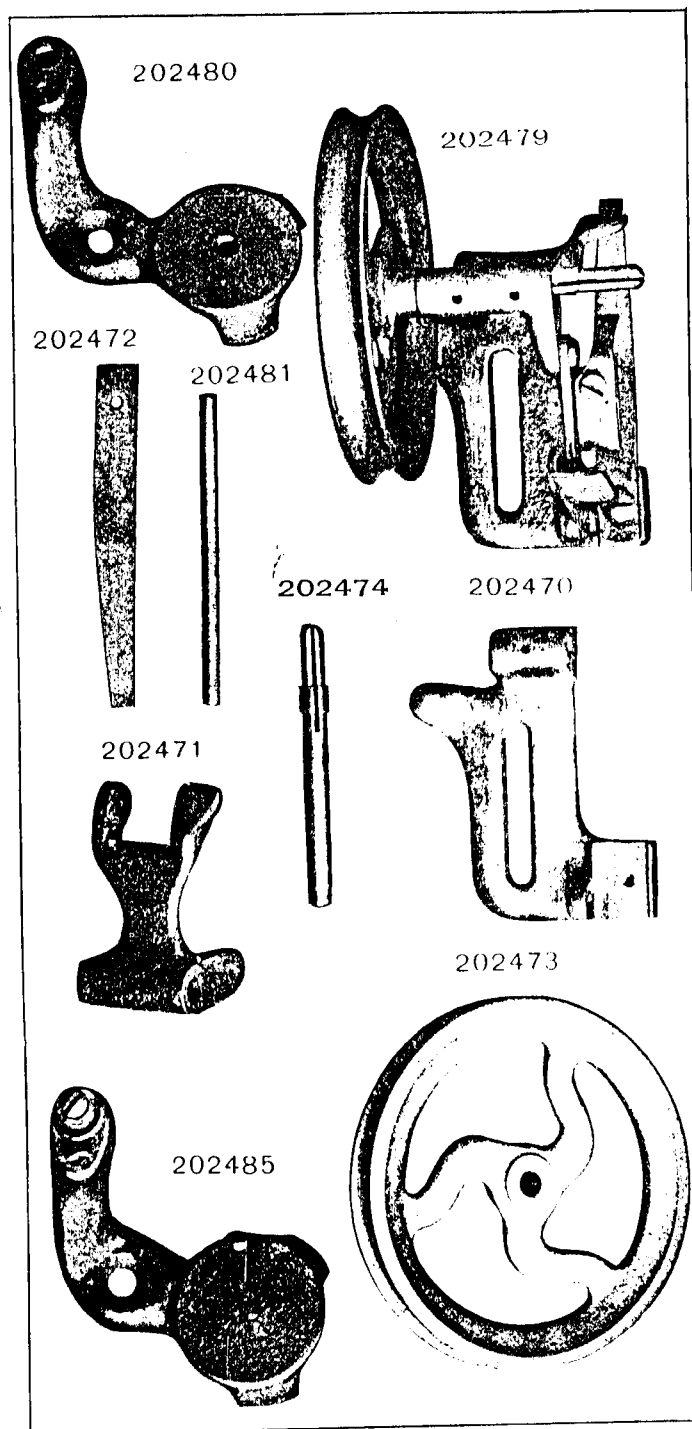 


PLATE 10272--FULL SIZE

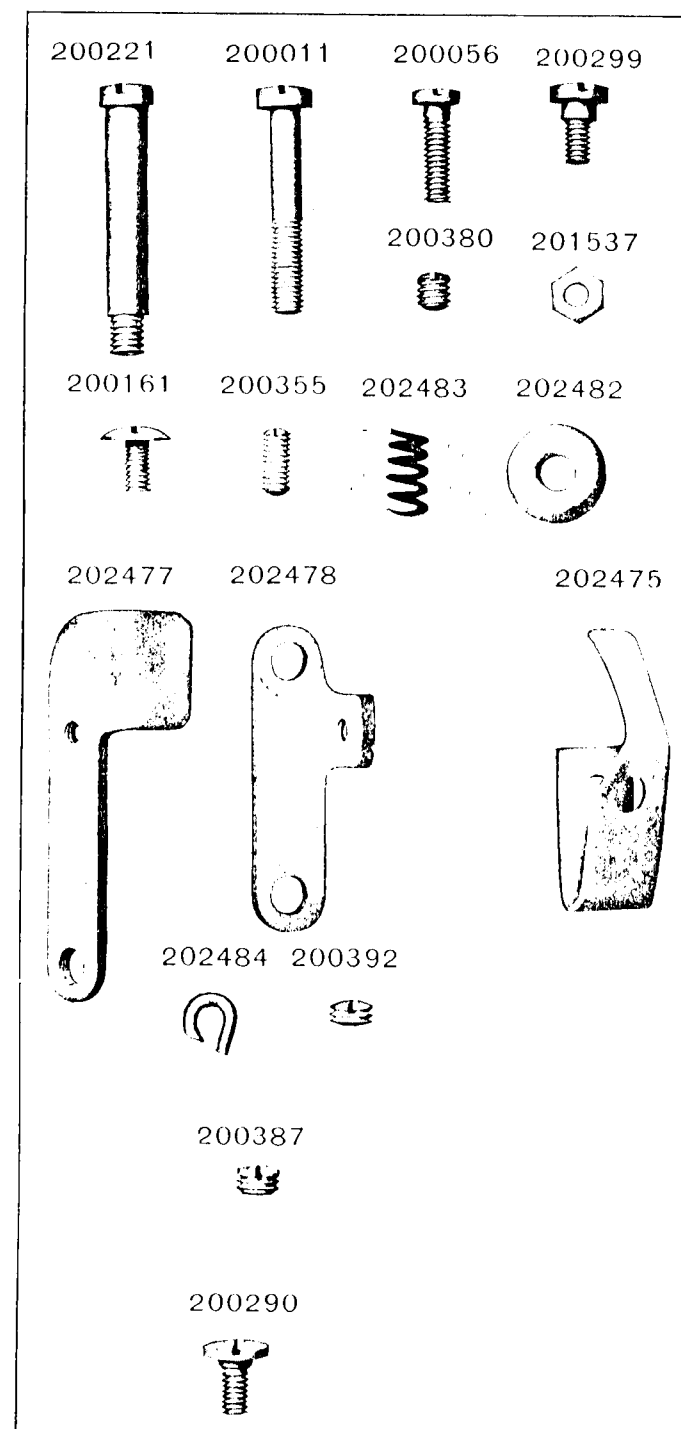 


PLATE 10667 -ONE - HALF SIZE

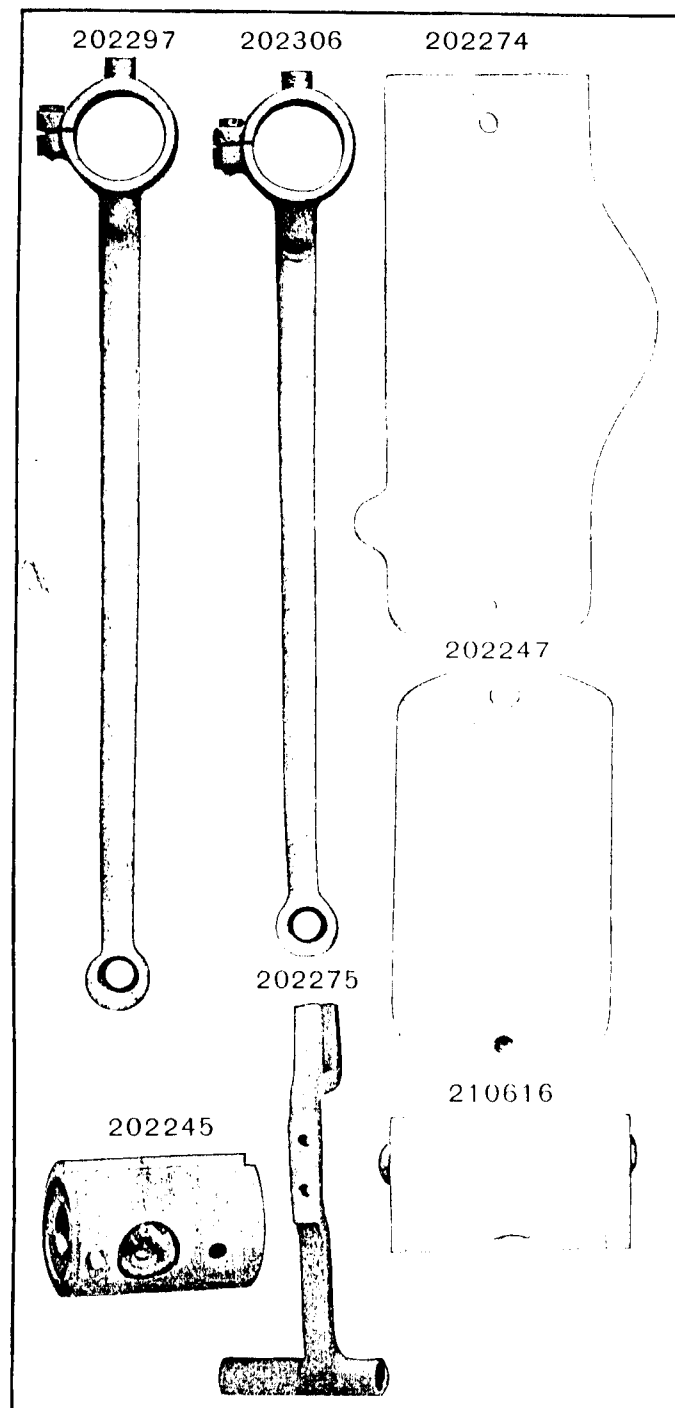 


PLATE 10668-FULL SIZE

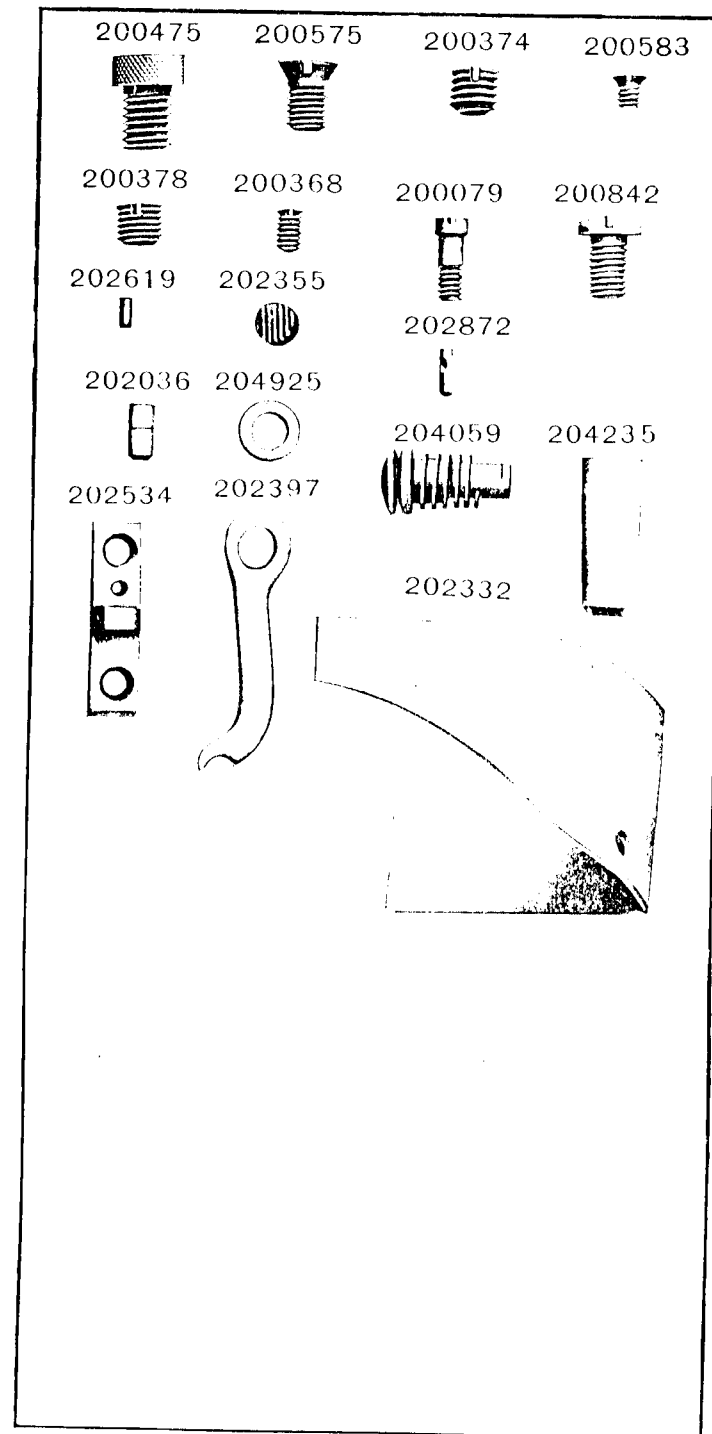 


PLATE 10920 -FULL SIZE

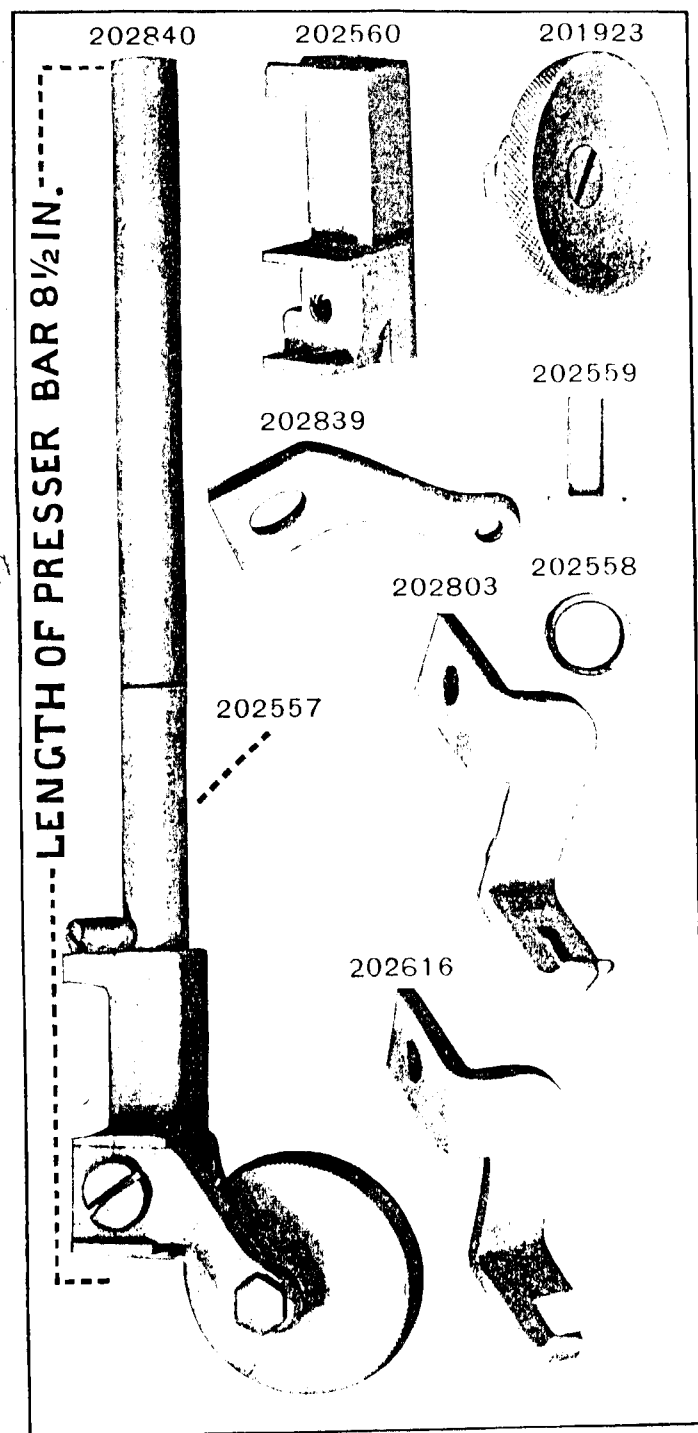 


PLATE 10936 -ONE-FOURTH SIZE

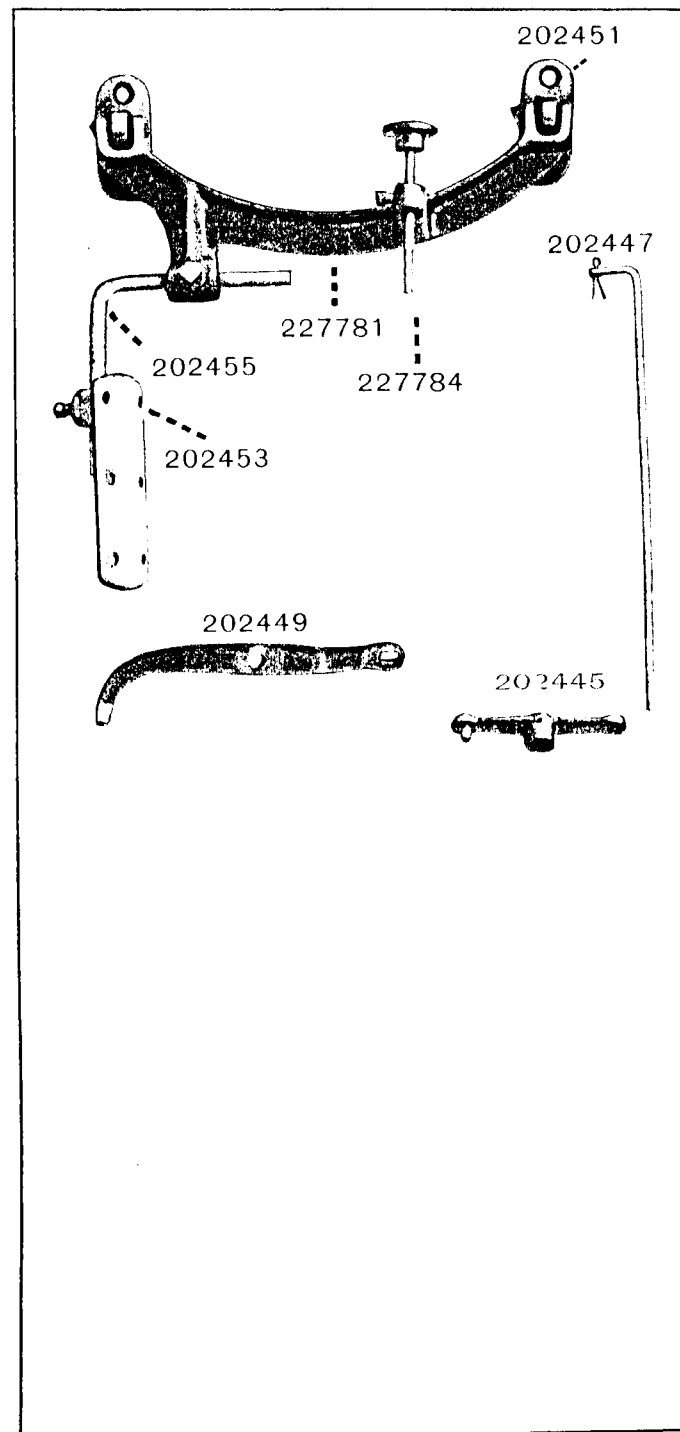 


PLATE 10972-ONE-HALF SIZE

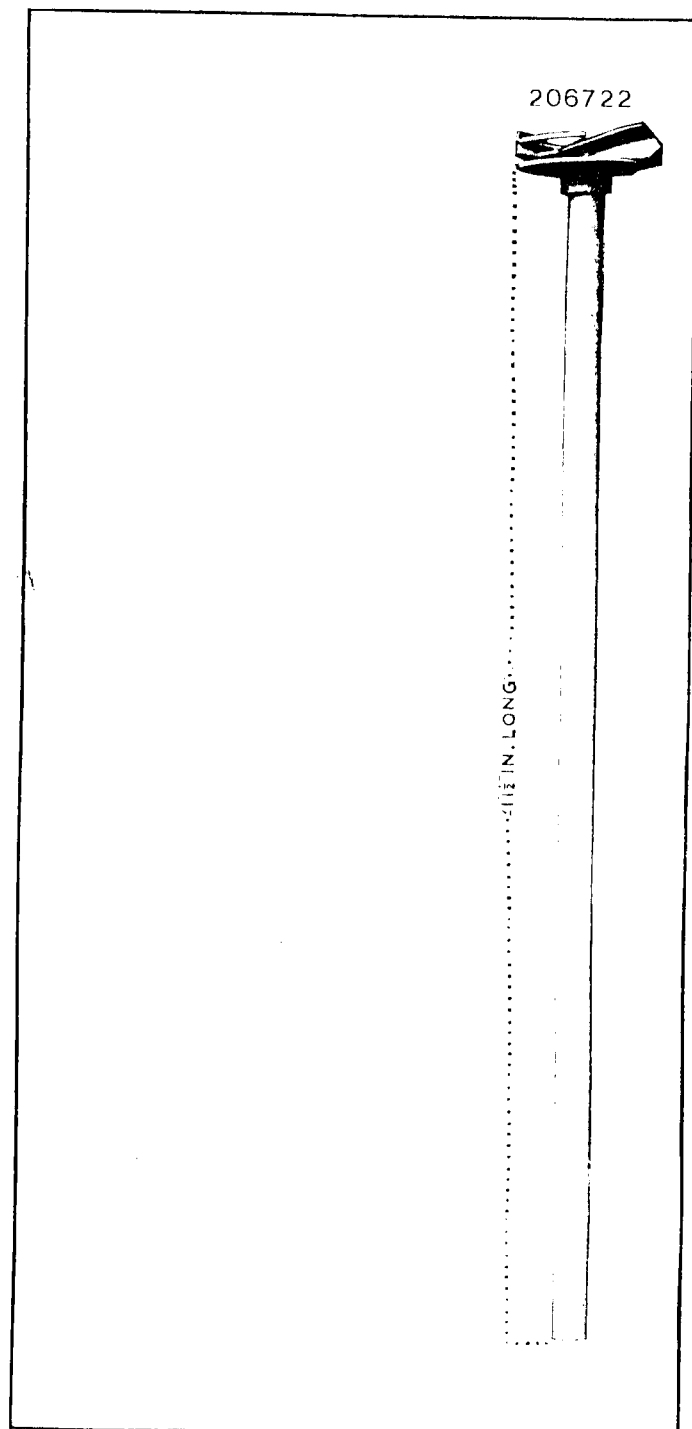 


PLATE 11671-FULL SIZE

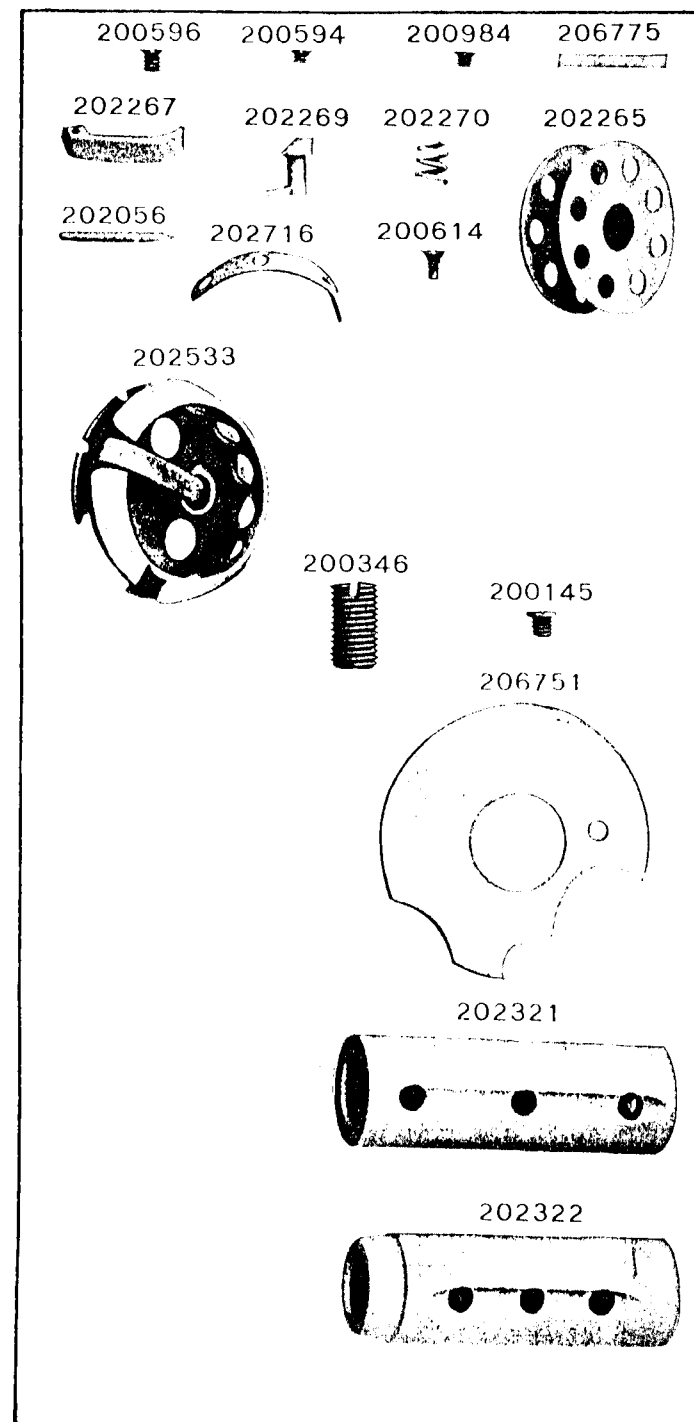 


PLATE 12153—ONE-HALF SIZE

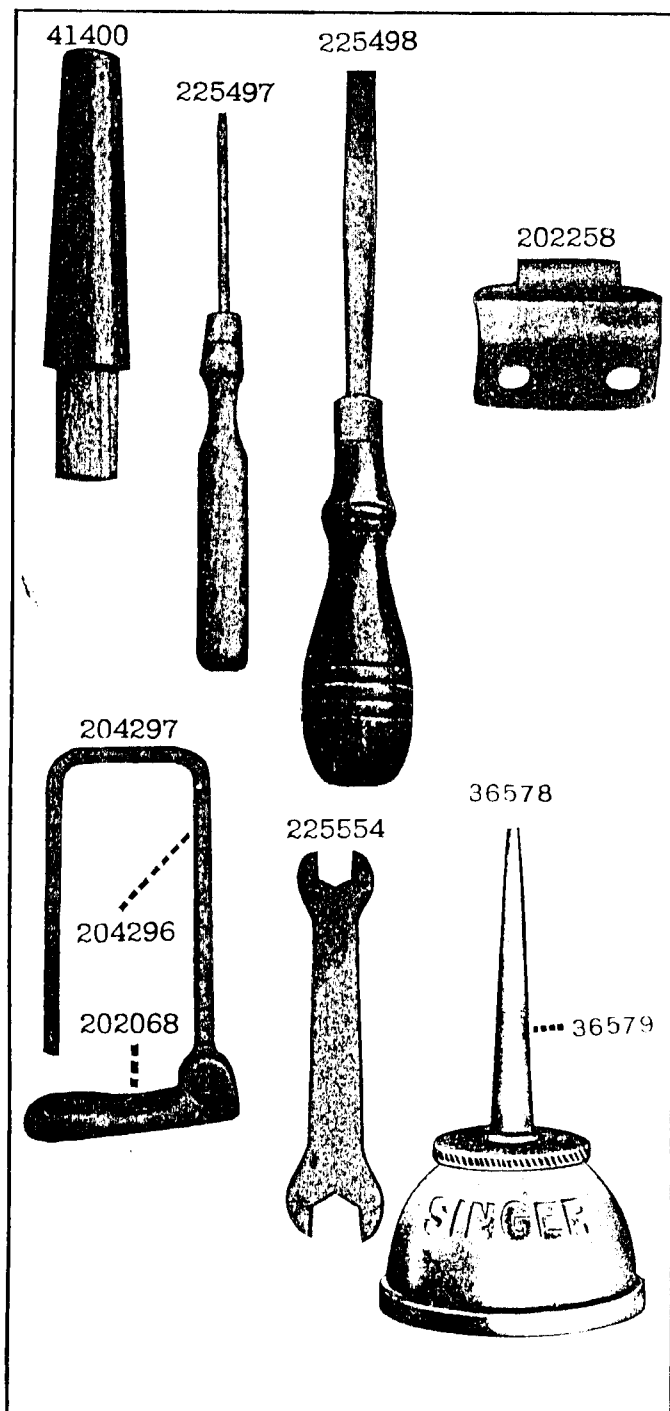 


PLATE 13351—ONE-HALF SIZE

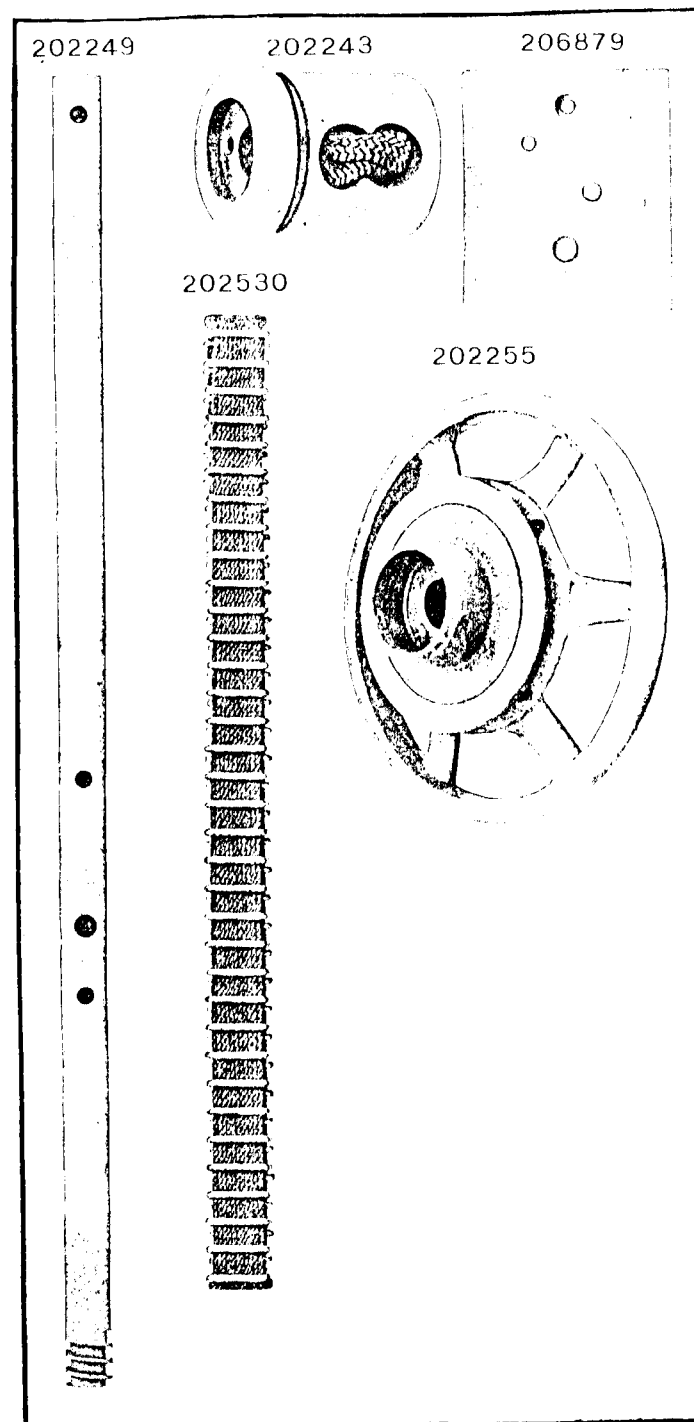 


PLATE 13352—ONE-HALF SIZE

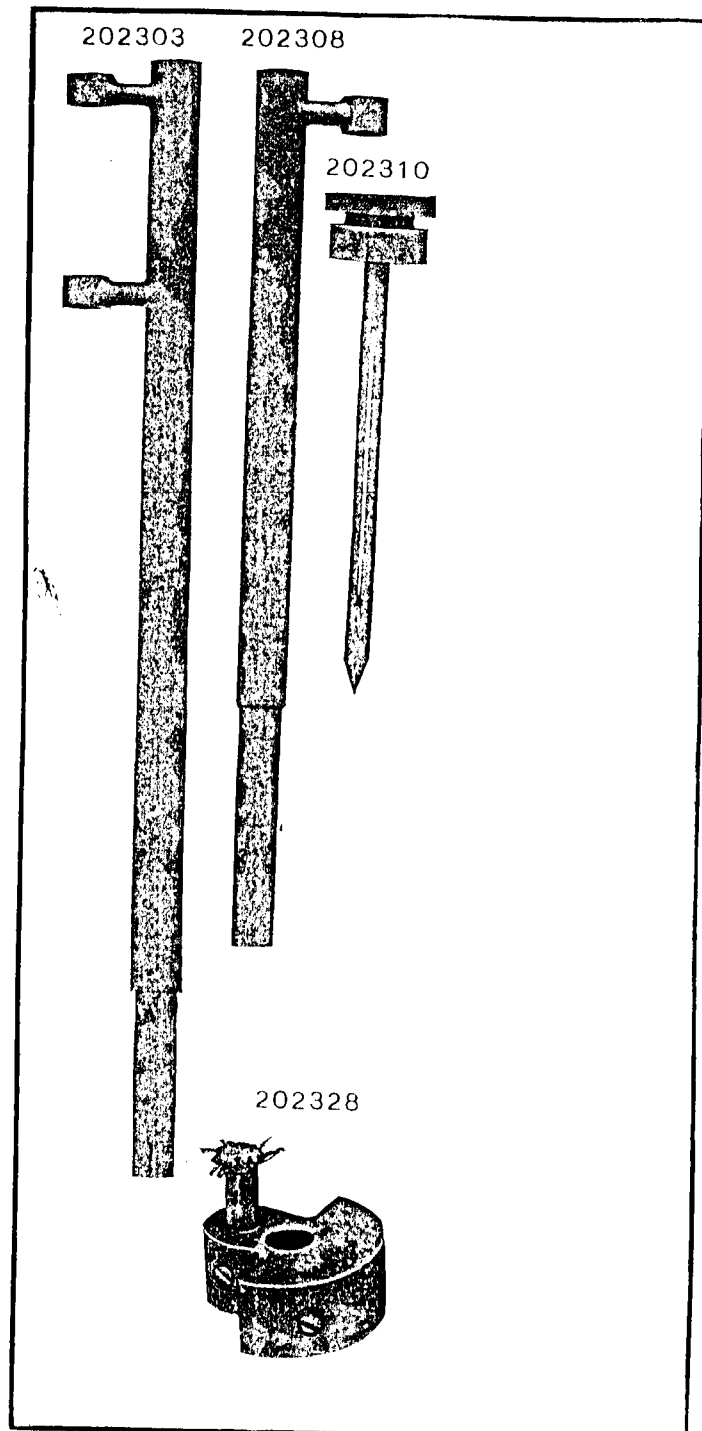 


PLATE 13361—FULL SIZE



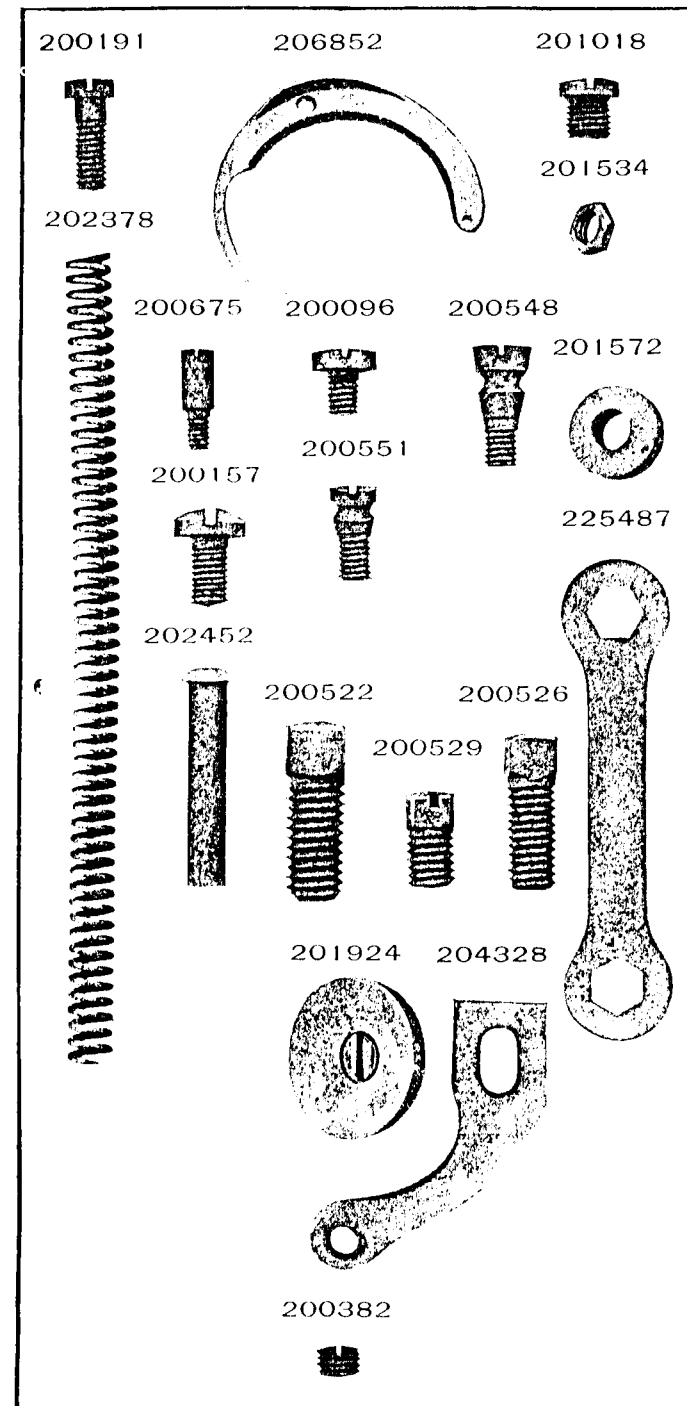 


PLATE 13362-FULL SIZE

 202283

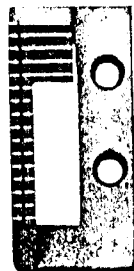


202285

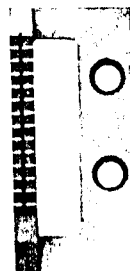 


202813



 203138

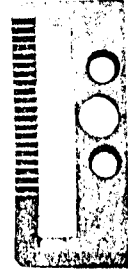


207051

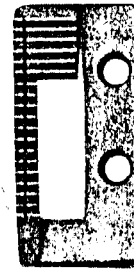 


207052



 202819

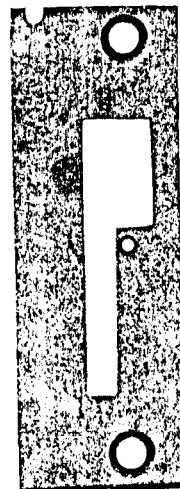

202820

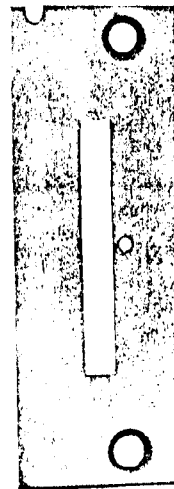 

206798

