Singer 69-23

Form 19467 (440) Printed in U. S. A.

LIST of PARTS



MACHINE No. 69-23

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To insure easy running and prevent unnecessary wear of the machine, the parts which are in movable contact should be regularly oiled. When the machine is in continuous use oil should be applied at least twice each day.

> Copyright, U. S. A., 1933, 1939 and 1940 by The Singer Manufacturing Company All Rights Reserved for all Countries

INDEX

	Page
Attachments and Accessories	. 15
Bobbin Winder	. 18
Eye and Finger Guard	. 16
Machine No. 69-23	. 6
Numerical List of Parts	. 19
Starting Lever and Foot Lifter Parts	. 17
Table Belt Guide	. 1
Thread Unwinder	. 1

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

A.A-Buffed and Chromium Flated

A.B-Hardened, Polished, Buffed and Chromium Plated

A.C-Brown Baking Enamel Finish

A.D-Gray Baking Enamel Finish

A.E-Hardened, Bright Rumbled and Nickel Plated

A.F-Hardened, Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated

B-Polished, Nickel Plated and Buffed

C-Hardened Only

C.R-Hardened and Merlized

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

F.J-Hardened, Polished and Nickel Plated

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Flated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

P.P-Wrinkle Finish

R-Merlized

S-Cadmium Plated

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.L-Copper and Brass Plated

T.M-Copper Plated and Oxidized

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

X-Black Oxide, for Iron and Steel

X.C-Hardened and Black Oxide, for Iron or Steel

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.A-Hardened, Polished, Nickel Plated, Buffed and Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.C-Hardened and Chromium Plated

Z.D-Polished and Chromium Plated

Z.G-Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated

Z.J-Nickel and Chromium Plated

Z.T-Copper and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers

1501 to 1800 and 51501 to 51800 are Nut Numbers


1801 to 2000 and 51801 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

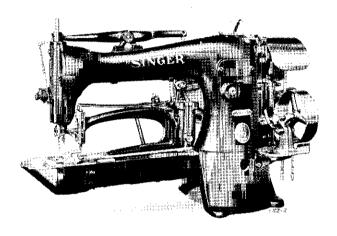

MACHINE No. 69-23

For Stitching Tags on Laundry Articles. Small size tag 30/64 inch by ¹⁵/₆₄ inch. Makes 21 stitches, 5 stitches on both the upper and lower rows, 4 stitches on each side and 3 tying stitches. Speed 1000 R. P. M.

No.	Plate	Name
55390	8590	Arch Clamp Foot (left) for 55391
55391		" " " 55390 with 219K and
		63731, for 55934
55392	8590	Arch Clamp Foot (right) for 55393
55393		" " " 55392 with 219K
		and 63732, for 55394
179 58	8596	Arch Clamp Foot Lifter with 17866
19 0 J	8596	" " " Screw
63726	8590	" " Lifting Stud
18477	8590	" " Plate
1901	8590	" " Screw
219K	8590	" " Screw
63731	8590	" " Shank (left) with 63726.
63732	8590	" " (right) with 63726
63733	8590	" Spring

						•
No.	Plate	Name		No.	Plate	Name
1221F	8590	Feed Plate Carrier Bar Block Screw		18373	8592	Knife Bar Rack
55300	8590	" " " " Steady Pin.		17822	8592	" " Rivet
17805	8590	" " Pivot Block	» N	39235	8592	* Cam Lever Body
1194D	8590	" " " " " Screw		39409		" " " 39235 with 39460
18390	8590	" " Plate		393 29		Knife Cam Lever complete, Nos. 19793 and
934J	8590	" " " Screw		<i>ಎ</i> ೪ಎ೭೪		
		DOLONILLI				39409
1654C	8590	Nuc		18470	8592	Knife Cam Lever Bracket with 1177D
17806	8590	POSICION BOUG		8589	8592	Dowel Pin
1195E	8590	DOLEM DOGG		670E	8592	" " " Screw
8505	8590	B A A Rivet		50029C	8592	" " Hinge Screw
39361	8595	" Regulator with 1953	* *	18471	8592	" " " " Bushing
18469	8595	" Bracket with 690D and two		18472		" " " " " 18 4 71
		160D				with 50029C
160D	8595	Feed Regulator Bracket Cap Screw		1177D	8592	Knife Cam Lever Hinge Screw Bushing
8589	8595	" " Dowel Pin	* 3	22.70		Clamping Screw
1177E	8595	" Screw		1980	8592	Knife Cam Lever Roller and Screw Stud
17744	8595	" " Hinge Stud		1900	0002	with 1654C
18488	8590	" Post		1.05.40	0500	
	8590	" " Guide		1654C	8592	Knife Cam Lever Roller and Screw Stud
18489		" " " Cap Screw				Nut
81 0 D	8590			39330	8592	Knife Cam Lever Slide with 1980
1953	8595	Wolfer wing persa peng atom		39460		" " " 39330 with 1255J and
		1655C and 14017				39331
1655C	8595	Feed Regulator Roller and Screw Stud Nut		1255J	8592	Knife Cam Lever Slide Screw
14017	8595			39331	8592	" " " Washer
		Washer		19793	8592	" " Steady Pin
39313	8595	Feed Regulator Swivel		17825	8597	* Holder with 17830 and two 7298
11910	8595	" " Thumb Screw		55323		" 17825 with 11980, 17829,
55442	8597	Knife (needle thread) for 55323		00000		55442 and 55456
55456	8597	" (shuttle thread) for 55323		7298	8597	Knife Holder Pinion Dowel Pin
55321	8597	" (stationary) for 55329				
50117J	8597	" Screw		17827	8597	" " " Stud
-		* Bar with 18373 and two 17822		17828	8597	
18370	8592					17827
18371	8592	Vap	ж э	50018 F	8597	Knife Holder Pinion Stud Bracket Screw
217J	8592	DOTEM************************************		1698C	8597	n n n n n n n Nut
18372	8592	" Connection with 17917	*	1198C	8597	* Screw
19 0J	8592	" " Screw		17829	8597	" Thread Holder
7071	8592	" " " Washer		17830	8597	" " Position Pin
17915	8592	" " Slide Block		17831	8596	Needle Bar with 237F
17917		* * * * * 17915		63756	8596	" Connecting Link with 21629
		with 17916	•	377C	8596	" " " Hinge Screw
17916	8592	Knife Bar Connection Slide Block Stud		1518E	8596	" " Nut
39297	8592	" Driving Lever with 190J, 1420E,		21629	8596	" " Stud with 155C
	0002	17919 and 39298	•			" " " Set Screw
1382 F	0500	Knife Bar Driving Lever Hinge Screw		155C	8596	
	8592	" " " " " Nut.		39350	8592	" Thread Nipper Driving Lever
1681C	8592	1444.0	'#1 14"			(adjustable) with 39351 and two 335J
39298	8592	DOCK DOUGHT.	•	39351	8592	Needle Bar Thread Nipper Driving Lever
17919	8592	5P1116	1			Extension
1901	8592		1	335J	8592	Needle Bar Thread Nipper Driving Lever
		Screw	7 1-			Extension Screw
1420E	8592	Knife Bar Driving Lever Lock Stud Stop		1196C	8592	Needle Bar Thread Nipper Driving Lever
		Screw			•	Hinge Screw

		N	 .	,			Name
No.	Plate	Name			No.	Plate	Name
39352	8592	Needle Bar Thread Nipper Driving Lever			17842	8596	Presser Bar Guide Bracket with 453C
		Spring			453C	8596	Dev Botom:::::
17834	8596	Needle Bar Thread Nipper Lever with	-	~	17843	8592	" " Lifting Lever
		17835			17844	8592	" " Bracket
17835	8596	Needle Bar Thread Nipper Lever Bushing			164E	8592	n n n " " Screw
1200D	8596	" " " " Hinge			1201C	8592	" " " Hinge Screw
		Screw			17845	8592	" " Rod
39276	8596	Needle Bar Thread Nipper Lever Spring			17846	8592	" " " " Chain
1329D	8596	14 15 16 14 19 M			32675	8596	" " Spring
		Screw			68712	8591	Pulley (loose) 23/4 in. diam. with
17837	8592	Needle Bar Thread Nipper Rod	w _i	,=			200584D
17838	8592	" " " " Adjusting			68713		Pulley (loose) 68712 with 68714
_,,,	•••	Stud			68714	8591	" Ball Bearing
1 651E	8592	Needle Bar Thread Nipper Rod Adjusting			68715	8591	" " Bushing
1 00.10	0002	Stud Lock Nut	~	*	51387R	8591	" " Cap Screw
17839	8592	Needle Bar Thread Nipper Rod Arm with			200584D	859 1	" " 011 Plug Screw
17009	3332	196F			68716	8591	" (tight) 2 7/8 in. diam
1000	0500	Needle Bar Thread Nipper Rod Arm Set			68720		" " 68716 with 12060 and
196F	8592				03780		17854
	2=20	Screw Bod Gunnart			0000	2501	
17840	8592	Needle Bar Thread Nipper Rod Support			2022	8591	Pulley (tight) Pin
190J	8592	2010"			68717		Pulleys (ball bearing) complete, Nos.
2 37F	8596	" Set Screw					51387R, 68713, 68715 and 68720
55278	8591	Oscillating Rock Shaft with 4784 and			2996	8597	Shuttle Bobbin
		55453			15140	8597	" Case Latch
55452	8591	Oscillating Rock Shaft Hinge Pin			2973	8597	u u "u M Lever
55453		" * " 55 4 52			2974	8597	a a a a Fulcrum
		with 1513J					Pin
15 13 J	8591	Oscillating Rock Shaft Hinge Pin Nut			2 97 5	8597	Shuttle Bobbin Case Latch Spring
4784	8591	" " " Oil Pad			592E	8597	" " " Stop Screw
18385	8591	" Shaft			15141	8597	" " Hinge, Nos.2973,2974
18386	8591	" Crank					and 15140
18387		Oscillating Shaft Crank complete, Nos.			15277	8597	Shuttle Bobbin Case complete, Nos. 591F,
10007		237F, 1519E, 15171 and 18386	_	,	10011	000,	592E, 2975, 15141 and 15278
2049	8591	Oscillating Shaft Crank Pin	~	•	21562	8597	Shuttle Body
237F	8591	" " Set Screw			591F	8597	" Tension Regulating Screw
	8591	" " Slide Block			15278	8597	" Spring
15170		" " " Cap		•			Shuttle, 1 11/16 in. diam., Nos. 2996,
226E	8591	V up			21561	8597	15277 and 21562
*****	2523	Screw			0.4.7	05.03	Shuttle Driver with two 462C
12424	8591				2441	8591	
		Screw Washer			2049	8591	1 1111
1035C	8591	Oscillating Shaft Crank Slide Block			462C	8591	Bet Bore
		Screw Stud			18411	8597	Race Body
1519E	8591	Oscillating Shaft Crank Slide Block			21623	8597	" " Cap
		Screw Stud Nut			662D	8597	" " Screw
15171		Oscillating Shaft Crank Slide Block com-			2523	8597	" " Steady Pin
		plete, Nos. 226E, 1035C, 12424 and	~	×-	18429	8597	" " Ring
		15170			55439	8597	" " Spring
2058	8596	Presser Bar			1289D	8597	" " " Screw
17841	8596	" Collar with two 196F	-		18430	8597	Shuttle Race (flexible) complete, Nos.
196F	8596	# # Set Screw	•				662D,2523,18411,18429,21623 and two
	-=						each 1289D and 55439
			,				

No.	Plate	Name
1710	8597	Shuttle Race Screw
17853	8598	Starting Lever
1262C	8598	" Hinge Screw
1662C	8598	" Nut
17886	8598	" " Pitman
17854	8591	Stop Cam
17855	8598	" " Interlocking Rod
55388	8598	# # Case
55389		*
		18443 and two 193J
55418		Stop Cam Interlocking Rod Case 55389 with 63976 and two 1255D
55285		Stop Cam Interlocking Rod Case 55418 with 1318D,17855,17863,17864,39222 and 68739
70746	0500	Stop Cam Interlocking Rod Case Bracket
39346	8598	Stop Cam Interlocking Rod Case Bracket
55304		complete, Nos. 1182E, 1196C, 1204E, 1254C, 1262C, 1508E, 1662C, 17853, 17859, 17861, 17862, 17872, 17873, 39346, 55285 and two 898D
18493	8598	Stop Cam Interlocking Rod Case Bracket 55304 with 39343,39344 and two 1186D
16532	8598	Stop Cam Interlocking Rod Case Bracket Dowel Pin
1343E	8598	Stop Cam Interlocking Rod Case Bracket Screw
1204E	8598	Stop Cam Interlocking Rod Case Hinge Screw
17859	8598	Stop Cam Interlocking Rod Case Socket Joint
898D	85 9 8	Stop Cam Interlocking Rod Case Socket Joint Cap Screw
39343	8598	Stop Cam Interlocking Rod Case Spring (flat)
50682C	8598	Stop Cam Interlocking Rod Case Spring Adjusting Screw
1520E	8598	Stop Cam Interlocking Rod Case Spring Adjusting Screw Nut
39344	8598	Stop Cam Interlocking Rod Case Spring Bracket with 1520E and 50682C
118 6 D	8598	Stop Cam Interlocking Rod Case Spring Bracket Screw
17861	8598	Stop Cam Interlocking Rod Case Stop Stud
1254C	8598	n n st et et et st st
		Screw Bushing
1508E	8598	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing Lock Nut
17862	8598	Stop Cam Interlocking Rod Case Stop Stud Spring

	•	<u></u>
No.	Plate	Name
18443	8598	Stop Cam Interlocking Rod Case Wearing
		Block
193J	8598	Stop Cam Interlocking Rod Case Wearing
		Block Screw
17863	8598	Stop Cam Interlocking Rod Spring
17864	8598	# # # Stop
1318D	8598	n n n n n screw
68739	8598	wasir-
		er
3012	8591	Stop Cam Pin
1206C	8591	" " Screw
2102	8593	Tension Disc
156 0 0	8593	" Regulating Thumb Nut
600C	8593	* Screw Stud
16202		" " 600C with 1560C
448C	8593	" * Set Screw
2103	8593	* Spring
2105	8593	" Thread Guard
56791	8593	Tension complete, Nos. 2103, 2124, 16202
		and two 2102
18392	8591	Thread Take-up Cam with 446C
3012	8591	в в в Pin
446C	8591	<pre>*</pre>
55283	8591	" Lever with 79C and 1822
79C	8591	# # # Hinge Screw
1822	8591	" " Roller and Stud
2124	8593	" Spring
2127	8593	" " Regulator Plate
233J	8593	- Ad the the the
2000	0010	justing Screw
17865	8596	Thread Wiper Body
12070	8596	" " Hinge Screw
17866	8596	" " " Hook
17867	8596	"
641C	8596	" " Set Screw
17868	8596	" " Wire
337D	8596	" " Screw
17869	8596	# # " " Washer
55324	8597	Throat Plate
55327		" " 55324 with 55325 and two
1 3000		1208D
55325	8597	Throat Plate Needle Hole Bushing (large
63066	0001	needle hole)
1208D	8597	Throat Plate Needle Hole Bushing Screw
55329	8597	Throat Plate complete, Nos. 16980,17828,
ರಿರಿಂದಿಕ	0097	50018F,50117J,55321,55323 and 55327.
691F	8597	Throat Plate Screw
17872	859 <i>1</i> 8598	Trip Lever
	8598	" " Hinge Screw
11960		" Spring
17873	8598	Φħτ τ#R* · · · · · · · · · · · · · · · · · · ·

No.	Plate	Name
1182E	8598	Trip Lever Spring Screw
17874	8594	Tripping Point
190J	8594	" " Screw
*15404		Trade Mark
15405		" " Rivet

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles.

ATTACHMENTS AND ACCESSORIES

No.	Plate	Name
18419	8599	Cylinder Base Plate with two 453C
18420	8599	" " " Hinge Connection
18423	8599	" " " Hinge
		Pin
4530	8599	Cylinder Base Plate Hinge Connection
		Hinge Pin Set Screw
18424	8599	Cylinder Base Plate (hinged) complete,
		Nos. 18419, two each 18420, 18423,
		three wood screws 1 1/4 in. No. 12
		and four 134D
134D	8599	Cylinder Base Plate Screw
41400	8599	Machine Rest Pin (wood)
120346	8599	Oiler (copper plated) with 120347
120347	8599	" Spout, 8 1/2 in. long
11831	8599	Screw Driver (large)
26026	8599	" (machine)
26485	8599	" (shuttle tension)
10875	8599	Wrench for 1518 and 1520
27662	8599	# # 1508
17905	8599	" 1654 and 1676
22003	8599	⁴ 1651

BOBBIN WINDER

(SWINGING AUTOMATIC, LEFT HAND)

No.	Plate	Name
41598	8600	Base with 27916 and two 28084
1186C	8600	" Screw
15072	8600	Bobbin Position Pin
126391	8600	Bracket for 41716
129E	8600	" Screw
27916	8600	Brake (leather)
28084	8600	" Rivet
27321	8600	Frame
50356D	8600	" Hinge Screw
1620J	8600	" " Nut
41825	8600	" Spring
41600	8600	Pulley with 155C
155C	8600	* Set Screw
27538	8600	Spindle with 15072, 27850 and 41828
27850	8600	" Collar
41828	8600	" " Pin
27328	8600	Stop Latch

EYE	AND	FINGER	GUARD

No.	Plate	Name
35D	8600	Stop Latch Hinge Screw
60769	8600	Tension Bracket
60770	8600	Tension Bracket complete, Nos. 419E, 1562J,8422,9780,43808,60769 and two 2455.
9780	8600	Tension Bracket Position Stud
161J	8600	" Screw
2455	8600	" Disc
1562J	8600	" Regulating Thumb Nut
419E	8600	" Screw Stud
43808	8600	" Spring
8422	8600	" Thread Guide
41604		Bobbin Winder, Nos. 35D, 1620J, 27321,
		27328,27538,41598,41600,41825 and
		50356D
41716	8600	Bobbin Winder (swinging automatic, left
		hand) complete for 126391, Nos.161J,
		41604, 60770 and two 11860

EYE AND FINGER GUARD

No.	Plate	Name
121603	8601	Eye and Finger Guard (glass)
121604	8601	Carrying Arm
1004K	8601	" " Hinge Screw (back)
1698J	8601	# # # " " Nut
50222K	8601	" " " (front)
1735J	8601	n n n n n n Nut
121605	8601	" " Spring
50435K	8601	Depressing Screw
121606	8601	" " Holder
140061J	8601	" " " Screw
121607	8601	Frame
121608		" 121607 with 121603
5016 5 J	8601	" Screw
121609	8601	Guiding Rod
50 435 K	8601	" " Hinge Screw
121611	8601	Holder
121612	8601	Supporting Bracket
191J	8601	" Screw
121613		Eye and Finger Guard complete, Nos.
		1004K, 1698J, 1735J, 50222K, 50435K,
		121604,121605,121608,121609,121611,
		121612 and two 50165J
68740		Face Plate
68741	8601	" 68740 with 2105
68742		Face Plate complete, Nos.4480,2107,2127,
		56791,68741 and two 233J

STARTING LEVER AND FOOT LIFTER PARTS

No.	Plate	Name
17876	8602	Treadle with 443C
17877	8602	" Pitman Rod (lower)
17878	8602	" " (upper)
17879	8602	" " Clamp with two 161E
161 E	8602	" " " Screw
17880	8602	Treadle Pitman complete, Nos. 17877 to
		17879
17881	8602	Treadle Shaft
443C	8602	" Set Screw
17882	8602	" Spring
17883	8602	" Stand
17884	8602	Treadle complete, Nos. 17876, 17881 to
		17883 and two wood screws 1 in. No.
		10
17885		Treadle and Pitman complete, Nos. 17880
		and 17884

TABLE BELT GUIDE

No.	Plate	Name
39218	8602	Belt Guide with two 168E
168E	8602	<pre># Set Screw</pre>
17892	8602	Bracket with two 153E
17893	8602	Pulley
39219	8602	* Shaft (long) with 17896 and 63973
63973	8602	<pre>" " Wick (braided cotton)</pre>
39220	8602	<pre>" (short) with 17896 and 63974</pre>
63974	8602	" " Wick (braided cotton)
17896	8602	" " Plug
153E	8602	<pre># " Set Screw</pre>
39221	8602	Table Belt Guide complete, Nos. 17892,
		39219,39220, two each 17893,39218 and
		three wood screws 1 1/4 in. No. 12

THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

No.	Plate	Name
225257	22248	Spool Rest with 201018C
150203	22248	<pre>" " Cushion (felt)</pre>
225388	22248	* * Rod
200383C	22248	" " Set Screw
201018C	22248	" " Set Screw
202490	22248	Stand with 2003830
225391	22248	Thread Guide
201696 J	22248	Lock Nut
225326	22248	" Position Cup
225324	22248	" Rod with 208E and 225322
208E	22248	" " Screw
225322	22248	" " Washer
225258	22248	Thread Unwinder complete, Nos. 201696J,
		202490,225257,225324,225326,225388,
		two each 150203, 225391 and three
		wood screws 7/8 in. No. 12 F.H
27739	22248	Thread Cone (wood) for large cones
225390	22248	" " Holder, for inverted cones
No	te: Nos.	27739 and 225390 are used with, but not
	include	ed in 225258.

NUMERICAL LIST OF PARTS

No.	Plate	Name
35D	8600	Bobbin Winder Stop Latch Hinge Screw for
000	0000	41604
79C	8591	Thread Take-up Lever Hinge Screw for 55283
129E	8600	Bobbin Winder Bracket Screw
134D	8599	Cylinder Base Plate Screw for 18424
145E	8591	Crank Connecting Rod Cap Screw for 4292.
153E	8602	Table Belt Guide Pulley Shaft Set Screw
TOOF	300,2	for 17892
155C	8600	Bobbin Winder Pulley Set Screw for 41600
155C	8596	Needle Bar Connecting Stud Set Screw for
1000	0000	21629
160E	8591	Feed Across Shaft Crank (back) Clamping Screw for 18360
160E	8591	Feed Across Shaft Crank (front) Clamping
TOOF	0991	Screw for 18362
160D	8595	Feed Regulator Bracket Cap Screw for
1600	0090	18469
161J	8600	Bobbin Winder Tension Bracket Screw for
1010	8600	41716
161E	8602	Starting Lever and Foot Lifter Treadle
TOTE	3002	Pitman Rod Clamp Screw for 17879
1.64D	8593	Face Plate Screw
164E	8592	Presser Bar Lifting Lever Bracket Screw
10-25	0002	for 55405
168E	8602	Table Belt Guide Set Screw for 39218
1710	8597	Shuttle Race Screw
181D	8590	Arch Clamp Frame Screw for 55394
184E	8591	Belt Cover Bracket Screw Stud for 39290.
1900	8596	Arch Clamp Foot Lifter Screw
190J	8590	" " Plate Screw for 55394
190J	8591	Arm Side Cover Screw
190J	8592	Knife Bar Connection Screw
190J	8592	" Driving Lever Lock Stud Spring
		Screw for 39297
190J	8592	Needle Bar Thread Nipper Rod Support
		Screw
1907	8594	Tripping Point Screw for 55430
19 1 J	8601	Eye and Finger Guard Supporting Bracket
		Screw for 121626
193J	8598	Stop Cam Interlocking Rod Case Wearing
		Block Screw for 55389
196F	8592	Needle Bar Thread Nipper Rod Arm Set
		Screw for 17839
196 F	8596	Presser Bar Collar Set Screw for 17841
200F	8591	Feed Across Shaft Collar Set Screw for
		18359

17-	Diete	Name
No.	Plate	
200 c	8591	Feed Across Shaft Crank (back) Ball Stud
	00040	Set Screw for 18360
208E	22248	Thread Unwinder Thread Guide Rod Screw
		for 225324
217J	8591	Belt Cover Screw
217E	8597	Cylinder End Cover Spring Screw
217J	8592	Knife Bar Cap Screw
219K	8590	Arch Clamp Foot Screw for 55391 and 55393
226E	8591	Oscillating Shaft Crank Slide Block Cap Screw for 15171
233J	8593	Face Plate Thread Guard Screw for 17725 and 68742
233J	8593	Thread Take-up Spring Regulator Plate
దురు	6030	Adjusting Screw for 17725 and 68742.
237F	8596	Needle Set Screw for 17831
237F	8591	Oscillating Shaft Crank Set Screw for
2011	0097	18387
335J	8592	Needle Bar Thread Nipper Driving Lever
3330	ಯಾಬ	Extension Screw for 39350
337D	8596	Thread Wiper Body Wire Screw
3750	8591	Crank Connecting Rod Hinge Screw
377C	8596	Needle Bar Connecting Link Hinge Screw
419E	8600	Bobbin Winder Tension Screw Stud for
419E	8600	60770
443C	8602	Starting Lever and Foot Lifter Treadle
	••••	Shaft Set Screw for 17876
446C	8591	Thread Take-up Cam Set Screw for 18392
448C	8593	Tension Screw Stud Set Screw for 17725
		and 68742
453C	8599	Cylinder Base Plate Hinge Connection
-000	55-1	Hinge Pin Set Screw for 18419
453C	8594	Feed Cam Driving Worm Wheel Set Screw
2000	0001	for 17797
453C	8596	Presser Bar Guide Bracket Set Screw for
	5000	17842
4620	8591	Shuttle Driver Set Screw for 2441
591F	8597	" Tension Regulating Screw for 15277
592E	8597	* Bobbin Case Latch Stop Screw for
0025	0007	15277
600C	8593	Tension Screw Stud for 16202
641C	8596	Thread Wiper Body Support Set Screw
662D	8597	Shuttle Race Cap Screw for 18430
670E	8592	Knife Cam Lever Bracket Screw
690D	8595	Feed Across Regulator Hinge Stud Clamp-
		ing Screw for 18469
691 F	8597	Throat Plate Screw
810D	8590	Feed Regulator Post Guide Cap Screw for 18486
88 0 E	8591	Arm Screw

N7.0	Diata	Name
No.	Plat e 8598	Stop Cam Interlocking Rod Case Socket
898 D	0090	Joint Cap Screw for 55304
93 4 J	8590	Feed Plate Carrier Bar Plate Screw for 18486
1004K	8601	Eye and Finger Guard Carrying Arm Hinge Screw (back) for 121613
1035C	8591	Oscillating Shaft Crank Slide Block Screw Stud for 15171
1057E	8595	Feed Across Connection Cap (lower) Screw for 55376
1057E	8595	Feed Across Connection Cap (upper) Screw for 55376
1177E	8595	Feed Regulator Bracket Screw
1177 <u>E</u> 1177D	8592	Knife Cam Lever Hinge Screw Bushing
TILID	0002	Clamping Screw for 18470
1182E	8598	Trip Lever Spring Screw for 55304
1186C	8600	Bobbin Winder Base Screw for 41716
1186D	8598	Stop Cam Interlocking Rod Case Spring
11005	****	Bracket Screw for 18493
11910	8595	Feed Regulator Thumb Screw
11920	3594	" Cam Set Screw for 55430
1194D	8590	Plate Carrier Bar Pivot Block Screw
1195E	8590	* Screw Stud for 18486
1196C	8592	Needle Bar Thread Nipper Driving Lever
		Hinge Screw
1196C	8598	Trip Lever Hinge Screw for 55304
1198C	8597	Knife Screw for 55323
1200D	8596	Needle Bar Thread Nipper Lever Hinge
10010	0500	Presser Bar Lifting Lever Hinge Screw
1201C	8592	Stop Cam Interlocking Rod Case Hinge
1204E	8598	Screw for 55304
1206C	8591	Stop Cam Screw for 68720
1207D	8596	Thread Wiper Body Hinge Screw
1208D	8597	Throat Plate Needle Hole Bushing Screw for 55327
1221F	8590	Feed Plate Carrier Bar Block Screw for 18486
1229F	85 90	Arch Clamp Foot Spring Adjusting Screw for 55394
125 4 C	8598	Stop Cam Interlocking Rod Case Stop Stud Screw Bushing for 55304
1255D	8598	Belt Shifter Clamp Screw for 55418
1255J	8592	Knife Cam Lever Slide Screw for 39460
1262C	8598	Starting Lever Hinge Screw for 55304
1289D	8597	Shuttle Race Ring Spring Screw for 18430
1300D	8590	Cylinder Block Screw
1318D	8598	Stop Cam Interlocking Rod Stop Screw for 55285
12000	8596	Needle Bar Thread Nipper Lever Spring
13290	9390	Screw

No.	Plate	Name
1343E	8598	Stop Cam Interlocking Rod Case Bracket
		Screw
1382F	8592	Knife Bar Driving Lever Hinge Screw
1420£	8592	" " Lock Stud Stop
		Screw for 39297
1441C	8591	Feed Cam Driving Worm Set Screw for
		18415
1442C	859 1	Feed Cam Driving Worm Position Screw for
		18415
1508E	8598	Stop Cam Interlocking Rod Case Stop Stud
		Screw Bushing Lock Nut for 55304
15 13 J	8591	Oscillating Rock Shaft Hinge Pin Nut for
3-300	0503	55453
1518E	8591	Crank Connecting Rod Hinge Screw Nut
1518E	8596	Needle Bar Connecting Link Hinge Screw Nut
1519E	8591	Oscillating Shaft Crank Slide Block
TOTAE	OOST	Screw Stud Nut for 18387
1520E	8591	Arm Shaft Bushing (back) Adjusting Screw
2020	0001	Nut
1520E	8598	Stop Cam Interlocking Rod Case Spring
		Adjusting Screw Nut for 39344
1547J	8590	Arch Clamp Foot Spring Adjusting Screw
		Lock Nut for 55394
1560C	8593	Tension Regulating Thumb Nut for 16202
1562J	8600	Bobbin Winder Tension Regulating Thumb
		Nut for 60770
1620J	8600	Bobbin Winder Frame Hinge Screw Nut for
		41604
1651E	8592	Needle Bar Thread Nipper Rod Adjusting
		Stud Lock Nut
1653C	8594	Feed Cam Shaft Nut
1654C	8590	* Plate Nut for 55394
1654C	8592	Knife Cam Lever Roller and Screw Stud
1.0550	0505	Nut for 1980
1655C	8595	Feed Regulator Roller and Screw Stud Nut
1662C	8598	for 1953 Starting Lever Hinge Screw Nut for 55304
1676C	8595	Feed Across Regulator Ball Screw Stud
10700	0000	Nut
1681C	8592	Knife Bar Driving Lever Hinge Screw Nut.
1698J	8601	Eye and Finger Guard Carrying Arm Hinge
10000	0001	Screw (back) Nut for 121613
1698C	8597	Knife Holder Pinion Stud Bracket Screw
		Nut for 55329
1735J	8601	Eye and Finger Guard Carrying Arm Hinge
		Screw (front) Nut for 121613
1822	8591	Thread Take-up Lever Roller and Stud for
		55283
1952	8595	Feed Across Regulator Roller and Stud
		for 18356

No.	Plate	Name
1953	8595	Feed Regulator Roller and Screw Stud
1000	0030	with 1655C and 14017, for 39361
1980	8592	Inife Cam Lever Roller and Screw Stud
1000	0002	with 1654C, for 39330
2022	8591	Pulley (tight) Pin
2049	8591	Oscillating Shaft Crank Pin
2049	8591	Shuttle Driver Pin
2058	8596	Presser Bar
2102	8593	Tension Disc for 56791
2103	8593	" Spring for 56791
2105	8593	" Thread Guard for 17725 and 68741
2107	8593	Face Plate Thread Guard for 17725 and
2207	0000	68742
2124	8593	Thread Take-up Spring for 56791
2127	8593	" " Regulator Plate for
2221	0000	17725 and 68742
2441	8591	Shuttle Driver with two 462C
2455	8600	Bobbin Winder Tension Disc for 60770
2523	8597	Shuttle Race Cap Steady Pin for 18430
2973	8597	" Bobbin Case Latch Lever for 15141
2974	8597	" " " " Fulcrum Pin
		for 15141
2975	8597	Shuttle Bobbin Case Latch Spring for
		15277
2996	8597	Shuttle Bobbin for 21561
3012	8591	Stop Cam Pin
3012	8591	Thread Take-up Cam Pin
4292	8591	Crank Connecting Rod with two 145E
4389	8591	Arm Dowel Pin
4448	8591	" 011 Tube for intermediate bearing
4604	8597	Cylinder End Cover Bracket Rivet for
		18427
4784	8591	Oscillating Rock Shaft Oil Pad for 55278
7071	8592	Knife Bar Connection Screw Washer
7298	8597	" Holder Pinion Dowel Pin for 17825.
8422	8600	Bobbin Winder Tension Thread Guide for
		60770
8505	8590	Feed Plate Screw Stud Rivet for 18486
8589	8595	" Regulator Bracket Dowel Pin
8589	8592	Knife Cam Lever Bracket Dowel Pin
9780	8600	Bobbin Winder Tension Bracket Position
		Stud for 60770
10875	8599	Wrench for 1518 and 1520 (Attachments
		and Accessories)
11831	8599	Screw Driver (large) Attachments and
		Accessories
12424	8591	Oscillating Shaft Crank Slide Block Cap
		Screw Washer for 15171
14017	8595	Feed Regulator Roller and Screw Stud Nut
		Washer for 1953

						•	· · · -
No.	Plate	Name	••	•	No.	Plate	Name
14079	8590	Arch Clamp Frame Dowel Pin for 55394			17840	8592	Needle Bar Thread Nipper Rod Support
1 50 7 2	8600	Bobbin Winder Bobbin Position Pin for			17841	8596	Presser Bar Collar with two 196F
		27538	_		17842	8596	" Guide Bracket with 453C
15140	8597	Shuttle Bobbin Case Latch for 15141		4	17843	8592	" " Lifting Lever
1 5141	8597	" " " Hinge, Nos. 2973,			17844	8592	" " Bracket for
		2974 and 15140, for 15277			2,011	0002	55405
1 5170	8591	Oscillating Shaft Crank Slide Block for			17845	8592	Presser Bar Lifting Lever Rod
		15171			17846	8592	" " " Chain
15171		Oscillating Shaft Crank Slide Block com-			17853	8598	Starting Lever for 55304
		plete, for 18387, Nos. 226E, 1035C,			17854	8591	Stop Cam for 68720
		12424 and 15170			17855	8598	" Interlocking Rod for 55285
15277	8597	Shuttle Bobbin Case complete for 21561,	•	-	17859	8598	" " " Case Socket
		Nos. 591F,592E,2975,15141 and 15278.			11000	0000	Joint for 55304
15273	8597	Shuttle Tension Spring for 15277			17861	8598	Stop Cam Interlocking Rod Case Stop
*15404		Trade Mark for 55405	_	3	2,002	0000	Stud for 55304
15405		# Rivet for 55405			17862	8598	Stop Cam Interlocking Rod Case Stop Stud
16202		Tension Screw Stud 6000 with 15600, for			17002	0000	Spring for 55304
		56791			17863	8598	Stop Cam Interlocking Rod Spring for
16532	8598	Stop Cam Interlocking Rod Case Bracket			1,000	0030	
		Dowel Pin			17864	8598	Step Com Interleging Ped Step Sep ESSOS
17702	8591	Arm Shaft			17865	8596	Stop Cam Interlocking Rod Stop for 55285 Thread Wiper Body
17703	8591	" Bushing (back)			17866	8596	# # # Hook for 1000
17724	8593	Face Plate for 17725			17867	8596	" " Hook for 17958
17725	8593	Face Plate complete, Nos.448C,2105,2107,			17868	8596	aupport
		2127,17724,56791 and two 233J			17869	8596	M140 ***********
17738	85 9 5	Feed Across Regulator Ball Screw Stud			17872	8598	Screw washer
		Nut Washer			17873	8598	Trip Lever for 55304
17741	8591	Belt Cover Bracket Stud for 39290			17874	8594	opring 101 33004
17744	85 9 5	Feed Regulator Hinge Stud			17876	8602	Tripping Point for 55430
17797	8594	" Cam Driving Worm Wheel with 453C			17070	0002	Starting Lever and Foot Lifter Treadle
17805	8590	" Plate Carrier Bar Pivot Block			17877	8602	with 443C, for 17884
17806	8590	" Position Stud for 18486			1/0//	2002	Starting Lever and Foot Lifter Treadle
17822	8592	Knife Bar Rack Rivet for 18370			17878	8602	Pitman Rod (lower) for 17880
17825	8597	" Holder with 17830 and two 7298, for	1-	*	1,010	0002	Starting Lever and Foot Lifter Treadle
		55323			17879	8602	Pitman Rod (upper) for 17880
17827	8597	Knife Holder Pinion Stud for 17828			1,0,0	0002	Starting Lever and Foot Lifter Treadle
17828	8597	" " " Bracket with	-				Pitman Rod Clamp with two 161E, for
		17827, for 55329	_	•	17880	8602	17880
17829	8597	Knife Thread Holder for 55323			17000	0002	Starting Lever and Foot Lifter Treadle
17830	8597	" " Position Pin for 17825					Pitman complete for 17885, Nos.17877
17831	8596	Needle Bar with 237F	-		17881	8602	to 17879
17834	8596	Needle Bar Thread Nipper Lever with			17001	3002	Starting Lever and Foot Lifter Treadle
		17835			17882	8602	Shaft for 17884
17835	8596	Needle Bar Thread Nipper Lever Bushing			1,002	3002	Starting Lever and Foot Lifter Treadle
		for 17834			מסמון	0600	Spring for 17884
17837	8592	Needle Bar Thread Nipper Rod	L		17883	8602	Starting Lever and Foot Lifter Treadle
17838	8592	" " " Adjusting	•	*	17884	9600	Stand for 17884
		Stud			1/004	8602	Starting Lever and Foot Lifter Treadle
17839	8592	Needle Bar Thread Nipper Rod Arm with					complete for 17885, Nos. 17876,17881
		196F	*	, 5			to 17883 and two wood screws 1 in.
							No. 10


		No.	L			•	
No.	Plate	Name	•	J	No.	Plate	Name
17885		Starting Lever and Foot Lifter Treadle			18415	8591	Feed Cam Driving Worm with 1441C and
		and Pitman complete, Nos. 17880 and					14420
		17884	r	•	18419	8599	Cylinder Base Plate with two 453C, for
17886	8598	Starting Lever Pitman					18424
17892	8602	Table Belt Guide Bracket with two 153E,			18420	8599	Cylinder Base Plate Hinge Connection for
		for 39221				•	18424
17893	8602	Table Belt Guide Pulley for 39221			18423	8599	Cylinder Base Plate Hinge Connection
17896	8602	Bilaic Flug 101					Hinge Pin for 18424
		39219 and 39220			18424	8599	Cylinder Base Plate (hinged) complete,
17905	8599	Wrench for 1654 and 1676 (Attachments					Nos.18419, two each 18420, 18423, three
		and Accessories	44				wood screws 1 1/4 in. No. 12 and
17915	8592	Knife Bar Connection Slide Block for					four 134D (Attachments and Accesso-
		17917					ries)
17916	8592	Knife Bar Connection Slide Block Stud	r		18427	8597	Cylinder End Cover with 18428, 18444 and
		for 17917	•	•			three 4604
17917		Knife Bar Connection Slide Block 1,915			18428	.8597	Cylinder End Cover Bracket for 18427
		with 17916, for 18372			18429	8597	Shuttle Race Ring for 18430
17919	8592	Knife Bar Driving Lever Lock Stud Spring			16430	8597	Shuttle Race (flexible) complete, Nos.
		for 39297			10100	0007	662D,2523,18411,18429,21623 and two
17958	8596	Arch Clamp Foot Lifter with 17866					each 1289D and 55439
18356	8595	Feed Across Regulator with 1952			18443	8598	Stop Cam Interlocking Rod Case Wearing
18357	8595	# # Hinge Stud			10110	0000	Block for 55389
18358	8591	" Shaft			18444	8597	Cylinder End Cover Bracket Hinge Pin for
18359	8591	" Collar with two 200F			1011	0001	18427
18360	8591	" " Crank (back) with 160E			18469	8595	Feed Regulator Bracket with 690D and two
		and 2000			10409	0000	160D
18362	8591	Feed Across Shaft Crank (front) with			18470	8592	Knife Cam Lever Bracket with 1177D
		160E and 18363			18471	8592	" " Hinge Screw Bushing for
18363	8591	Feed Across Shaft Crank (front) Stud			104/1	0032	18472
		for 18362			18472		Knife Cam Lever Hinge Screw Bushing
18364	85 9 0	Feed Across Shaft Crank (front) Stud			10412		18471 with 50029C
		Blide Block			18477	0500	
18366	8590	Feed Plate Carrier Bar Block for 18486	L			8590	Arch Clamp Foot Plate for 55394
18367	8590	" " " Cover for	•	*	18486	8590	Feed Plate Carrier Bar with 810D, 934J,
		55394					1195E, 1221F, 8505, 18366, 18390, 18488,
18370	8592	Knife Bar with 18373 and two 17822					18489, two 55300 and four 17806, for
18371	8592	* * Cap	٠		10400	0000	55394
18372	8592	Connection with 17917		-	18488	8590	Feed Regulator Post for 18486
18373	8592	# Rack for 18370			18489	8590	Garac 101 201001111
18379	8597	Cylinder End Cover Spring			18493	8598	Stop Cam Interlocking Rod Case Bracket
18384	8594	Feed Cam Driving Worm Wheel Pin			20100	0.00	55304 with 39343,39344 and two 1186D
18384	8594	" " Pin			18498	8591	Belt Cover
18385	8591	Oscillating Shaft			19793	8592	Knife Cam Lever Steady Pin for 39329
18386	8591	<pre>*</pre>			21561	8597	Shuttle, 1 11/16 in. diam., Nos. 2996,
18387		Oscillating Shaft Crank complete, Nos.					15277 and 21562
. = = = *		237F, 1519E, 15171 and 18386	L		21562	8597	Shuttle Body for 21561
18388	8590	Cylinder Block		•	21623	8597	Race Cap for 18430
18390	8590	Feed Plate Carrier Bar Plate for 18486			21629	8596	Needle Bar Connecting Stud with 155C, for
18392	8591	Thread Take-up Cam with 446C					63756
18411	8597	Shuttle Race Body for 18430	•	7	22003	8599	Wrench for 1651 (Attachments and Ac-
· · · · ·				İ			cessories)

			4	•			37
No.	Plate	Name			No.	Plate	Name
26026	8599	Screw Driver (machine) Attachments and			39352	8592	Needle Bar Thread Nipper Driving Lever
		Accessories					Spring
26485	8599	Screw Driver (shuttle tension) Attach-	r	*	39361	8595	Feed Regulator with 1953
		ments and Accessories			39409		Knife Cam Lever Body 39235 with 39460,
27321	8600	Bobbin Winder Frame for 41604					for 39329
		" " Stop Latch for 41604			39460		Knife Cam Lever Slide 39330 with 1255J
27328	8600	Doop Education 101 X1001111111			00100		and 39331, for 39409
27538	8600	ppingle with teers, steer			41.400	0500	Machine Rest Pin (wood) Attachments and
		and 41828, for 41604			41400	8599	
27662	8599	Wrench for 1508 (Attachments and Ac-					Accessories
		cessories)			41598	8600	Bobbin Winder Base with 27916 and two
27739	22248	Thread Unwinder Thread Cone (wood) for	L	,			28084, for 41604
		large comes for 225258	•		41600	8600	Bobbin Winder Pulley with 1550, for
27850	8600	Bobbin Winder Spindle Collar for 27538					41604
27916	8600	" Brake (leather) for 41598.	_	_	41604		Bobbin Winder, Nos. 35D, 1620J, 27321,
28084	8600	" " Rivet for 41598	•	•			27328,27538,41598,41600,41825 and
							50356D, for 41716
32675	8596	Presser Bar Spring			41776	8600	Bobbin Winder (swinging automatic, left
392 1 8	8602	Table Belt Guide with two 168E, for			41716	8600	
		39221					hand) complete for 126391, Nos.161J,
39219	8602	Table Belt Guide Pulley Shaft (long)					41604, 60770 and two 11860
		with 17896 and 63973, for 39221			41825	8600	Bobbin Winder Frame Spring for 41604
39220	8602	Table Belt Guide Pulley Shaft (short)			41828	8600	Bobbin Winder Spindle Collar Pin for
		with 17896 and 63974, for 39221					27538
39221	8602	Table Belt Guide complete, Nos. 17892,			43808	8600	Bobbin Winder Tension Spring for 60770
COLLE	0002	39219,39220,two each 17893,39218 and			50018F	8597	Knife Holder Pinion Stud Bracket Screw
		three wood screws 1 1/4 in. No. 12					for 55329
======	05.00				50029C	8592	Knife Cam Lever Hinge Screw for 18472
39222	8598	Belt Shifter for 55285				8597	" (stationary) Screw for 55329
3 92 3 5	8592	Knife Cam Lever Body for 39409			50117J		· · · · · · · · · · · · · · · · · · ·
39276	8596	Needle Bar Thread Nipper Lever Spring			50165J	8601	Eye and Finger Guard Frame Screw for
39290	8591	Belt Cover Bracket with 184E and 17741					121613
39297	8592	Knife Bar Driving Lever with 190J,1420E,			50222K	8601	Eye and Finger Guard Carrying Arm Hinge
		17919 and 39298					Screw (front) for 121613
39298	8592	Knife Bar Driving Lever Lock Stud for			50333C	8591	Arm Shaft Bushing (back) Adjusting Screw
00200	0000	39297	₩	*	50356D	8600	Bobbin Winder Frame Hinge Screw for
20212	8595	Feed Regulator Swivel					41604
39313		Knife Cam Lever complete, Nos. 19793 and			50435K	8601	Eye and Finger Guard Depressing Screw
39329					0010011	0002	for 121626
		39409	f ~	*	FOAZEV	9601	
39330	8592	Knife Cam Lever Slide with 1980, for			50 43 5K	8601	Eye and Finger Guard Guiding Rod Hinge
		39460					Screw for 121613
39331	8592	Knife Cam Lever Slide Screw Washer for			50598C	8595	Feed Across Regulator Ball Screw Stud
		39460					for 55378
39343	8598	Stop Cam Interlocking Rod Case Spring		1	50682C	8598	Stop Cam Interlocking Rod Case Spring
		(flat) for 18493					Adjusting Screw for 39344
39344	8598	Stop Cam Interlocking Rod Case Spring		i	51387R	8591	Pulley (loose) Cap Screw for 68717
03011	0000	Bracket with 1520E and 50682C, for			55278	8591	Oscillating Rock Shaft with 4784 and
							55453
		18493 Pad Gago Bracket	₩.	*	55283	8591	Thread Take-up Lever with 79C and 1822
39346	8598	Stop Cam Interlocking Rod Case Bracket					
		for 55304			55285		Stop Cam Interlocking Rod Case 55418
39350	8592	Needle Bar Thread Nipper Driving Lever		i			with 1318D,17855,17863,17864,39222
		(adjustable) with 39351 and two 335J	Va.	,			and 68739, for 55304
39351	8592	Needle Bar Thread Nipper Driving Lever		•	55300	8590	Feed Plate Carrier Bar Block Steady Pin
		Extension for 39350		i			for 18486

		TOTAL COLUMN TOTAL
No.	Plate	Name
55304		Stop Cam Interlocking Rod Case Bracket
00000		complete for 18493, Nos.1182E,1196C,
		1204E,1254C,1262C,1508E,1662C,17853,
		17859,17861,17862,17872,17873,39346,
		55285 and two 898D
55321	8597	Knife (stationary) for 55329
55323		" Holder 17825 with 11980,17829,55442
-		and 55456, for 55329
55324	8597	Throat Plate for 55327
55325	8597	" " Needle Hole Bushing (large
		needle hole) for 55327
55327		Throat Plate 55324 with 55325 and two
		1208D, for 55329
55329	8597	Throat Plate complete, Nos. 1698C, 17828,
		50018F,50117J,55321,55323 and 55327.
55376	8595	Feed Across Connection with four 1057E,
		for 55378
55378		Feed Across Connection 55376 with 505980
		and 55381
5538 1	8595	Feed Across Shaft Crank (back) Ball Stud
		for 55378
55388	8598	Stop Cam Interlocking Rod Case for 55389
55389		" " " " " 55388 with
		18443 and two 193J, for 55418
55390	8590	Arch Clamp Foot (left) for 55391
55391		" " " 55390 with 219K and
		63731, for 55934
55392	8590	Arch Clamp Foot (right) for 55393
55393		" " 55392 with 219K
		and 63732, for 55394
55394	8590	Arch Clamp complete, Nos. 1654C, 18367,
		18477,18486,55391,55393,55396,63734,
		two each 181D, 1229F, 1547J, 14079,
=====	2500	63733 and four 190J
55396	8590	Feed Plate for 55394
* 55 4 05		Arm with 15404, 17844 and two each 164E
		and 15405
* 55 4 07		Cylinder
55 41 8		Stop Cam Interlocking Rod Case 55389 with 63976 and two 1255D, for 55285.
EE 420	0504	Feed Cam with two each 11920, 17874 and
55430	8594	
55439	0507	four 190JShuttle Race Ring Spring for 18430
55 4 42	8597 8597	Knife (needle thread) for 55323
55452	85 91	Oscillating Rock Shaft Hinge Pin for
JO±J&	0091	55453
55453		Oscillating Rock Shaft Hinge Pin 55452
30-200		with 1513J, for 55278
55456	8597	Knife (shuttle thread) for 55323
56791	8593	Tension complete for 17725 and 68742,
00.01	3000	Nos. 2103, 2124, 16202 and two 2102.
		1004 0100, 0201, 10000 deta 010 01001

No.	Plate	Name
60769	8600	Bobbin Winder Tension Bracket for 60770.
60770	8600	Bobbin Winder Tension Bracket complete
00710	5500	for 41716, Nos. 419E, 1562J, 8422, 9780,
		43808, 60769 and two 2455
62155	8594	Feed Cam Shaft
63726	8590	Arch Clamp Foot Lifting Stud for 63731
		and 63732
63731	8590	Arch Clamp Foot Shank (left) with 63726, for 55391
6373 2	8590	Arch Clamp Foot Shank (right) with 63726, for 55393
63733	8590	Arch Clamp Foot Spring for 55394
63734	8590	" " Frame for 55394
63756	8596	Needle Bar Connecting Link with 21629
63973	8602	Table Belt Guide Pulley Shaft (long)
00370	0002	Wick (braided cotton) for 39219
63974	8602	Table Belt Guide Pulley Shaft (short) Wick (braided cotton) for 39220
63976	8598	Belt Shifter Clamp for 55418
68712	8591	Pulley (loose) 2 3/4 in. diam. with
		200584D, for 68713
68713		Pulley (loose) 68712 with 68714, for
		68717
68714	8591	Pulley (loose) Ball Bearing for 68713
68715	8591	" " Bushing for 68717
68716	8591	" (tight) 2 7/8 in. diam. for 68720
68717		Pulleys (ball bearing) complete, Nos.
		51387R, 68713, 68715 and 68720
68720		Pulley (tight) 68716 with 12060 and
		17854, for 68717
68739	8598	Stop Cam Interlocking Rod Stop Screw
		Washer for 55285
68740		Eye and Finger Guard Face Plate for
		68741
68741	8601	Eye and Finger Guard Face Plate 68740
		with 2105, for 68742
68742		Eye and Finger Guard Face Plate com-
		plete for 121626, Nos. 448C, 2107,
		2127, 56791, 68741 and two 233J
120346	8599	Oiler (copper plated) with 120347 (At-
		tachments and Accessories)
120347	8599	Oiler Spout, 8 1/2 in. long for 120346
121603	8601	Eye and Finger Guard (glass) for 121608.
121604	8601	" " " Carrying Arm for
		121613
121605	8601	Eye and Finger Guard Carrying Arm Spring
		for 121613
121606	8601	Eye and Finger Guard Depressing Screw
		Holder for 121626
121607	8601	Eye and Finger Guard Frame for 121608

No.	Plate	Nаme
121608		Eye and Finger Guard Frame 121607 with
121609	8601	121603, for 121613 Eye and Finger Guard Guiding Rod for
121611	8601	121613 Eye and Finger Guard Holder for 121613
121612	8601	" " " Supporting Bracket for 121613
121613		Eye and Finger Guard complete for 121626, Nos. 1004K, 1698J, 1735J, 50222K,50435K,121604,121605,121608, 121609,121611,121612 and two 50165J.
121626	8601	Eye and Finger Guard with Face Plate complete, Nos. 50435K,68742,121606, 121613,14006LJ and two 191J
124674	8591	Arm Side Cover
126391	8600	Bobbin Winder Bracket for 41716
14006LJ	8601	Eye and Finger Guard Depressing Screw Holder Screw for 121626
150203	22248	Thread Unwinder Spool Rest Cushion (felt) for 225258
2003830	22248	Thread Unwinder Spool Rest Rod Set Screw for 202490.
200584D	8591	Pulley (loose) Oil Plug Screw for 68712.
201018C	22248	Thread Unwinder Spool Rest Set Screw for 225257
20169 6 J	22248	Thread Unwinder Thread Guide Lock Nut for 225258
202490	22248	Thread Unwinder Spool Stand with 200383C, for 225258.
225257	22248	Thread Unwinder Spool Rest with 201018C, for 225258
225258	22248	Thread Unwinder complete for two spools or two large cones of thread, Nos.
		201696J,202490,225257,225324,225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12 F.H.
225322	22248	Thread Unwinder Thread Guide Rod Washer for 225324.
225324	22248	Thread Unwinder Thread Guide Rod with 208F and 225322, for 225258
225326	22248	Thread Unwinder Thread Guide Position Cup for 225258
225388	22248	Thread Unwinder Spool Rest Rod for 225258.
225390	22248	Thread Unwinder Thread Cone Holder for inverted cones for 225258
225391	22248	Thread Unwinder Thread Guide for 225258.

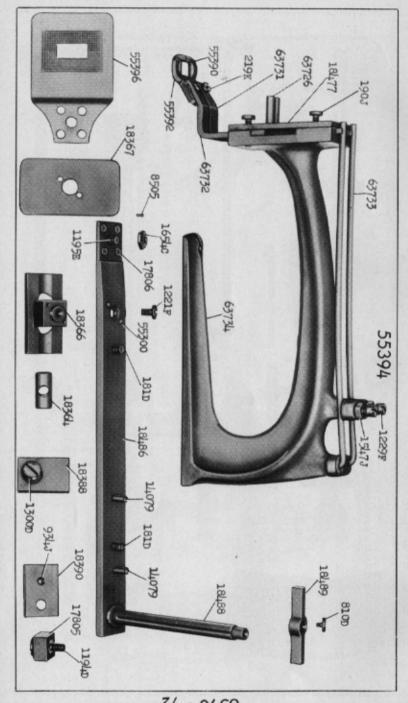

2/1 - 0928

