Singer 81-10

Form 8468 Revised June, 1928 PRINTED IN U. S. A.

LIST of PARTS



MACHINE No. 81-10

★米 A TRADE MARK ○

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling, and when in continuous use, "TYPE B" or "TYPE D" OIL, sold only by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 18194.

"TYPE D" OIL is stainless.

CAUTION: A machine new from the factory, or one that has not been used for some time, SHOULD NOT BE OPERATED UNTIL ABOUT THREE HOURS AFTER FILLING THE RESERVOIRS. Failure to heed this caution may result in serious damage to the mechanism of the machine.

COPYRIGHT, U. S. A.,
1916, 1918, 1922, 1923 AND 1928
BY THE SINGER MANUFACTURING COMPANY
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

	PAGI
Accessories	 13
FOOT LIFTER PARTS	 1-
Неммек	 1:
Iron Base	 13
KNEE LIFTER PARTS	 14
Machine No. 81-10	 7
Numerical List of Parts	 17
Tupean Hawkaner	 1.5

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A-Hardened, Polished, Nickel Plated and Buffed
- B-Polished, Nickel Plated and Buffed
- C-Hardened Only
- D-Polished Only E-Soft, Not Polished
- F-Hardened and Polished
- H-Blued
- J-Nickel Plated Only
- K-Hardened and Nickel Plated
- L-Brass Plated
- M--Oxidized
- P-Japanned
- R—Merlized
- T-Copper Plated
- T. N.—Copper—and Nickel Plated T. M.—Copper Plated and Oxidized
- T. L.—Copper—and Brass Plated
 - U—Zinc Plated
 - V-Silver Plated
 - W—Polished and Nickel Plated
 - Z-Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.


In this series:

- 1 to 1500 and 50001 to 51500 are Screw Numbers.
- 1501 to 1800 and 51501 to 51800 are Nut Numbers.
- 1801 to 2000 and 51801 to 52000 are Roller Numbers.
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE

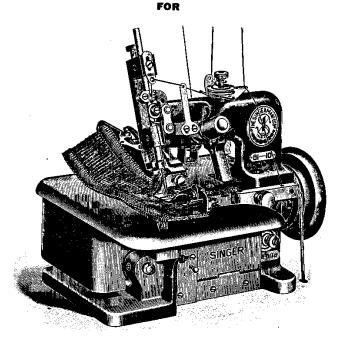

MACHINE No. 81-10

FOR OVEREDGING CARPETS, RUGS, BLANKETS, ETC. NO TRIMMER, BIGHT ADJUSTABLE FROM 1/4 TO 1/2 INCH; GREATEST LENGTH OF STITCH 1/4 INCH. THREE-THREAD STITCH. FOOT LIFTER.

NO. PLA	E NAME
*42252 —	- Arm with two each 462c and 42253
4389 738	7 " Dowel Pin
949E 558	7 " Screw
42001 738	Balance Wheel, $2\frac{3}{16}$ in. pulley, with 424c and 1354c.
1354c 558	Balance Wheel Position Screw
424c 558	" Set Screw
*42229 552	Cloth Plate

NO.	PLATE			NAM	Œ		
*42230		Cloth	ı Plate con	nplete.	Nos.	42005.	42229.
		425	231, two 23	36c an	d thre	e 229E	
42231	5528	Cloth	Plate Ext	ension	1. .		
229E	5587	"	"	"		w	
1437 D	5587	"	" Hir	nge Sci			
1655E	5587	"				ut	
42005	7381	"	" Loc	k Spri	ng		
236c	5587	44	. " "	• "	Se	rew	
42205	5558	Feed	Bar with	1253c.		.	
42007	5578	**	" Hinge	Pin		<i></i>	
1253c	5587	"	" "	" 5	Set Sc	rew	
42008	5578	"	Connectin	g Rod	with	42009 a	nd two
			57E				
*42009			Connectin				
1057E	5578	"	"	. "	"	Screw	
1373c	5578	66	u	46		e Screw	
1520c	5578	**	"	**	"	"	Nut
42232	7383	46	Dog, 17 to	eeth (1	2 teet	th to th	e inch)
42447	7405	46	" 14 to	eeth (1	.0 teet	th to th	e inch)
	Nori	: No	. 42447 is s	sent w	ith th	is Macl	nine
			otherwise				
190n	7388	Feed	Dog Screv	cr.			
42011	5578	"	Eccentric				
42094	7381	"					
42102	7382	"	"	"		er	
283p		"	"	"		Thum	
2749	7382	"	"	**	46	**	44
		Wε	sher	.			
207F	5587		Eccentric				
45 3c	5578	46	"	Set Sc	rew		
42012	5578	"	Lifting Ec				
420 13	5578	"	"	"	Con	nection	
462c	7385	"	"	44	Set i	Screw	
1374c	5578	"	Regulating	g Scre			
1680c	5578	44	"	"	"	Nut	
42290	5578	"	"	44	"		er
42014	7382	"	Regulator	with :	233р я	and two	1259c
42015	5578	"	"	Conn	ection	n with	1012E
1012E	5578	"	"		" A	djusting	g Screw
1373c	5578	46	"			linge.	
1520c	5578	"	"		"	"	
		Nu	ıt				
42016	7382	Feed	Regulator	Hinge	Stud	1	
1259c	7382	"	46				
233p	7382	"	"				
42019	7382	"	Rock Shaf	it	.	,	

NO. PLATE	NAME
42020	Feed Rock Shaft complete, Nos. 42019
12020	and 42021
42021 5578	Feed Rock Shaft Crank with 157E
157E 5578	" " Clamping Screw
42098 7382	" " Hinge Pin
42079 7382	" " " Bushing
1036c 7382	" " " " Set
10000 1002	Screw
*42233	Frame.
42210 7381	" Rotary Shaft
42024 7381	" " Bushing (front)
1036c 7382	" " " Set
	Screw
42211 7386	Frame Rotary Shaft Crank with 1036c
	and 1375c
1375c 7384	Frame Rotary Shaft Crank Position Screw
1036c 7382	" " Set Screw
42026 7381	" " Flanged Bushing
	(back) with 54967
54967 7387	Frame Rotary Shaft Flanged Bushing
	(back) Oil Pad (braided cotton)
1036c 7382	Frame Rotary Shaft Flanged Bushing
	(back) Set Screw
42367 7387	Frame Rotary Shaft Front Bearing Oil
	Pad (braided cotton)
42193 7381	Frame Side Cover (left) with 19045
19045 7387	" " " Handle
330л 5587	" " " Serew
42028 * 7381	" " (right) hinged
42192 7386	" " " Lock Spring
330j 5587	<i>""""""</i> ""
	Screw
330л 5587	Frame Side Cover (right) Screw
42234 7381	" Top Cover
742 _F 5587	" " Screw
42235 7383	Guide Body
42236 7383	" Finger
233р 7382	" " Screw
42237 7383	" Smoothing Plate
203F 5587	" " Screw
7071 5548	" " Washer
42238 7383	Guide complete, Nos. 203F, 7071, 42235
	to 42237 and two 233p
217 _F 5548	Guide Screw
7071 5548	" " Washer
42219 7386	Looper (left hand)
42051 7384	" " Lever with 209H

NO. F	LATE	NAME
42052	7384	Looper (left hand) Lever Connecting Link
50562c	7396	a a a a a
		Hinge Screw
1520c	5578	Looper (left hand) Lever Connecting Link Hinge Screw Nut
42053	7384	Looper (left hand) Lever Hinge Stud
1036c	7382	u u u u u set
209н	7221	Screw
	7388	" (right hand)
	7384	" " and Spreader Lever
120.0	.001	with 1259c
42221	7386	Looper (right hand) and Spreader Lever Ball Stud
$1259\mathrm{c}$	7382	Looper (right hand) and Spreader Lever Ball Stud Set Screw
42075	7384	Looper (right hand) and Spreader Lever Connection with 42059, 42076 and four 896E
*42076		Looper (right hand) and Spreader Lever
896е	7396	Connection Cap (lower)
*42059		Looper (right hand) and Spreader Lever
896E	7396	Connection Cap (upper) Looper (right hand) and Spreader Lever
42077	7386	Connection Cap (upper) Screw Looper (right hand) and Spreader Lever Connection Guide
171F	7386	Looper (right hand) and Spreader Lever Connection Guide Screw
42106	7386	Looper (right hand) and Spreader Lever Connection Oil Tube and Bracket with 29599
29599	7386	Looper (right hand) and Spreader Lever Connection Oil Tube Packing (felt)
42078	7386	Looper (right hand) and Spreader Lever Hinge Pin
42079	7382	Looper (right hand) and Spreader Lever Hinge Pin Bushing
1259c	7382	Looper (right hand) and Spreader Lever Hinge Pin Bushing Set Screw
197р	7384	Looper (right hand) Screw
38534	7385	Needle Bar (hollow)
42253	7385	" " Bushing
462c	7385	" " Set Screw

NO. PLATE	NAME
42291 7385	Needle Bar Connecting Bracket with 223F
	and I057p
1057р 5578	Needle Bar Connecting Bracket Clamping Screw
42055 7385	Needle Bar Connecting Link
40247 7385	" " " Hinge Pin
223г 7385	
	Set Screw for 42291
904c 7385	Needle Bar Connecting Link Hinge Pin Set Screw for 42104
42057 7385	Needle Bar Connecting Rod with 42059,
12001 1000	42076 and four 896E
*42076 ——	Needle Bar Connecting Rod Cap (lower)
896E 7396	
	Screw
*42059	Needle Bar Connecting Rod Cap (upper)
896E 7396	
	Screw
42077 7386	Needle Bar Connecting Rod Guide
171F 7386	" , " " " Screw
42103 7385	" Crank (back) with 1258c and
	two 1259c
42074 7385	Needle Bar Crank (back) Ball Stud
1259c 7382	n a c i
1259c 7382	Screw
1258c 7385	" " Set Screw
42104 7385	" " (front) with 904c,
42101 /300	1258c and 1259c
1259c 7382	Needle Bar Crank (front) Position Screw
1258c 7385	" " Set Screw
42105 7385	" " " Shaft
42115 7385	" " Thread Retainer Bracket
228p 7385	" " " " Screw
10106 7385	" " " Disc
93c 7385	" " " Screw
10107 7385	" " " Spring
1629c 7385	" Clamping Nut
42066 7385	" Guard
42195 7387	" " Holder
1101c 5587	" " Screw
171r 7386	OCIEW
42240 7383	Presser Foot with 233p and 42241
42241 7383	Chaining-on ringer
233p 7382	Belew
1324c 5587	Screw
39541 7387	" " Washer

NO. PLATE	NAME .
42227 5558	Presser Lever
42045 7384	" " Hinge Stud
1120c 7384	" " Set Screw
42070 7384	" " Lifter
85p 7384	" " Hinge Screw
1377c 7384	" Screw Stud (eccentric)
1547p 7384	" " " Nut
42071 7386	" Spring
1378j 7386	Pressure Regulating Thumb Screw
42250 7386	Spreader
197р 7384	" Screw
2102 7387	Tension (looper, left hand) Disc
1560c 7387	" " Regulating
19000 1901	Thumb Nut
828c 7387	Tension (looper, left hand) Screw Stud
10148 7387	" " " Spring
2102 7387	" (looper, right hand) Disc
1560c 7387	" " " Regulating
19000 1901	Thumb Nut
828c 7387	Tension (looper, right hand) Screw Stud
10148 7387	. Spring
17547 7387	Threat Guide
2102 7387	(needle thread) Disc
1560c 7387	Regulating Thumb
	Nut
916c 7387	Tension (needle thread) Screw Stud
2103 7386	" " Spring
42082 7387	" " Thread Guide
42242 7388	Thread (looper, left hand) Eyelet
233р 7382	" " " " Screw
42122 7388	" " " Nipper Spring
	(lower)
42123 7388	Thread (looper, left hand) Nipper Spring
	(upper)
176д 7388	Thread (looper, left hand) Nipper Spring
	Screw
42243 7388	Thread (looper, left hand) Pull-off
42244 7388	" " " " Eyelet
207 _F 5587	
	Screw
42084 7387	Thread (looper, left hand) Tube
462c 7385	" " Set Screw
42093 7387	" (looper, right hand) Staple
190р 7387	" " " Screw
42245 7387	" " " Take-up
197 _F 7384	" " " " Screw

NO.	PLATE			1	NAME	}
42096	7387	Thread	(needl	e) E	yelet	
217 _F	5548	44	- 4		"	Screw
42128	7387	"	**	T	ake-u	ıp
197 _F	7384	"	"		"	Screw
42246	7383	Throat	Plate 1	for 4	2232	
42448	7405		"	" 4	2447	
742r	5587	"	"	Screv	v	

PARTS FOR MACHINE No. 81-10

IRON BASE

NO. PLATE 42086 5564	Machine Base with three wood screws 11/4 in. No. 12 and four each 935D, 4718, 42088 and 66707
4718 5558	Machine Base Cushion (felt)
42088 5558	" Cushion (felt)
935p 5558	" " Screw
66707 7405	" " Washer

ACCESSORIES

NO. PLATE			NAM	DE SEL	
1407E 5563	Machine	e Base T	Chumb	Screw	, for 3 in. table
1408E 5563	46	"	"	"	" 2 in. table
14063 5558	"	**	44	"	Spring
9842 5558	46	44	44	"	
120344 5566	Oiler (co	opper p	lated)	with 1	20345
120345 5566	" Sp	out, 5 i	n. long	3	
120440 5566	Screw I	river			
42090 5566					
120341 5566	Tweezer	s (curv	ed)		
42089 5566					1629
8908 5566	"	" 152	0 and	1655.	• • • • • • • • • • • • •
4822 5566	"	" 154	7		

HEMMER

NO. PLATE	NAME
35864 5548	Hemmer on Shank, for ½ in. hem, for
	blankets
217F 5548	Hemmer Screw
7071 5548	" " Washer
35865 5548	Presser Foot for 35864

NO.	PLATE	NAME
6439		Chain, 36 in. to 45 in., with 56864 and
		56865
	Nors	: When ordering No. 6439, give length
	11012	required
		•
4879	5566	Chain Connecting Link
56864	7405	" Hook (large)
56865	7396	" (small)
42130	7389	Lifting Lever
42247	7389	" " Bracket
1229c	7389	" " Screw
1301 _J	7389	" " Hinge Screw
42132	7389	" " Spring
1148r	7389	" " Stop Screw
1547p	7389	" " " Nut
4881	5564	Treadle
4882	5566	" Shaft
4883	5566	" Spring
4884	5564	" Stand
4885	5564	Treadle complete, Nos. 4879, 4881 to 4884
2000		and two wood screws 1 in. No. 16
42248		Foot Lifter complete, Nos. 1301, 4885,
4882	5566 5564	" Shaft

KNEE LIFTER PARTS

NO.	PLATE				NAM:	E			
42130	7389	Lifting	Leve	r	<i>.</i> .				
42247	7389	"	"						
1229	7389	"	"	"	8	Screv	v		
42142	5564	"	"	Conn	ecti	ng R	od		
1301	7389	"	"	Hing	e Sc	rew.			
42132		"	**	Sprir	ìg				
1148	r 7389	46	46	Stop	Scre	w			
	р 7389	"	"	"	"	N	ut		
2763	5564	Rock	Shaft.	.					
12242	5564	"	44	Hange	r wit	h tw	o wo	od scr	ews
		1 in	. No.	10					
2765	5564	Rock	Shaft :	Knee A	Arm.				
2766	5564	. 44	"	"	"	Hub	with	a 356c	
356	c 5587	44	"	"	"	"	Set	Screw	·
2768			Shaft I	Knee A		_	-		
		#A 1	F7857						

2767	5564	Rock	Shaft	Knee	Plate		h 356c	
356c	5587	"	44	44	"	\mathbf{Set}	Screw	
6337	5564	"	4	Liftin	g Bra	cket	with two 356	ic
7125	5564	44	"	44		"	Hook	
356c	5587	"	"	"		"	" Set Scre	w
	5587	46	44	44		"	Set Screw	
2770	5564	"	"	Stop	Dog v	with	356c	
356c	5587	"	"	"	** 5	Set S	Screw	
42143	5564	Rock	Shaf	t com	plete,	No	s. 2763, 276	8,
		633	7,712	5 and	two e	ach 2	2770 and 1224	12
42249		Knee	Lifte	r com	plete,	Nos	. 1301 _J , 4213	0,
		421	32, 4	2142,	4214	3, 4	224 7 and tv	٧o
							547p	

THREAD UNWINDER

FOR THREE SPOOLS

NO. PLATE	NAME
225389 7165	Spool Rest (for one spool) with 201018c
225395 7165	" (for two spools) with 201018c
225388 7165	" " Rod
200383c 7396	" " Set Screw
201018c 7396	" Set Screw
202490 7165	" Stand with 200383c
225391 7165	Thread Guide
201696л 7396	" Lock Nut
225392 7165	" Rod with 208E and 225393
208± 7396	" " Serew
225393 7396	" " Washer
225397 7165	Thread Unwinder complete, Nos. 2016961,
220001 .100	202490, 225388, 225389, 225392, 225395,
	three 225391 and wood screws 1/8 in.
	No. 12
27739 7234	Thread Cone (wood) for large cones
225390 7234	" " Holder, for inverted cones
	Nos. 27739 and 225390 are used with, but
Note:	not included in, 225397
	not included in, 220091

SINGER Needles should be used in SINGER Machines These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO.**"

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles. 2

NUMERICAL LIST OF PARTS

NO. PLATE NAME
85D 7384 Presser Lever Lifter Hinge Scrow
Needle Bar Thread Retainer Serow
101E 5578 Feed Rock Shaft Crank Clamping Soro
10r 42U21
Looper (right hand) and Spreader I are
Connection Guide Screw
111 1000 Needle Bar Connecting Rod Could Could
Guard Screw
176r 7388 Thread (looper, left hand) Nipper Sprin Screw
190p 7388 Feed Dog Screw
190p 7387 Thread (looper, right hand) Staple Screv
1970 7384 Looper (right hand) Screw
197p 7384 Spreader Screw
Thread (looper, right hand) Take-up
Screw
- Take-III Seraw
outde chicothing Flate below for 49990
Localitic Cover Screw
and helper, left fland) Phill-off Evolut
Screw 208E 7396 Thread Unwinder Thread Guide Rod Screw
for 225392
Looper (left hand) Set Screw for 42051
211F 9948 Guide Screw
2111 3040 Hemmer Screw
-111 00±0 Inread (needle) Eyelet Screw
223r 7385 Needle Bar Connecting Link Hinge Pin Set Screw for 42291
228n 7385 Needle Bar Thread Retainer Bracket Screw
229E 5587 Cloth Plate Extension Screw for 42230
233D 7382 Feed Regulator Stop Screw for 42230
233b 7382 Guide Finger Screw for 42238
2330 7382 Presser Foot Chaining-off Finger Screw
for 42240
233b 7382 Thread (looper, left hand) Eyelet Screw.
Cloth Plate Lock Spring Serow for 49990
1302 reed Eccentric Cover Holder Thursh
Screw
Just Frame Side Cover (left) Sanon
" (right) Lock Spring
Screw

NO. PLATE	NAME
330p 5587	Frame Side Cover (right) Screw
356c 5587	Rock Shaft Knee Arm Hub Set Screw for
DE0 - EE05	2766
356c 5587	Rock Shaft Knee Plate Set Screw for 2767 "Lifting Bracket Hook Set
356c 5587	2
356c 5587	Screw for 6337
390C 9981	Rock Shaft Lifting Bracket Set Screw for 6337
356c 5587	Rock Shaft Stop Dog Set Screw for 2770
424c 5587	Balance Wheel Set Screw for 42001
453c 5578	Feed Eccentric Set Screw for 42011
462c 7385	" Lifting Eccentric Set Screw for 42012
462c 7385	Needle Bar Bushing Set Screw for 42252
462c 7385	Thread (looper, left hand) Tube Set Screw
742 F 5587	Frame Top Cover Screw
$742_{ m F}$ 5587	Throat Plate Screw
828c 7387	Tension (looper, left hand) Screw Stud
828c 7387	" (looper, right hand) Screw Stud
896e 7396	Looper (right hand) and Spreader Lever
	Connection Cap (lower) Screw for 42075
896e 7396	Looper (right hand) and Spreader Lever
	Connection Cap (upper) Screw for 42075
896E 7396	Needle Bar Connecting Rod Cap (lower)
	Screw for 42057
896E 7396	Needle Bar Connecting Rod Cap (upper)
	Screw for 42057
904c 7385	Needle Bar Connecting Link Hinge Pin
	Set Screw for 42104
916c 7387	Tension (needle thread) Screw Stud
935р 5558	Machine Cushion Screw for 42086
949E 5587	Arm Screw
1012E 5578	Feed Regulator Connection Adjusting
1004 - 7000	Screw for 42015
1036c 7382	Feed Rock Shaft Hinge Pin Bushing Set Screw
1036c 7382	Frame Rotary Shaft Bushing (front) Set Screw
1036c 7382	Frame Rotary Shaft Crank Set Screw for
	42211
1036c 7382	Frame Rotary Shaft Flanged Bushing (back) Set Screw
1036c 7382	Looper (left hand) Lever Hinge Stud Set
	Screw
1057E 5578	Feed Connecting Rod Cap Screw for 42008
1057p 5578	Needle Bar Connecting Bracket Clamping Screw for 42291
11010 5597	Needle Guard Holder Serew

NO. PLATE	NAME
	Presser Lever Hinge Stud Set Screw
1148F 7389	Lifting Lever Stop Screw for 42248 and
	42249
1229c 7389	Lifting Lever Bracket Screw for 42248 and 42249
1253c 5587	Feed Bar Hinge Pin Set Screw for 42205
1258c 7385	Needle Bar Crank (back) Set Screw for 42103
1258c 7385	Needle Bar Crank (front) Set Screw for
*050 F00D	42104. Feed Regulator Set Screw for 42014
1259c 7382	Feed Regulator Set Screw for 42014
1259c 7382	Looper (right hand) and Spreader Lever Ball Stud Set Screw for 42073
1259c 7382	Looper (right hand) and Spreader Level Hinge Pin Bushing Set Screw
1259c 7382	Needle Bar Crank (back) Ball Stud Set
	Screw for 42103
1259c 7382	Needle Bar Crank (back) Position Screw for 42103
1259c 7382	Needle Bar Crank (front) Position Screw
12090 1002	for 42104
1301л 7389	Lifting Lever Hinge Screw for 42248 and 42249
1324c 5587	Presser Foot Screw
1354c 5587	Balance Wheel Position Screw for 42001
1373c 5578	Feed Connecting Rod Hinge Screw
1373c 5578	" Regulator Connection Hinge Screw
1374c 5578	" Regulating Screw Stud
1375e 7384	Frame Rotary Shaft Crank Position Screw
	for 42211
1377c 7384	Presser Lever Screw Stud (eccentric)
1378ј 7386	Pressure Regulating Thumb Screw
1407E 5563	Machine Base Thumb Screw, for 3 in. table
	(Accessories)
1408E 5563	Machine Base Thumb Screw, for 2 in. table
	(Accessories)
1437р 5587	Cloth Plate Hinge Screw
1520c 5578	Feed Connecting Rod Hinge Screw Nut.
1520c 5578	" Regulator Connection Hinge Screen
	Nut
1520c 5578	Looper (left hand) Lever Connecting Lin
	Hinge Screw Nut
1547D 7389	Lifting Lever Stop Screw Nut for 4224 and 42249
1547р 7384	Presser Lever Screw Stud Nut
1560c 7387	Tension (looper, left hand) Regulatin
20000 1001	Thumb Nut

NO.	PLATE	NAME
1560c	7387	Tension (looper, right hand) Regulating Thumb Nut
1560c	7387	Tension (needle thread) Regulating Thumb Nut
1629c	7385	Needle Clamping Nut
1655E		Cloth Plate Hinge Screw Nut
1680c	5578	Feed Regulating Screw Stud Nut
2102	7387	Tension (looper, left hand) Disc
2102	7387	" (looper, right hand) Disc
2102	7387	" (needle thread) Disc
2103	7386	" " Spring
2749	7382	Feed Eccentric Cover Holder Thumb
		Screw Washer
2763	5564	Rock Shaft for 42143
		Nos. 2765 to 2767 for 2768
2765	5564	Rock Shaft Knee Arm
2766	5564	" " " Hub with 356c
2767	5564	" " Plate with 356c
2768		Rock Shaft Knee Arm complete for 42143,
		Nos. 2765 to 2767
2770	5564	Rock Shaft Stop Dog with 356c, for 42143
4389	7387	Arm Dowel Pin
4718	5558	Machine Base Cushion (felt) for 42086
4822	5566	Wrench for 1547 (Accessories)
4879	5566	Chain Connecting Link for 4885
		Nos. 4881 to 4884 for 4885
4881	5564	Treadle
4882	5566	" Shaft
4883	5566	" Spring
4884	5564	" Stand
4885	5564	Treadle complete for 42248, Nos. 4879,
		4881 to 4884 and two wood screws 1 in. No. 16
6337	5564	Rock Shaft Lifting Bracket with two 356c, for 42143
6439		Chain, 36 in. to 45 in., with 56864 and
7071	5548	56865, for 42248
		42238
7071	5548	Guide Screw Washer
7071	5548	Hemmer Screw Washer
7125	5564	Rock Shaft Lifting Bracket Hook for 42143
2002	5566	Wrongh for 1520 and 1655 (Ageograpica)

NO.	PLATE	NAME
9842	5558	Machine Base Thumb Screw Spring Washe
		(Accessories)
10106	7385	Needle Bar Thread Retainer Disc
10107	7385	" " " Spring
10148	7387	Tension (looper, left hand) Spring
10148	7387	" (looper, right hand) Spring
12242	5564	Rock Shaft Hanger with two wood screw
		1 in. No. 10, for 42143
14063	5558	Machine Base Thumb Screw Spring (Ac
11000,	0000	cessories)
17547	7387	Tension (looper, right hand) Thread Guide
19045	7387	Frame Side Cover (left) Handle for 42193
27739	7234	Thread Unwinder Thread Cone (wood
21139	1234	firead Unwinder Inread Cone (wood
00500	7000	for large cones, for 225397
29599	7386	Looper (right hand) and Spreader Leve
		Connection Oil Tube Packing (felt) for
		42106
35864	5548	Hemmer on Shank, for ½ in. hem, for
		blankets
35865	5548	Presser Foot for 35864
38534	7385	Needle Bar (hollow)
39541	7387	Presser Foot Screw Washer
40247	7385	Needle Bar Connecting Link Hinge Pin.
42001	7381	Balance Wheel, $2\frac{3}{16}$ in. pulley, with 424c
		and 1354c
42005	7381	Cloth Plate Lock Spring for 42230
42007	5578	Feed Bar Hinge Pin
42008	5578	" Connecting Rod with 42009 and
12000	9910	two 1057E
* 10000		
*42009		Feed Connecting Rod Cap for 42008
42011	5578	" Eccentric with two 453c
42012	5578	" Lifting Eccentric with two 462c
42013	5578	" " Connection
42014	7382	" Regulator with 233p and two 1259c
42015	5578	" Connection with 1012E
42016	7382	" " Hinge Stud
42019	7382	" Rock Shaft for 42020
42020		Feed Rock Shaft complete, Nos. 42019
		and 42021
42021	5578	Feed Rock Shaft Crank with 157E, for
	-0.0	42020
42024	7381	Frame Rotary Shaft Bushing (front)
42026	7381	" " " Flanged Bushing
A=0=0	.001	(back) with 54967
42028	7381	Frame Side Cover (right) hinged
42045	7384	Presser Lever Hinge Stud
42040	1004	Tresser Dever minge Stud

NO.	PLATE	NAME
42051	7384	Looper (left hand) Lever with 209H
42052	7384	" " " Connecting Link
42053	7384	" " " Hinge Stud
42055	7385	Needle Bar Connecting Link
42057	7385	" " Rod with 42059.
		42076 and four 896E
*42059		Looper (right hand) and Spreader Lever
		Connection Cap (upper) for 42075
*42059		Needle Bar Connecting Rod Cap (upper)
		for 42057
42066	7385	Needle Guard
42070	7384	Presser Lever Lifter
42071	7386	" " Spring
42073	7384	Looper (right hand) and Spreader Lever
		with 1259c
42074	7385	Needle Bar Crank (back) Ball Stud
42075	7384	Looper (right hand) and Spreader Lever
		Connection with 42059, 42076 and four
		896в
*42076		Looper (right hand) and Spreader Lever
		Connection Cap (lower) for 42075
*42076		Needle Bar Connecting Rod Cap (lower)
		for 42057
42077	7386	Looper (right hand) and Spreader Lever
		Connection Guide
42077	7386	Needle Bar Connecting Rod Guide
42078	7386	Looper (right hand) and Spreader Lever
		Hinge Pin
42079	7382	Feed Rock Shaft Hinge Pin Bushing
42079	7382	Looper (right hand) and Spreader Lever
		Hinge Pin Bushing
42082	7387	Tension (needle thread) Thread Guide
42084	7387	Thread (looper, left hand) Tube
42086	5564	Machine Base with three wood screws 11/4
		in. No. 12 and four each 935p, 4718,
		42088 and 66707
42088	5558	Machine Cushion (felt) for 42086
42089	5566	Wrench for 1324, 1374 and 1629 (Acces-
		sories)
42090	5566	Threading Wire (Accessories)
42093	7387	Thread (looper, right hand) Staple
42094	7381	Feed Eccentric Cover
42096	7387	Thread (needle) Eyelet
42098	7382	Feed Rock Shaft Hinge Pin
42102	7382	" Eccentric Cover Holder
42103	7385	Needle Bar Crank (back) with 1258c and
		two 1259c

NO.	PLATE	NAME
42104	7385	Needle Bar Crank (front) with 904c, 1258c
		and 1259c
42105	7385	Needle Bar Crank Shaft
42106	7386	Looper (right hand) and Spreader Lever Connection Oil Tube and Bracket with 29599
40115	= 00*	
42115	7385	Needle Bar Thread Retainer Bracket
42122	7388	Thread (looper, left hand) Nipper Spring (lower)
42123	7388	Thread (looper, left hand) Nipper Spring (upper)
42128	7387	Thread (needle) Take-up
42130	7389	Lifting Lever for 42248 and 42249
42132	7389	" " Spring for 42248 and 42249
42142	5564	" Connecting Rod for 42249
42143	5564	Rock Shaft complete for 42249, Nos. 2763,
		2768, 6337, 7125 and two each 2770 and 12242
42192	7386	Frame Side Cover (right) Lock Spring
42193	7381	" " (left) with 19045
42195	7387	Needle Guard Holder
42205	5558	Feed Bar with 1253c
42210	7381	Frame Rotary Shaft
42211	7386	" " Crank with 1036c
12211	1000	and 1375c
42219	7386	Looper (left hand)
42221	7386	" (right hand) and Spreader Lever
		Ball Stud
42227	5558	Presser Lever
*42229	5528	Cloth Plate for 42230
*42230		Cloth Plate complete, Nos. 42005, 42229,
		42231, two 236c and three 229E
42231	5528	Cloth Plate Extension for 42230
42232	7383	Feed Dog, 17 teeth (12 teeth to the inch)
*42233		Frame
42234	7381	" Top Cover
		os. 42235 to 42237 for 42238
42235	7383	Guide Body
42236	7383	" Finger
42237	7383	" Smoothing Plate
42238	7383	Guide complete, Nos. 203r, 7071, 42235
		to 42237 and two 233p
42239	7388	Looper (right hand)
42240	7383	Presser Foot with 233p and 42241
42241	7383	" Chaining-off Finger for 42240

NO.	PLATE	NAME
42242	7388	Thread (looper, left hand) Eyelet
42243	7388	" " " Pull-off
42244	7388	" " " " Eyelet
42245	7387	" " " Take-up
42246	7383	Throat Plate for 42232
42247	7389	Lifting Lever Bracket for 42248 and 42249
42248		Foot Lifter complete, Nos. 1301J, 4885,
		6439, 42130, 42132, 42247 and two each 1148 <i>F</i> , 1229c and 1547 <i>D</i>
42249		Knee Lifter complete, Nos. 1301J, 42130,
12210		42132, 42142, 42143, 42247 and two
		each 1148F, 1229c and 1547D
40050	7386	Spreader
42250 42252	1000	Arm with two each 462c and 42253
	7385	Needle Bar Bushing for 42252
42253 42290	5578	Feed Regulating Screw Stud Washer
	7385	Needle Bar Connecting Bracket with 223F
42291	1000	and 1057b
42367	7387	Frame Rotary Shaft Front Bearing Oil
		Pad (braided cotton)
42447	7405	Feed Dog, 14 teeth (10 teeth to the inch)
42448	7405	Throat Plate for 42447
50562c	7396	Looper (left hand) Lever Connecting Link
		Hinge Screw
54967	7387	Frame Rotary Shaft Flanged Bushing
		(back) Oil Pad (braided cotton) for
		42026
56864	7405	Chain Hook (large) for 6439
56865	7396	" (small) for 6439
66707	7405	Machine Cushion Screw Washer for 42086
20341	5566	Tweezers, curved (Accessories)
20344	5566	Oiler (copper plated) with 120345 (Acces-
		sories)
20345	5566	Oiler Spout, 5 in. long, for 120344
20440	5566	Screw Driver (Accessories)
200383c	7396	Thread Unwinder Spool Rest Rod Set
		Screw for 202490
201018c	7396	Thread Unwinder Spool Rest Set Screw
		for 225389 and 225395
201696л	7396	Thread Unwinder Thread Guide Lock Nut
		for 225397
202490	7165	Thread Unwinder Spool Stand with
		200383c, for 225397
	N	ов. 225388 то 225392 гов 225397
25388	7165	Thread Unwinder Spool Rest Rod

NO.	PLATE	NAME
225389	7165	Thread Unwinder Spool Rest (for one spool) with 201018c
225390	7234	Thread Unwinder Thread Cone Holder, for inverted cones.
225391	7165	Thread Unwinder Thread Guide
225392	7165	" " Rod with
		208E and 225393
225393	7396	Thread Unwinder Thread Guide Rod Washer for 225392
225395	7165	Thread Unwinder Spool Rest (for two spools) with 201018c, for 225397
225397	7165	Thread Unwinder complete, for three spools, Nos. 201696J, 202490, 225388, 225389, 225392, 225395, three 225391 and wood screws ¼ in. No. 12

singer Needles should be used in SINGER Machines
These Needles and their Containers are marked with the
Company's Trade Mark "SIMANCO.**"

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT SINGER made needles. 2

PLATE 5528-ONE-HALF SIZE

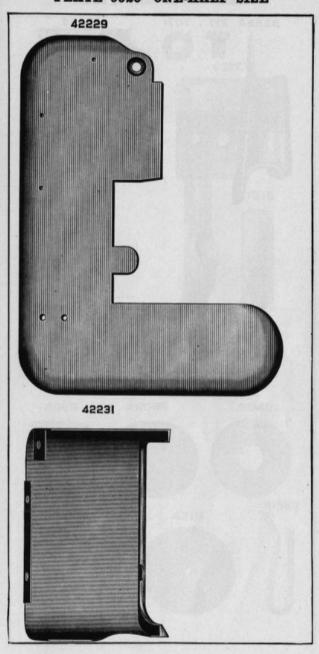


PLATE 5548-FULL SIZE

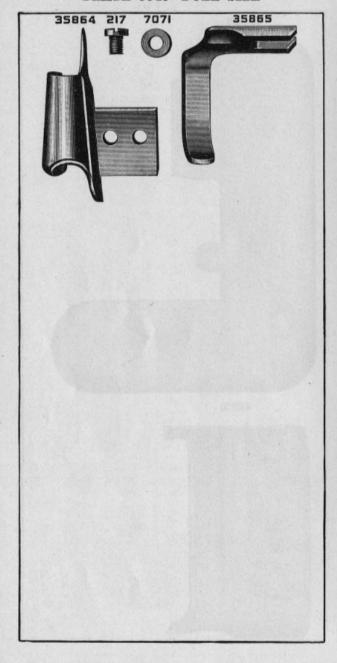


PLATE 5558-FULL SIZE

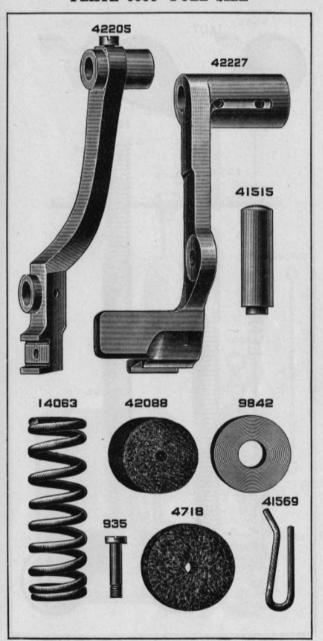


PLATE 5563-FULL SIZE

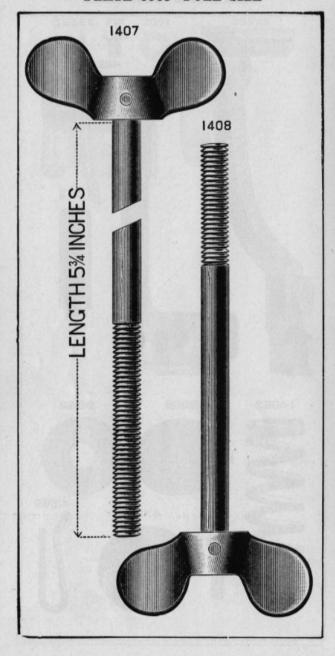


PLATE 5564-ONE-FOURTH SIZE

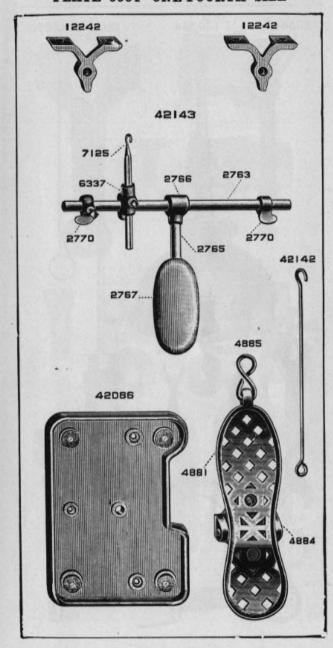
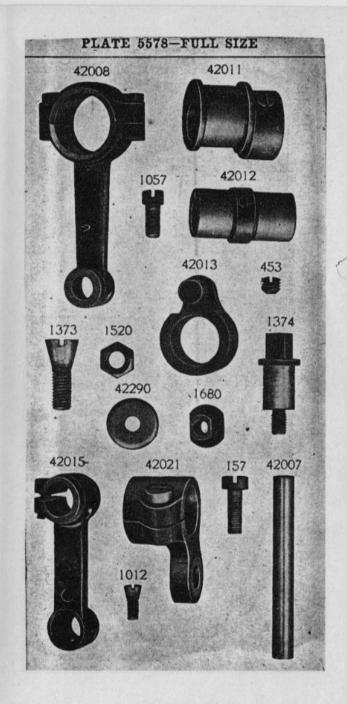
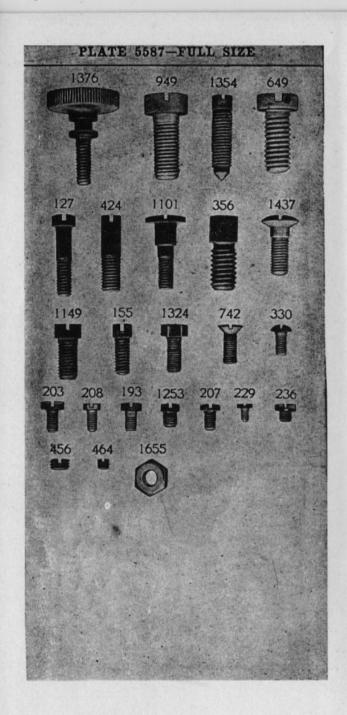


PLATE 5566-ONE-HALF SIZE 120440 42090





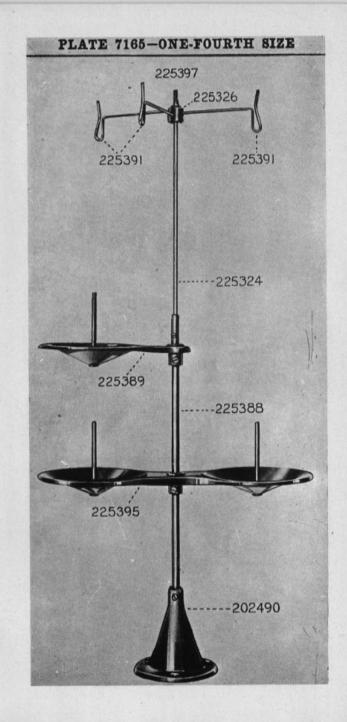


PLATE 7234-ONE-HALF SIZE





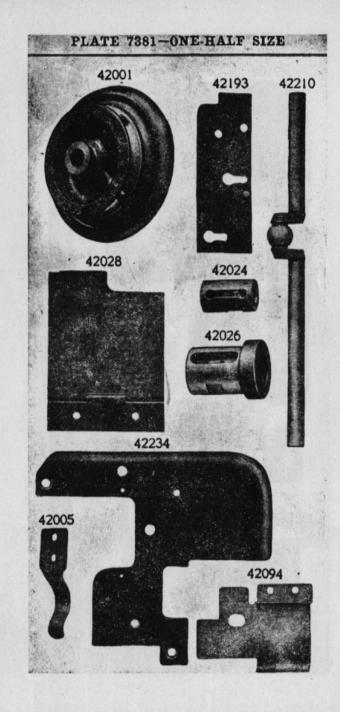
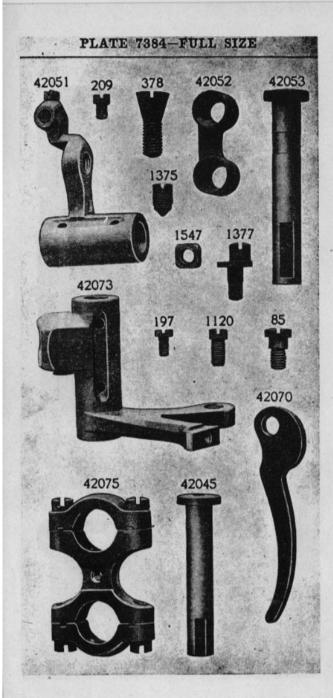
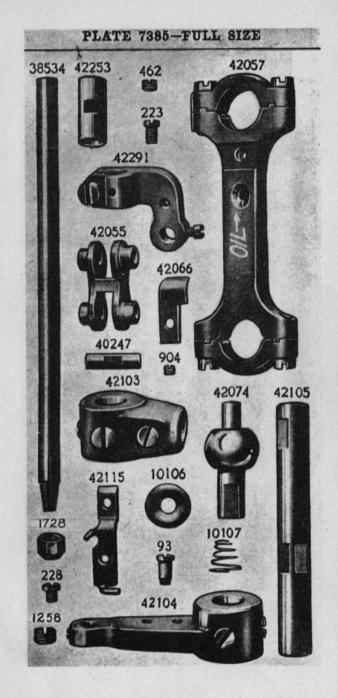
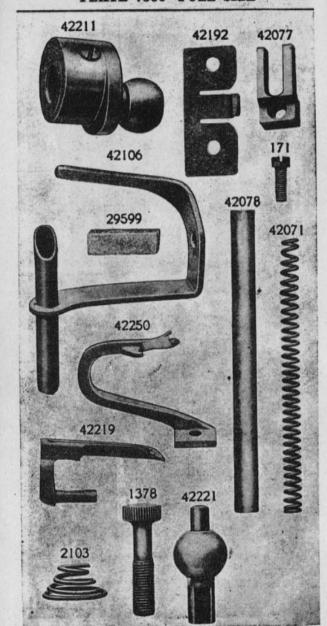


PLATE 7382-FULL SIZE

PLATE 7383-FULL SIZE







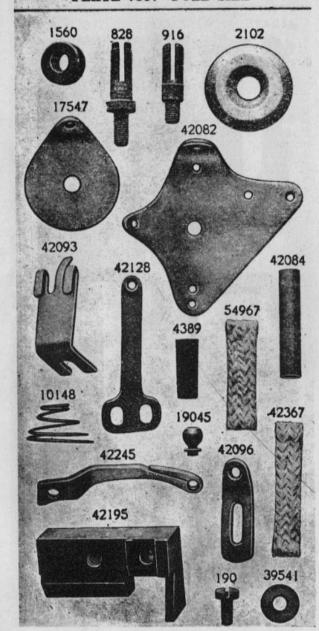


PLATE 7388-FULL SIZE 42243 42242 42122 176 42123

