

SINGER
17W13

LIST OF PARTS



MACHINE No. 17w13

THE SINGER MANUFACTURING COMPANY

INDEX

	PAGE
ACCESSORIES	18
BOBBIN WINDER	18
EYELET PUNCHES	19
KNEE LIFTER	19
MACHINE No. 17w13	7
NEEDLE PLATE AND THROAT PLATE SPURS	20
NUMERICAL LIST OF PARTS	23
OBSOLETE PARTS	21
PRESSER FEET	20

Instructions for Ordering

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

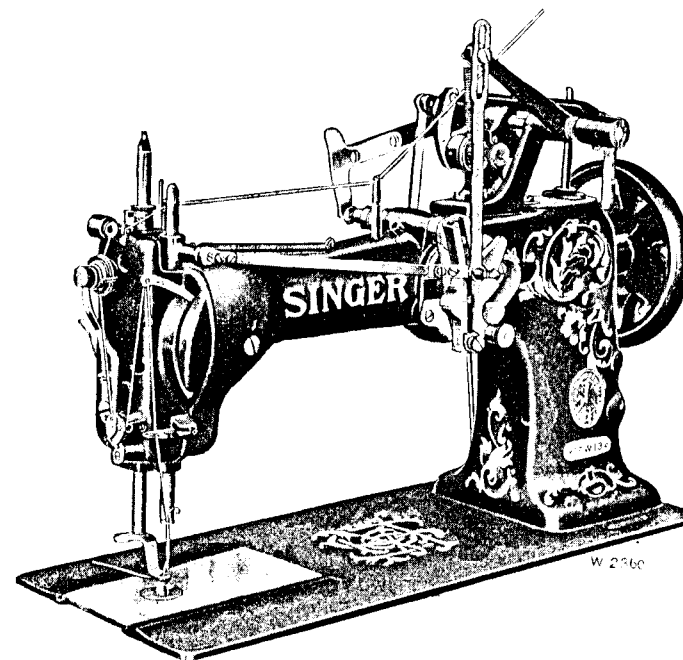

MACHINE No. 17w13

For Making Eyelets of Various Shapes and Sizes,

Known as Madeira Work; also Flat Stitch
Embroidery.

No.	Plate	Name
*234401	—	Arm with 200439c and 208605
208602	12801	" Cap with 208604 and two 200137H
200278H	12311	Arm Cap Screw
202248	12802	" " " Washer
208603	12801	" " " Spool Pin
208604	—	" " " " Base with 208603
200137H	12802	" " " " " Screw
200963E	12311	" Screw (3)
202005	12802	" " " Washer (3)

No.	Plate	Name
208658	10693	Arm Shaft
208605	12801	" " Bushing (front)
200439c	12311	" " " Position Screw ..
204165	12801	" " Connection with four 200054E (2)
200054E	12805	Arm Shaft Connection Screw
204174	10693	Balance Wheel, 5½ in. diam. (belt groove 2¾ in. diam.), with 200328c and 200335c
200062H	12311	Balance Wheel Adjusting Screw ..
200328c	12311	" " " Position Screw
200335c	12802	" " " Set Screw
*234461	—	Bed with 202062, 204245, 204393 and two 200516E
202258	12345	Bed Hinge Connection (2)
200570E	12311	" " " Screw (4)
204178	12802	Bobbin
208462	—	" Case with 204181
204181	12802	" " Position Finger
204182	12802	" " Tension Spring
200598c	12802	" " " " Adjust- ing Screw
200592c	12802	Bobbin Case Tension Spring Screw
208463	12802	Bobbin Case complete, Nos. 200592c, 200598c, 204182 and 208462
208656	—	Face Plate with 200366H, 200368H, 202087, 202090, 204185, 204281 and two 200397H
200053c	12311	Face Plate Screw (2)
204185	12802	" " Thread Guide
200397H	10675	" " " " Set Screw
234481	12801	Face Plate complete, Nos. 200286E, 200577H, 201527H, 202088, 204059, 204280, 204934, 206639, 208656 and 234441
234402	12803	Hook (sewing) with 204217
204217	12802	" Bobbin Case Stud
204880	10665	" Bracket with 200379c, two 200380c and three 204234
204881	—	Hook Bracket 204880 with 204226c
208610	—	" " 204881 with 204224, 204225, 204229, 204539, two each 204223 and 204231
200379c	10665	Hook Bracket Adjusting Screw (lower)
200380c	12319	Hook Bracket Adjusting Screw (upper)
204539	10665	Hook Bracket Bobbin Case Stop (hinged)

No.	Plate	Name
204223	10665	Hook Bracket Bobbin Case Stop Hinge Pin
204224	10665	Hook Bracket Bobbin Case Stop Latch
204223	10665	Hook Bracket Bobbin Case Stop Latch Hinge Pin
204225	10665	Hook Bracket Bobbin Case Stop Latch Spring
200085c	12802	Hook Bracket Screw (lower or upper) (2)
234482	12803	Hook Bracket complete, Nos. 208610 and 234402
234403	12803	Hook Driver with 234486
204885	10669	" " Bevel Gear, 25 teeth, with two 200348c
200348c	10665	Hook Driver Bevel Gear Set Screw
208246	—	" " Crank
204240	12802	" " " 208246 with 200378c, 200662c, 201530E and two 200348c
204241	12802	Hook Driver Crank Link
200669c	10665	" " " " Stud
201530E	10665	" " " " " Nut
200348c	10665	" " " " Set Screw (long)
200378c	12311	" " " " " (short)
200662c	10665	" " " " Screw Stud ...
201530E	10665	" " " " " Nut
234486	—	" " Washer
204887	10669	" Driving Bevel Gear, 24 teeth (intermediate)
204888	—	Hook Driving Bevel Gear (inter- mediate) Bracket
206078	10669	Hook Driving Bevel Gear (inter- mediate) Bracket 204888 with 200772c, 201514E and 204887
200041E	10669	Hook Driving Bevel Gear (inter- mediate) Bracket Screw (2)
200772c	10669	Hook Driving Bevel Gear (inter- mediate) Bracket Screw Stud ..
201514E	10669	Hook Driving Bevel Gear (inter- mediate) Bracket Screw Stud Nut
204890	12801	Hook Driving Bevel Gear (inter- mediate) Oil Guard
200113F	12802	Hook Driving Bevel Gear (inter- mediate) Oil Guard Screw (2) ..
204886	10669	Hook Driving Bevel Gear Shaft, 25 teeth
204393	12802	Hook Driving Bevel Gear Shaft Bushings

No.	Plate	Name
204891	10693	Hook Driving Shaft
204245	12801	" " " Bearing
202126	12802	" " " " Position Pin
200516E	12311	Hook Driving Shaft Bearing Screw
204246	12802	" " " Collar with two 200383c
200383c	12311	Hook Driving Shaft Collar Set Screw
204201	12805	Hook Driving Shaft Crank with 200335c, 200431c, 200669c and 201530E
200431c	12805	Hook Driving Shaft Crank Position Screw
200335c	12802	Hook Driving Shaft Crank Set Screw
204226	12802	Hook Race, .156 in. thick, 1.906 in. diameter
204229	10665	Hook Race Cap (iron)
204230	10665	" " " Spring
204231	10665	" " " " 204230 with 200792E
200792E	10665	Hook Race Cap Spring Screw
204234	10665	" " Position Pin
208613	—	Needle Bar (hollow)
208615	12801	" " 208613 with 200125E, 200175D and 208640
*206360	—	Needle Bar Connecting Ball Stud with 200086c
200086c	12805	Needle Bar Connecting Ball Stud Pinch Screw
208641	—	Needle Bar Connecting Link with 206353 and two 200079c
206354	12805	Needle Bar Connecting Link 208641 with 206360
200744c	12805	Needle Bar Connecting Link Ball Screw Stud
*206352	—	Needle Bar Connecting Link Ball Screw Stud Cap
201013c	12805	Needle Bar Connecting Link Ball Screw Stud Cap Screw
201522E	12805	Needle Bar Connecting Link Ball Screw Stud Nut
*206353	—	Needle Bar Connecting Link Cap
200079c	12311	" " " " " " Screw
208616	12807	Needle Bar Frame
234487	12804	" " " Cam Gear, 36 teeth

No.	Plate	Name
234488	12804	Needle Bar Frame Cam Gear Cover
234489	—	" " " " " " 234488 with 200062H and 234487..
200571B	12805	Needle Bar Frame Cam Gear Cover Screw (3)
208568	12814	Needle Bar Thumb Frame Cam Gear Oil Leader
202254	—	Needle Bar Frame Cam Gear Oil- ing Wick
200062H	12311	Needle Bar Frame Cam Gear Stop Screw
206431	12805	Needle Bar Frame Center (lower)
200363c	12805	" " " " " " Set Screw
206430	12805	Needle Bar Frame Center (upper)
200347c	12805	" " " " " " Set Screw
234490	12805	Needle Bar Frame Driving Bevel Pinion, 18 teeth, with two 200374c
200374c	12805	Needle Bar Frame Driving Bevel Pinion Set Screw
208618	—	Needle Bar Frame Pitman with 200741c, 201531E, 204921 and two 200110B
200741c	12805	Needle Bar Frame Pitman Ball Screw
*204921	—	Needle Bar Frame Pitman Ball Screw Cap
200110B	12805	Needle Bar Frame Pitman Ball Screw Cap Screw
201531E	12805	Needle Bar Frame Pitman Ball Screw Nut
204922	12805	Needle Bar Frame Pitman Conne- ction (adjustable)
234483	—	Needle Bar Frame Pitman Conne- ction 204922 with 204924, 208618 and two 200110B
234405	12805	Needle Bar Frame Pitman Conne- ction (adjustable) Bearing
204924	12805	Needle Bar Frame Pitman Conne- ction Clamp Washer
200110B	12805	Needle Bar Frame Pitman Conne- ction Clamp Washer Screw
234406	12807	Needle Bar Frame Regulator
234491	12806	" " " " Driver with 200376c, 201816 and 234492
203244	12806	Needle Bar Frame Regulator Driver Collar with two 200393c

No.	Plate	Name
200393c	12806	Needle Bar Frame Regulator Driver Collar Set Screw
201816	12806	Needle Bar Frame Regulator Driver Roller
234492	12806	Needle Bar Frame Regulator Driver Roller Stud (eccentric)
200376c	12806	Needle Bar Frame Regulator Driver Roller Stud Set Screw
234409	12806	Needle Bar Frame Regulator Index Plate
200474D	12806	Needle Bar Frame Regulator Index Plate Adjusting Thumb Screw ..
206505	12806	Needle Bar Frame Regulator Index Plate Slide Block
201251E	12806	Needle Bar Frame Regulator Position Screw Stud
222705	12806	Needle Bar Frame Regulator Position Screw Stud Spring
1538D	12806	Needle Bar Frame Regulator Position Screw Stud Thumb Nut
234410	12806	Needle Bar Frame Regulator Slide
201644B	12806	" " " " "
		Adjusting Nut
200174D	12806	Needle Bar Frame Regulator Slide Adjusting Nut Stop Screw
226163	12806	Needle Bar Frame Regulator Slide Adjusting Nut Washer.....
234411	12806	Needle Bar Frame Regulator Slide Index Plate
234412	12808	Needle Bar Frame Regulator Slide Link with 204190
234413	12808	Needle Bar Frame Regulator Slide Link Lever with 200383c, 200441c and 204189
200441c	12808	Needle Bar Frame Regulator Slide Link Lever Position Screw
200383c	12311	Needle Bar Frame Regulator Slide Link Lever Set Screw
234414	12808	Needle Bar Frame Regulator Slide Link Lever Shaft
222707	10694	Needle Bar Frame Regulator Slide Link Lever Shaft Bracket
200019E	12808	Needle Bar Frame Regulator Slide Link Lever Shaft Bracket Screw (2)
222708	12809	Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever with 200383c and 200441c

No.	Plate	Name
222709	10694	Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever 222708 with 222713 and two 334D
200441c	12808	Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever Position Screw
200383c	12311	Needle Bar Frame Regulator Slide Link Lever Shaft Driving Lever Set Screw
234415	12809	Needle Bar Frame Regulator Slide Link Lever Shaft Spring
214361	12809	Needle Bar Frame Regulator Slide Link Lever Spring
204190	12809	Needle Bar Frame Regulator Slide Link Lever Spring Hook, for 234412
204189	12809	Needle Bar Frame Regulator Slide Link Lever Spring Hook, for 234413
200281D	12809	Needle Bar Frame Regulator Slide Link Screw
208631	12807	Needle Bar Frame Regulator Slide Operating Rod
201520H	12809	Needle Bar Frame Regulator Slide Operating Rod Adjusting Nut (lower or upper)
215353	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket with 200527c and 201531E
208633	10693	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection with 208635
200224H	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Hinge Screw
208634	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link
200273D	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Hinge Screw
208635	10669	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Stud
202302	12805	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Link Stud Cotter Pin
200536c	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw

No.	Plate	Name
208637	12807	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw Bracket with two each 200536c and 201521c
200053c	12311	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw Bracket Screw ..
201521c	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Connection Stop Screw Nut
200239H	12809	Needle Bar Frame Regulator Slide Operating Rod Bracket Hinge Screw
201531E	12805	Needle Bar Frame Regulator Slide Operating Rod Bracket Hinge Screw Nut
200527c	12809	Needle Bar Frame Regulator Slide Operating Rod Set Screw
201531E	12805	Needle Bar Frame Regulator Slide Operating Rod Set Screw Nut ..
208638	12809	Needle Bar Frame Regulator Slide Operating Rod Spring
208639	—	Needle Bar Frame Regulator Slide Operating Rod Spring Holding Eyelet (lower or upper)
203060	12809	Needle Bar Frame Regulator Slide Operating Rod Spring Holding Eyelet Hook
234418	12809	Needle Bar Frame Regulator Spring
234419	12809	" " " " Stop...
234420	12811	" " " " " Col-
		lar with 200380c
200380c	12319	Needle Bar Frame Regulator Stop Collar Set Screw
200078E	12811	Needle Bar Frame Regulator Stop Screw (2)
234421	12811	Needle Bar Frame Regulator Switching Plunger
234422	12807	Needle Bar Frame Regulator Switching Plunger Lever
234423	12811	Needle Bar Frame Regulator Switching Plunger Lever Operating Lever
234424	12811	Needle Bar Frame Regulator Switching Plunger Lever Operating Lever Friction Plate
200174D	12806	Needle Bar Frame Regulator Switching Plunger Lever Operating Lever Friction Plate Screw

No.	Plate	Name
200690c	12811	Needle Bar Frame Regulator Switching Plunger Lever Operating Lever Hinge Screw
234425	12811	Needle Bar Frame Regulator Switching Plunger Lever Plate
200160B	12811	Needle Bar Frame Regulator Switching Plunger Lever Plate Screw (2)
234426	12811	Needle Bar Frame Regulator Switching Plunger Spring
234427	12811	Needle Bar Frame Spring
203060	12809	" " " " Hook (2)
208640	12811	" " Thread Guide
200175D	12811	" " " " Set Screw
200125F	12811	" Set Screw
234429	12807	Presser Bar (hollow)
234430	12810	" " Clamping Rod
201644B	12806	" " " " Nut. ..
204252	12811	" " Lifter
200550c	12311	" " " Hinge Screw
234431	12811	" " Lifting Bracket
204254	12812	" " " " Position Guide
200362c	12311	Presser Bar Lifting Bracket Position Guide Set Screw
204327	—	Presser Bar Packing Washer (felt)
200504E	12812	" " Screw Bushing (lower)
234432	12812	" " Spring
200491B	12812	" " Thumb Screw (pressure regulating)
234504	12812	Presser Foot, for eyelets $\frac{3}{8}$ in. diameter
208674	12810	Take-up Cam with 200335c, 200383c, 200430c, 200744c, 201522E, 206352 and two 201013c
200430c	12311	Take-up Cam Position Screw
200383c	12311	" " " " Check Screw
200335c	12802	Take-up Cam Set Screw
208675	12810	Take-up Cam complete, Nos. 206354 and 208674
204262	12812	Take-up Lever
206556	—	" " 204262 with 204263 ..
204263	12812	" " Bearing with 204264
204264	12812	" " " Position Pin..
200042F	12311	" " " Screw
201816	12806	" " Roller
204266	12812	Take-up Lever complete, Nos. 200042F, 201816 and 206556

No.	Plate	Name
202402	10675	Tension Disc
202090	10675	" " Position Pin
234441	12812	" Release Lever
200286F	12812	" " " Hinge Screw
201527H	10669	" " " " " " Nut
204934	12812	Tension Release Lever Hinge Screw Washer
200650F	12812	Tension Release Lever Switch Screw Stud
201525E	12812	Tension Release Lever Switch Screw Stud Nut
202407	10881	Tension Spring
200632B	10675	" Stud
200397H	10675	" " Set Screw
201572B	10881	" Thumb Nut
204271	10675	" Washer
206639	10675	Tension complete, Nos. 200632B, 201572B, 202407, 204271 and two 202402
204274	10675	Thread Controller Plate
200577H	12311	" " " Screw
202098	10675	" " Roller
204275	10675	" " " Guard
202084	10675	" " " " Washer
200300C	10675	" " " Screw
204276	10675	" " Spring
204333	10675	" " " Guard
200581H	10675	" " " " Screw
202087	10675	" " " Stop
202088	10675	" " " Stud with 204925
200366H	10675	Thread Controller Spring Stud Set Screw
204925	10675	Thread Controller Spring Stud Washer
205987	10675	Thread Controller complete, Nos. 200300C, 200581H, 202084, 202098, 204274, 204275 and 204333
204280	10675	Thread Controller and Spring complete, Nos. 204276 and 205987 ..
202412	12813	Thread Guide
204459	12813	" "
204281	10675	" Retainer Guide Wire
202091	10675	" " Sleeve
202092	10675	" " Spring
204058	10675	" " Stud
200368H	10675	" " " Set Screw

No.	Plate	Name
204059	10675	Thread Retainer complete, Nos. 202091, 202092 and 204058
234442	12810	Throat Plate
234443	12813	" " Latch
234444	12813	" " " Friction Washer
200318H	12813	" " " Screw
202062	12813	" " Position Pin
234512	12813	" " Spur, for eyelet $\frac{3}{16}$ in. diameter
234452	12813	Throat Plate Spur Locking Slide
200321D	12813	" " " " " " Screw (2)
2102	10881	Variable Tension Disc
222712	10694	" " " Spring
222713	12813	" " " Releasing Plate
334D	10694	" " " " " " Screw
201046E	10694	Variable Tension Stud
222714	10694	" " " Bushing
200355H	12319	" " " " " Set Screw
222715	10694	Variable Tension Stud Spring
222716	10694	" " " " " Plate
329D	10694	" " " " " " Screw
201620D	10694	Variable Tension Stud Thumb Nut
222717	10694	" " Thread Guide
200132D	10694	" " " " " Screw
234494	—	Throat Plate complete, Nos. 200318H, 234442 to 234444, 234452 and two 200321D

ACCESSORIES

No.	Plate	Name
204178	12802	Bobbin (5)
*225482	—	" Case Screw Driver Blade ..
*225483	—	" " " " Handle ..
225497	12345	Bobbin Case Screw Driver complete, Nos. 225482 and 225483 ..
130 x 25	—	Needles, six, size 9
228166	—	Drip Pan with four wood screws $\frac{1}{2}$ in., No. 5
87561	—	Embroidery Hoop
41400	12345	Machine Rest Pin (wood)
36578	12345	Oil with 36579
36579	12345	" Spout, $3\frac{1}{2}$ in. long, with 120117
120117	—	" " Washer
*225484	—	Screw Driver Blade
*225485	—	" " Handle
225498	12345	Screw Driver complete, (7 $\frac{1}{2}$ in. long,) Nos. 225484 and 225485 ..
225554	12345	Wrench (steel)

BOBBIN WINDER

Swing Automatic, Right Hand.

*225451	—	Bobbin Holder
225453	10882	Frame with 202277 and 225438
225454	10882	" Hinge Pin
202277	—	" Oil Packing (wick)
225438	10882	" " Well Cap
225455	10882	" Spring
225456	10882	" " Plunger
202473	10883	Pulley with 200380c
200380c	12319	" Set Screw
*225443	—	Spindle
225452	10882	" 225443 with 225451
225444	10882	Stop Latch
200056E	10882	" " Screw
225458	10882	" " Thumb Lever
225459	10882	" " " " Hinge Stud
225460	10882	Stop Latch Thumb Lever Joint Stud
202478	10882	Stop Latch Trip Lever
200299H	10882	" " " " Hinge Screw

No.	Plate	Name
225461	10881	Tension Bracket with 201499B
200082D	10881	" " Screw
202104	10881	" " Washer
2102	10881	" Disc
202407	10881	" Spring
201499B	10881	" Stud
201572R	10881	" " Thumb Nut
225462	10881	Bobbin Winder Tension Bracket complete, Nos. 201572R, 202407, 225461 and two 2102
225433	10883	Bobbin Winder and Tension Bracket Base
225436	10883	Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200299H, 202104, 202473, 202478, 225433, 225444, 225452 to 225456, 225458 to 225460, 225462 and two wood screws $\frac{3}{4}$ in., No. 13, R.H.B.

EYELET PUNCHES

234468	—	Eyelet Piercer with 200473R
234469	—	" " Holder
200473R	12805	" " Thumb Screw
234470	—	Eyelet Piercer (adjustable), for eyelets from $\frac{5}{16}$ to $\frac{1}{4}$ in. diam., complete, Nos. 234468 and 234469
234462	12813	Eyelet Punch, for eyelets $\frac{5}{16}$ in. diam., heavy material
234463	—	Eyelet Punch, for eyelets $\frac{5}{16}$ in. diam., heavy material, and $\frac{3}{16}$ in. diam., light material
234464	—	Eyelet Punch, for eyelets $\frac{5}{16}$ in. diam., heavy material, and $\frac{3}{16}$ in. diam., light material
234465	—	Eyelet Punch, for eyelets $\frac{1}{4}$ in. diam., heavy material
234466	—	Eyelet Punch, for eyelets $\frac{3}{8}$ in. diam., heavy material
234467	—	Eyelet Punch, for eyelets $\frac{5}{8}$ in. diam., light material
234484	—	Eyelet Punch Cutting Block (fibre)
234485	—	" " Mallet (wood)

KNEE LIFTER

202450	—	Knee Lifter Rock Lever with 200522c and 200529c
--------	---	---

No.	Plate	Name
202185	—	Knee Lifter Rock Lever 202450 with two each 202451 and 202452
208654	—	Knee Lifter Rock Lever 202185 with 202203 and 208655
202453	10693	Knee Lifter Rock Lever Knee Plate with 200526c
202203	—	Knee Lifter Rock Lever Knee Plate 202453 with 202454
202454	10693	Knee Lifter Rock Lever Knee Plate Arm (long)
200522c	12319	Knee Lifter Rock Lever Knee Plate Arm Set Screw
200526c	12319	Knee Lifter Rock Lever Knee Plate Set Screw
202451	10693	Knee Lifter Rock Lever Lug with two wood screws $\frac{3}{4}$ in., No. 13H
202452	12319	Knee Lifter Rock Lever Lug Hinge Pin
208655	10693	Knee Lifter Rock Lever Rod with 202456
*202456	—	Knee Lifter Rock Lever Rod Cap or Oil Guard
200529c	12319	Knee Lifter Rock Lever Rod Set Screw

NEEDLE PLATE AND THROAT PLATE SPURS

234428	12813	Needle Plate, 50 elongated needle hole, for needle sizes 16 and 18 ..
234445	—	Throat Plate Spur, for eyelets $\frac{5}{16}$ in. diameter
234446	—	Throat Plate Spur, for eyelets $\frac{7}{16}$ in. diameter
234513	—	Throat Plate Spur, for eyelets $\frac{1}{4}$ in. diameter
234511	—	Throat Plate Spur, for eyelets $\frac{5}{16}$ in., diameter

PRESSER FEET

234501	—	Presser Foot, for eyelets $\frac{5}{16}$ in. diameter
234502	—	Presser Foot, for eyelets $\frac{7}{16}$ in. diameter
234505	—	Presser Foot, for eyelets $\frac{1}{4}$ in. diameter
234503	—	Presser Foot, for eyelets $\frac{5}{16}$ in. diameter

OBSOLETE PARTS

No.	Plate	Name
202470	12320	Bobbin Winder Base
202471	12320	" " Frame
202472	12319	" " " Spring
202474	12320	" " Spindle
202477	12319	" " Stop Latch Thumb Lever
202480	12320	Bobbin Winder Spool Holder Base with 200355H and 202484
202481	12320	Bobbin Winder Spool Holder Base Spool Pin
202482	12319	Bobbin Winder Spool Holder Tension Disc (lower or upper)
202483	12319	Bobbin Winder Spool Holder Tension Disc Spring (brass)
202484	12319	Bobbin Winder Spool Holder Tension Disc Thread Guide
202485	12320	Bobbin Winder Spool Holder complete, Nos. 200011E, 202480, 202481, 202483, two 202482 and one wood screw 1 in., No. 13
227522	12319	Bobbin Winder Stop Latch
227523	12320	Bobbin Winder complete, Nos. 200056E, 200161D, 200221D, 201537H, 202470 to 202474, 202477, 202478, 227522, three 200299H and two round head wood screws 1 in., No. 13
204916	12814	Needle Bar Frame Driving Cam with two 200347c
234404	12814	Needle Bar Frame Driving Cam Cover
204918	12814	Needle Bar Frame Driving Cam Follower
234408	12814	Needle Bar Frame Regulator Driver

PLATE 10665 - FULL SIZE

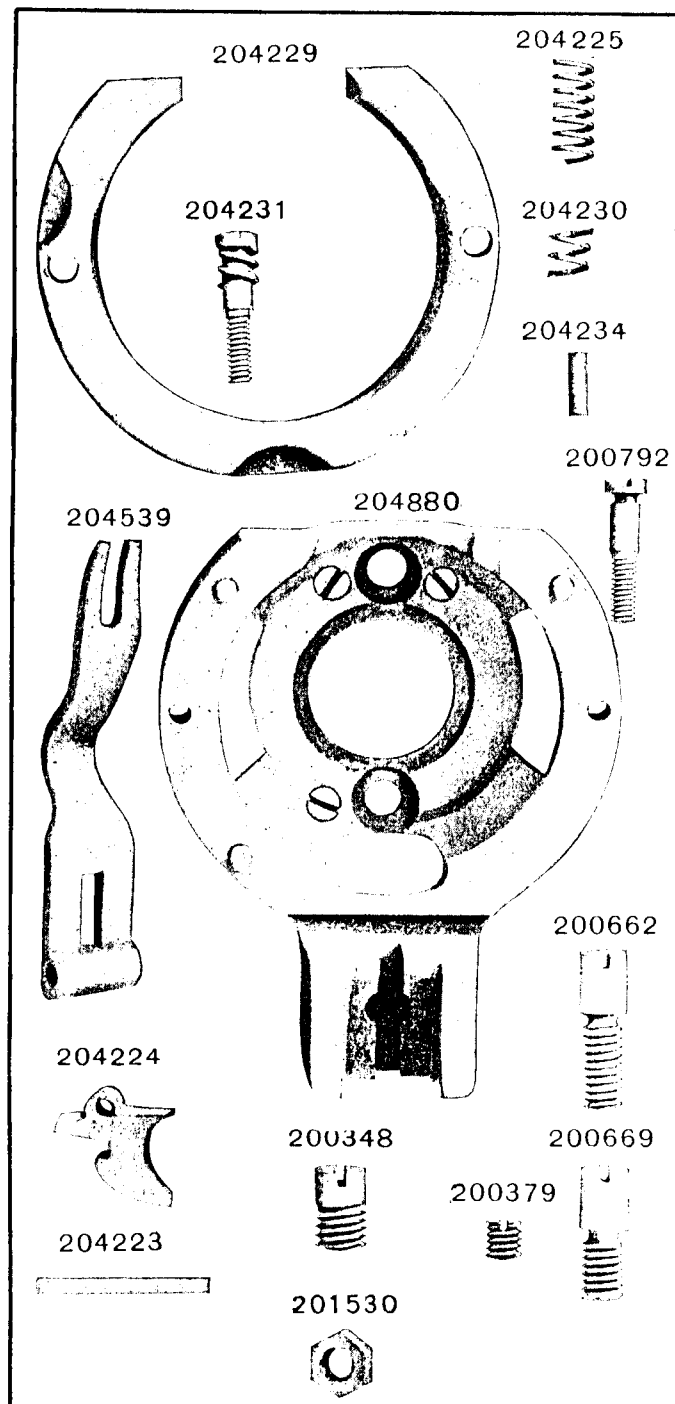


PLATE 10669 - FULL SIZE

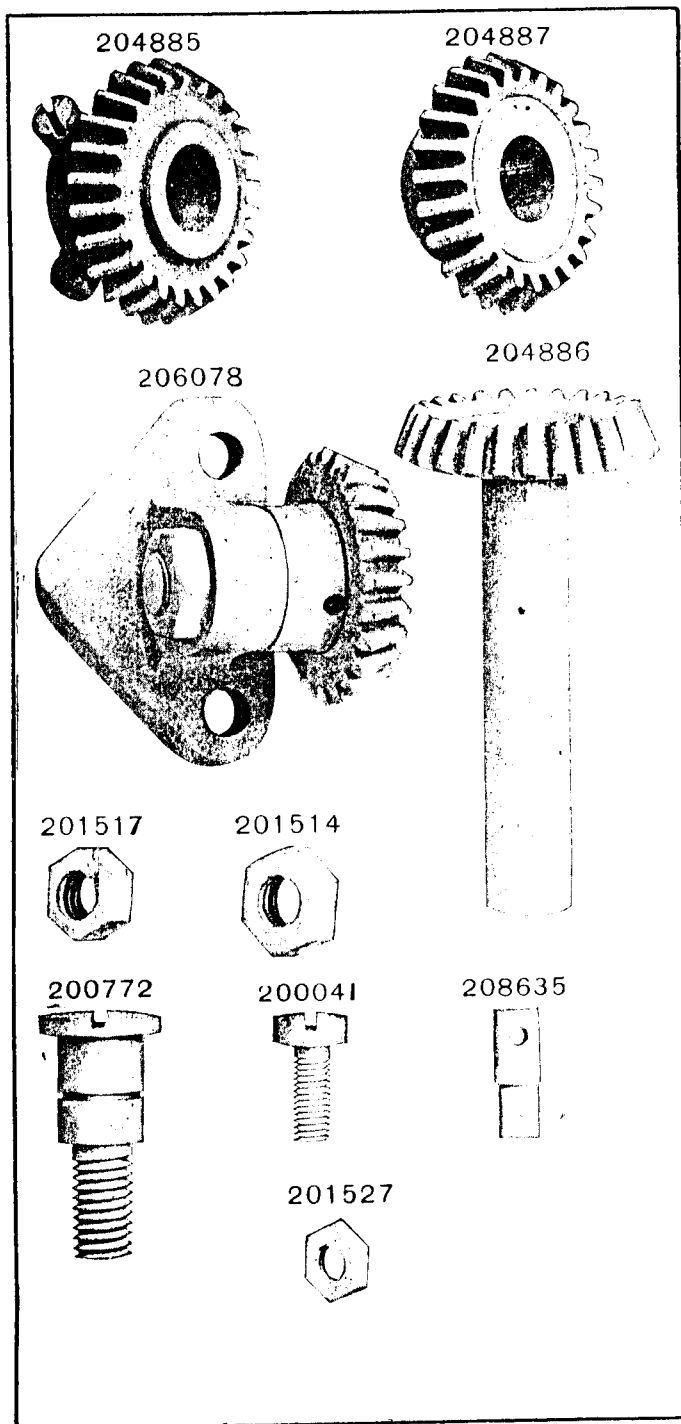


PLATE 10675 - FULL SIZE

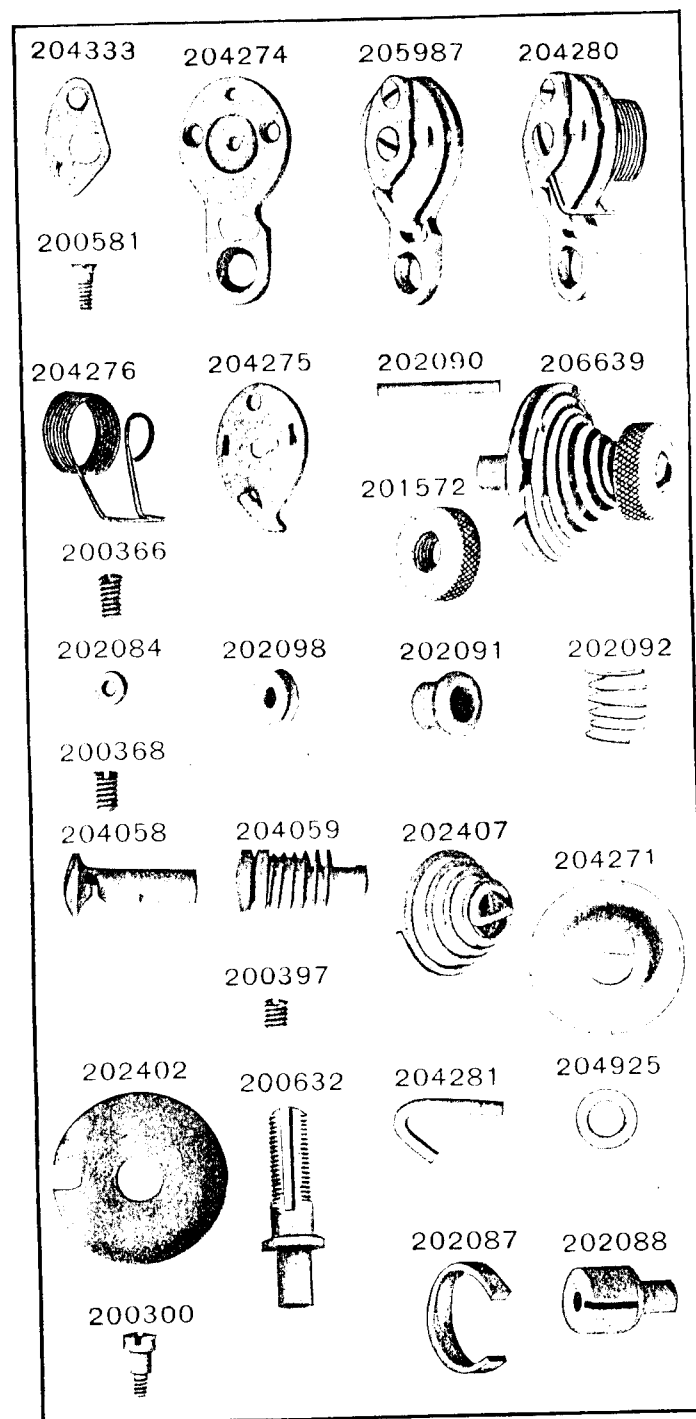


PLATE 10693 - ONE-FOURTH SIZE

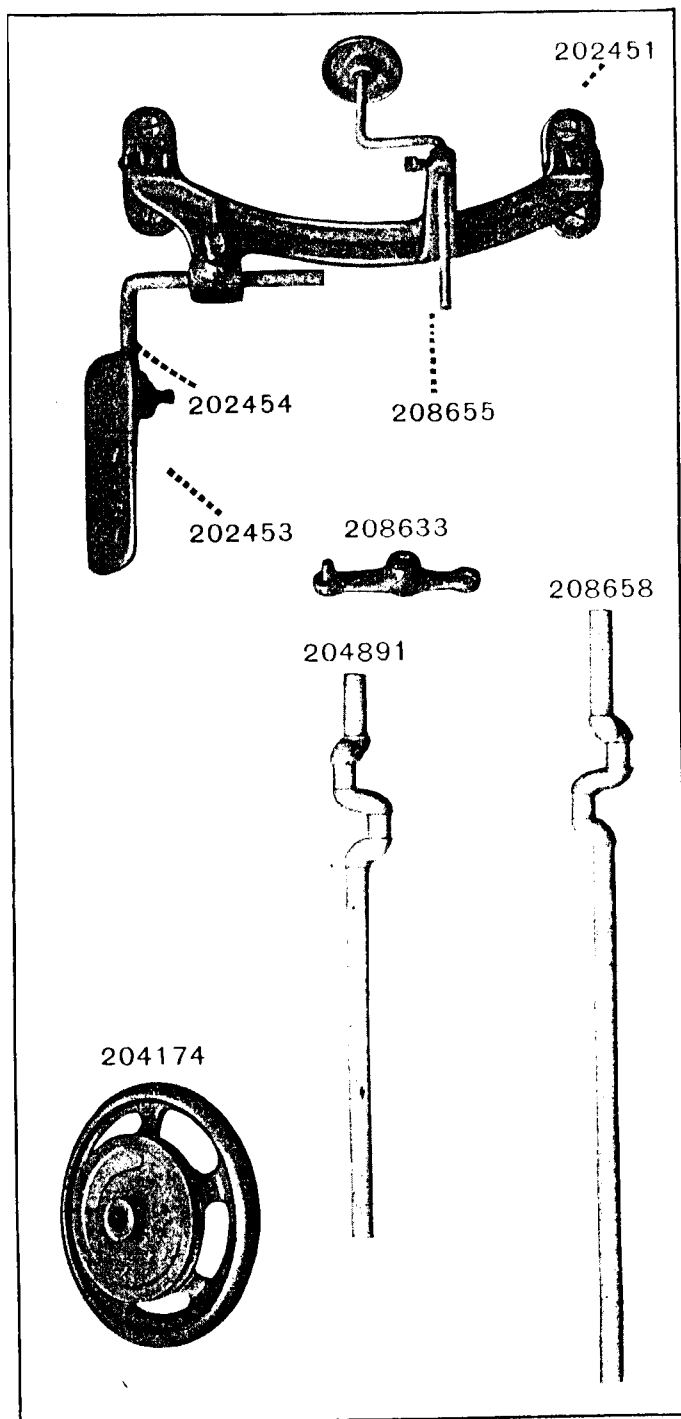


PLATE 10694 - FULL SIZE

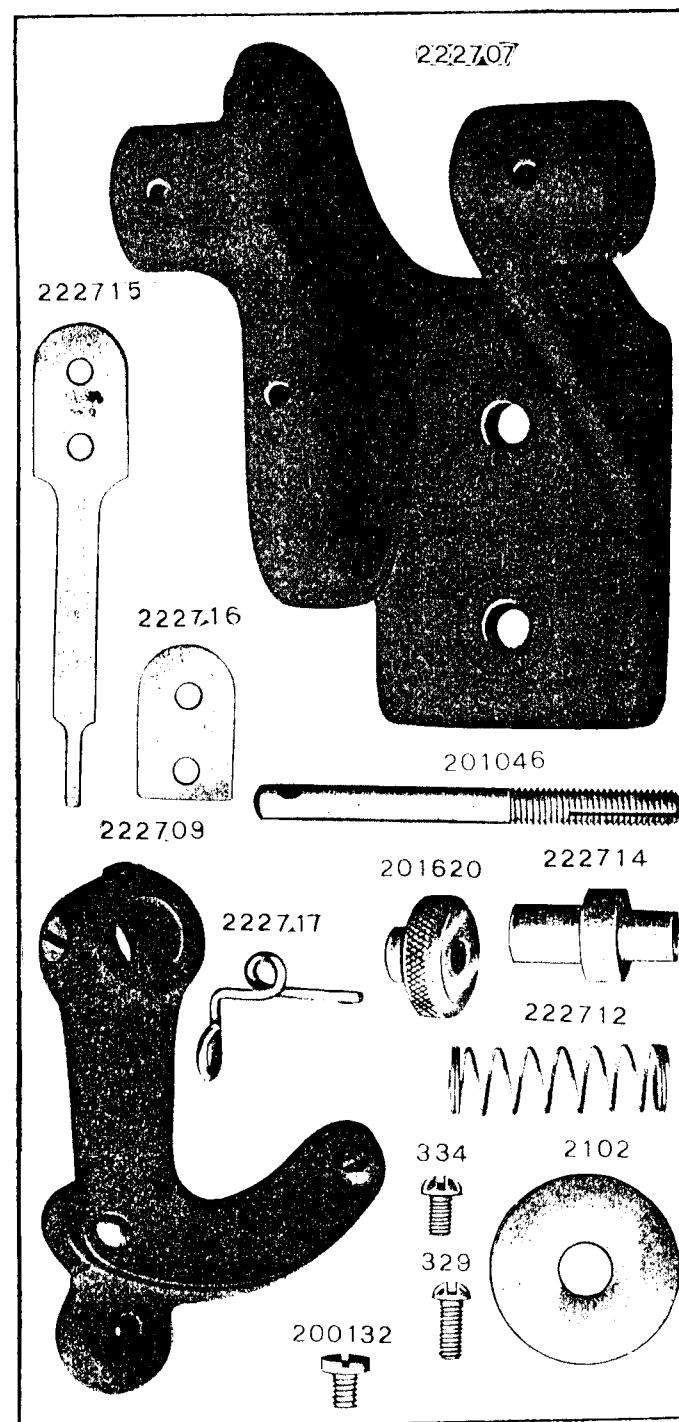


PLATE 10881—FULL SIZE

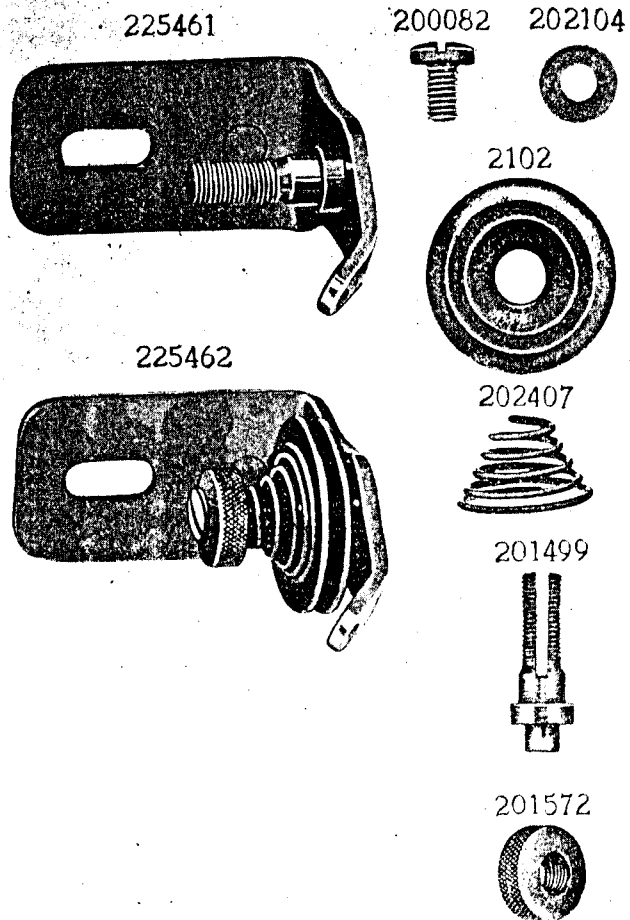


PLATE 10882—FULL SIZE

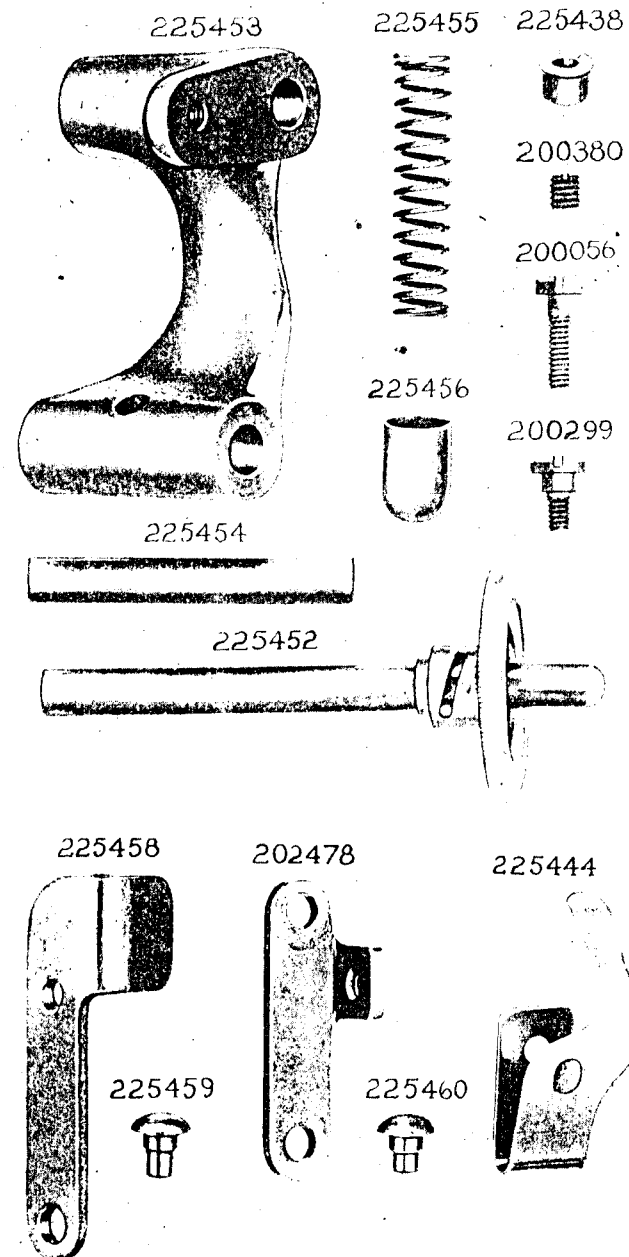


PLATE 10883 ONE-FOURTH SIZE

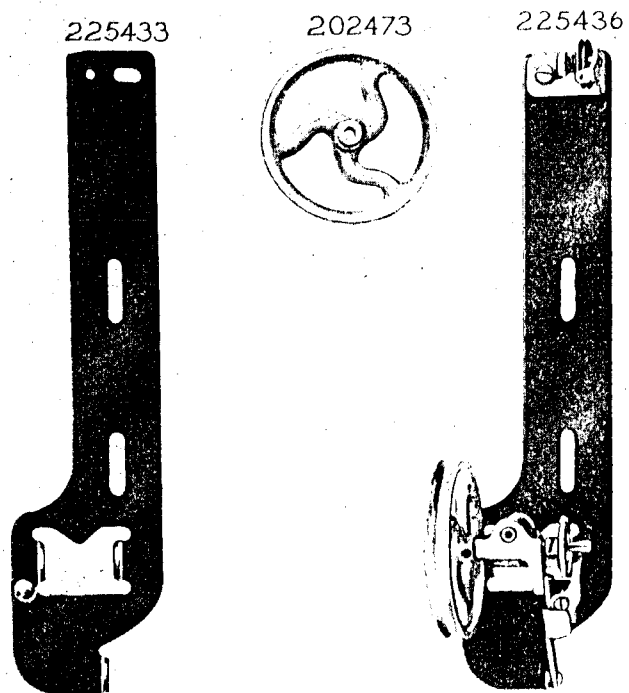


PLATE 12311—FULL SIZE

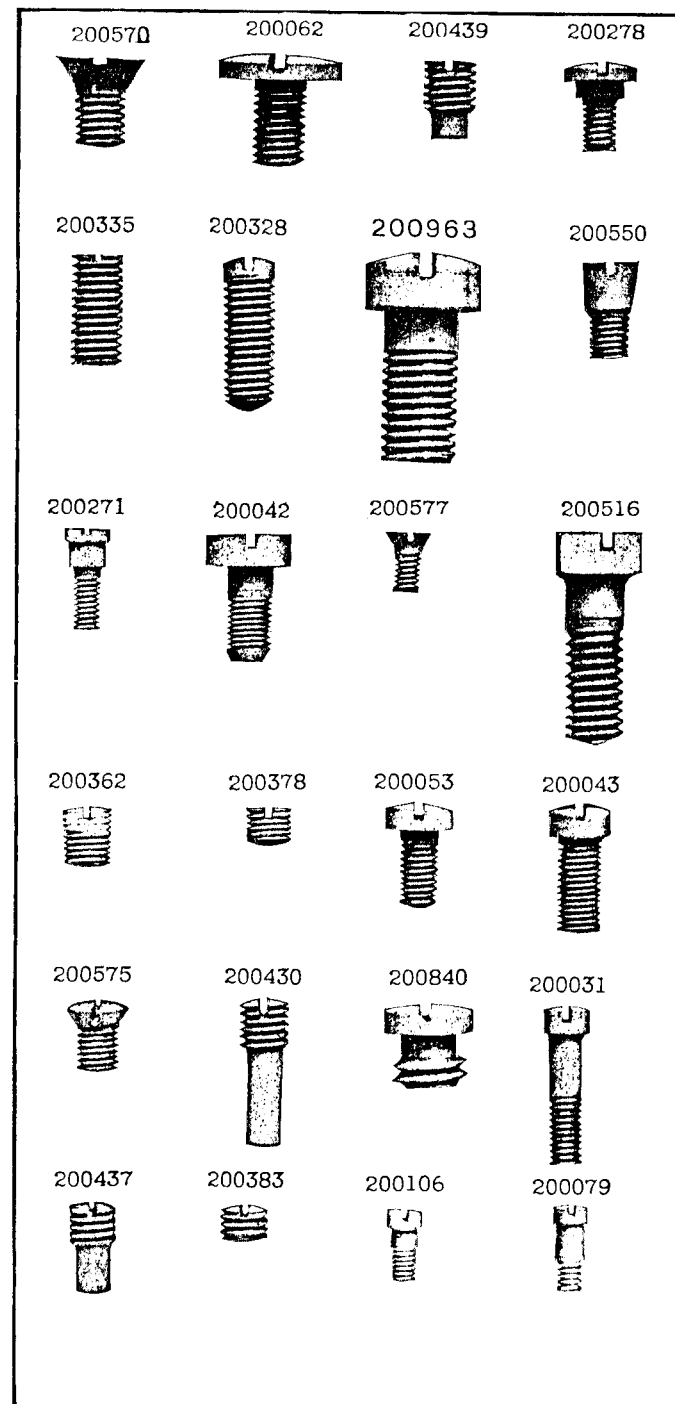


PLATE 12319 -FULL SIZE

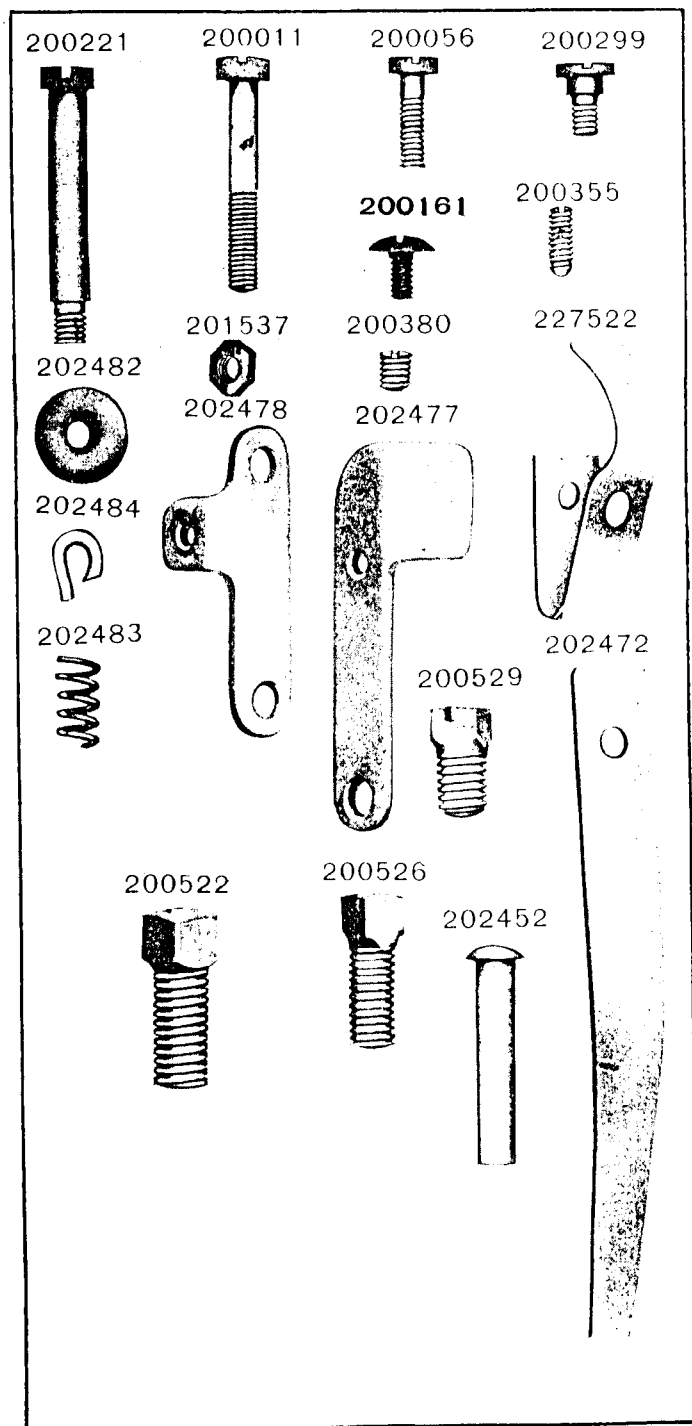


PLATE 12320-ONE-HALF SIZE

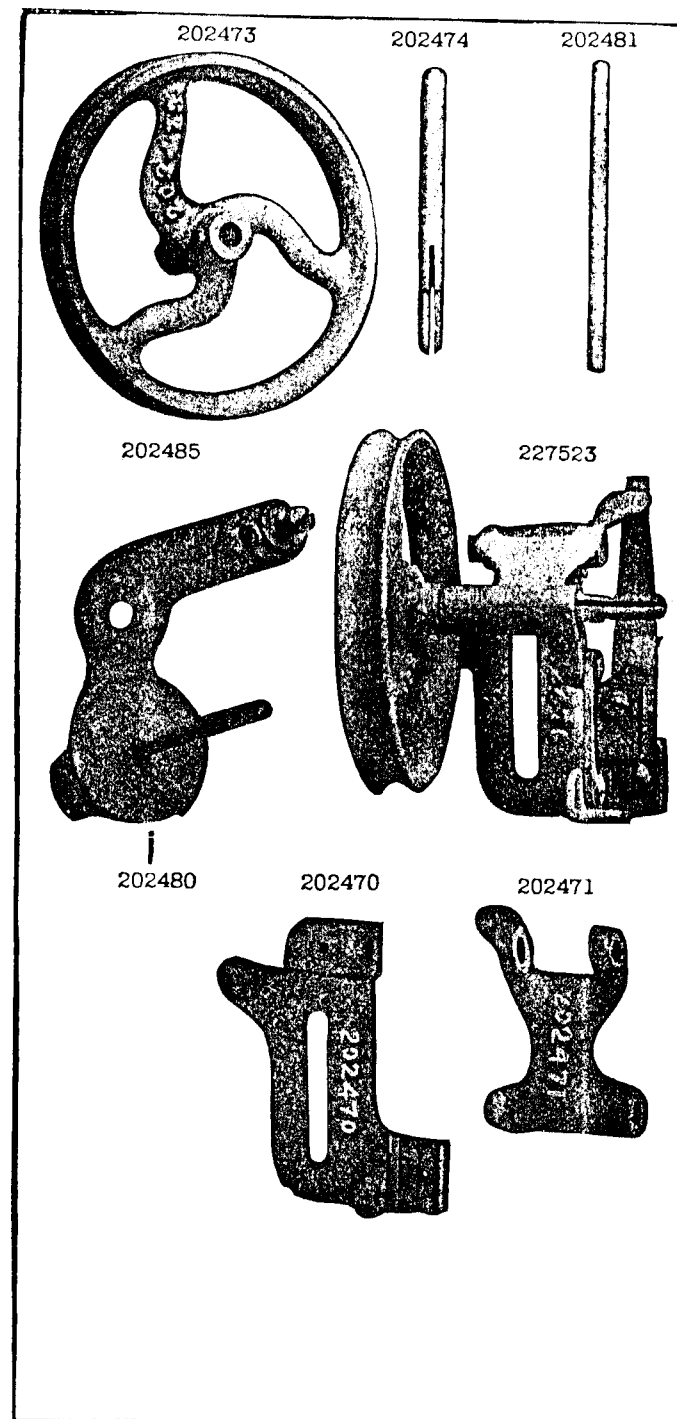


PLATE 12345—ONE-HALF SIZE

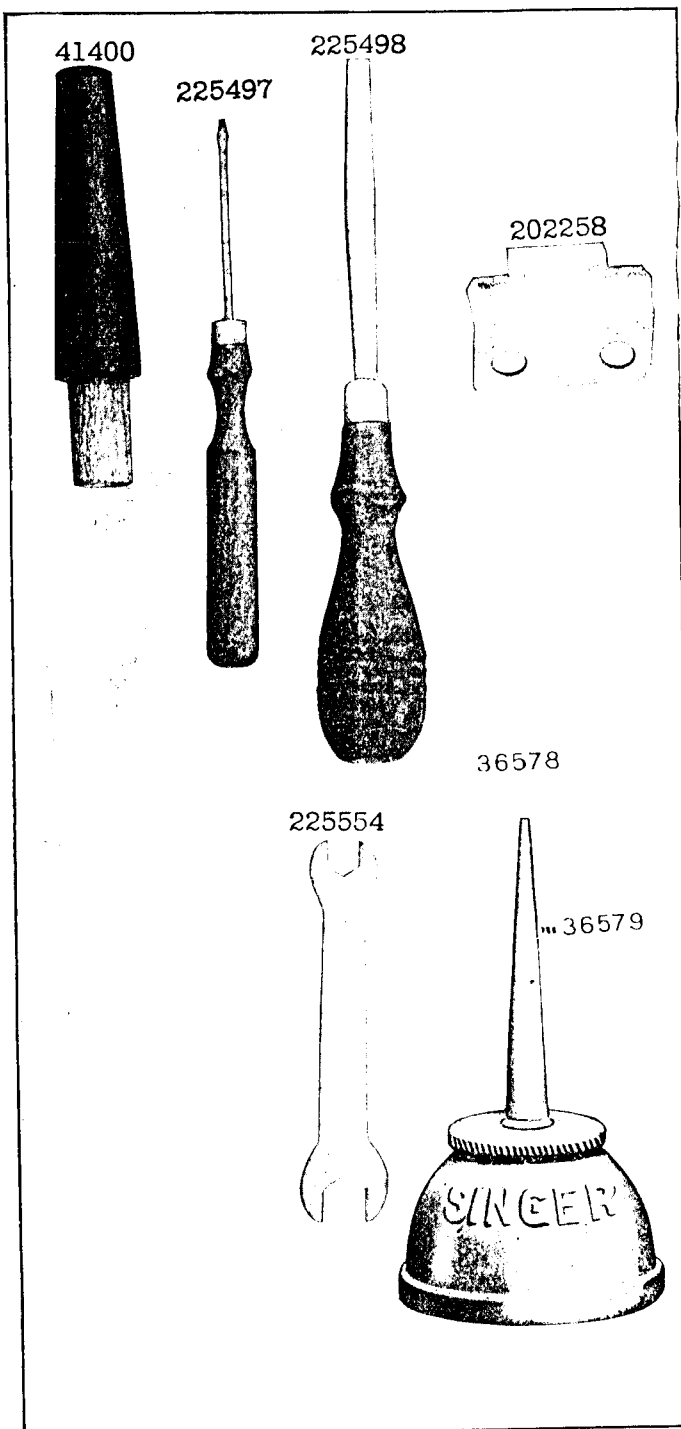


PLATE 12801—ONE-HALF SIZE

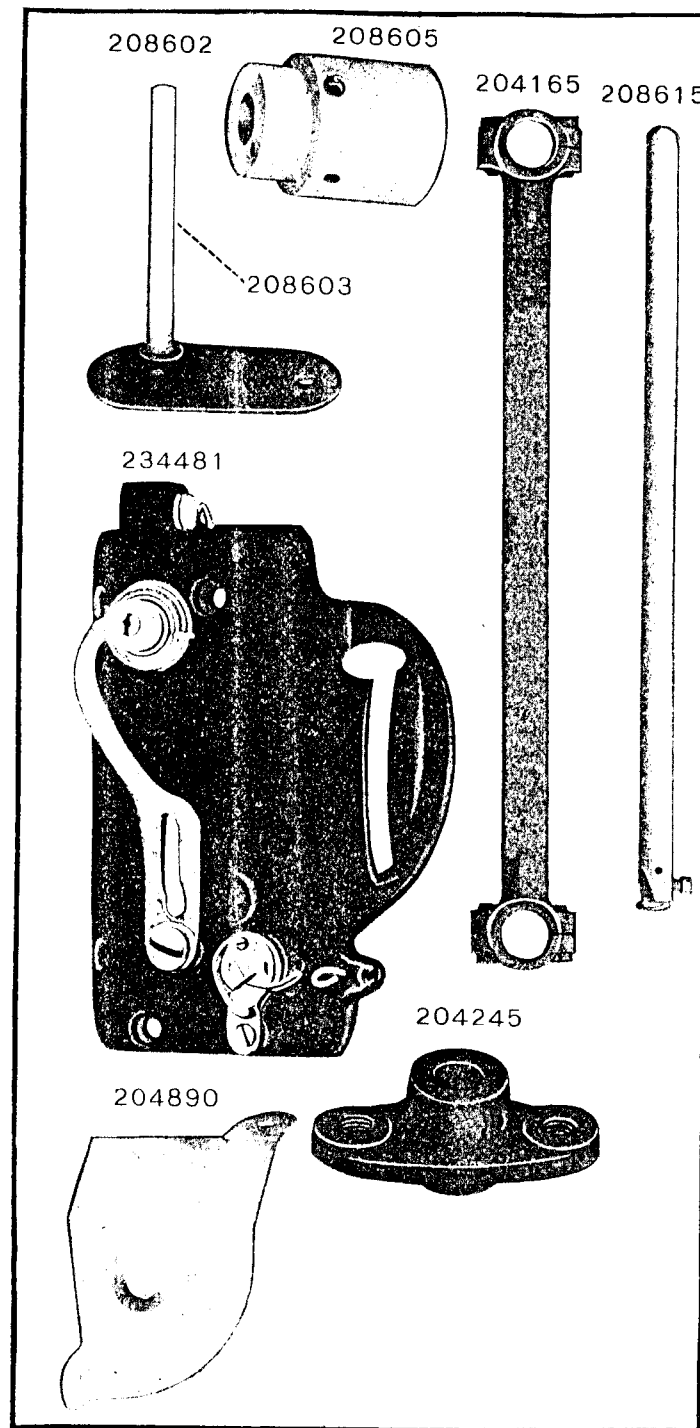


PLATE 12802-FULL SIZE

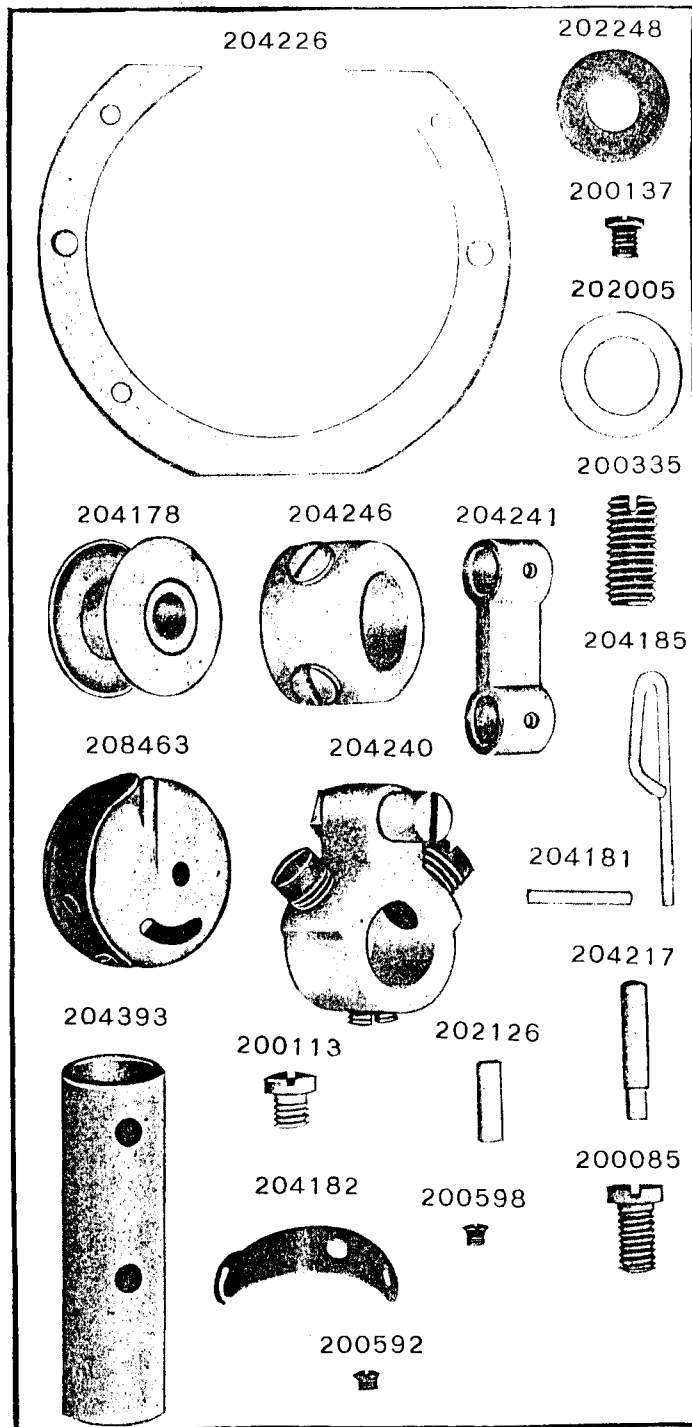


PLATE 12803-FULL SIZE

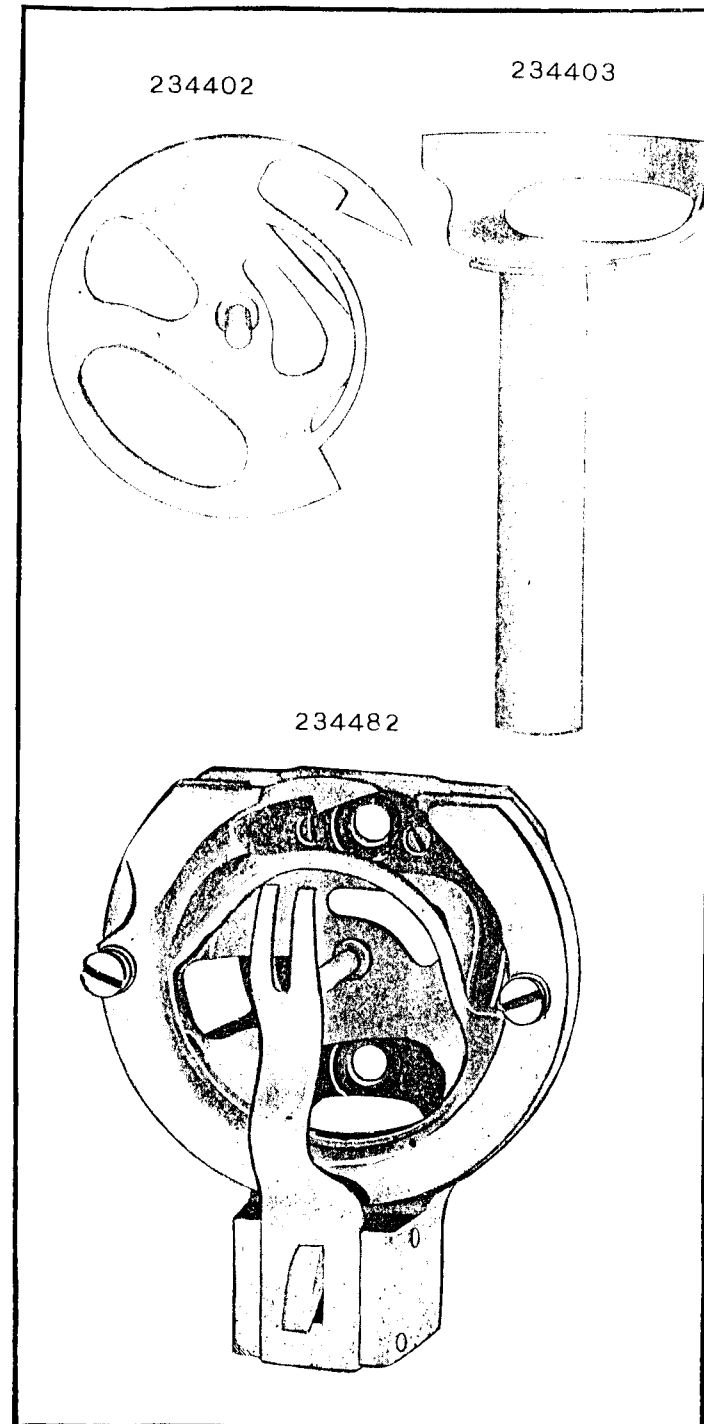


PLATE 12804-FULL SIZE

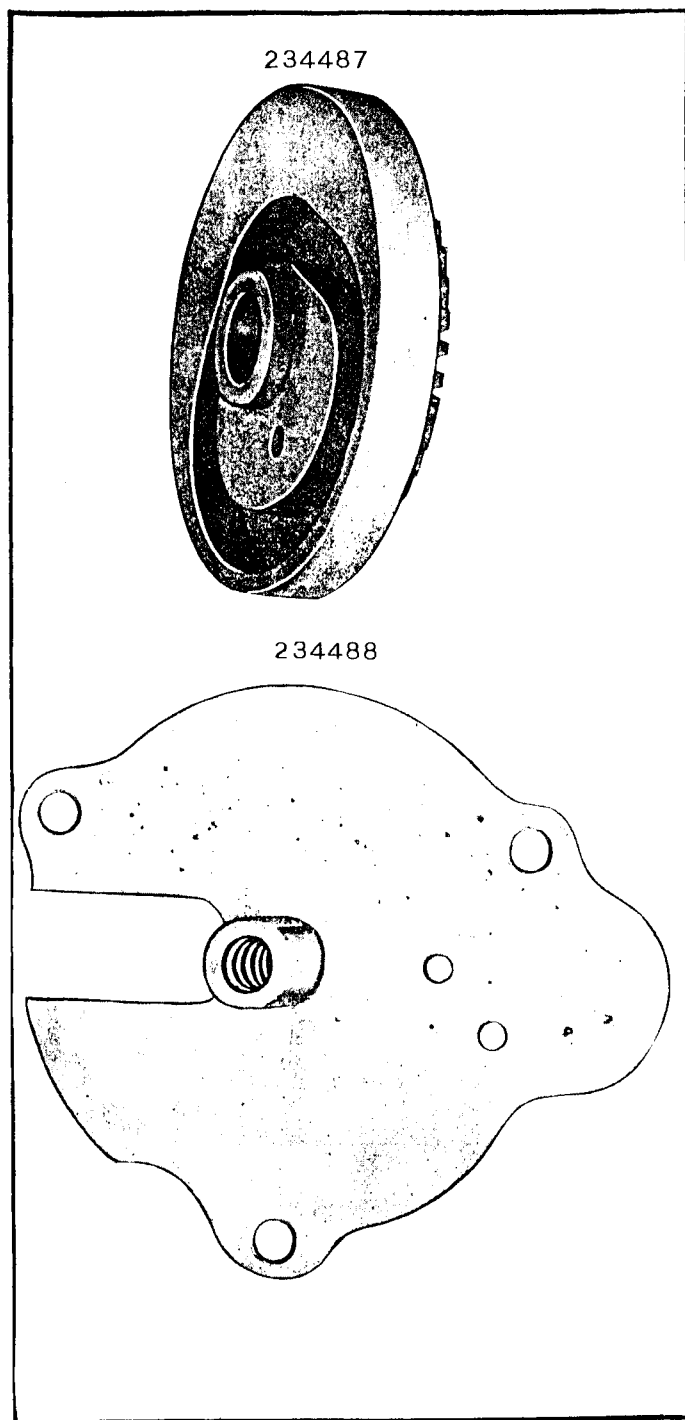


PLATE 12805-FULL SIZE

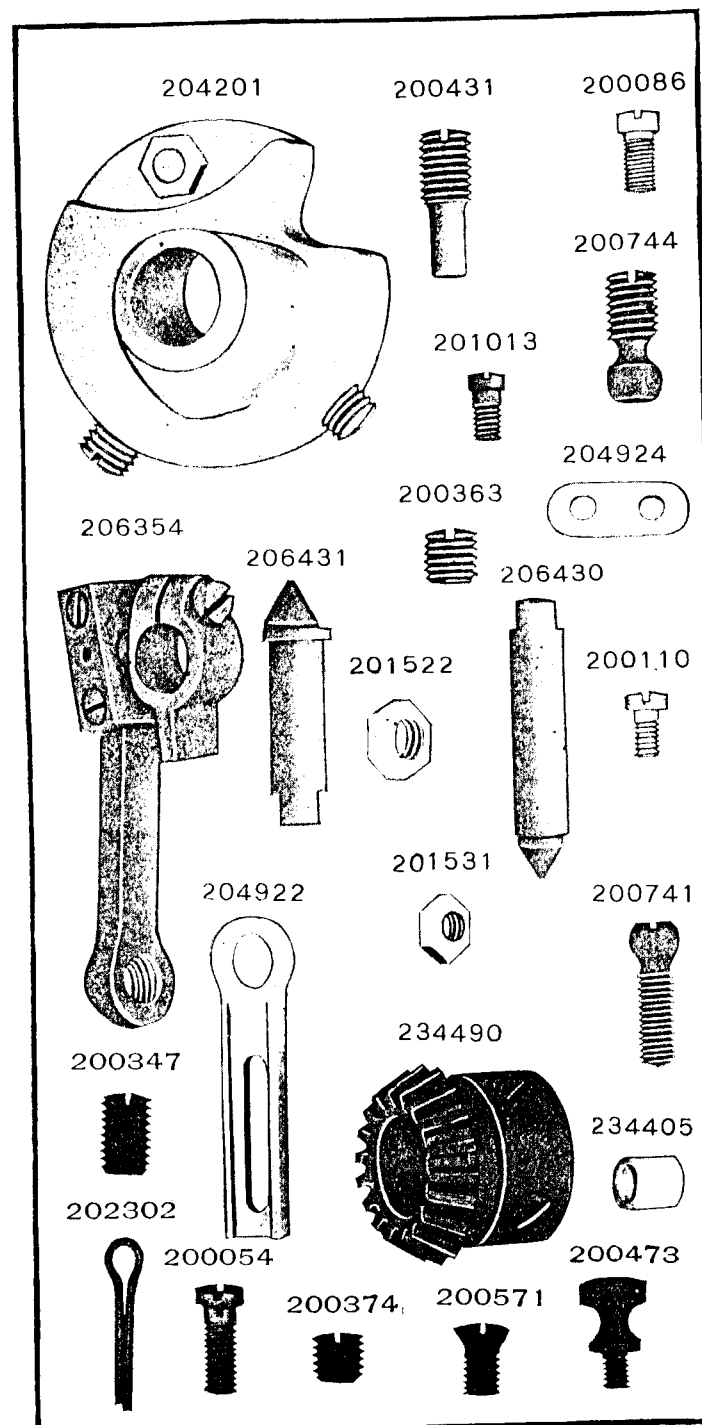


PLATE 12806-FULL SIZE

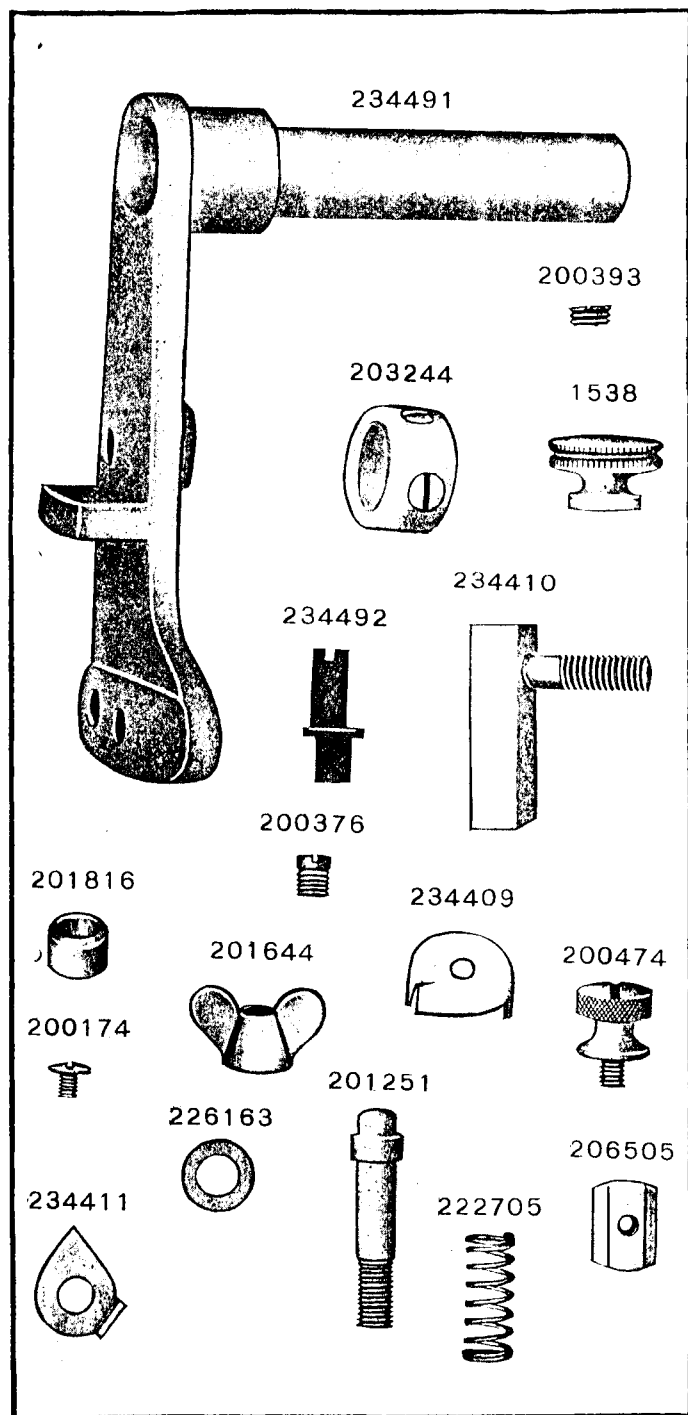


PLATE 12807-ONE-HALF SIZE

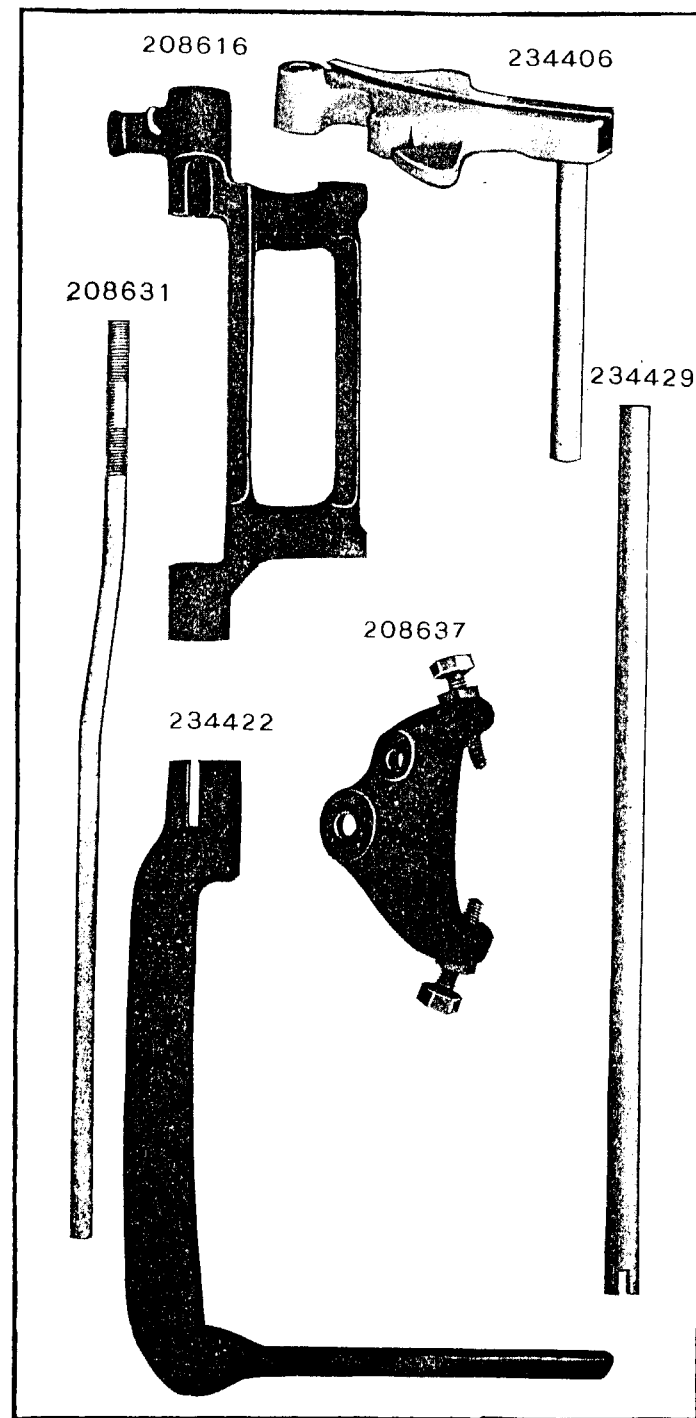


PLATE 12808-FULL SIZE

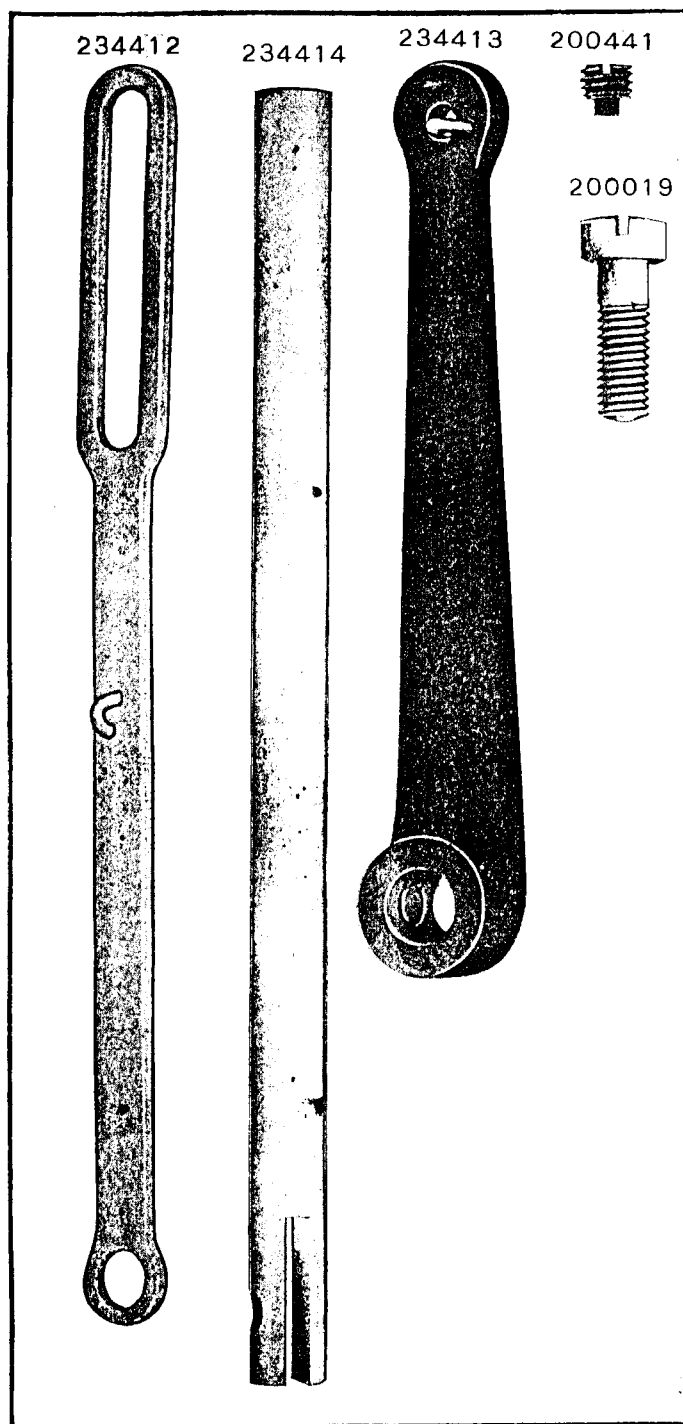


PLATE 12809-FULL SIZE



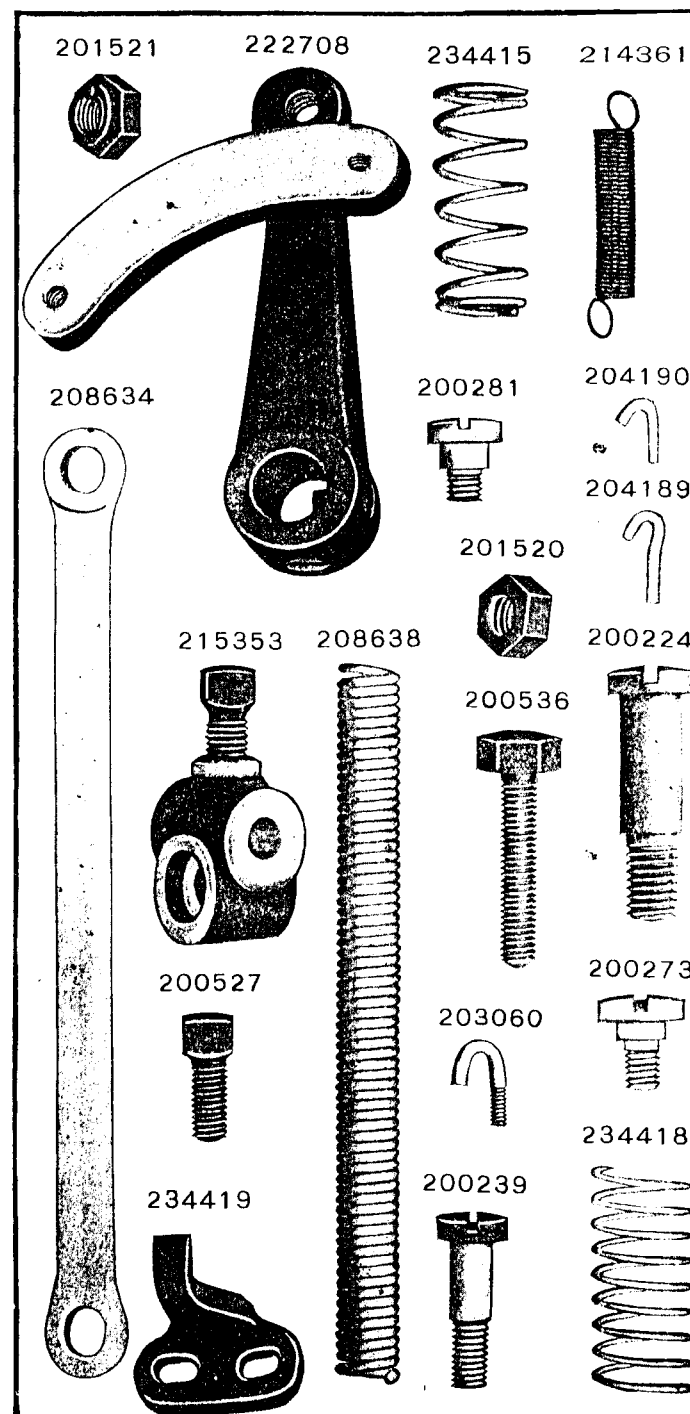


PLATE 12810-ONE-HALF SIZE


234430



208674

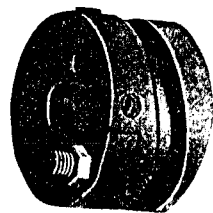

208675

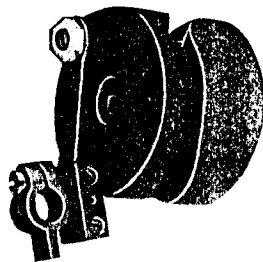

234442


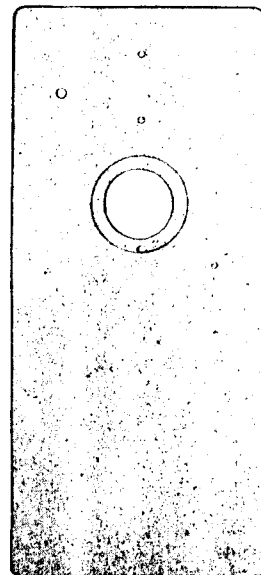


PLATE 12811-FULL SIZE

234420



200078

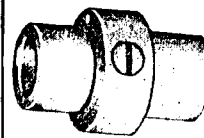

234421



234423




234425


234426



201581

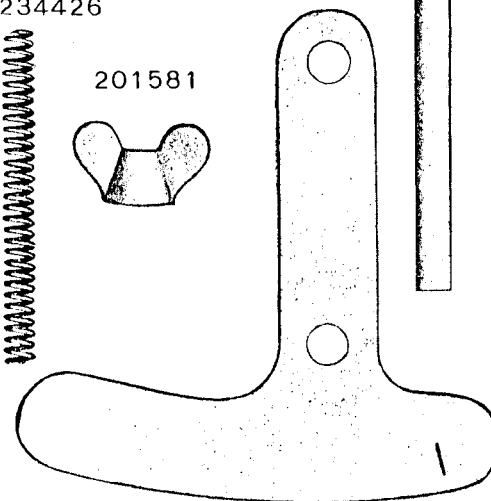

234424




234427



204252



234431

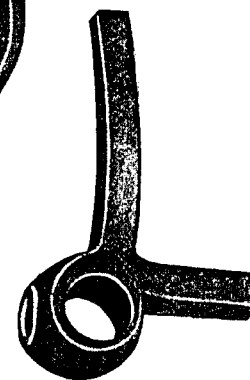

200690



200160



208640



200175



200125



PLATE 12812-FULL SIZE

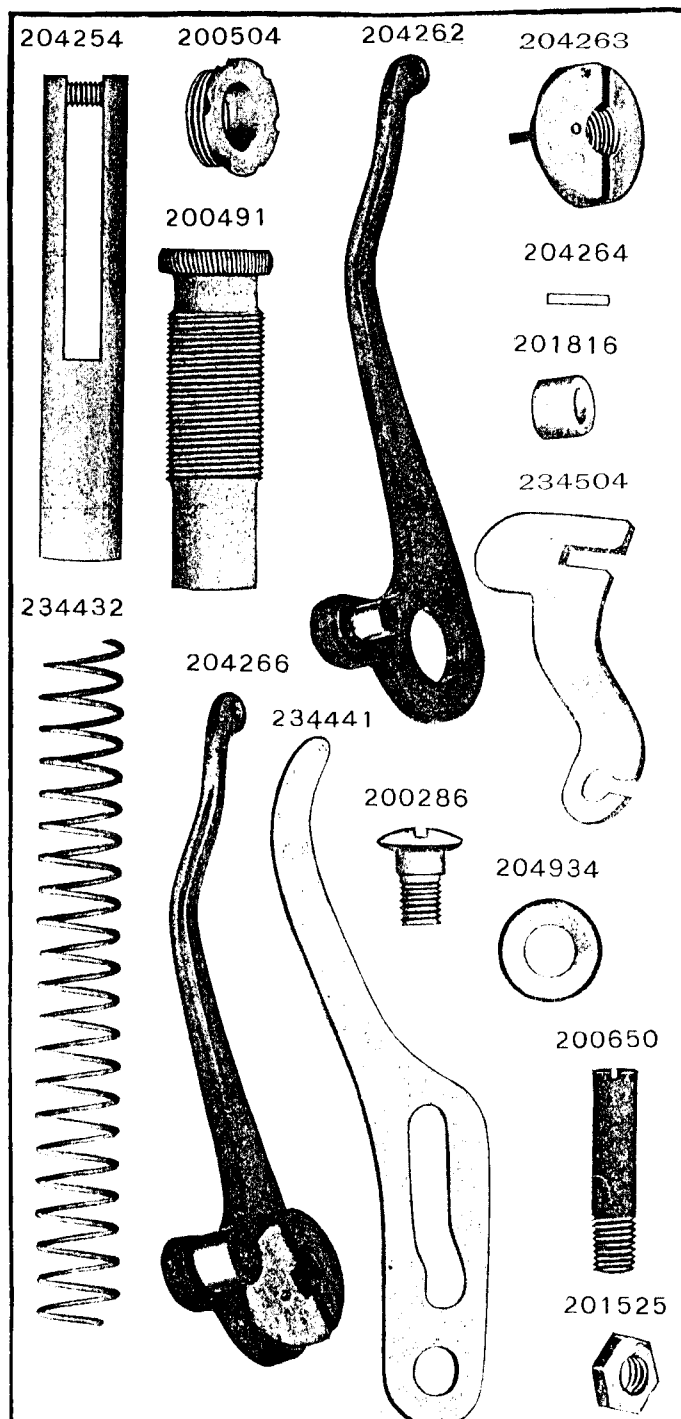


PLATE 12813-FULL SIZE

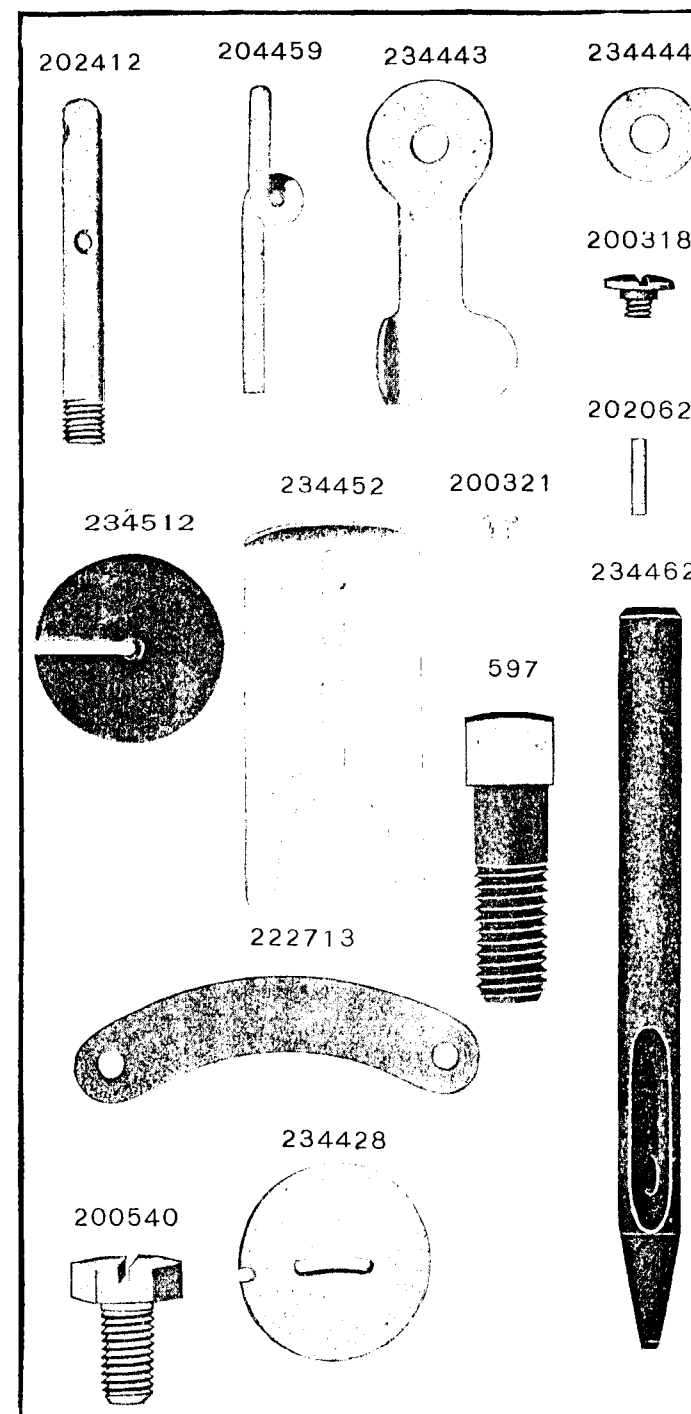


PLATE 12814-FULL SIZE

