

Singer 42-2

Singer 42-3

Singer 42-4

Singer 42-5

Singer 42-8

**Price List of Parts**

**Numbers**

**42-2**

**42-3**

**42-4**

**42-5**

**42-8**

**MACHINES.**



**THE SINGER MANUFACTURING COMPANY.**

## INDEX.

|                                | PAGE |
|--------------------------------|------|
| No 42-2 Machine.....           | 4    |
| " 42-3 ".....                  | 8    |
| " 42-4 ".....                  | 9    |
| " 42-5 ".....                  | 13   |
| " 42-8 ".....                  | 17   |
| Accessories.....               | 18   |
| Bobbin Winders.....            | 19   |
| Knee Lifter (Power Table)..... | 19   |
| " " (Stand).....               | 21   |
| Numerical List.....            | 25   |
| Obsolete Parts.....            | 22   |
| Stand Parts.....               | 22   |

## List of Parts

### NUMBERS

**42-2, 42-3, 42-4,  
42-5 and 42-8**

### MACHINES.

In ordering from this list, use **ONLY** the **PART** number, in the first column.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows :

- A.** Hardened, Polished and Plated.
- B.** Polished and Plated.
- C.** Hardened only.
- D.** Polished "
- E.** Soft, not Polished.

These letters **MUST BE USED** *when* they appear in the list, and **AFTER** the number, *as* in the list.

In this series

1 to 1500 are Screw Numbers.

1501 " 1800 " Nut "

1801 " 2000 " Roller "

2001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (\*) are furnished only when repairs are made at factory.

## 42-2 MACHINE.

**C. B. DROP FEED, BOTH SIDES OF NEEDLE, HINGED PRESSER  
FOOT, LINK NEEDLE BAR CONNECTION, CLOTH.**

| No.   | Plate | Name.                                                                        | Each |
|-------|-------|------------------------------------------------------------------------------|------|
| *4287 | —     | Arm.....                                                                     | 4 50 |
| 2002  | 686   | " Dowel Pin.....                                                             | 02   |
| 4448  | 695   | " Oil Tube for intermediate bearing .....                                    | 06   |
| 123E  | 691   | " Screw .....                                                                | 06   |
| 6109  | 696   | " Shaft for 3011.....                                                        | 1 50 |
| 6107  | 696   | " " " 5977.....                                                              | 1 50 |
| 3005  | 678   | " " Bushing (back) .....                                                     | 25   |
| 448C  | 691   | " " " " Set Screw.....                                                       | 03   |
| *4449 | —     | " " " (front).....                                                           | 30   |
| 144D  | 691   | " " Screw .....                                                              | 12   |
| 4288  | 678   | " Side Cover.....                                                            | 10   |
| 286D  | 692   | " " Thumb Screw.....                                                         | 08   |
| 5811  | 695   | " Spool Pin and Thread Eyelet.....                                           | 05   |
| 3011  | 696   | Balance Wheel (two-speed) for 6109 with two<br>448C.....                     | 1 75 |
| 5977  | 696   | Balance Wheel (two-speed) for Loose Wheel<br>Attachment 5981 .....           | 1 75 |
| 448C  | 691   | Balance Wheel Set Screw.....                                                 | 03   |
| *5900 | —     | Bed.....                                                                     | 5 00 |
| 3016  | 679   | " Hinge.....                                                                 | 03   |
| 3017  | —     | " " (half butt) for 5900.....                                                | 02   |
| 3018  | —     | " " " " Wood Table.....                                                      | 02   |
| 3020  | 683   | " " Pin .....                                                                | 01   |
| 3021  | 686   | " " Rivet..... per 100..                                                     | 25   |
| 5969  | 697   | Crank Connecting Rod.....                                                    | 80   |
| *4349 | —     | " " " Cap.....                                                               | —    |
| 158E  | 691   | " " " Screw.....                                                             | 03   |
| 566C  | 692   | " " " Hinge Screw.....                                                       | 15   |
| 1513  | 693   | " " " " Nut.....                                                             | 05   |
| 5978  | 696   | Driving Flange.....                                                          | 50   |
| 5979  | 683   | " " Latch.....                                                               | 10   |
| 136   | 691   | " " Hinge Screw.....                                                         | 04   |
| 435C  | 691   | " " Set Screw .....                                                          | 04   |
| 5980  | 683   | " " Spring.....                                                              | 05   |
| 330D  | 692   | " " " Screw .....                                                            | 03   |
| 5993  | —     | " " 5978 with 136, 330D, 5979 and<br>5980, for Loose Wheel Attachment 5981.. | 75   |
| 5982  | 696   | Face Plate for 5797 and 5989.....                                            | 75   |
| 164D  | 691   | " " Screw.....                                                               | 04   |
| 5902  | 677   | Feed Bar .....                                                               | 40   |
| 313C  | 692   | " " Screw Centre .....                                                       | 04   |
| 1519  | 693   | " " " " Nut.....                                                             | 03   |
| 3032  | 678   | " Cam with 446C.....                                                         | 35   |
| 446C  | 691   | " " Set Screw.....                                                           | 03   |

| No.   | Plate | Name                                                        | Each |
|-------|-------|-------------------------------------------------------------|------|
| 3033  | 681   | Feed Connecting Link .....                                  | 20   |
| 375C  | 692   | " " " Hinge Screw.....                                      | 12   |
| 1518  | 693   | " " " " Nut.....                                            | 04   |
| 5774  | 689   | " Dog (double), 12 teeth.....                               | 1 00 |
| 5776  | 688   | " " for sewing buff wheels.....                             | 1 00 |
| 5905  | 690   | " " " tent work.....                                        | 1 00 |
| 5906  | 690   | " " " canvas work.....                                      | 1 00 |
| 191C  | 691   | " " Screw.....                                              | 03   |
| 5907  | 697   | " Forked Connection.....                                    | 60   |
| 375C  | 692   | " " " Hinge Screw.....                                      | 12   |
| 1518  | 693   | " " " " Nut.....                                            | 04   |
| 5908  | 697   | " Lifting Rock Shaft .....                                  | 45   |
| 5909  | —     | " " " " 5908 with 3166.....                                 | 85   |
| 3166  | 682   | " " " " Crank with 157E and<br>1813.....                    | 40   |
| 157E  | 691   | Feed Lifting Rock Shaft Crank Clamping Scr.                 | 04   |
| 1813  | 693   | " " " " " Roller and Stud                                   | 20   |
| 304C  | 692   | " " " " " Screw Centre.....                                 | 06   |
| 1513  | 693   | " " " " " Nut.....                                          | 05   |
| 3039  | 681   | " Regulator.....                                            | 25   |
| 58E   | 691   | " " Hinge Screw.....                                        | 15   |
| 818D  | 692   | " " Thumb " .....                                           | 12   |
| 5910  | 697   | " Rock Shaft.....                                           | 55   |
| 5911  | —     | " " " 5910 with 5913.....                                   | 75   |
| 5913  | 682   | " " " Crank for 5911.....                                   | 20   |
| 2049  | 686   | " " " " Pin.....                                            | 01   |
| 304C  | 692   | " " " " Screw Centre .....                                  | 06   |
| 1513  | 693   | " " " " " Nut.....                                          | 05   |
| 5981  | —     | Loose Wheel Attachment complete, Nos. 5977<br>and 5993..... | 2 50 |
| 5465  | 678   | Needle Bar.....                                             | 40   |
| 3045  | 681   | " " Connecting Link.....                                    | 30   |
| 377C  | 692   | " " " Hinge Screw.....                                      | 12   |
| 1518  | 693   | " " " " " Nut.....                                          | 04   |
| 2052  | 683   | " " " Stud with 155C.....                                   | 30   |
| 155C  | 691   | " " " " Set Screw.....                                      | 03   |
| 290E  | 692   | " " Screw Bushing.....                                      | 06   |
| 4803  | 686   | " Clamp with 651D, 808 and 4802 .....                       | 45   |
| 808   | 691   | " " Screw .....                                             | 03   |
| 4802  | 686   | " " Thread Guide for 4803.....                              | 10   |
| 651D  | 692   | " " " " Screw.....                                          | 01   |
| 5970  | 679   | Oscillating Rock Shaft (steel) for 1885.....                | 1 00 |
| 3052  | 678   | " " " Hinge Pin.....                                        | 50   |
| 1513  | 693   | " " " " " Nut.....                                          | 05   |
| 635C  | 692   | " " " " " Scr. Bearing                                      | 10   |
| 1513  | 693   | " " " " " Nut.....                                          | 05   |
| 11165 | 695   | Oscillating Rock Shaft Oil Pad.....                         | 01   |
| 5834  | 697   | " Shaft .....                                               | 50   |
| 5917  | 682   | " " Collar with 455C.....                                   | 20   |
| 455C  | 692   | " " " Set Screw .....                                       | 02   |

| No.  | Plate | Name.                                         | Each. |
|------|-------|-----------------------------------------------|-------|
| 5966 | —     | Oscillating Shaft Crank                       | 30    |
| 5967 | 681   | " " " 5966 with 1513 and 1885                 | 75    |
| 2049 | 686   | " " " Pin                                     | 01    |
| 1885 | 693   | " " " Roller and Screw Stud                   | 40    |
| 190  | 691   | " " " " " "                                   |       |
|      |       | Cap Screw                                     | 08    |
| 5968 | 686   | Oscillating Shaft Crank Roller and Screw Stud |       |
|      |       | Cap Screw Washer                              | 02    |
| 1513 | 693   | Oscillating Shaft Crank Roller and Screw Stud |       |
|      |       | Nut                                           | 05    |
| 3054 | 678   | Presser Bar                                   | 35    |
| 5990 | 681   | " " " Lifter                                  | 25    |
| 689c | 691   | " " " " " Screw                               | 08    |
| 1520 | 693   | " " " " " Nut                                 | 03    |
| 5608 | 679   | " " " Lifting Bracket with 453c               | 25    |
| 453c | 692   | " " " " " Set Screw                           | 02    |
| 290E | 692   | " " " Screw Bushing                           | 06    |
| 3056 | 678   | " " " Spring                                  | 05    |
| 2070 | 686   | " " " Washer                                  | 01    |
| 5921 | 689   | " " " Foot (hinged)                           | 2 00  |
| 5922 | —     | " " " " " Bracket                             | 1 00  |
| 5923 | 686   | " " " " " Hinge Pin                           | 01    |
| 5924 | —     | " " " Plate                                   | 1 00  |
| 190D | 691   | " " " " " Screw                               | 08    |
| 262D | 692   | Pressure Regulating Thumb Screw               | 25    |
| 5733 | —     | Shuttle, 2½-inch diam., with 5810             | 5 00  |
| 5810 | 684   | " " Bobbin (solid and hardened)               | 25    |
| 5784 | 684   | " " " Case, includes 591, 592E, 5785,         |       |
|      |       | 5789, 5838, 5933 and 5935                     | 2 50  |
| 5785 | —     | Shuttle Bobbin Case Hinge, includes 5786,     |       |
|      |       | 5787 and 5788                                 | 60    |
| 5786 | 684   | Shuttle Bobbin Case Latch                     | 25    |
| 5787 | 684   | " " " " " Lever                               | 25    |
| 5788 | 684   | " " " " " Fulcrum Pin,                        |       |
|      |       | per 100                                       | 25    |
| 5838 | —     | Shuttle Bobbin Case Latch Spring              | 05    |
| 592E | 692   | " " " " " Stop Screw                          | 02    |
| 5789 | 684   | Shuttle Bobbin Case Position Finger           | 10    |
| 5938 | 684   | " " " " " Rivet,                              |       |
|      |       | per 100                                       | 25    |
| 5934 | 684   | Shuttle Body                                  | 2 50  |
| 5832 | 677   | " " " Driver                                  | 1 25  |
| 2049 | 686   | " " " Pin                                     | 01    |
| 5972 | 677   | " " " Race, includes 741D, 5938, 5939, 5942,  |       |
|      |       | 5973 and two each 219 and 5965                | 3 50  |
| 5938 | 677   | Shuttle Race Back                             | 60    |
| 5965 | 686   | " " " " " Dowel Pin.....per 100..             | 10    |
| 5939 | 677   | " " " " " Spring                              | 30    |
| 741D | 691   | " " " " " Screw                               | 05    |
| 5973 | —     | " " " Body                                    | 2 00  |
| 5942 | 677   | " " " Cap                                     | 30    |
| 219  | 691   | " " " " " Screw                               | 02    |

| No.   | Plate | Name                                            | Each |
|-------|-------|-------------------------------------------------|------|
| 5943  | 677   | Shuttle Race Frame with 5944                    | 2 50 |
| 129E  | 691   | " " " " " Clamping Screw                        | 04   |
| 5944  | 686   | " " " " " Steady Pin                            | 01   |
| 145   | 691   | " " " " " Screw                                 | 04   |
| 5945  | —     | " " " " " Slide                                 | 40   |
| 5946  | 677   | " " " " " 5945 with 5947 and two 240D           | 50   |
| 5947  | 682   | " " " " " Spring                                | 10   |
| 240D  | 691   | " " " " " " " Screw                             | 01   |
| 591   | 692   | " " " Tension Regulating Screw                  | 02   |
| 5935  | 684   | " " " " " Spring                                | 30   |
| 1560  | 693   | Tension Regulating Thumb Nut                    | 04   |
| 817   | 693   | " " " " " Screw Stud                            | 13   |
| 448c  | 691   | " " " " " Set Screw                             | 08   |
| 2108  | 685   | " " " " " Spring                                | 03   |
| 2105  | 686   | " " " " " Thread Guard                          | 03   |
| 5983  | 686   | " " " " " Washer (felt)                         | 01   |
| 5984  | 686   | " " " " " (steel)                               | 01   |
| 5795  | 686   | " " " " " Wheel                                 | 40   |
| 5797  | —     | " " " " " complete (wheel), includes 817, 1560, |      |
|       |       | 2103, 5795 and two each 5983 and 5984           | 65   |
| 12296 | 686   | Thread Eyelet (side of arm)                     | 02   |
| 2107  | 686   | " " " " " Guard                                 | 02   |
| 233D  | 691   | " " " " " Screw                                 | 02   |
| 2455  | 685   | " " " " " Retainer Disc                         | 02   |
| 1562  | 693   | " " " " " Regulating Thumb Nut                  | 04   |
| 418D  | 693   | " " " " " Screw Stud                            | 08   |
| 10141 | 685   | " " " " " Spring                                | 01   |
| 5989  | —     | " " " " " complete, includes 418D, 1562,        |      |
|       |       | 10141 and two 2455                              | 15   |
| 13017 | 678   | Thread Take-up Cam (steel) with 446c            | 1 25 |
| 3012  | 683   | " " " " " Pin                                   | 01   |
| 446c  | 691   | " " " " " Set Screw                             | 03   |
| 5954  | 678   | " " " " " Lever with 1819                       | 75   |
| 76c   | 691   | " " " " " Hinge Screw                           | 05   |
| 1819  | 693   | " " " " " Roller and Stud                       | 20   |
| 5991  | 686   | " " " " " Spring                                | 03   |
| 2127  | 686   | " " " " " Regulator Plate                       | 08   |
| 233D  | 691   | " " " " " " " Screw                             | 02   |
| 5775  | 689   | Throat Plate for 5774                           | 1 25 |
| 5777  | 688   | " " " " " 5776                                  | 1 25 |
| 5802  | 689   | " " " " " Carpet Mitres, for 5774               | 1 25 |
| 5950  | 690   | " " " " " 5905                                  | 1 25 |
| 5951  | 690   | " " " " " 5906                                  | 1 25 |
| 742   | 692   | " " " " " Screw                                 | 05   |

## 42-3 MACHINE.

C. B. DROP FEED, BOTH SIDES OF NEEDLE, VIBRATING PRESSER,  
LINK NEEDLE BAR CONNECTION CLOTH.

This Machine is Composed of the SAME PARTS as 42-2 Machine,  
Excepting:

| No     | Plate. | Name.                                                         | Each |
|--------|--------|---------------------------------------------------------------|------|
| * 5819 | —      | Arm, substituting 4287.....                                   | 6 00 |
| 5820   | 675    | Face Plate for 5797 and 5989, substituting 5982.....          | 75   |
| 5774   | 689    | Feed Dog (double), 12 teeth.....                              | 1 00 |
| 5821   | 675    | Lifting Lever.....                                            | 1 25 |
| 5822   | 676    | " " Adjusting Block.....                                      | 50   |
| 5823   | 676    | " " " " Roller.....                                           | 12   |
| 5824   | 676    | " " " " " Pin.....                                            | 05   |
| 266D   | 676    | " " " " Thumb Screw.....                                      | 12   |
| 248    | 676    | " " " " " ".....                                              |      |
|        |        | Stop Screw.....                                               | 02   |
| 5835   | 676    | Lifting Lever Hinge Bracket.....                              | 50   |
| 180    | 691    | " " " " " Screw.....                                          | 03   |
| 4810   | 683    | " " " " " Stud.....                                           | 10   |
| 207D   | 691    | " " " " " " Scr.....                                          | 02   |
| 3146   | 686    | " " " " " " Washer.....                                       | 01   |
| 5836   | —      | " " " " " 5835 with 4810.....                                 | 65   |
| 5825   | —      | " " " " " 5831 with 248, 266D, 5822 to 5824.....              | 2 00 |
| 5826   | 676    | " " Cam for 5764.....                                         | 75   |
| 902E   | —      | " " " Screw.....                                              | 12   |
| 3147   | —      | Needle Bar Connecting Stud with 155c, substituting 2052.....  | 30   |
|        |        | 155c 691 Needle Bar Connecting Stud Set Screw.....            | 03   |
| 5827   | 675    | Presser Bar Lifting Bracket with 453c, substituting 5808..... | 35   |
| 5764   | 680    | Thread Take-up Cam (steel) with 446c, substituting 13017..... | 1 50 |
| 5828   | 675    | Thread Take-up Lever with 1819, substituting 5954.....        | 85   |
| 5802   | 689    | Throat Plate.....                                             | 1 25 |
| 742    | 692    | " " " Screw.....                                              | 05   |
| 5829   | 675    | Vibrating Presser.....                                        | 2 00 |
| 5837   | 676    | " " " Guide Bracket.....                                      | 75   |
| 190    | 691    | " " " " " Screw.....                                          | 03   |
| 5830   | 676    | " " " Hinge Bracket with 453c.....                            | 75   |
| 212D   | 691    | " " " " " Cap Screw.....                                      | 04   |
| 453c   | 692    | " " " " " Set ".....                                          | 02   |
| 5831   | 676    | " " " Spring.....                                             | 05   |
| 233D   | 691    | " " " " Screw.....                                            | 02   |
| 2269   | 686    | " " " Stop Pin.....                                           | 01   |

## 42-4 MACHINE.

DROP FEED AT LEFT OF NEEDLE, ROLLER PRESSER, LINK  
NEEDLE BAR CONNECTION, CYLINDER SHUTTLE,  
LEATHER.

| No.    | Plate. | Name.                                                                        | Each |
|--------|--------|------------------------------------------------------------------------------|------|
| * 4287 | —      | Arm.....                                                                     | 4 50 |
| 2002   | 686    | " Dowel Pin.....                                                             | 02   |
| 4448   | 695    | " Oil Tube for intermediate bearing.....                                     | 06   |
| 123E   | 691    | " Screw.....                                                                 | 06   |
| 6109   | 696    | " Shaft for 3011.....                                                        | 1 50 |
| 6107   | 696    | " " " 5977.....                                                              | 1 50 |
| 3005   | 678    | " " Bushing (back).....                                                      | 25   |
| 448c   | 691    | " " " " Set Screw.....                                                       | 03   |
| * 4449 | —      | " " " (front).....                                                           | 30   |
| 144D   | 691    | " " Screw.....                                                               | 12   |
| 4288   | 678    | " Side Cover.....                                                            | 10   |
| 286D   | 692    | " " " Thumb Screw.....                                                       | 08   |
| 5811   | 695    | " Spool Pin and Thread Eyelet.....                                           | 05   |
| 3011   | 696    | Balance Wheel (two-speed) for 6109 with two 448c.....                        | 1 75 |
| 5977   | 696    | Balance Wheel (two-speed) for Loose Wheel Attachment 5981.....               | 1 75 |
| 448c   | 691    | Balance Wheel Set Screw.....                                                 | 03   |
| * 5992 | —      | Bed.....                                                                     | 5 00 |
| 3016   | 679    | " Hinge.....                                                                 | 03   |
| 3017   | —      | " " (half butt) for 5992.....                                                | 02   |
| 3018   | —      | " " " " wood table.....                                                      | 02   |
| 3020   | 683    | " " Pin.....                                                                 | 01   |
| 3021   | 686    | " " Rivet..... per 100.....                                                  | 25   |
| 5969   | 697    | Crank Connecting Rod.....                                                    | 80   |
| * 4349 | —      | " " " Cap.....                                                               | —    |
| 158E   | 691    | " " " " Screw.....                                                           | 03   |
| 506c   | 692    | " " " Hinge Screw.....                                                       | 15   |
| 1513   | 693    | " " " " Nut.....                                                             | 05   |
| 5978   | 696    | Driving Flange.....                                                          | 50   |
| 5979   | 683    | " " Latch.....                                                               | 10   |
| 136    | 691    | " " " Hinge Screw.....                                                       | 04   |
| 435c   | 691    | " " Set Screw.....                                                           | 04   |
| 5980   | 683    | " " Spring.....                                                              | 05   |
| 330D   | 692    | " " " Screw.....                                                             | 03   |
| 5993   | —      | " " 5978 with 136, 330D, 5979 and 5980, for Loose Wheel Attachment 5981..... | 75   |
| 5982   | 696    | Face Plate for 5797 and 5989.....                                            | 75   |
| 164D   | 691    | " " Screw.....                                                               | 04   |
| 5994   | 679    | Feed Bar.....                                                                | 30   |
| 313c   | 692    | " " Screw Centre.....                                                        | 04   |
| 1519   | 693    | " " " Nut.....                                                               | 03   |
| 3032   | 678    | " Cam with 446c.....                                                         | 35   |
| 446c   | 691    | " " Set Screw.....                                                           | 03   |

| No.  | Plate | Name                                          | Each |
|------|-------|-----------------------------------------------|------|
| 3038 | 681   | Feed Connecting Link.....                     | 20   |
| 3750 | 692   | " " " Hinge Screw.....                        | 12   |
| 1518 | 693   | " " " " Nut.....                              | 04   |
| 5995 | 688   | " Dog (leather) 8 teeth.....                  | 40   |
| 1910 | 691   | " " Screw.....                                | 03   |
| 3037 | 697   | " Forked Connection.....                      | 60   |
| 3750 | 692   | " " " Hinge Screw.....                        | 12   |
| 1518 | 693   | " " " " Nut.....                              | 04   |
| 5996 | 697   | " Lifting Rock Shaft.....                     | 50   |
| 5997 | 679   | " " " " Crank Fork with 157E                  | 40   |
| 157E | 691   | " " " " Fork Clamp-                           |      |
|      |       | ing Screw.....                                | 04   |
| 5998 | 679   | Feed Lifting Rock Shaft Crank with 1813 and   |      |
|      |       | two 172E.....                                 | 50   |
| 172E | 691   | Feed Lifting Rock Shaft Crank Clamping        |      |
|      |       | Screw for 5998.....                           | 04   |
| 1813 | 693   | Feed Lifting Rock Shaft Crank Roller and Stud | 20   |
| 3039 | 681   | " Regulator.....                              | 25   |
| 58E  | 691   | " " Hinge Screw.....                          | 15   |
| 818D | 692   | " " Thumb ".....                              | 12   |
| 3042 | 697   | Feed Rock Shaft.....                          | 35   |
| 3041 | —     | " " " 3042 with 3043.....                     | 50   |
| 3043 | 682   | " " " Crank.....                              | 15   |
| 2049 | 686   | " " " Pin.....                                | 01   |
| 3040 | 692   | " " " Screw Centre.....                       | 06   |
| 1513 | 693   | " " " " Nut.....                              | 05   |
| 5981 | —     | Loose Wheel Attachment complete, Nos. 5977    |      |
|      |       | and 5993.....                                 | 2 50 |
| 5465 | 678   | Needle Bar.....                               | 40   |
| 3045 | 681   | " " Connecting Link.....                      | 30   |
| 3770 | 692   | " " " Hinge Screw.....                        | 12   |
| 1518 | 693   | " " " " Nut.....                              | 04   |
| 2052 | 683   | " " " Stud with 1550.....                     | 30   |
| 1550 | 691   | " " " " Set Screw.....                        | 03   |
| 290E | 692   | " " Screw Bushing.....                        | 06   |
| 4803 | 686   | " Clamp with 651D, 808 and 4802.....          | 45   |
| 808  | 691   | " " Screw.....                                | 03   |
| 4802 | 686   | " " Thread Guide.....                         | 10   |
| 651D | 692   | " " " Screw.....                              | 01   |
| 5778 | 696   | Oil Cup.....                                  | 55   |
| 5779 | 695   | " " Pad (felt).....                           | 02   |
| 211  | 692   | " " " Screw.....                              | 02   |
| 7071 | 695   | " " " Washer.....                             | 01   |
| 1350 | 691   | " " " Screw.....                              | 05   |
| 5780 | 695   | " " Thread Eyelet.....                        | 01   |
| 5781 | —     | " " complete, includes Nos. 211, 5778, 5779,  |      |
|      |       | 5780 and 7071.....                            | 60   |
| 5970 | 679   | Oscillating Rock Shaft (steel) for 1885.....  | 1 00 |
| 3052 | 678   | " " " Hinge Pin.....                          | 50   |
| 1513 | 693   | " " " " Nut.....                              | 05   |
| 6350 | 692   | " " " " Scr. Bearing                          | 10   |

| No.   | Plate | Name                                            | Each |
|-------|-------|-------------------------------------------------|------|
| 1513  | 693   | Oscillating Rock Shaft Hinge Pin Scr. Bearing   |      |
|       |       | Nut.....                                        | 05   |
| 11185 | 695   | Oscillating Rock Shaft Oil Pad.....             | 01   |
| 5884  | 697   | " Shaft.....                                    | 50   |
| 5917  | 682   | " " Collar with 4550.....                       | 20   |
| 4550  | 692   | " " " Set Screw.....                            | 02   |
| 5999  | —     | " " Crank.....                                  | 30   |
| 6000  | —     | " " " 5999 with 1513 and 1885                   | 75   |
| 2049  | 686   | " " " Pin.....                                  | 01   |
| 1885  | 693   | " " " Roller and Screw Stud                     | 40   |
| 190   | 691   | " " " " " " " " "                               |      |
|       |       | Cap Screw.....                                  | 03   |
| 5968  | 686   | Oscillating Shaft Crank Roller and Screw Stud   |      |
|       |       | Cap Screw Washer.....                           | 02   |
| 1513  | 693   | Oscillating Shaft Crank Roller and Screw Stud   |      |
|       |       | Nut.....                                        | 05   |
| 3054  | 678   | Presser Bar.....                                | 35   |
| 5990  | 681   | " " Lifter.....                                 | 25   |
| 6890  | 691   | " " " Screw.....                                | 08   |
| 1520  | 693   | " " " " Nut.....                                | 03   |
| 5608  | 679   | " " Lifting Bracket with 4580.....              | 25   |
| 4580  | 692   | " " " " Set Screw.....                          | 02   |
| 290E  | 692   | " " Screw Bushing.....                          | 06   |
| 3056  | 678   | " " Spring.....                                 | 05   |
| 2070  | 686   | " " " Washer.....                               | 01   |
| 5971  | 687   | " Foot (long shank).....                        | 75   |
| 190D  | 691   | " " Screw.....                                  | 03   |
| 262D  | 692   | Pressure Regulating Thumb Screw.....            | 25   |
| 5964  | 687   | Roller Presser complete, 1½-in., includes 176,  |      |
|       |       | 440, 1549, 1875, 2205, 3223, 6535, and two      |      |
|       |       | each 316 and 1547.....                          | 1 30 |
| 1875  | —     | Roller, 1½-in., with 634D and 1528.....         | 60   |
| 6535  | —     | " Arm.....                                      | 20   |
| 440C  | 691   | " " Adjusting Screw.....                        | 03   |
| 1547  | 693   | " " " " Nut.....                                | 03   |
| 3223  | —     | " " Bracket.....                                | 20   |
| 3160  | 692   | " " " Screw Centre.....                         | 03   |
| 1547  | 693   | " " " " Nut.....                                | 03   |
| 2205  | 695   | " " Lock Spring.....                            | 04   |
| 176   | 691   | " " " " Screw.....                              | 03   |
| 1549  | 693   | " " " " Nut.....                                | 03   |
| 634D  | 692   | " Screw.....                                    | 08   |
| 1528  | 693   | " " Nut.....                                    | 03   |
| 5751  | 685   | Shuttle (cylinder), 2½-in. diam., with 14535... | 6 00 |
| 14535 | 685   | " Bobbin (solid and hardened).....              | 25   |
| 12098 | 685   | " Cylinder.....                                 | 2 50 |
| 12000 | 685   | " " Hinge Pin.....                              | 02   |
| 12001 | 685   | " " Latch.....                                  | 15   |
| 12002 | 685   | " " " Pin.....                                  | 01   |
| 12003 | 685   | " " " Spring.....                               | 03   |

| No.   | Plate. | Name.                                                                                        | Each |
|-------|--------|----------------------------------------------------------------------------------------------|------|
| 590E  | 692    | Shuttle Cylinder Latch Spring Screw.....                                                     | 02   |
| 583B  | 679    | " Driver.....                                                                                | 1 25 |
| 2049  | 686    | " " Pin.....                                                                                 | 01   |
| 5752  | 685    | " Frame.....                                                                                 | 2 75 |
| 5754  | 677    | Shuttle Race, includes 741D, 5755, 5756, 5760,<br>5988, 5939 and two each 219, 5790 and 5965 | 3 50 |
| 5988  | 677    | Shuttle Race Back.....                                                                       | 60   |
| 5965  | 686    | " " Dowel Pin.....per 100..                                                                  | 10   |
| 5939  | 677    | " " Spring.....                                                                              | 30   |
| 741D  | 691    | " " Screw.....                                                                               | 05   |
| 5755  | —      | " " Body.....                                                                                | 2 00 |
| 5760  | 683    | " " Cap (left).....                                                                          | 10   |
| 5756  | 683    | " " (right).....                                                                             | 10   |
| 5790  | 686    | " " Dowel Pin.....                                                                           | —    |
| 219   | 691    | " " Screw.....                                                                               | 02   |
| 5943  | 677    | " " Frame with 5944.....                                                                     | 2 50 |
| 129E  | 691    | " " Clamping Screw.....                                                                      | 04   |
| 5944  | 686    | " " Steady Pin.....                                                                          | 01   |
| 145   | 691    | " " Screw.....                                                                               | 04   |
| 5945  | —      | " " Slide.....                                                                               | 40   |
| 5946  | 677    | " " 5945 with 5947 and two 240D                                                              | 50   |
| 5947  | 682    | " " Spring.....                                                                              | 10   |
| 240D  | 691    | " " Screw.....                                                                               | 01   |
| 773C  | 692    | " Tension Regulating Screw.....                                                              | 05   |
| 12095 | 685    | " " Spring.....                                                                              | 40   |
| 1560  | 693    | Tension Regulating Thumb Nut.....                                                            | 04   |
| 817   | 693    | " Screw Stud.....                                                                            | 12   |
| 448C  | 691    | " " Set Screw.....                                                                           | 03   |
| 2103  | 685    | " Spring.....                                                                                | 03   |
| 2105  | 686    | " Thread Guard.....                                                                          | 03   |
| 5982  | 686    | " Washer (felt).....                                                                         | 01   |
| 5984  | 686    | " " (steel).....                                                                             | 01   |
| 5795  | 686    | " Wheel.....                                                                                 | 40   |
| 5797  | —      | " complete (wheel), includes 817, 1560,<br>2103, 5795 and two each 5983 and 5984             | 65   |
| 12296 | 686    | Thread Eyelet (side of arm).....                                                             | 02   |
| 2107  | 686    | " Guard.....                                                                                 | 02   |
| 283D  | 691    | " " Screw.....                                                                               | 02   |
| 2455  | 685    | " Retainer Disc.....                                                                         | 02   |
| 1562  | 693    | " " Regulating Thumb Nut.....                                                                | 04   |
| 418D  | 693    | " " Screw Stud.....                                                                          | 09   |
| 10141 | 685    | " " Spring.....                                                                              | 01   |
| 5989  | —      | " " complete, includes 418D, 1562,<br>10141 and two 2455                                     | 15   |
| 5757  | 678    | Thread Take-up Cam (steel) with 446C.....                                                    | 1 25 |
| 3012  | 683    | " " Pin.....                                                                                 | 01   |
| 446C  | 691    | " " Set Screw.....                                                                           | 03   |
| 5758  | 678    | " " Lever with 1819.....                                                                     | 75   |
| 76C   | 691    | " " Hinge Screw.....                                                                         | 05   |
| 1819  | 693    | " " Roller and Stud.....                                                                     | 20   |

| No.  | Plate. | Name.                      | Each |
|------|--------|----------------------------|------|
| 5991 | 686    | Thread Take-up Spring..... | 03   |
| 2127 | 686    | " " Regulator Plate.....   | 03   |
| 283D | 691    | " " " " " Screw ..         | 02   |
| 5759 | 688    | Throat Plate.....          | 1 25 |
| 742  | 692    | " " Screw.....             | 05   |

## 42-5 MACHINE.

DROP FEED, CYLINDER SHUTTLE, ALTERNATING PRESSERS.

| No.    | Plate. | Name.                                                                          | Each |
|--------|--------|--------------------------------------------------------------------------------|------|
| * 5801 | —      | Arm.....                                                                       | 6 00 |
| 2002   | 686    | " Dowel Pin.....                                                               | 02   |
| 4448   | 695    | " Oil Tube for intermediate bearing.....                                       | 06   |
| 123E   | 691    | " Screw.....                                                                   | 06   |
| 6109   | 696    | " Shaft for 8011.....                                                          | 1 50 |
| 6107   | 696    | " " 5977.....                                                                  | 1 50 |
| 3005   | 678    | " " Bushing (back).....                                                        | 25   |
| 448C   | 691    | " " " " Set Screw.....                                                         | 03   |
| * 4449 | —      | " " (front).....                                                               | 30   |
| 144D   | 691    | " " Screw.....                                                                 | 12   |
| 4288   | 678    | " Side Cover.....                                                              | 10   |
| 286D   | 692    | " " " Thumb Screw.....                                                         | 08   |
| 5811   | 695    | " Spool Pin and Thread Eyelet.....                                             | 05   |
| 3011   | 696    | Balance Wheel (two-speed) for 6109 with two<br>448C.....                       | 1 75 |
| 5977   | 696    | Balance Wheel (two-speed) for Loose Wheel<br>Attachment 5981.....              | 1 75 |
| 448C   | 691    | Balance Wheel Set Screw.....                                                   | 03   |
| * 5992 | —      | Bed.....                                                                       | 5 00 |
| 3016   | 679    | " Hinge.....                                                                   | 03   |
| 3017   | —      | " " (half butt) for 5992.....                                                  | 02   |
| 3018   | —      | " " " " Wood Table.....                                                        | 02   |
| 3020   | 683    | " " Pin.....                                                                   | 01   |
| 3021   | 686    | " " Rivet.....per 100..                                                        | 25   |
| 5969   | 697    | Crank Connecting Rod.....                                                      | 80   |
| * 4349 | —      | " " " Cap.....                                                                 | —    |
| 158E   | 691    | " " " " Screw.....                                                             | 08   |
| 566C   | 692    | " " " Hinge Screw.....                                                         | 15   |
| 1513   | 693    | " " " " Nut.....                                                               | 05   |
| 5978   | 696    | Driving Flange.....                                                            | 50   |
| 5979   | 683    | " " Latch.....                                                                 | 10   |
| 136    | 691    | " " " Hinge Screw.....                                                         | 04   |
| 435C   | 691    | " " Set Screw.....                                                             | 04   |
| 5980   | 683    | " " Spring.....                                                                | 05   |
| 330D   | 692    | " " " Screw.....                                                               | 08   |
| 5993   | —      | " " 5978 with 136, 330D, 5979 and<br>5980, for Loose Wheel Attachment 5981.... | 75   |

| No.  | Plate | Name                                                                                                     | Each |
|------|-------|----------------------------------------------------------------------------------------------------------|------|
| 5791 | 696   | Face Plate for 5797 and 5999.....                                                                        | 75   |
| 175  | 691   | " " Screw.....                                                                                           | 02   |
| 5994 | 679   | Feed Bar.....                                                                                            | 30   |
| 8130 | 692   | " " " " Screw Centre.....                                                                                | 04   |
| 1519 | 693   | " " " " " Nut.....                                                                                       | 03   |
| 3032 | 678   | " " " " " Cam with 4460.....                                                                             | 35   |
| 4460 | 691   | " " " " " Set Screw.....                                                                                 | 03   |
| 3033 | 681   | " " " " " Connecting Link.....                                                                           | 20   |
| 8750 | 692   | " " " " " Hinge Screw.....                                                                               | 12   |
| 1518 | 693   | " " " " " " Nut.....                                                                                     | 04   |
| 5995 | 688   | " " " " " Dog (leather), 8 teeth.....                                                                    | 40   |
| 1910 | 691   | " " " " " " Screw.....                                                                                   | 03   |
| 3037 | 697   | " " " " " Forked Connection.....                                                                         | 60   |
| 8750 | 692   | " " " " " " Hinge Screw.....                                                                             | 12   |
| 1518 | 693   | " " " " " " Nut.....                                                                                     | 04   |
| 5996 | 697   | " " " " " Lifting Rock Shaft.....                                                                        | 50   |
| 5997 | 679   | " " " " " " Crank Fork with 157E.....                                                                    | 40   |
| 157E | 691   | " " " " " " " Clamping<br>Screw.....                                                                     | 04   |
| 5998 | 679   | Feed Lifting Rock Shaft Crank with 1813 and<br>two 172E.....                                             | 50   |
| 172E | 691   | Feed Lifting Rock Shaft Crank Clamping<br>Screw for 5998.....                                            | 04   |
| 1813 | 693   | Feed Lifting Rock Shaft Crank Roller and<br>Stud.....                                                    | 20   |
| 3039 | 681   | Feed Regulator.....                                                                                      | 25   |
| 58E  | 691   | " " " " " Hinge Screw.....                                                                               | 15   |
| 8180 | 692   | " " " " " Thumb.....                                                                                     | 12   |
| 3042 | 697   | " " " " " Rock Shaft.....                                                                                | 35   |
| 3041 | —     | " " " " " 3042 with 3043.....                                                                            | 50   |
| 3043 | 682   | " " " " " Crank.....                                                                                     | 15   |
| 2049 | 686   | " " " " " " Pin.....                                                                                     | 01   |
| 3040 | 692   | " " " " " " Screw Centre.....                                                                            | 06   |
| 1513 | 693   | " " " " " " Nut.....                                                                                     | 05   |
| 3126 | 680   | Guide Bar.....                                                                                           | 1 50 |
| 4730 | —     | " " " " " 3126 with 337, 2361, 3134, 3135,<br>3137, 4723 and two each 602D, 2362, and<br>three 404D..... | 5 00 |
| 3130 | 682   | Guide Bar Driving Crank with 1862 and 3131.....                                                          | 75   |
| 1862 | —     | " " " " " Roller.....                                                                                    | 12   |
| 3131 | —     | " " " " " Roller Cap.....                                                                                | 05   |
| 3094 | 686   | " " " " " Wedge.....                                                                                     | 10   |
| 6900 | 691   | " " " " " " Adjusting<br>Screw.....                                                                      | 05   |
| 4723 | 683   | Guide Bar Lifting Bracket with 6260.....                                                                 | 1 25 |
| 6260 | 693   | " " " " " Guide Screw Stud.....                                                                          | 10   |
| 404D | 692   | " " " " " " Screw.....                                                                                   | 02   |
| 3054 | 678   | Lifting Presser Bar.....                                                                                 | 35   |
| 3133 | 680   | " " " " " Bracket with 641E and<br>1823.....                                                             | 35   |

| No.   | Plate. | Name.                                                                 | Each |
|-------|--------|-----------------------------------------------------------------------|------|
| 641E  | 691    | Lifting Presser Bar Bracket Clamp Screw.....                          | 03   |
| 1823  | 693    | " " " " " Roller and Stud.....                                        | 18   |
| 5792  | 683    | " " " " " Foot.....                                                   | 40   |
| 193   | 691    | " " " " " " Screw.....                                                | 03   |
| 5981  | —      | Loose Wheel Attachment complete, Nos. 5977<br>and 5993.....           | 2 50 |
| 4264  | 680    | Needle Bar.....                                                       | 40   |
| 3098  | 682    | " " " " " Connecting Link with 3900.....                              | 75   |
| 3900  | 692    | " " " " " " Adjusting Screw.....                                      | 02   |
| 2305  | 695    | " " " " " Stud with 1550.....                                         | 30   |
| 1550  | 691    | " " " " " " Set Screw.....                                            | 03   |
| 4265  | 686    | " " " " " Clamp with 196.....                                         | 25   |
| 4266  | 686    | " " " " " Thread Guide.....                                           | 10   |
| 651   | 692    | " " " " " " Screw.....                                                | 01   |
| 196   | 676    | " " " " " " Screw.....                                                | 02   |
| 5778  | 696    | Oil Cup.....                                                          | 55   |
| 5779  | 695    | " " " " " Pad (felt).....                                             | 02   |
| 211   | 692    | " " " " " " Screw.....                                                | 02   |
| 7071  | 695    | " " " " " Washer.....                                                 | 01   |
| 135D  | 691    | " " " " " " Screw.....                                                | 05   |
| 5780  | 695    | " " " " " Thread Eyelet.....                                          | 01   |
| 5781  | —      | " " " " " complete, includes 211, 5778, 5779,<br>5780 and 7071.....   | 60   |
| 5970  | 679    | Oscillating Rock Shaft (steel) for 1885.....                          | 1 00 |
| 3052  | 678    | " " " " " Hinge Pin.....                                              | 50   |
| 1513  | 693    | " " " " " " Nut.....                                                  | 05   |
| 6350  | 692    | " " " " " " Scr. Bearing.....                                         | 10   |
| 1513  | 693    | " " " " " " " " " " " Nut.....                                        | 05   |
| 11165 | 695    | Oscillating Rock Shaft Oil Pad.....                                   | 01   |
| 5834  | 697    | " " " " " Shaft.....                                                  | 50   |
| 5917  | 682    | " " " " " Collar with 4550.....                                       | 20   |
| 4550  | 692    | " " " " " " Set Screw.....                                            | 02   |
| 5999  | —      | " " " " " Crank.....                                                  | 30   |
| 6000  | —      | " " " " " 5999 with 1513 and<br>1885.....                             | 75   |
| 2049  | 686    | Oscillating Shaft Crank Pin.....                                      | 01   |
| 1885  | 693    | " " " " " Roller and Scr. Stud.....                                   | 40   |
| 190   | 691    | " " " " " " " " " " " Cap Screw.....                                  | 03   |
| 5968  | 686    | Oscillating Shaft Crank Roller and Scr. Stud<br>Cap Screw Washer..... | 02   |
| 1513  | 693    | Oscillating Shaft Crank Roller and Scr. Stud<br>Nut.....              | 05   |
| 23590 | 695    | Presser Bar Lifter.....                                               | 25   |
| 5980  | 691    | " " " " " " Screw.....                                                | 06   |
| 3100  | 679    | " " " " " Spring.....                                                 | 05   |
| 2070  | 686    | " " " " " Washer.....                                                 | 01   |
| 262D  | 692    | Pressure Regulating Thumb Screw.....                                  | 25   |
| 5751  | 685    | Shuttle (cylinder), 2½-in. diam., with 14535.....                     | 6 00 |
| 14535 | 685    | " " Bobbin (solid and hardened).....                                  | 25   |

| No.   | Plate. | Name.                                                                                                | Each |
|-------|--------|------------------------------------------------------------------------------------------------------|------|
| 12093 | 685    | Shuttle Cylinder.....                                                                                | 2 50 |
| 12000 | 685    | " " Hinge Pin.....                                                                                   | 03   |
| 12001 | 685    | " " Latch.....                                                                                       | 15   |
| 12002 | 685    | " " Pin.....                                                                                         | 01   |
| 12003 | 685    | " " Spring.....                                                                                      | 03   |
| 590E  | 692    | " " " Screw.....                                                                                     | 03   |
| 5833  | 679    | " Driver.....                                                                                        | 1 25 |
| 2049  | 686    | " " Pin.....                                                                                         | 01   |
| 5752  | 685    | " Frame.....                                                                                         | 2 75 |
| 5754  | 677    | " Race, includes Nos. 741D, 5755, 5756,<br>5760, 5938, 5939 and two each 219, 5790,<br>and 5965..... | 3 50 |
| 5938  | 677    | Shuttle Race Back.....                                                                               | 60   |
| 5965  | 686    | " " Dowel Pin.....per 100..                                                                          | 10   |
| 5939  | 677    | " " Spring.....                                                                                      | 30   |
| 741D  | 691    | " " " Screw.....                                                                                     | 05   |
| 5755  | —      | " " Body.....                                                                                        | 2 00 |
| 5760  | 683    | " " Cap (left).....                                                                                  | 10   |
| 5756  | 683    | " " " (right).....                                                                                   | 10   |
| 5790  | 686    | " " Dowel Pin.....                                                                                   | —    |
| 219   | 691    | " " Screw.....                                                                                       | 03   |
| 5943  | 677    | " " Frame with 5944.....                                                                             | 2 50 |
| 129E  | 691    | " " Clamping Screw.....                                                                              | 04   |
| 5944  | 686    | " " Steady Pin.....                                                                                  | 01   |
| 145   | 691    | " " Screw.....                                                                                       | 04   |
| 5945  | —      | " " Slide.....                                                                                       | 40   |
| 5946  | 677    | " " 5945 with 5947 and two 240D.....                                                                 | 50   |
| 5947  | 682    | " " Spring.....                                                                                      | 10   |
| 240D  | 691    | " " " Screw.....                                                                                     | 01   |
| 7730  | 692    | " Tension Regulating Screw.....                                                                      | 05   |
| 12095 | 685    | " " Spring.....                                                                                      | 40   |
| 1560  | 693    | Tension Regulating Thumb Nut.....                                                                    | 04   |
| 817   | 693    | " " Screw Stud.....                                                                                  | 12   |
| 4480  | 691    | " " " Set Screw.....                                                                                 | 03   |
| 2103  | 685    | " Spring.....                                                                                        | 03   |
| 2105  | 686    | " Thread Guard.....                                                                                  | 03   |
| 5983  | 686    | " Washer (felt).....                                                                                 | 01   |
| 5984  | 686    | " " (steel).....                                                                                     | 01   |
| 5795  | 686    | " Wheel.....                                                                                         | 40   |
| 5797  | —      | " complete (wheel) includes 817, 1560,<br>2103, 5795 and two each 5983 and 5984.....                 | 65   |
| 12296 | 686    | Thread Eyelet (side of arm).....                                                                     | 02   |
| 2108  | —      | " Guard.....                                                                                         | 01   |
| 233D  | 691    | " " Screw.....                                                                                       | 02   |
| 2455  | 685    | " Retainer Disc.....                                                                                 | 03   |
| 1562  | 693    | " " Regulating Thumb Nut.....                                                                        | 04   |
| 418D  | 693    | " " Screw Stud.....                                                                                  | 08   |
| 10141 | 685    | " " Spring.....                                                                                      | 01   |
| 5939  | —      | " " complete, includes 418D, 1562,<br>10141 and two 2455.....                                        | 15   |

| No.  | Plate. | Name                                      | Each |
|------|--------|-------------------------------------------|------|
| 5793 | 680    | Thread Take-up Cam (steel) with 4460..... | 1 50 |
| 3012 | 683    | " " " Pin.....                            | 01   |
| 4460 | 691    | " " " Set Screw.....                      | 03   |
| 5758 | 678    | " " Lever with 1819.....                  | 75   |
| 760  | 691    | " " " Hinge Screw.....                    | 05   |
| 1819 | 693    | " " " Roller and Stud.....                | 20   |
| 5991 | 686    | " " Spring.....                           | 03   |
| 2127 | 686    | " " " Regulator Plate.....                | 03   |
| 233D | 691    | " " " " Screw.....                        | 02   |
| 5759 | 688    | Throat Plate for 5995.....                | 1 25 |
| 742  | 692    | " " " Screw.....                          | 05   |
| 3134 | 680    | Vibrating Presser Bar.....                | 45   |
| 2361 | 683    | " " " Hinge Bracket.....                  | 50   |
| 2362 | —      | " " " " Rivet.....                        | 01   |
| 602D | 691    | " " " " Cap Screw.....                    | 02   |
| 3135 | 680    | " " " Lifting Bell Crank....              | 75   |
| 602D | 691    | " " " " " " " " Hinge Cap Screw.....      | 02   |
| 5794 | 683    | Vibrating Presser Foot.....               | 60   |
| 217  | 691    | " " " " Screw.....                        | 03   |
| 3137 | 682    | " " Spring.....                           | 10   |
| 337E | 692    | " " " " Screw.....                        | 03   |

## No. 42-8 MACHINE.

C B. DROP FEED ALTERNATING PRESSERS.

This Machine is Composed of the Same Parts as 42-5 Machine, Excepting:

| No.   | Plate. | Name.                                                                               | Each |
|-------|--------|-------------------------------------------------------------------------------------|------|
| *5801 | —      | Arm, substituting 4375.....                                                         | 6 00 |
| 5902  | 677    | Feed Bar, substituting 5994.....                                                    | 40   |
| 5812  | 694    | " Dog (double), substituting 5995.....                                              | 1 00 |
| 5815  | 697    | " Lifting Rock Shaft, substituting 5996....                                         | 50   |
| 3166  | 682    | " " " Crank with 157E and<br>1813, substituting 5998.....                           | 40   |
| 5816  | 694    | Lifting Presser Foot, substituting 5792.....                                        | 40   |
| 217   | 691    | " " " Screw, substituting 193.....                                                  | 03   |
| 5966  | —      | Oscillating Shaft Crank, substituting 5999....                                      | 30   |
| 5967  | 681    | " " " 5966 with 1513 and<br>1885, substituting 6000.....                            | 75   |
| 5783  | —      | Shuttle, 2½-in. diam. with 5810, substituting<br>5751.....                          | 5 00 |
| 5810  | 684    | Shuttle Bobbin (solid and hardened), substi-<br>tuting 14535.....                   | 25   |
| 5784  | 684    | Shuttle Bobbin Case includes Nos 591, 592E,<br>5785, 5789, 5888, 5933 and 5935..... | 2 50 |
| 5785  | —      | Shuttle Bobbin Case Hinge, includes 5786,<br>5787 and 5788.....                     | 60   |

| No.  | Plate | Name                                                                                               | Each |
|------|-------|----------------------------------------------------------------------------------------------------|------|
| 5786 | 684   | Shuttle Bobbin Case Latch.....                                                                     | 25   |
| 5787 | 684   | " " " " Lever.....                                                                                 | 25   |
| 5788 | 684   | " " " " Fulcrum Pin                                                                                |      |
|      |       | per 100.....                                                                                       | 25   |
| 5838 | —     | Shuttle Bobbin Case Latch Spring.....                                                              | 05   |
| 5928 | 692   | " " " " Stop Screw.....                                                                            | 02   |
| 5789 | 684   | " " " " Position Finger.....                                                                       | 10   |
| 5933 | 684   | " " " " Rivet                                                                                      |      |
|      |       | per 100.....                                                                                       | 25   |
| 5934 | 684   | Shuttle Body.....                                                                                  | 2 50 |
| 5832 | 677   | " Driver, substituting 5833.....                                                                   | 1 25 |
| 5972 | 677   | " Race, includes 741b, 5938, 5939, 5942,<br>5973 and two each 219 and 5965, substituting 5754..... | 3 50 |
| 5973 | —     | Shuttle Race Body, substituting 5755.....                                                          | 2 00 |
| 5942 | 677   | " Cap, substituting 5760 and 5756                                                                  | 30   |
| 591  | 692   | " Tension Regulating Screw, substituting 773.....                                                  | 02   |
| 5935 | 684   | Shuttle Tension Spring, substituting 12095...                                                      | 30   |
| 5817 | 680   | Thread Take-up Cam (steel) with 446c, substituting 5793.....                                       | 1 50 |
| 5954 | 678   | Thread Take-up Lever with 1819, substituting 5758.....                                             | 75   |
| 5813 | 694   | Throat Plate for 5812, substituting 5759.....                                                      | 1 25 |
| 5814 | 694   | Vibrating Presser Foot, substituting 5794....                                                      | 75   |

### ACCESSORIES.

| No.   | Plate | Name                                                                          | Each |
|-------|-------|-------------------------------------------------------------------------------|------|
| 5975  | 698   | Drip Pan (Stand), with four wood screws, $\frac{1}{4}$ -in., No. 5.....       | 30   |
| 5976  | —     | Drip Pan (Power Table), with four wood screws, $\frac{1}{4}$ -in., No. 5..... | 30   |
| 25867 | —     | Guide (cloth). Old No. 559, A. & A.....                                       | 10   |
| 25868 | —     | " " for carpet mitres. Old No. 560, A. & A.....                               | 40   |
| 747b  | —     | Guide Thumb Screw.....                                                        | 10   |
| 25952 | —     | Oiler with Cap and Spout. Old No. 325, A. & A.                                | 05   |
| 25953 | —     | " 25952 filled with oil. " " 326, "                                           | 08   |
| 25954 | —     | " Spout. " " 327, "                                                           | 01   |
| 26026 | —     | Screw Driver (Machine). " " 393, "                                            | 10   |
| 26027 | —     | " " (Shuttle Tension), with wood handle. Old No. 395, A. & A.....             | 05   |
| 4822  | —     | Wrench for 1547, 1548 and 1549. Old No. 375, A. & A.....                      | 05   |
| 4847  | —     | Wrench for 1513 and 1518.....                                                 | 15   |

### BOBBIN WINDERS.

#### BOBBIN WINDER FOR 42-2, 42-3 AND 42-8 MACHINES.

| No.   | Plate | Name                                                                 | Each |
|-------|-------|----------------------------------------------------------------------|------|
| 5958  | 680   | Bracket.....                                                         | 20   |
| 159   | 691   | " Screw.....                                                         | 08   |
| 5959  | 680   | Frame.....                                                           | 15   |
| 46b   | 691   | " Hinge Screw.....                                                   | 06   |
| 5960  | 678   | Friction Wheel (leather).....                                        | 10   |
| 5961  | 678   | " " Washer.....                                                      | 05   |
| 333b  | 692   | " " Screw.....                                                       | 04   |
| 5962  | 678   | Spindle.....                                                         | 15   |
| 5963  | 678   | " Flange.....                                                        | 06   |
| 5957  | —     | Frame complete, includes 333b and 5959 to 5963.....                  | 60   |
| 11114 | 682   | Spring.....                                                          | 08   |
| 190   | 691   | " Screw.....                                                         | 03   |
| 5974  | 680   | Bobbin Winder complete, includes 46b, 190, 5957, 5958 and 11114..... | 90   |

#### BOBBIN WINDER FOR 42-4 AND 42-5 MACHINES.

| No.   | Plate | Name                                                                 | Each |
|-------|-------|----------------------------------------------------------------------|------|
| 5958  | 680   | Bracket.....                                                         | 20   |
| 159   | 691   | " Screw.....                                                         | 08   |
| 5959  | 680   | Frame.....                                                           | 15   |
| 46b   | 691   | " Hinge Screw.....                                                   | 06   |
| 5960  | 678   | Friction Wheel (leather).....                                        | 10   |
| 5961  | 678   | " " Washer.....                                                      | 05   |
| 333b  | 692   | " " Screw.....                                                       | 04   |
| 5761  | 678   | Spindle.....                                                         | 20   |
| 5963  | 678   | " Flange.....                                                        | 06   |
| 5809  | —     | Frame complete, includes 333b, 5761, 5959 to 5961 and 5963.....      | 65   |
| 11114 | 682   | Spring.....                                                          | 08   |
| 190   | 691   | " Screw.....                                                         | 08   |
| 5762  | 680   | Bobbin Winder complete, includes 46b, 190, 5809, 5958 and 11114..... | 95   |

### KNEE LIFTER PARTS.

#### (POWER TABLE).

| No.  | Plate | Name               | Each |
|------|-------|--------------------|------|
| 5596 | —     | Bell Crank.....    | 05   |
| 5599 | —     | " Bracket.....     | 08   |
| 178  | 691   | " " Screw.....     | 08   |
| 5601 | —     | " " Hinge Pin..... | 01   |

| No.   | Plate | Name                                                                                                                                                                    | Each |
|-------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 5602  | —     | Bell Crank Spring.....                                                                                                                                                  | 02   |
| 5598  | 690   | " " 5596 with 5599, 5601 and 5602 . . .                                                                                                                                 | 20   |
| 5607  | 697   | Lifting Lever for 42-2, 42-3 and 42-4 Machs..                                                                                                                           | 20   |
| 4724  | 697   | " " 42-5 and 42-8 Machines....                                                                                                                                          | 25   |
| 4728  | 679   | " " Connecting Rod for 42-5 and 42-8<br>Machines.....                                                                                                                   | 08   |
| 12416 | 681   | Lifting Lever Connecting Rod Joint for 42-5<br>and 42-8 Machines.....                                                                                                   | 08   |
| 76D   | 691   | Lifting Lever Connecting Rod Joint Hinge<br>Screw for 42-5 and 42-8 Machines.....                                                                                       | 05   |
| 1521  | 693   | Lifting Lever Connecting Rod Joint Lock Nut<br>for 42-5 and 42-8 Machines.....                                                                                          | 03   |
| 802D  | 691   | Lifting Lever Hinge Screw.....                                                                                                                                          | 12   |
| 4725  | 695   | " " Lifting Bracket for 42-5 and<br>42-8 Machines.....                                                                                                                  | 50   |
| 4726  | 695   | Lifting Lever Lifting Bracket Guide Pin for<br>42-5 and 42-8 Machines.....                                                                                              | 03   |
| 4727  | 695   | Lifting Lever Pin for 4724 for 42-5 and 42-8<br>Machines.....                                                                                                           | 05   |
| 4480  | 691   | Lifting Lever Pin Set Screw for 42-5 and 42-8<br>Machines.....                                                                                                          | 03   |
| 5614  | 679   | Pitman for 42-2, 42-3 and 42-4 Machines.....                                                                                                                            | 03   |
| 2768  | 697   | Rock Shaft.....                                                                                                                                                         | 10   |
| 12242 | 697   | " " Hanger, with two wood screws,<br>1½-in., No. 10.....                                                                                                                | 08   |
| 2765  | 697   | Rock Shaft Knee Arm.....                                                                                                                                                | 10   |
| 2766  | 697   | " " " " Hub with 3560.....                                                                                                                                              | 15   |
| 3560  | 693   | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 2768  | —     | " " " " 2765 with 2766 and 2767                                                                                                                                         | 40   |
| 2767  | 697   | " " " " Plate with 3560.....                                                                                                                                            | 18   |
| 3560  | 693   | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 6337  | 697   | " " " " Lifting Bracket with two 3560....                                                                                                                               | 20   |
| 2778  | 697   | " " " " " Hook.....                                                                                                                                                     | 05   |
| 3560  | 693   | " " " " " Set Screw....                                                                                                                                                 | 06   |
| 3560  | 693   | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 2770  | 697   | " " " " Stop Dog with 3560.....                                                                                                                                         | 12   |
| 3560  | 693   | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 2777  | 697   | " " 2763 with 2769, 2770, 2778, 6337 and<br>two 12242.....                                                                                                              | 1 00 |
| 5587  | —     | Knee Lifter complete, includes 802D, 2777,<br>5598, 5607, 5614 and two 178 for 42-2, 42-3<br>42-4 Machines.....                                                         | 2 00 |
| 4816  | —     | Knee Lifter complete, includes 76D, 802D, 1521,<br>2777, 4724 to 4728, 5598, 12416, two 178<br>and four wood screws, 1½-in., No. 10, for<br>42-5 and 42-8 Machines..... | 2 25 |

### KNEE LIFTER PARTS. (STAND).

| No.   | Plate. | Name.                                                                                                                                                                   | Each |
|-------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 5596  | —      | Bell Crank.....                                                                                                                                                         | 05   |
| 5599  | —      | " " Bracket.....                                                                                                                                                        | 08   |
| 178   | 691    | " " " Screw.....                                                                                                                                                        | 08   |
| 5601  | —      | " " Hinge Pin.....                                                                                                                                                      | 01   |
| 5602  | —      | " " Spring.....                                                                                                                                                         | 02   |
| 5598  | 690    | " " 5596 with 5599, 5601 and 5602.....                                                                                                                                  | 20   |
| 5607  | 697    | Lifting Lever for 42-2, 42-3 and 42-4 Machs..                                                                                                                           | 20   |
| 4724  | 697    | " " 42-5 and 42-8 Machines....                                                                                                                                          | 25   |
| 4728  | 679    | " " Connecting Rod for 42-5 and<br>42-8 Machines.....                                                                                                                   | 08   |
| 12416 | 681    | Lifting Lever Connecting Rod Joint for 42-5<br>and 42-8 Machines.....                                                                                                   | 08   |
| 76D   | 691    | Lifting Lever Connecting Rod Joint Hinge<br>Screw for 42-5 and 42-8 Machines.....                                                                                       | 05   |
| 1521  | 693    | Lifting Lever Connecting Rod Joint Lock Nut<br>for 42-5 and 42-8 Machines.....                                                                                          | 03   |
| 802D  | 691    | Lifting Lever Hinge Screw.....                                                                                                                                          | 12   |
| 4725  | 695    | " " Lifting Bracket for 42-5 and<br>42-8 Machines.....                                                                                                                  | 50   |
| 4726  | 695    | Lifting Lever Lifting Bracket Guide Pin for<br>42-5 and 42-8 Machines.....                                                                                              | 03   |
| 4727  | 695    | Lifting Lever Pin for 4724.....                                                                                                                                         | 05   |
| 4480  | 691    | " " " Set Screw.....                                                                                                                                                    | 03   |
| 5614  | 679    | Pitman for 42-2, 42-3 and 42-4 Machines.....                                                                                                                            | 03   |
| 5772  | 697    | Rock Shaft.....                                                                                                                                                         | 12   |
| 7539  | 697    | " " Hanger, with two wood screws,<br>1-in., No. 10.....                                                                                                                 | 08   |
| 2765  | 697    | Rock Shaft Knee Arm.....                                                                                                                                                | 10   |
| 2766  | 697    | " " " " Hub with 3560.....                                                                                                                                              | 15   |
| 3560  | 693    | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 2768  | —      | " " " " 2765 with 2766 and 2767                                                                                                                                         | 40   |
| 2767  | 697    | " " " " Plate with 3560.....                                                                                                                                            | 18   |
| 3560  | 693    | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 6337  | 697    | " " " " Lifting Bracket with two 3560....                                                                                                                               | 20   |
| 12242 | 697    | " " " " " Hook.....                                                                                                                                                     | 05   |
| 3560  | 693    | " " " " " Set Screw....                                                                                                                                                 | 06   |
| 3560  | 693    | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 2770  | 697    | " " " " Stop Dog with 3560.....                                                                                                                                         | 12   |
| 3560  | 693    | " " " " " Set Screw.....                                                                                                                                                | 06   |
| 5773  | —      | " " 5772 with 2768, 2770, 6337, 12243<br>and two 7539.....                                                                                                              | 1 10 |
| 5805  | —      | Knee Lifter complete, includes 802D, 5598,<br>5607, 5614, 5773 and two 178, for 42-2,<br>42-3 and 42-4 Machines.....                                                    | 1 75 |
| 5818  | —      | Knee Lifter complete, includes 76D, 802D, 1521,<br>4724 to 4728, 5598, 5773, 12416, two 1780<br>and four wood screws, 1-in., No. 10, for<br>42-5 and 42-8 Machines..... | 2 35 |

## STAND PARTS.

| No.   | Plate. | Name.                                                                        | Each |
|-------|--------|------------------------------------------------------------------------------|------|
| 25001 | 698    | Back Leaf Bracket.....                                                       | 10   |
| 25002 | 698    | " " Scroll Bracket.....                                                      | 15   |
| 25003 | 698    | " " Sliding Hinge.....                                                       | 25   |
| 25151 | 698    | " " " " Plate for 25003.....                                                 | 05   |
| 25138 | 698    | Band Wheel (two speed), 10 and 12 inches<br>diam., with 25010.....           | 8 00 |
| 25010 | 698    | Band Wheel Crank.....                                                        | 15   |
| 2117  | 695    | " " " Pin.....                                                               | 01   |
| 2970  | 692    | " " Screw Centre.....                                                        | 10   |
| 1507  | 693    | " " " " Nut.....                                                             | 04   |
| 25136 | —      | Belt, size $\frac{1}{8}$ -in., length 62 $\frac{1}{4}$ -in., with 25029..... | 30   |
| 25029 | 695    | " Hook.....                                                                  | 01   |
| 25166 | 698    | Brace with three each 2970 and 1507.....                                     | 1 70 |
| 506E  | 692    | " Bolt with 1510.....                                                        | 03   |
| 1510  | 693    | " " Nut.....                                                                 | 01   |
| 25057 | 698    | End Leaf Support.....                                                        | 25   |
| 25168 | 680    | " " " Bracket.....                                                           | 10   |
| 25060 | 698    | " " " Button.....                                                            | 08   |
| 25169 | —      | " " " Lever.....                                                             | 15   |
| 25143 | 695    | " " " " Hinge Pin.....                                                       | 01   |
| 25064 | 698    | Leg.....                                                                     | 1 60 |
| 25070 | 695    | Machine Cushion Tack (rubber).....                                           | 01   |
| 25074 | 698    | Pitman (adjustable).....                                                     | 25   |
| 25123 | —      | " Adjusting Block.....                                                       | 02   |
| 558E  | 693    | " " Screw.....                                                               | 08   |
| 1570  | 693    | " " " Nut.....                                                               | 01   |
| 25075 | 695    | " " " " Washer.....                                                          | 01   |
| 7958  | 695    | " Stud Pin.....                                                              | 01   |
| 11742 | 695    | " Washer.....                                                                | 01   |
| 25032 | 698    | Treadle.....                                                                 | 65   |
| 2970  | 692    | " Screw Centre.....                                                          | 10   |
| 1507  | 693    | " " " Nut.....                                                               | 04   |
| 25086 | 698    | Wrench for 1507 and 1510.....                                                | 10   |
| 25226 | —      | Stand complete, with 25136 (Table not included).....                         | 9 38 |

### OBSOLETE PARTS.

| No.    | Plate. | Name.                                                                                                | Each |
|--------|--------|------------------------------------------------------------------------------------------------------|------|
| *13019 | —      | Arm, for 42-2 and 42-4 Machines, use 4287...                                                         | 4 50 |
| *4381  | —      | " " 42-3 Machine, use 5819.....                                                                      | 6 00 |
| 2007   | 688    | " Spool Pin use 5811.....                                                                            | 02   |
| 5768   | 696    | Face Plate for 5797 and 5989 for 42-3 Mach...                                                        | 75   |
| 5908   | —      | Feed Dog for canvas work (double), distance<br>between rows $\frac{1}{2}$ -in. for 42-2 Machine..... | 1 00 |

| No.   | Plate | Name                                                                                                                      | Each |
|-------|-------|---------------------------------------------------------------------------------------------------------------------------|------|
| 3132  | —     | Guide Bar Lifting Bracket with 6260 for 42-5 Machine.....                                                                 | 1 50 |
| 4807  | 679   | Lifting Lever for 42-3 Machine.....                                                                                       | 75   |
| 4808  | 679   | " " Adjusting Block for 42-3 Mach.....                                                                                    | 16   |
| 5806  | 686   | " " " " Hinge Pin for 42-3 Machine.....                                                                                   | 01   |
| 574   | 692   | Lifting Lever Adjusting Block Thumb Screw for 42-3 Machine.....                                                           | 15   |
| 1528  | 693   | Lifting Lever Adjusting Block Thumb Screw Nut for 574.....                                                                | 03   |
| 4809  | 688   | Lifting Lever Hinge Bracket for 42-3 Mach..                                                                               | 40   |
| 4811  | —     | " " " " 4809 with 4810 for 42-3 Machine.....                                                                              | 55   |
| 4812  | —     | Lifting Lever 4807 with 574, 1528, 4808, and 5806 for 42-3 Machine.....                                                   | 1 10 |
| 1806  | 693   | Lifting Roller and Screw for 5764 for 42-3 Machine.....                                                                   | 30   |
| 5607  | 097   | Lifting Lever (Knee Lifter) for 42-5 Machine..                                                                            | 20   |
| 5682  | 686   | Needle Clamp with 246 and 5691, for 42-2, 42-3 and 42-4 Machines, use 4808.....                                           | 45   |
| 5691  | 686   | Needle Clamp Thread Guide for 5682.....                                                                                   | 10   |
| 5915  | —     | Oscillating Shaft for 5936.....                                                                                           | 50   |
| 5914  | 677   | " Rock Shaft for 1878.....                                                                                                | 1 00 |
| 5919  | 682   | " Shaft Crank with 1878 and 1520...                                                                                       | 65   |
| 1878  | —     | " " " " Roller and Screw Stud                                                                                             | 35   |
| 1520  | 693   | " " " " " " " " Nut.....                                                                                                  | 08   |
| 20620 | 681   | Presser Bar Lifter for 42-2 and 42-4 Machines, use 5990.....                                                              | 25   |
| 5610  | 680   | Presser Bar Lifting Bracket for 42-5 Machine.....                                                                         | 25   |
| 5926  | —     | Shuttle, 2½-in. diam., with 5927, for 42-2, 42-3 and 42-8 Machines, use 5783.....                                         | 5 00 |
| 5927  | 684   | Shuttle Bobbin for 5926, use 5810.....                                                                                    | 25   |
| 5929  | 684   | " " Case, includes 591, 592e, 5930 to 5932, 5935 and two 5933 for 5926, use 5784                                          | 2 50 |
| 5930  | 684   | Shuttle Bobbin Case Latch for 5929.....                                                                                   | 25   |
| 5931  | 684   | " " " " Spring for 5929...                                                                                                | 05   |
| 5932  | 684   | " " " " Position Finger for 5929.....                                                                                     | 10   |
| 5936  | —     | " Driver for 42-2, 42-3 and 42-8 Machs..                                                                                  | 1 25 |
| 5758  | —     | " " " " 42-4 and 42-5 Machines...                                                                                         | 1 25 |
| 5937  | —     | " Race complete, includes 741d, 5938 to 5942 and two each 219, 399 and 5965 for 42-2, 42-3 and 42-8 Machine, use 5972.... | 3 50 |
| 5940  | —     | Shuttle Race Body for 5937.....                                                                                           | 2 00 |
| 5941  | 677   | " " Bridge for 5937.....                                                                                                  | —    |
| 899   | —     | " " Screw for 5937.....                                                                                                   | 02   |
| 2102  | 685   | Tension Disc.....                                                                                                         | 05   |
| 600   | —     | " Screw Stud.....                                                                                                         | 10   |
| 5985  | —     | " Wheel, use 5795.....                                                                                                    | —    |
| *5986 | —     | " " Flange.....                                                                                                           | —    |
| 5987  | —     | " " Hub.....                                                                                                              | —    |

| No.  | Plate. | Name.                                                                                             | Each |
|------|--------|---------------------------------------------------------------------------------------------------|------|
| 5988 | —      | Tension complete (wheel) includes 817, 1560, 2103, 5985 and two each 5988 and 5984, use 5797..... | —    |
| 5769 | 686    | Thread Eyelet (side of arm).....                                                                  | 08   |
| 5799 | 686    | " Guard for 5768.....                                                                             | 01   |
| 2112 | —      | " Retainer Disc.....                                                                              | 05   |
| 2113 | —      | " " " Steady Pin... per 100 ..                                                                    | 10   |
| 2114 | —      | " " " Spring.....                                                                                 | 01   |
| 2115 | —      | " " " Stud.....                                                                                   | 07   |
| 460c | —      | " " " Set Screw.....                                                                              | 02   |
| 2111 | —      | " Retainer complete, includes 2112 to 2115.....                                                   | 15   |
| 5765 | —      | Thread Take-up Lever with 1819 for 42-3 Machine.....                                              | 75   |
| 2124 | 686    | Thread Take-up Spring, use 5991.....                                                              | 03   |
| 5948 | —      | Throat Plate for 5903, for 42-2 Machine.....                                                      | 1 25 |
| 5766 | 679    | Vibrating Presser for 42-3 Machine.....                                                           | 2 00 |
| 5767 | —      | " " Guide Bracket for 42-3 Machine.....                                                           | 75   |
| 5768 | 683    | Vibrating Presser Hinge Bracket for 42-3 Mach.....                                                | 60   |
| 5798 | 682    | " " Spring for 42-3 Machine....                                                                   | 05   |

## Numerical List of Parts.

| No.  | Plate. | Name.                                                                                        | Each |
|------|--------|----------------------------------------------------------------------------------------------|------|
| 46d  | 691    | Bobbin Winder Frame Hinge Screw.....                                                         | 06   |
| 58a  | 691    | Feed Regulator Hinge Screw.....                                                              | 15   |
| 76c  | 691    | Thread Take-up Lever Hinge Screw.....                                                        | 05   |
| 76d  | 691    | Lifting Lever Connecting Rod Joint Hinge Screw (Knee Lifter) for 42-5 and 42-8 Machines..... | 05   |
| 123x | 691    | Arm Screw.....                                                                               | 06   |
| 129x | 691    | Shuttle Race Frame Clamping Screw.....                                                       | 04   |
| 135d | 691    | Oil Cup Screw for 42-4, 42-5 and 42-8 Machs..                                                | 05   |
| 136  | 691    | Driving Flange Latch Hinge Screw .....                                                       | 04   |
| 144d | 691    | Arm Shaft Screw.....                                                                         | 12   |
| 145  | 691    | Shuttle Race Screw .....                                                                     | 04   |
| 155c | 691    | Needle Bar Connecting Stud Set Screw.....                                                    | 03   |
| 157x | 691    | Feed Lifting Rock Shaft Crank Clamping Scr. for 42-2, 42-3 and 42-8 Machines.....            | 04   |
| 157x | 691    | Feed Lifting Rock Shaft Crank Fork Clamping Screw for 42-4 and 42-5 Machines....             | 04   |
| 158x | 691    | Crank Connecting Rod Cap Screw.....                                                          | 03   |
| 159  | 691    | Bobbin Winder Bracket Screw.....                                                             | 03   |
| 164d | 691    | Face Plate Screw for 42-2, 42-3 and 42-4 Machs.                                              | 04   |
| 172x | 691    | Feed Lifting Rock Shaft Crank Clamping Scr. for 5998, for 42-4 and 42-5 Machines .....       | 04   |
| 175  | 691    | Face Plate Screw for 5791.....                                                               | 02   |
| 176  | 691    | Roller Arm Lock Spring Screw for 5964.....                                                   | 03   |
| 178  | 691    | Bell Crank Bracket Screw (Knee Lifter) ....                                                  | 03   |
| 180  | 691    | Lifting Lever Hinge Bracket Screw for 42-3 Machine.. .....                                   | 03   |
| 190  | 691    | Oscillating Shaft Crank Roller and Screw Stud Cap Screw.....                                 | 03   |
| 190d | 691    | Presser Foot Screw.....                                                                      | 03   |
| 190  | 691    | Bobbin Winder Spring Screw.....                                                              | 03   |
| 190  | 691    | Vibrating Presser Guide Bracket Screw for 42-3 Machine.....                                  | 03   |
| 191c | 691    | Feed Dog Screw.....                                                                          | 03   |
| 193  | 691    | Lifting Presser Foot Screw for 5792.....                                                     | 03   |
| 196  | 676    | Needle Clamp Screw for 4265.....                                                             | 02   |
| 207d | 691    | Lifting Lever Hinge Bracket Stud Screw for 42-3 Machine.....                                 | 02   |
| 211  | 692    | Oil Cup Pad Screw for 5781.....                                                              | 02   |
| 212d | 691    | Vibrating Presser Hinge Bracket Cap Screw for 42-3 Machine.....                              | 04   |
| 217  | 691    | Vibrating Presser Foot Scr. for 5794 and 5814.                                               | 03   |
| 217  | 691    | Lifting " " " " 42-8 Machine.                                                                | 03   |
| 219  | 691    | Shuttle Race Cap Screw.....                                                                  | 02   |
| 233d | 691    | Thread Guard Screw.....                                                                      | 02   |
| 233d | 691    | " Take-up Spring Regulator Plate Scr..                                                       | 02   |
| 233d | 691    | Vibrating Presser Spring Screw for 42-3 Mach                                                 | 02   |

| No.  | Plate | Name                                                                            | Each |
|------|-------|---------------------------------------------------------------------------------|------|
| 240D | 691   | Shuttle Race Slide Spring Screw.....                                            | 01   |
| 248  | 676   | Lifting Lever Adjusting Block Thumb Screw<br>Stop Screw for 42-3 Machine.....   | 02   |
| 263D | 692   | Pressure Regulating Thumb Screw.....                                            | 25   |
| 266D | 676   | Lifting Lever Adjusting Block Thumb Screw<br>for 42-3 Machine.....              | 12   |
| 286D | 692   | Arm Side Cover Thumb Screw.....                                                 | 08   |
| 290E | 692   | Needle Bar Screw Bushing for 42-2, 42-3 and<br>42-4 Machines.....               | 06   |
| 290E | 692   | Presser Bar Screw Bushing for 42-2, 42-3 and<br>42-4 Machines.....              | 06   |
| 297C | 692   | Band Wheel Screw Centre (Stand).....                                            | 10   |
| 297C | 692   | Treadle Screw Centre (Stand).....                                               | 10   |
| 304C | 692   | Feed Lifting Rock Shaft Screw Centre for<br>42-2 and 42-3 Machines.....         | 06   |
| 304C | 692   | Feed Rock Shaft Screw Centre.....                                               | 06   |
| 313C | 692   | " Bar Screw Centre.....                                                         | 04   |
| 316C | 692   | Roller Arm Bracket Screw Centre for 5964....                                    | 03   |
| 330D | 692   | Driving Flange Spring Screw.....                                                | 03   |
| 333D | 692   | Bobbin Winder Friction Wheel Washer Screw                                       | 04   |
| 337E | 692   | Vibrating Presser Spring Screw for 42-5 and<br>42-8 Machines.....               | 02   |
| 356C | 693   | Rock Shaft Knee Arm Hub Set Screw (Knee<br>Lifter).....                         | 06   |
| 356C | 693   | Rock Shaft Knee Plate Set Screw (Knee Lifter)                                   | 06   |
| 356C | 693   | " " Lifting Bracket Hook Set Screw<br>(Knee Lifter).....                        | 06   |
| 356C | 693   | Rock Shaft Lifting Bracket Set Screw.....                                       | 06   |
| 356C | 693   | Rock Shaft Stop Dog Set Screw (Knee Lifter)                                     | 06   |
| 375C | 692   | Feed Connecting Link Hinge Screw.....                                           | 12   |
| 375C | 692   | " Forked Connection Hinge Screw.....                                            | 12   |
| 377C | 692   | Needle Bar Connecting Link Hinge Screw for<br>42-2, 42-3 and 42-4 Machines..... | 12   |
| 390C | 692   | Needle Bar Connecting Link Adjusting Screw<br>for 3098.....                     | 02   |
| 399  | —     | Shuttle Race Bridge Screw for 5987, obsolete..                                  | 02   |
| 404D | 692   | Guide Bar Lifting Bracket Screw for 42-5 and<br>42-8 Machines.....              | 02   |
| 418D | 693   | Thread Retainer Screw Stud.....                                                 | 08   |
| 435C | 691   | Driving Flange Set Screw.....                                                   | 04   |
| 440C | 691   | Roller Arm Adjusting Screw for 5964.....                                        | 03   |
| 446C | 691   | Feed Cam Set Screw.....                                                         | 08   |
| 446C | 691   | Thread Take-up Cam Set Screw.....                                               | 03   |
| 448C | 691   | Arm Shaft Bushing (back) Set Screw.....                                         | 03   |
| 448C | 691   | Balance Wheel Set Screw.....                                                    | 08   |
| 448C | 691   | Tension Screw Stud Set Screw.....                                               | 03   |
| 448C | 691   | Lifting Lever Pin Set Screw for 4724.....                                       | 08   |
| 453C | 692   | Presser Bar Lifting Bracket Set Screw for 42-2,<br>42-3 and 42-4 Machines.....  | 02   |

| No.  | Plate | Name                                                                                        | Each |
|------|-------|---------------------------------------------------------------------------------------------|------|
| 453C | 692   | Vibrating Presser Hinge Bracket Set Screw for<br>42-3 Machine.....                          | 02   |
| 455C | 692   | Oscillating Shaft Collar Set Screw.....                                                     | 02   |
| 460C | —     | Thread Retaining Stud Set Screw, obsolete....                                               | 02   |
| 506E | 692   | Brace Bolt with 1510 (Stand).....                                                           | 03   |
| 558E | 693   | Pitman Adjusting Screw (Stand).....                                                         | 03   |
| 566C | 692   | Crank Connecting Rod Hinge Screw.....                                                       | 15   |
| 574  | 692   | Lifting Lever Adjusting Block Thumb Screw,<br>obsolete, for 42-3 Machine.....               | 15   |
| 590E | 692   | Shuttle Cylinder Latch Spring Screw for 5751                                                | 02   |
| 591  | 692   | Shuttle Tension Regulating Screw for 5784....                                               | 02   |
| 592E | 692   | " Bobbin Case Latch Stop Screw for 5784                                                     | 02   |
| 598C | 691   | Presser Bar Lifter Screw for 42-5 and 42-8<br>Machines.....                                 | 06   |
| 600  | —     | Tension Screw Stud, obsolete.....                                                           | 10   |
| 602D | 691   | Vibrating Presser Bar Hinge Cap Screw for<br>42-5 and 42-8 Machines.....                    | 02   |
| 602D | 691   | Vibrating Presser Bar Lifting Bell Crank Hinge<br>Cap Screw for 42-5 and 42-8 Machines..... | 02   |
| 626C | 693   | Guide Bar Lifting Bracket Guide Screw Stud<br>for 42-5 and 42-8 Machines.....               | 10   |
| 634D | 692   | Roller Screw for 1875.....                                                                  | 08   |
| 635C | 692   | Oscillating Rock Shaft Hinge Pin Scr. Bearing                                               | 10   |
| 641E | 691   | Lifting Presser Bar Bracket Clamp Screw for<br>42-5 and 42-8 Machines.....                  | 03   |
| 651D | 692   | Needle Clamp Thread Guide Screw.....                                                        | 01   |
| 689C | 691   | Presser Bar Lifter Screw for 42-2, 42-3 and<br>42-4 Machines.....                           | 08   |
| 690C | 691   | Guide Bar Driving Crank Wedge Adjusting<br>Screw for 42-5 and 42-8 Machines.....            | 05   |
| 741D | 691   | Shuttle Race Back Spring Screw.....                                                         | 05   |
| 742  | 692   | Throat Plate Screw.....                                                                     | 05   |
| 747  | —     | Guide Thumb Screw.....                                                                      | 10   |
| 773C | 692   | Shuttle Tension Regulating Screw for 5751....                                               | 05   |
| 802D | 691   | Lifting Lever Hinge Screw (Knee Lifter).....                                                | 12   |
| 808  | 691   | Needle Clamp Screw for 5682 and 4803.....                                                   | 03   |
| 817  | 693   | Tension Screw Stud.....                                                                     | 12   |
| 818D | 692   | Feed Regulator Thumb Screw.....                                                             | 12   |
| 902E | —     | Lifting Cam Screw for 42-3 Machine.....                                                     | 12   |
| 1507 | 693   | Band Wheel Screw Centre Nut (Stand).....                                                    | 04   |
| 1507 | 693   | Treadle Screw Centre Nut (Stand).....                                                       | 04   |
| 1510 | 693   | Brace Bolt Nut (Stand).....                                                                 | 01   |
| 1513 | 693   | Crank Connecting Rod Hinge Screw Nut.....                                                   | 05   |
| 1513 | 693   | Feed Lifting Rock Shaft Screw Centre Nut for<br>42-2 and 42-3 Machines.....                 | 05   |
| 1513 | 693   | Feed Rock Shaft Screw Centre Nut.....                                                       | 05   |
| 1513 | 693   | Oscillating Rock Shaft Hinge Pin Nut.....                                                   | 05   |
| 1513 | 693   | " " " " " Screw Bear-<br>ing Nut.....                                                       | 05   |
| 1513 | 693   | Oscillating Shaft Crank Roller and Screw Stud<br>Nut.....                                   | 05   |

| No.   | Plate | Name                                                                                      | Each |
|-------|-------|-------------------------------------------------------------------------------------------|------|
| 1518  | 693   | Feed Connecting Link Hinge Screw Nut.....                                                 | 04   |
| 1518  | 693   | " Forked Connection Hinge Screw Nut...                                                    | 04   |
| 1518  | 693   | Needle Bar Connecting Link Hinge Screw Nut<br>for 42-2, 42-3 and 42-4 Machines.....       | 04   |
| 1519  | 693   | Feed Bar Screw Centre Nut.....                                                            | 03   |
| 1520  | 693   | Presser Bar Lifter Screw Nut for 42-2, 42-3<br>and 42-4 Machines.....                     | 03   |
| 1520  | 693   | Oscillating Shaft Crank Roller and Screw Stud<br>Nut, obsolete.....                       | 03   |
| 1521  | 693   | Lifting Lever Connecting Rod Joint Lock Nut<br>(Knee Lifter) for 42-5 and 42-8 Machines.. | 03   |
| 1528  | 693   | Roller Screw Nut for 634D.....                                                            | 03   |
| 1528  | 693   | Lifting Lever Adjusting Block Thumb Screw<br>Nut for 574, obsolete.....                   | 03   |
| 1547  | 693   | Roller Arm Adjusting Screw Nut for 5964....                                               | 03   |
| 1547  | 693   | " " Bracket Screw Centre Nut for 5964                                                     | 03   |
| 1549  | 693   | " " Lock Spring Screw Nut for 5964.                                                       | 03   |
| 1560  | 693   | Tension Regulating Thumb Nut .....                                                        | 04   |
| 1562  | 693   | Thread Retainer Regulating Thumb Nut ....                                                 | 04   |
| 1570  | 693   | Pitman Adjusting Screw Nut (Stand).....                                                   | 01   |
| 1806  | 693   | Lifting Roller and Screw for 5764, obsolete..                                             | 30   |
| 1813  | 693   | Feed Lifting Rock Shaft Crank Roller and<br>Stud.....                                     | 20   |
| 1819  | 693   | Thread Take-up Lever Roller and Stud.....                                                 | 20   |
| 1823  | 693   | Lifting Presser Bar Bracket Roller and Stud<br>for 42-5 and 42-8 Machines.....            | 18   |
| 1862  | —     | Guide Bar Driving Crank Roller for 42-5<br>and 42-8 Machines.....                         | 13   |
| 1875  | —     | Roller, 1½-in., with 634D and 1528.....                                                   | 60   |
| 1878  | —     | Oscillating Shaft Crank Roller and Screw<br>Stud, obsolete.....                           | 35   |
| 1885  | 693   | Oscillating Shaft Crank Roller and Scr. Stud.                                             | 40   |
| 2002  | 686   | Arm Dowel Pin.....                                                                        | 02   |
| 2007  | 683   | " Spool Pin, obsolete, use 5811.....                                                      | 02   |
| 2049  | 686   | Feed Rock Shaft Crank Pin.....                                                            | 01   |
| 2049  | 686   | Oscillating " " ".....                                                                    | 01   |
| 2049  | 686   | Shuttle Driver Pin.....                                                                   | 01   |
| 2052  | 683   | Needle Bar Connecting Stud with 155c for 42-2<br>and 42-4 Machines.....                   | 30   |
| 2062c | 681   | Presser Bar Lifter, obsolete, for 42-2 and 42-4<br>Machines, use 5990.....                | 25   |
| 2070  | 686   | Presser Bar Spring Washer.....                                                            | 01   |
| 2102  | 685   | Tension Disc, obsolete.....                                                               | 05   |
| 2103  | 685   | " Spring.....                                                                             | 03   |
| 2105  | 686   | " Thread Guard.....                                                                       | 03   |
| 2107  | 686   | Thread Guard for 42-2, 42-3 and 42-4 Machs...                                             | 02   |
| 2108  | —     | " " " 42-5 and 42-8 Machines....                                                          | 01   |
| 2111  | —     | " Retainer complete, includes 2112 to<br>2115, obsolete.....                              | 15   |
| 2112  | —     | Thread Retainer Disc, obsolete.....                                                       | 05   |

| No.   | Plate | Name                                                                                | Each |
|-------|-------|-------------------------------------------------------------------------------------|------|
| 2113  | —     | Thread Retainer Disc Steady Pin, obsolete,<br>per 100 .....                         | 10   |
| 2114  | —     | Thread Retainer Spring, obsolete.....                                               | 01   |
| 2115  | —     | " " Stud " .....                                                                    | 07   |
| 2117  | 695   | Band Wheel Crank Pin (Stand).....                                                   | 01   |
| 2124  | 686   | Thread Take-up Spring, obsolete, use 5991. .                                        | 03   |
| 2127  | 686   | " " " Regulator Plate.....                                                          | 03   |
| 2205  | 695   | Roller Arm Lock Spring for 5964.....                                                | 04   |
| 2269  | 686   | Vibrating Presser Stop Pin for 42-3 Machine.                                        | 01   |
| 2305  | 695   | Needle Bar Connecting Stud with 155c, for<br>42-5 and 42-8 Machines .....           | 30   |
| 2359c | 695   | Presser Bar Lifter for 42-5 and 42-8 Machines.                                      | 25   |
| 2361  | 683   | Vibrating Presser Bar Hinge Bracket for 42-5<br>and 42-8 Machines.....              | 50   |
| 2362  | —     | Vibrating Presser Bar Hinge Bracket Rivet for<br>42-5 and 42-8 Machines .....       | 01   |
| 2455  | 685   | Thread Retainer Disc .....                                                          | 02   |
| 2763  | 697   | Rock Shaft (Knee Lifter, Power Table).....                                          | 10   |
| 2765  | 697   | " " Knee Arm (Knee Lifter).....                                                     | 10   |
| 2766  | 697   | " " " Hub with 356c (Knee<br>Lifter) .....                                          | 15   |
| 2767  | 697   | Rock Shaft Knee Plate with 356c (Knee Lifter)                                       | 18   |
| 2768  | —     | " " " Arm 2765, with 2766 and<br>2767 (Knee Lifter) .....                           | 40   |
| 2770  | 697   | Rock Shaft Stop Dog with 356c (Knee Lifter)                                         | 12   |
| 2777  | 697   | " " 2763 with 2768, 2770, 2778, 6337<br>and two 12242 (Knee Lifter, Power Table). 1 | 00   |
| 2778  | 697   | Rock Shaft Lifting Bracket Hook (Knee<br>Lifter, Power Table).....                  | 05   |
| 3005  | 678   | Arm Shaft Bushing (back).....                                                       | 25   |
| 3011  | 696   | Balance Wheel (two-speed) for 6109 with two<br>448c .....                           | 1 75 |
| 3012  | 683   | Thread Take-up Cam Pin.....                                                         | 01   |
| 3016  | 679   | Bed Hinge.....                                                                      | 03   |
| 3017  | —     | " " (half butt) for 5900 and 5992.....                                              | 02   |
| 3018  | —     | " " " " Wood Table. ....                                                            | 02   |
| 3020  | 683   | " " Pin .....                                                                       | 01   |
| 3021  | 686   | " " Rivet.....per 100..                                                             | 25   |
| 3032  | 678   | Feed Cam with 446c.....                                                             | 35   |
| 3033  | 681   | " Connecting Link .....                                                             | 20   |
| 3037  | 697   | " Forked Connection for 42-4, 42-5 and<br>42-8 Machines.....                        | 60   |
| 3039  | 681   | Feed Regulator.....                                                                 | 25   |
| 3041  | —     | " Rock Shaft 3042 with 3043 for 42-4, 42-5<br>and 42-8 Machines. ....               | 50   |
| 3042  | 697   | Feed Rock Shaft for 42-4, 42-5 and 42-8 Machs.                                      | 35   |
| 3043  | 682   | " " " Crank for 42-4, 42-5 and 42-8<br>Machines .....                               | 15   |
| 3045  | 681   | Needle Bar Connecting Link for 42-2, 42-3 and<br>42-4 Machines.....                 | 30   |
| 3052  | 678   | Oscillating Rock Shaft Hinge Pin .....                                              | 50   |

| No.    | Plate. | Name.                                                                                   | Each |
|--------|--------|-----------------------------------------------------------------------------------------|------|
| 3054   | 678    | Presser Bar for 42-2, 42-3 and 42-4 Machines..                                          | 35   |
| 3054   | 678    | Lifting Presser Bar for 42-5 and 42-8 Machines                                          | 35   |
| 3056   | 678    | Presser Bar Spring for 42-2, 42-3 and 42-4 Machines.....                                | 05   |
| 3094   | 686    | Guide Bar Driving Crank Wedge for 42-5 and 42-8 Machines.....                           | 10   |
| 3098   | 682    | Needle Bar Connecting Link with 390c, for 42-5 and 42-8 Machines.....                   | 75   |
| 3100   | 679    | Presser Bar Spring for 42-5 and 42-8 Machs...                                           | 05   |
| 3126   | 680    | Guide Bar for 42-5 and 42-8 Machines.....                                               | 1 50 |
| 3130   | 682    | " " Driving Crank with 1862 and 3131, for 42-5 and 42-8 Machines.....                   | 75   |
| 3131   | —      | Guide Bar Driving Crank Roller Cap for 42-5 and 42-8 Machines.....                      | 05   |
| 3132   | —      | Guide Bar Lifting Bracket with 626c, for 42-5 Machine, obsolete.....                    | 1 50 |
| 3133   | 680    | Lifting Presser Bar Bracket with 641x and 1823 for 42-5 and 42-8 Machines.....          | 35   |
| 3134   | 680    | Vibrating Presser Bar for 42-5 and 42-8 Machs                                           | 45   |
| 3135   | 680    | " " " Lifting Bell Crank for 42-5 and 42-8 Machines.....                                | 75   |
| 3137   | 682    | Vibrating Presser Spring for 42-5 and 42-8 Machines.....                                | 10   |
| 3146   | 686    | Lifting Lever Hinge Bracket Stud Scr. Washer for 42-3 Machine.....                      | 01   |
| 3147   | —      | Needle Bar Connecting Stud with 155c, for 42-3 Machine.....                             | 30   |
| 3166   | 682    | Feed Lifting Rock Shaft Crank with 157x and 1813, for 42-2, 42-3 and 42-8 Machines..... | 40   |
| 3223   | —      | Roller Arm Bracket for 5964.....                                                        | 20   |
| 4264   | 680    | Needle Bar for 42-5 and 42-8 Machines.....                                              | 40   |
| 4265   | 686    | " Clamp with 196, for 42-5 and 42-8 Machines.....                                       | 25   |
| 4266   | 686    | Needle Clamp Thread Guide for 42-5 and 42-8 Machines.....                               | 10   |
| * 4287 | —      | Arm for 42-2 and 42-4 Machines.....                                                     | 4 50 |
| 4288   | 678    | " Side Cover.....                                                                       | 10   |
| 4347   | —      | Wrench for 1513 and 1518.....                                                           | 15   |
| *4349  | —      | Crank Connecting Rod Cap.....                                                           | —    |
| 4381   | —      | Arm for 42-3 Machine, obsolete, use 5819.....                                           | 6 00 |
| 4448   | 695    | " Oil Tube for intermediate bearing.....                                                | 06   |
| *4449  | —      | " Shaft Bushing (front).....                                                            | 30   |
| 4723   | 683    | Guide Bar Lifting Bracket with 626c for 42-5 and 42-8 Machines.....                     | 1 25 |
| 4724   | 697    | Lifting Lever (Knee Lifter) for 42-5 and 42-8 Machines.....                             | 25   |
| 4725   | 695    | Lifting Lever Lifting Bracket (Knee Lifter) for 42-5 and 42-8 Machines.....             | 50   |
| 4726   | 695    | Lifting Lever Lifting Bracket Guide Pin (Knee Lifter) for 42-5 and 42-8 Machines.....   | 03   |

| No.  | Plate | Name                                                                                                                                                                                 | Each |
|------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 4727 | 695   | Lifting Lever Pin for 4724.....                                                                                                                                                      | 05   |
| 4728 | 679   | " " Connecting Rod (Knee Lifter) for 42-5 and 42-8 Machines.....                                                                                                                     | 08   |
| 4730 | —     | Guide Bar 3126 with 337, 2361, 3134, 3135, 3137, 4723 and two each 602d, 2363, and three 404d, for 42-5 and 42-8 Machines.....                                                       | 5 00 |
| 4802 | 686   | Needle Clamp Thread Guide for 4803.....                                                                                                                                              | 10   |
| 4803 | 686   | " " with 651d, 808 and 4802 for 42-2, 42-3 and 42-4 Machines.....                                                                                                                    | 45   |
| 4807 | 679   | Lifting Lever, obsolete, for 42-3 Machine.....                                                                                                                                       | 75   |
| 4808 | 679   | " " Adjusting Block, obsolete, for 42-3 Machine.....                                                                                                                                 | 16   |
| 4809 | 683   | Lifting Lever Hinge Bracket, obsolete, for 42-3 Machine.....                                                                                                                         | 40   |
| 4810 | 683   | Lifting Lever Hinge Bracket Stud for 5835 and 4809.....                                                                                                                              | 10   |
| 4811 | —     | Lifting Lever Hinge Bracket 4809 with 4810, obsolete, for 42-3 Machine.....                                                                                                          | 55   |
| 4812 | —     | Lifting Lever 4807 with 574, 1528, 4808 and 5806, obsolete, for 42-3 Machine.....                                                                                                    | 1 10 |
| 4816 | —     | Knee Lifter complete (Power Table), includes Nos. 76d, 802d, 1521, 2777, 4724 to 4728, 5598, 12416, two 178 and four wood screws, 1 1/4-in., No. 10, for 42-5 and 42-8 Machines..... | 2 25 |
| 4822 | —     | Wrench for 1547, 1548 and 1549. Old No. 375 A. & A.....                                                                                                                              | 05   |
| 5465 | 678   | Needle Bar for 42-2, 42-3 and 42-4 Machines..                                                                                                                                        | 40   |
| 5587 | —     | Knee Lifter complete (Power Table), includes 802d, 2777, 5598, 5607, 5614 and two 178, for 42-2, 42-3 and 42-4 Machines.....                                                         | 2 00 |
| 5596 | —     | Bell Crank (Knee Lifter).....                                                                                                                                                        | 05   |
| 5598 | 680   | " " 5596 with 5599, 5601 and 5602 (Knee Lifter).....                                                                                                                                 | 20   |
| 5599 | —     | Bell Crank Bracket (Knee Lifter).....                                                                                                                                                | 08   |
| 5601 | —     | " " Hinge Pin (Knee Lifter).....                                                                                                                                                     | 01   |
| 5602 | —     | " " Spring " ".....                                                                                                                                                                  | 02   |
| 5607 | 697   | Lifting Lever (Knee Lifter) for 42-2, 42-3 and 42-4 Machines.....                                                                                                                    | 20   |
| 5607 | 697   | Lifting Lever (Knee Lifter) obsolete, for 42-5 Machine.....                                                                                                                          | 20   |
| 5608 | 679   | Presser Bar Lifting Bracket with 453c, for 42-2, 42-3 and 42-4 Machines.....                                                                                                         | 25   |
| 5610 | 680   | Presser Bar Lifting Bracket, obsolete, for 42-5 Machine.....                                                                                                                         | 25   |
| 5614 | 679   | Pitman (Knee Lifter) for 42-2, 42-3 and 42-4 Machines.....                                                                                                                           | 03   |
| 5632 | 686   | Needle Clamp with 246 and 5691, obsolete, for 42-2, 42-3 and 42-4 Machines, use 4803.....                                                                                            | 45   |
| 5691 | 686   | Needle Clamp Thread Guide for 5632, obsolete,                                                                                                                                        | 10   |

| No.  | Plate. | Name.                                                                                                                     | Each |
|------|--------|---------------------------------------------------------------------------------------------------------------------------|------|
| 5751 | 685    | Shuttle (Cylinder), 2½-in. diam., with 14535, for 42-4 and 42-5 Machines.....                                             | 6 00 |
| 5752 | 685    | Shuttle Frame for 5751.....                                                                                               | 2 75 |
| 5753 | —      | " Driver, obsolete, for 42-4 and 42-5 Mchs. ....                                                                          | 1 25 |
| 5754 | 677    | " Race, includes Nos. 741D, 5755, 5756, 5760, 5938, 5939 and two each 219, 5790 and 5965, for 42-4 and 42-5 Machines..... | 3 50 |
| 5755 | —      | Shuttle Race Body for 5754.....                                                                                           | 2 00 |
| 5756 | 683    | " " Cap (right) for 5754.....                                                                                             | 10   |
| 5757 | 678    | Thread Take-up Cam (steel) with 446c, for 42-4 Machine.....                                                               | 1 25 |
| 5758 | 678    | Thread Take-up Lever with 1819, for 42-4 and 42-5 Machines.....                                                           | 75   |
| 5759 | 688    | Throat Plate for 5995, for 42-4 and 42-5 Mchs. ....                                                                       | 1 25 |
| 5760 | 683    | Shuttle Race Cap (left) for 5754.....                                                                                     | 10   |
| 5761 | 678    | Bobbin Winder Spindle for 5809.....                                                                                       | 20   |
| 5762 | 630    | " " complete, includes Nos. 46D, 190, 5809, 5958 and 11114, for 42-4 and 42-5 Machines.....                               | 95   |
| 5763 | 696    | Face Plate for 5797 and 5989, obsolete, for 42-3 Machine.....                                                             | 75   |
| 5764 | 680    | Thread Take-up Cam (steel) with 446c, for 42-3 Machine.....                                                               | 1 50 |
| 5765 | —      | Thread Take-up Lever with 1819, obsolete....                                                                              | 75   |
| 5766 | 679    | Vibrating Presser, obsolete, for 42-3 Machine.....                                                                        | 2 00 |
| 5767 | —      | " " Guide Bracket, obsolete, for 42-3 Machine.....                                                                        | 75   |
| 5768 | 683    | Vibrating Presser Hinge Bracket, obsolete, for 42-3 Machine.....                                                          | 60   |
| 5769 | 686    | Thread Eyelet (side of arm) obsolete.....                                                                                 | 03   |
| 5772 | 697    | Rock Shaft (Knee Lifter Stand).....                                                                                       | 12   |
| 5773 | —      | " " 5772 with 2768, 2770, 6387, 12243 and two 7539 (Knee Lifter Stand).....                                               | 1 10 |
| 5774 | 689    | Feed Dog (double), 12 teeth, for 42-2 and 42-3 Machines.....                                                              | 1 00 |
| 5775 | 689    | Throat Plate for 5774 for 42-2 and 42-3 Mchs. ....                                                                        | 1 25 |
| 5776 | 688    | Feed Dog for sewing buff wheels for 42-2 Machine.....                                                                     | 1 00 |
| 5777 | 688    | Throat Plate for 5776 for 42-2 Machine.....                                                                               | 1 25 |
| 5778 | 696    | Oil Cup for 5781.....                                                                                                     | 55   |
| 5779 | 695    | " " Pad (felt) for 5781.....                                                                                              | 02   |
| 5780 | 695    | " " Thread Eyelet for 5781.....                                                                                           | 01   |
| 5781 | —      | " " complete, includes Nos. 211, 5778, 5779, 5780 and 7071 for 42-4, 42-5 and 42-8 Machines.....                          | 60   |
| 5783 | —      | Shuttle, 2½ inches diam., with 5810 for 42-2, 42-3 and 42-8 Machines.....                                                 | 5 00 |
| 5784 | 684    | Shuttle Bobbin Case, includes 591, 592E, 5785, 5789, 5931, 5933 and 5935 for 5783.....                                    | 2 50 |
| 5785 | —      | Shuttle Bobbin Case Hinge, includes 5786, 5787 and 5788 for 5784.....                                                     | 60   |

| No.    | Plate | Name                                                                                                                                                                  | Each |
|--------|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 5786   | 684   | Shuttle Bobbin Case Latch for 5784.....                                                                                                                               | 25   |
| 5787   | 684   | " " " " " Lever for 5784.....                                                                                                                                         | 25   |
| 5788   | 684   | " " " " " Fulcrum Pin for 5784.....                                                                                                                                   | 25   |
| 5789   | 684   | Shuttle Bobbin Case Position Finger for 5784.....                                                                                                                     | 10   |
| 5790   | 686   | " Race Cap Dowel Pin for 5754.....                                                                                                                                    | —    |
| 5791   | 696   | Face Plate for 5797 and 5989 for 42-5 and 42-8 Machines.....                                                                                                          | 75   |
| 5792   | 683   | Lifting Presser Foot for 42-5 and 42-8 Mchs. ....                                                                                                                     | 40   |
| 5793   | 680   | Thread Take-up Cam (steel) with 446c, for 42-5 Machine.....                                                                                                           | 1 50 |
| 5794   | 683   | Vibrating Presser Foot for 42-5 Machine.....                                                                                                                          | 60   |
| 5795   | 686   | Tension Wheel for 5797.....                                                                                                                                           | 40   |
| 5797   | —     | " " complete (wheel), includes 817, 1580, 2103, 5795 and two each 5983 and 5984....                                                                                   | 65   |
| 5798   | 682   | Vibrating Presser Spring, obsolete, for 42-3 Machine.....                                                                                                             | 05   |
| 5799   | 686   | Thread Guard for 5763 (obsolete).....                                                                                                                                 | 01   |
| * 5801 | —     | Arm for 42-5 and 42-8 Machines.....                                                                                                                                   | 6 00 |
| 5802   | 689   | Throat Plate for carpet mitres for 5774.....                                                                                                                          | 1 25 |
| 5805   | —     | Knee Lifter complete (Stand), includes 802D, 5598, 5607, 5614, 5773 and two 178, for 42-2, 42-3 and 42-4 Machines.....                                                | 1 75 |
| 5806   | 686   | Lifting Lever Adjusting Block Hinge Pin, obsolete, for 42-3 Machine.....                                                                                              | 01   |
| 5809   | —     | Bobbin Winder Frame complete, includes Nos. 333D, 5761, 5959 to 5961 and 5963 for 5762.....                                                                           | 65   |
| 5810   | 684   | Shuttle Bobbin (solid and hardened) for 5783.....                                                                                                                     | 25   |
| 5811   | 695   | Arm Spool Pin and Thread Eyelet.....                                                                                                                                  | 05   |
| 5812   | 694   | Feed Dog (double) for 42-8 Machine.....                                                                                                                               | 1 00 |
| 5813   | 694   | Throat Plate for 5812.....                                                                                                                                            | 1 25 |
| 5814   | 694   | Vibrating Presser Foot for 42-8 Machine.....                                                                                                                          | 75   |
| 5815   | 697   | Feed Lifting Rock Shaft for 42-8 Machine....                                                                                                                          | 50   |
| 5816   | 694   | Lifting Presser Foot for 42-8 Machine.....                                                                                                                            | 40   |
| 5817   | 680   | Thread Take-up Cam (steel) with 446c, for 42-8 Machine.....                                                                                                           | 1 50 |
| 5818   | —     | Knee Lifter complete (Stand), includes 76D, 802D, 1521, 4724 to 4728, 5598, 5773, 12416, two 178 and four wood screws, 1-in., No. 10, for 42-5 and 42-8 Machines..... | 2 35 |
| * 5819 | —     | Arm for 42-3 Machine.....                                                                                                                                             | 6 00 |
| 5820   | 675   | Face Plate for 5797 and 5989 for 42-3 Mach....                                                                                                                        | 75   |
| 5821   | 675   | Lifting Lever for 42-3 Machine.....                                                                                                                                   | 1 25 |
| 5822   | 676   | " " Adjusting Block for 42-3 Mach..                                                                                                                                   | 50   |
| 5823   | 676   | " " " " " Roller for 42-3 Machine.....                                                                                                                                | 12   |
| 5824   | 676   | Lifting Lever Adjusting Block Roller Pin for 42-3 Machine.....                                                                                                        | 05   |
| 5825   | —     | Lifting Lever 5821 with 248, 266D, 5822 to 5824 for 42-3 Machine.....                                                                                                 | 2 00 |

| No     | Plate | Name                                                                                                            | Each |
|--------|-------|-----------------------------------------------------------------------------------------------------------------|------|
| 5826   | 676   | Lifting Cam for 5764 for 42-3 Machine.....                                                                      | 75   |
| 5827   | 675   | Presser Bar Lifting Bracket with 453c, for<br>42-3 Machine.....                                                 | 85   |
| 5828   | 675   | Thread Take-up Lever with 1819, for 42-3<br>Machine.....                                                        | 85   |
| 5829   | 675   | Vibrating Presser for 42-3 Machine.....                                                                         | 2 00 |
| 5830   | 676   | " " Hinge Bracket with 453c,<br>42-3 Machine.....                                                               | 75   |
| 5831   | 676   | Vibrating Presser Spring for 42-3 Machine....                                                                   | 05   |
| 5832   | 677   | Shuttle Driver for 42-2, 42-3 and 42-3 Machs..                                                                  | 1 25 |
| 5833   | 679   | " " " 42-4 and 42-5 Machines....                                                                                | 1 25 |
| 5834   | 697   | Oscillating Shaft.....                                                                                          | 50   |
| 5835   | 676   | Lifting Lever Hinge Bracket for 42-3 Mach....                                                                   | 50   |
| 5836   | —     | " " " " 5835 with 4810,<br>for 42-3 Machine.....                                                                | 65   |
| 5837   | 676   | Vibrating Presser Guide Bracket for 42-3 Mach.                                                                  | 75   |
| 5838   | —     | Shuttle Bobbin Case Latch Spring for 5784....                                                                   | 05   |
| * 5900 | —     | Bed for 42-2 and 42-3 Machines.....                                                                             | 5 00 |
| 5902   | 677   | Feed Bar for 42-2, 42-3 and 42-3 Machines....                                                                   | 40   |
| 5903   | —     | " Dog for canvas work (double), distance<br>between rows $\frac{1}{2}$ -in., obsolete, for 42-2<br>Machine..... | 1 00 |
| 5905   | 690   | Feed Dog for tent work for 42-3 Machine.....                                                                    | 1 00 |
| 5906   | 690   | " " " canvas work for 42-2 Machine....                                                                          | 1 00 |
| 5907   | 697   | " Forked Connection for 42-2 and 42-3<br>Machines.....                                                          | 60   |
| 5908   | 697   | Feed Lifting Rock Shaft for 42-2 and 42-3<br>Machines.....                                                      | 45   |
| 5909   | —     | Feed Lifting Rock Shaft 5908 with 3166 for<br>42-2 and 42-3 Machines.....                                       | 85   |
| 5910   | 697   | Feed Rock Shaft for 42-3 and 42-3 Machines..                                                                    | 55   |
| 5911   | —     | " " " 5910 with 5913 for 42-2 and<br>42-3 Machines.....                                                         | 75   |
| 5913   | 682   | Feed Rock Shaft Crank for 5911.....                                                                             | 20   |
| 5914   | 677   | Oscillating Rock Shaft for 1878, obsolete.....                                                                  | 1 00 |
| 5915   | —     | " Shaft for 5936, obsolete.....                                                                                 | 50   |
| 5917   | 683   | " " Collar with 455c.....                                                                                       | 20   |
| 5919   | 682   | " " Crank with 1878 and 1520,<br>obsolete.....                                                                  | 65   |
| 5921   | 689   | Presser Foot (hinged) for 42-2 Machine.....                                                                     | 2 00 |
| 5922   | —     | " " " Bracket for 5921.....                                                                                     | 1 00 |
| 5923   | 686   | " " " " Hinge Pin for<br>5921.....                                                                              | 01   |
| 5924   | —     | Presser Foot Plate for 5921.....                                                                                | 1 00 |
| 5926   | —     | Shuttle, 2 $\frac{1}{2}$ -in. diam., with 5927, obsolete, for<br>42-2, 42-3 and 42-3 Machines, use 5783.....    | 5 00 |
| 5927   | 684   | Shuttle Bobbin for 5926, obsolete, use 5810....                                                                 | 25   |
| 5929   | 684   | " " Case for 5926, includes 591,<br>592x, 5930 to 5932, 5935 and two 5933,<br>obsolete, use 5784.....           | 2 50 |
| 5930   | 684   | Shuttle Bobbin Case Latch for 5929, obsolete..                                                                  | 25   |
| 5931   | 684   | " " " " Spring for 5929,<br>obsolete.....                                                                       | 05   |

| No   | Plate | Name                                                                                                                                                    | Each |
|------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| 5932 | 684   | Shuttle Bobbin Case Position Finger for 5929,<br>obsolete.....                                                                                          | 10   |
| 5933 | 684   | Shuttle Bobbin Case Position Finger Rivet<br>for 5784.....per 100...                                                                                    | 25   |
| 5934 | 684   | Shuttle Body for 5783.....                                                                                                                              | 2 50 |
| 5935 | 684   | " Tension Spring for 5784.....                                                                                                                          | 30   |
| 5936 | —     | " Driver, obsolete, for 42-2, 42-3 and 42-3<br>Machines.....                                                                                            | 1 25 |
| 5937 | —     | Shuttle Race complete, includes 741b, 5938 to<br>5942 and two each 219, 399 and 5965, ob-<br>solete, use 5972, for 42-2, 42-3 and 42-3<br>Machines..... | 3 50 |
| 5938 | 677   | Shuttle Race Back for 5754 and 5972.....                                                                                                                | 60   |
| 5939 | 677   | " " " Spring for 5754 and 5972....                                                                                                                      | 30   |
| 5940 | —     | " " Body, obsolete, for 5937.....                                                                                                                       | 2 00 |
| 5941 | 677   | " " Bridge, " " ".....                                                                                                                                  | —    |
| 5942 | 677   | " " Cap for 5972.....                                                                                                                                   | 30   |
| 5943 | 677   | " " Frame with 5944.....                                                                                                                                | 2 50 |
| 5944 | 686   | " " " Steady Pin for 5943.....                                                                                                                          | 01   |
| 5945 | —     | " " Slide.....                                                                                                                                          | 40   |
| 5946 | 677   | " " " 5945 with 5947 and two 240b                                                                                                                       | 50   |
| 5947 | 682   | " " " Spring for 5946.....                                                                                                                              | 10   |
| 5948 | —     | Throat Plate for 5903, obsolete, for 42-2 Mach.                                                                                                         | 1 25 |
| 5950 | 690   | " " " 5905.....                                                                                                                                         | 1 25 |
| 5951 | 690   | " " " 5906.....                                                                                                                                         | 1 25 |
| 5954 | 678   | Thread Take-up Lever with 1819 for 42-2 and<br>42-3 Machines.....                                                                                       | 75   |
| 5957 | —     | Bobbin Winder Frame complete, includes<br>333b and 5959 to 5963 for 5974.....                                                                           | 60   |
| 5958 | 680   | Bobbin Winder Bracket for 5762 and 5974....                                                                                                             | 20   |
| 5959 | 680   | " " Frame for 5809 and 5957.....                                                                                                                        | 15   |
| 5960 | 678   | " " Friction Wheel (leather) for<br>5809 and 5957.....                                                                                                  | 10   |
| 5961 | 678   | Bobbin Winder Friction Wheel Washer for 5809<br>and 5957.....                                                                                           | 05   |
| 5962 | 678   | Bobbin Winder Spindle for 5957.....                                                                                                                     | 15   |
| 5963 | 678   | " " " Flange for 5809 and<br>5957.....                                                                                                                  | 06   |
| 5964 | 687   | Roller Presser complete, 1 $\frac{1}{2}$ -in., includes Nos.<br>176, 440, 1549, 1875, 2205, 3223, 6535 and<br>two each 316 and 1547, for 42-4 Machine.. | 1 30 |
| 5965 | 686   | Shuttle Race Back Dowel Pin.....per 100..                                                                                                               | 10   |
| 5966 | —     | Oscillating Shaft Crank for 42-2, 42-3 and 42-3<br>Machines.....                                                                                        | 30   |
| 5967 | 681   | Oscillating Shaft Crank 5966 with 1513 and<br>1885.....                                                                                                 | 75   |
| 5968 | 686   | Oscillating Shaft Crank Roller and Screw Stud<br>Cap Screw Washer.....                                                                                  | 02   |
| 5969 | 697   | Crank Connecting Rod.....                                                                                                                               | 80   |
| 5970 | 679   | Oscillating Rock Shaft (steel) for 1885.....                                                                                                            | 1 00 |
| 5971 | 687   | Presser Foot (long shank) for 42-4 Machine...                                                                                                           | 75   |

| No.   | Plate | Name                                                                                                            | Each |
|-------|-------|-----------------------------------------------------------------------------------------------------------------|------|
| 5972  | 677   | Shuttle Race, includes 741b, 5988, 5989, 5942, 5973 and two each 219 and 5965 for 42-2, 42-3 and 42-8 Machines. | 3 50 |
| 5973  | —     | Shuttle Race Body for 5972.                                                                                     | 2 00 |
| 5974  | 680   | Bobbin Winder complete, includes 46b, 190, 5957, 5958 and 11114 for 42-2, 42-3 and 42-8 Machines.               | 90   |
| 5975  | 698   | Drip Pan (Stand) with four wood screws, $\frac{3}{4}$ -in., No. 5.                                              | 30   |
| 5976  | —     | Drip Pan (Power Table) with four wood screws, $\frac{3}{4}$ -in., No. 5.                                        | 30   |
| 5977  | 696   | Balance Wheel (two speed) for Loose Wheel Attachment 5981.                                                      | 1 75 |
| 5978  | 696   | Driving Flange.                                                                                                 | 50   |
| 5979  | 683   | " " Latch.                                                                                                      | 10   |
| 5980  | 683   | " " Spring.                                                                                                     | 05   |
| 5981  | —     | Loose Wheel Attachment complete, Nos. 5977 and 5993.                                                            | 2 50 |
| 5982  | 696   | Face Plate for 5797 and 5989 for 42-2 and 42-4 Machines.                                                        | 75   |
| 5983  | 686   | Tension Washer (felt) for 5797.                                                                                 | 01   |
| 5984  | 686   | " " (steel) for 5797.                                                                                           | 01   |
| 5985  | —     | " " Wheel, obsolete, use 5795.                                                                                  | —    |
| *5986 | —     | " " Flange, obsolete.                                                                                           | —    |
| 5987  | —     | " " Hub, obsolete.                                                                                              | —    |
| 5988  | —     | " " complete (wheel), includes 817, 1560, 2108, 5985 and two each 5983 and 5984, obsolete, use 5797.            | —    |
| 5989  | —     | Thread Retainer complete, includes 418b, 1562, 10141 and two 2455.                                              | 15   |
| 5990  | 681   | Presser Bar Lifter for 42-2, 42-3 and 42-4 Machines.                                                            | 25   |
| 5991  | 686   | Thread Take-up Spring.                                                                                          | 03   |
| *5992 | —     | Bed for 42-4, 42-5 and 42-8 Machines.                                                                           | 5 00 |
| 5993  | —     | Driving Flange 5978 with 136, 830b, 5979 and 5980 for Loose Wheel Attachment 5981.                              | 75   |
| 5994  | 679   | Feed Bar for 42-4 and 42-5 Machines.                                                                            | 30   |
| 5995  | 688   | " " Dog (leather), 8 teeth, for 42-4 and 42-5 Machines.                                                         | 40   |
| 5996  | 697   | Feed Lifting Rock Shaft for 42-4 and 42-5 Machines.                                                             | 50   |
| 5997  | 679   | Feed Lifting Rock Shaft Crank Fork with 157x for 42-4 and 42-5 Machines.                                        | 40   |
| 5998  | 679   | Feed Lifting Rock Shaft Crank with 1813 and two 172x for 42-4 and 42-5 Machines.                                | 50   |
| 5999  | —     | Oscillating Shaft Crank for 1885, for 42-4 and 42-5 Machines.                                                   | 30   |
| 6000  | —     | Oscillating Shaft Crank 5999 with 1513 and 1885, for 42-4 and 42-5 Machines.                                    | 75   |
| 6107  | 696   | Arm Shaft for 5977.                                                                                             | 1 50 |
| 6109  | 696   | " " " 3011.                                                                                                     | 1 50 |

| No.    | Plate | Name                                                                                             | Each |
|--------|-------|--------------------------------------------------------------------------------------------------|------|
| 6337   | 697   | Rock Shaft Lifting Bracket with two 356c (Knee Lifter).                                          | 20   |
| 6535   | —     | Roller Arm for 5964.                                                                             | 20   |
| 7071   | 695   | Oil Cup Pad Screw Washer for 5781.                                                               | 01   |
| 7539   | 697   | Rock Shaft Hanger with two wood screws, 1-in., No. 10 (Knee Lifter).                             | 08   |
| 7958   | 695   | Pitman Stud Pin (Stand).                                                                         | 01   |
| 10141  | 695   | Thread Retainer Spring.                                                                          | 01   |
| 11114  | 692   | Bobbin Winder Spring for 5974 and 5762.                                                          | 03   |
| 11165  | 695   | Oscillating Rock Shaft Oil Pad for 5970.                                                         | 01   |
| 11742  | 695   | Pitman Washer (Stand).                                                                           | 01   |
| 12000  | 683   | Shuttle Cylinder Hinge Pin for 5751.                                                             | 02   |
| 12001  | 685   | " " Latch for 5751.                                                                              | 15   |
| 12002  | 685   | " " " Pin for 5751.                                                                              | 01   |
| 12003  | 685   | " " " Spring for 5751.                                                                           | 03   |
| 12093  | 685   | " " " for 5751.                                                                                  | 2 50 |
| 12095  | 685   | " " Tension Spring for 5751.                                                                     | 40   |
| 12242  | 697   | Rock Shaft Hanger with two wood screws, 1 $\frac{1}{4}$ -in., No. 10 (Knee Lifter, Power Table). | 08   |
| 12243  | 697   | Rock Shaft Lifting Bracket Hook (Knee Lifter, Stand).                                            | 15   |
| 12296  | 686   | Thread Eyelet (side of arm).                                                                     | 02   |
| 12416  | 681   | Lifting Lever Connecting Rod Joint (Knee Lifter) for 42-5 and 42-8 Machines.                     | 08   |
| 13017  | 678   | Thread Take-up Cam (steel), with 446c for 42-2 Machine.                                          | 1 25 |
| *13019 | —     | Arm, obsolete, for 42-2 and 42-4 Machines, use 4287.                                             | 4 50 |
| 14535  | 685   | Shuttle Bobbin (solid and hardened) for 5751.                                                    | 25   |
| 25001  | 698   | Back Leaf Bracket. (Stand).                                                                      | 10   |
| 25002  | 698   | " " " Scroll Bracket.                                                                            | 15   |
| 25003  | 698   | " " " Sliding Hinge.                                                                             | 25   |
| 25010  | 698   | Band Wheel Crank.                                                                                | 15   |
| 25029  | 695   | Belt Hook.                                                                                       | 01   |
| 25057  | 698   | End Leaf Support.                                                                                | 25   |
| 25060  | 698   | " " " Button.                                                                                    | 08   |
| 25064  | 698   | Leg.                                                                                             | 1 60 |
| 25070  | 695   | Machine Cushion Tack (rubber).                                                                   | 01   |
| 25074  | 698   | Pitman (adjustable).                                                                             | 25   |
| 25075  | 695   | " " Adjusting Screw Nut Washer.                                                                  | 01   |
| 25082  | 698   | Treadle.                                                                                         | 65   |
| 25086  | 698   | Wrench for 1507 and 1510.                                                                        | 10   |
| 25123  | —     | Pitman Adjusting Block.                                                                          | 02   |
| 25133  | 698   | Band Wheel (two-speed), 10 and 12-in. diam., with 25010 (Stand).                                 | 3 00 |
| 25136  | —     | Belt, size $\frac{3}{8}$ -in., length, 62 $\frac{1}{2}$ inches, with 25029 (Stand).              | 30   |
| 25143  | 695   | End Leaf Support Lever Hinge Pin (Stand).                                                        | 01   |
| 25151  | 698   | Back Leaf Sliding Hinge Plate for 25003.                                                         | 05   |
| 25166  | 698   | Brace with three each 297c and 1507 (Stand).                                                     | 1 70 |


| No.   | Plate | Name                                                                | Each |
|-------|-------|---------------------------------------------------------------------|------|
| 25168 | 680   | End Leaf Support Bracket (Stand).....                               | 10   |
| 25169 | —     | “ “ “ Lever “ .....                                                 | 15   |
| 25226 | —     | Stand complete with 25136 (Table not included) 9                    | 88   |
| 25867 | —     | Guide (cloth). Old No. 559 A. & A.....                              | 10   |
| 25868 | —     | “ “ for carpet mitres. Old No.<br>560 A. & A.....                   | 40   |
| 25952 | —     | Oiler with Cap and Spout. Old No. 325 A. & A.                       | 05   |
| 25953 | —     | “ 25952 filled with oil. Old No. 326<br>A. & A.....                 | 08   |
| 25954 | —     | Oiler Spout. Old No. 327 A. & A.....                                | 01   |
| 26026 | —     | Screw Driver (Machine). Old No. 398 A. & A.                         | 10   |
| 26027 | —     | “ “ (Shuttle Tension) with wood<br>handle. Old No. 395, A. & A..... | 05   |

---

THE SINGER MANUFACTURING COMPANY use and recommend  
exclusively the WILLIMANTIC SPOOL COTTON.

PLATE 675—ONE-HALF SIZE

5829

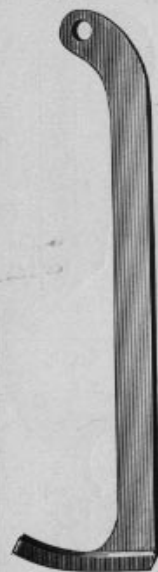

5826



5827



5821



5820



PLATE 676—FULL SIZE

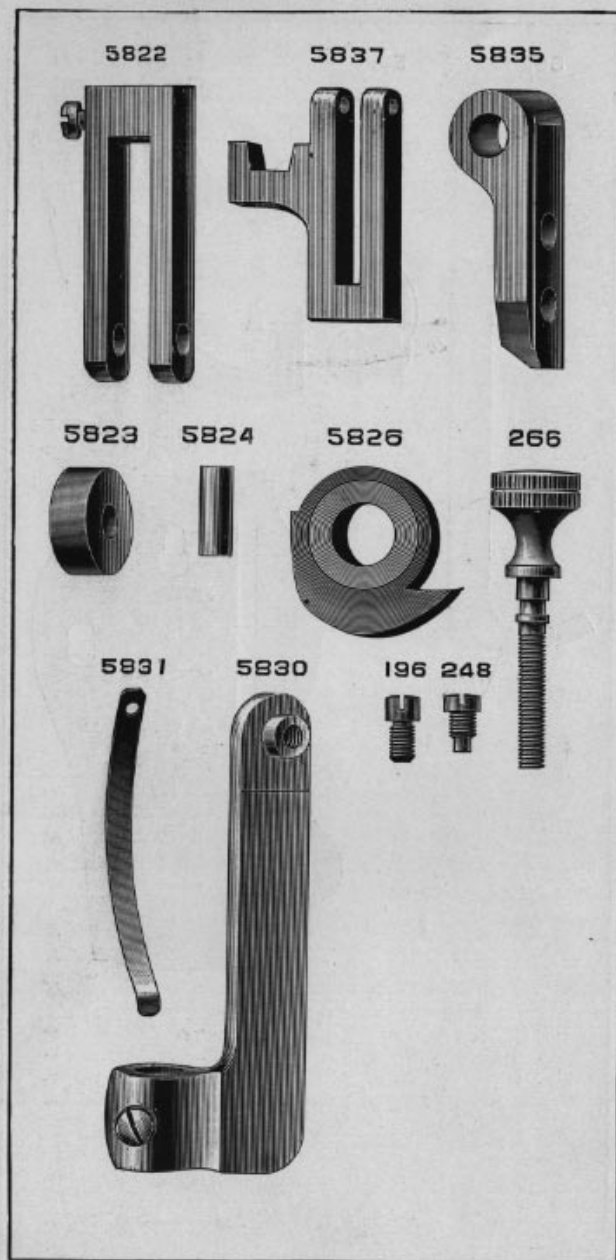


PLATE 677—ONE-HALF SIZE

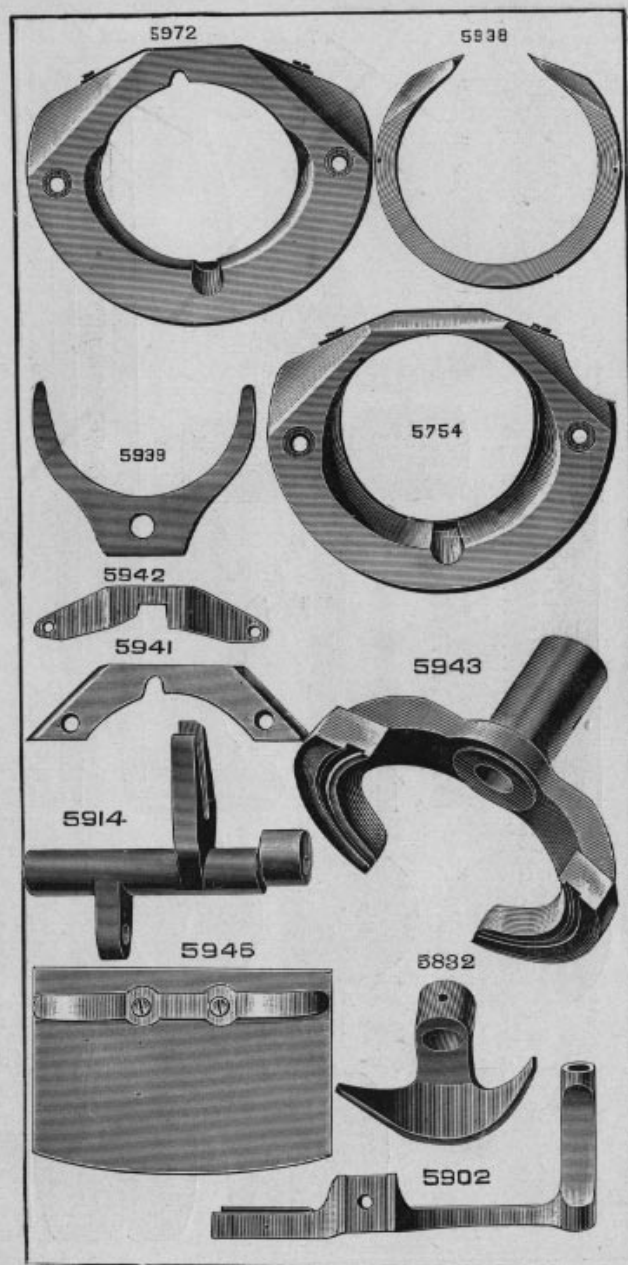


PLATE 678—ONE-HALF SIZE

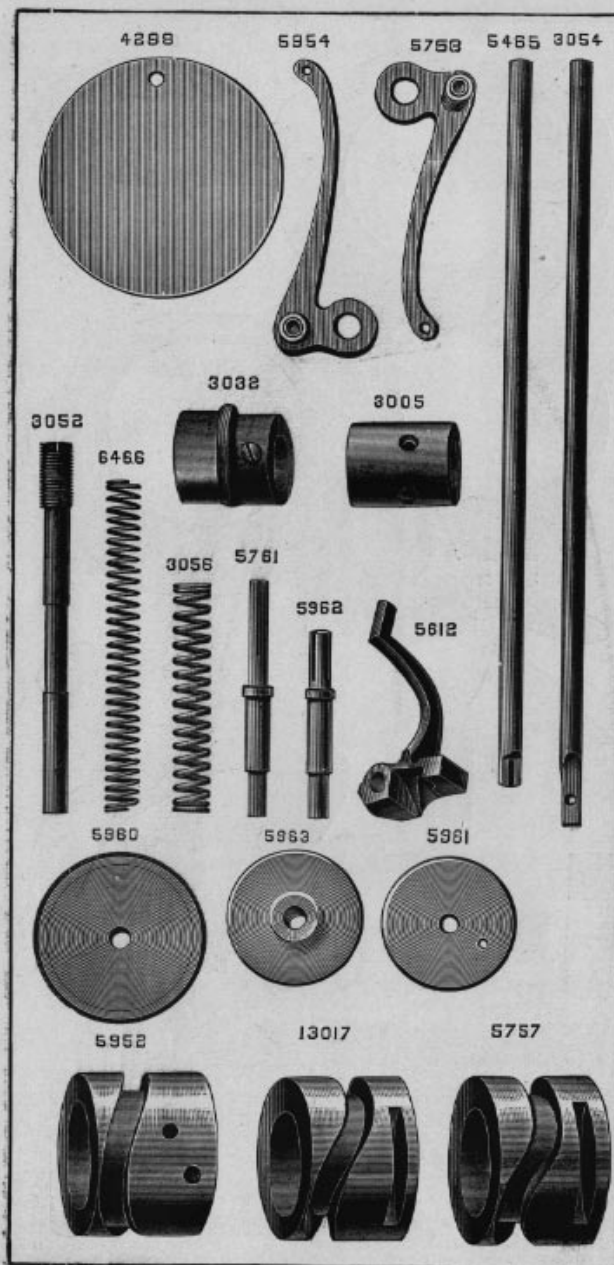


PLATE 679—ONE-HALF SIZE

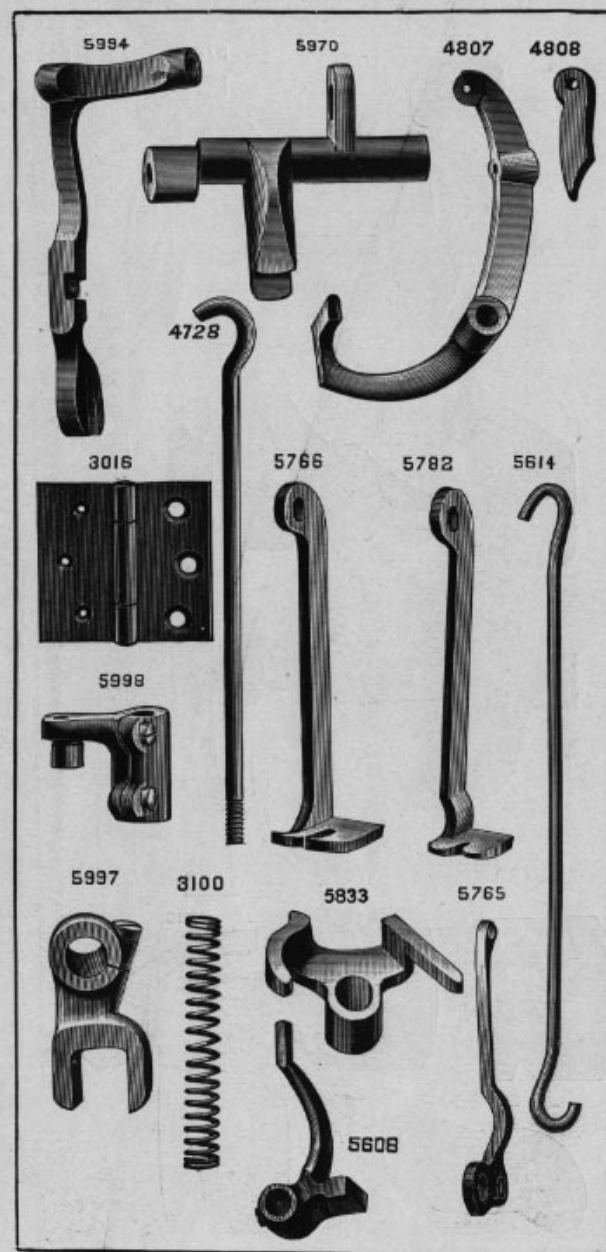


PLATE 680—ONE-HALF SIZE

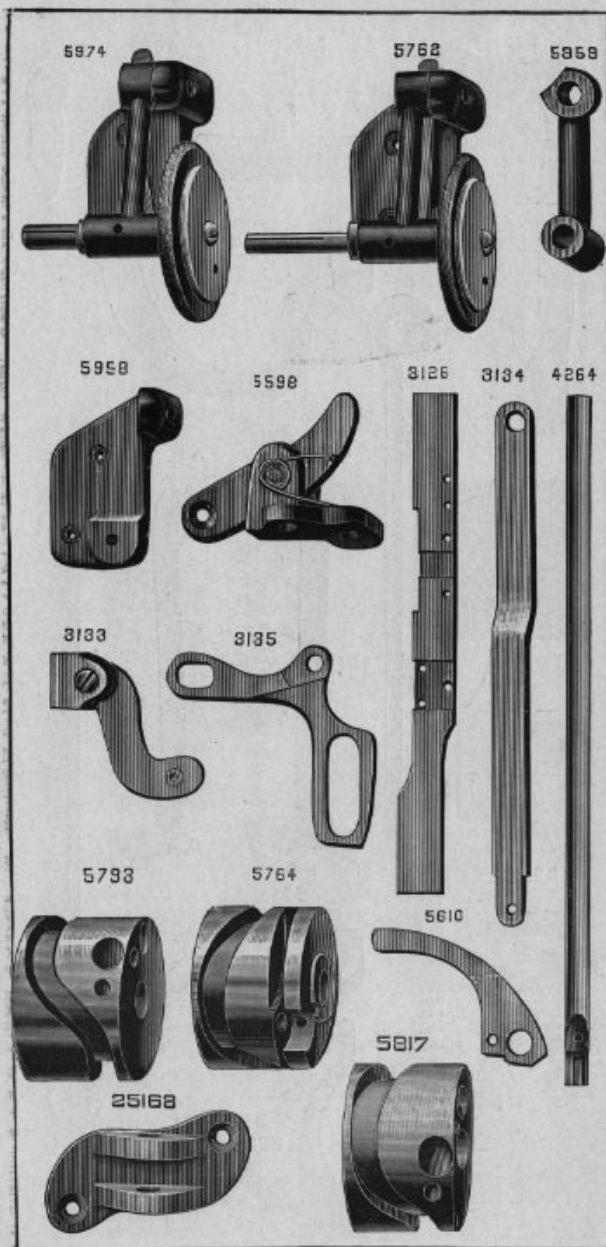


PLATE 681—FULL SIZE

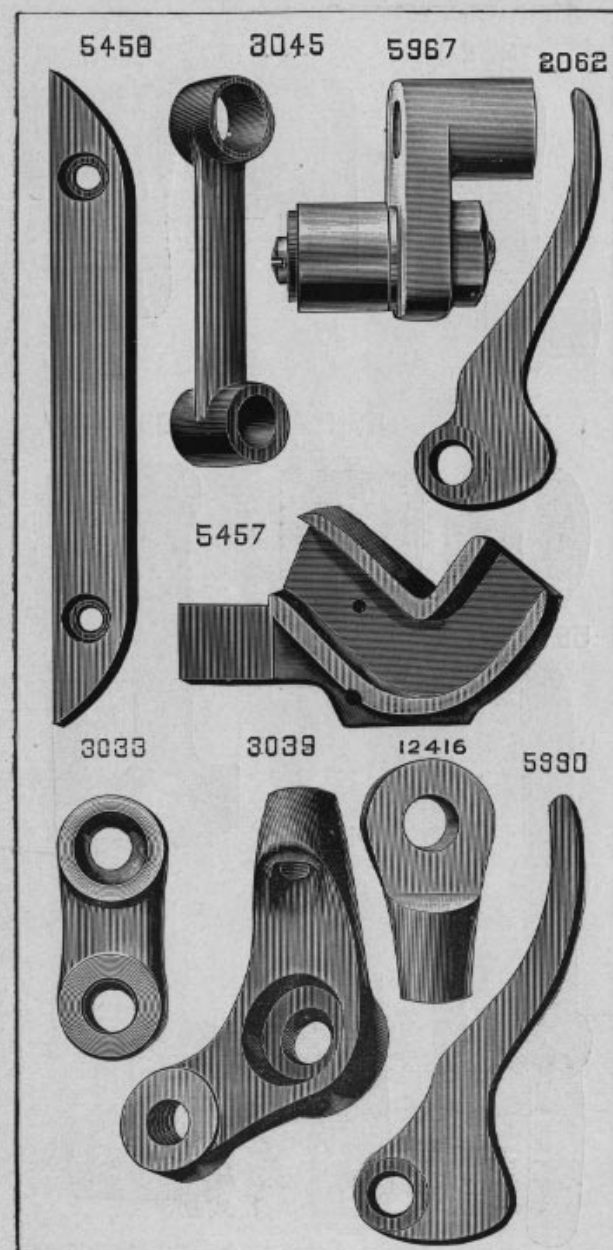


PLATE 682—FULL SIZE

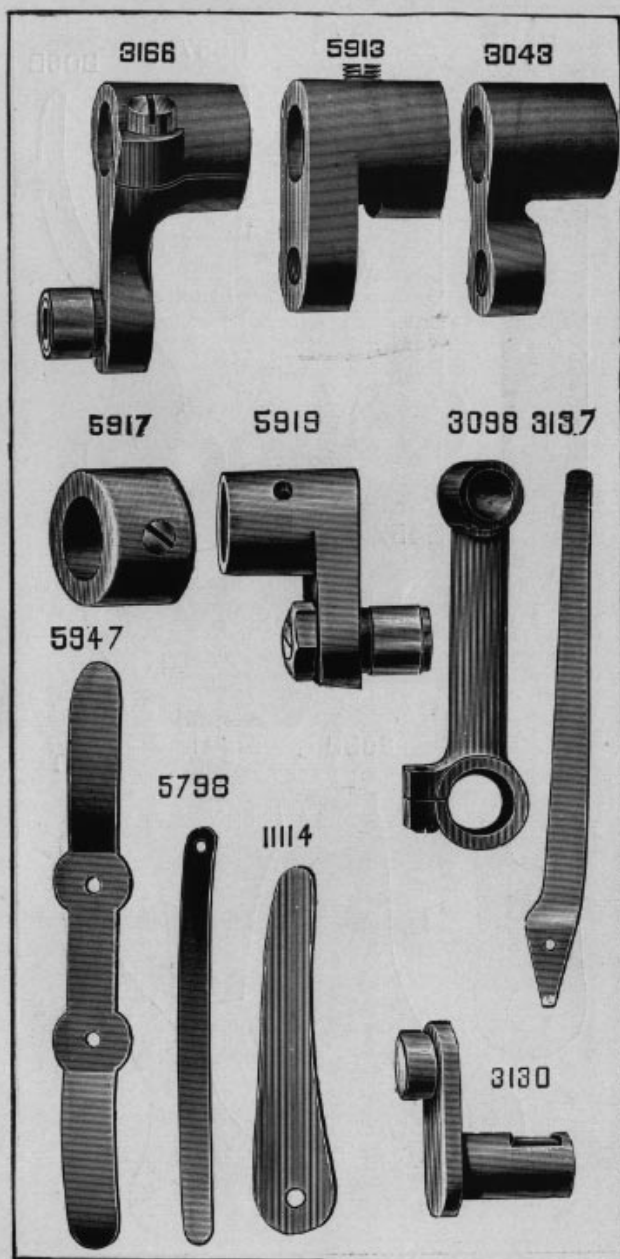
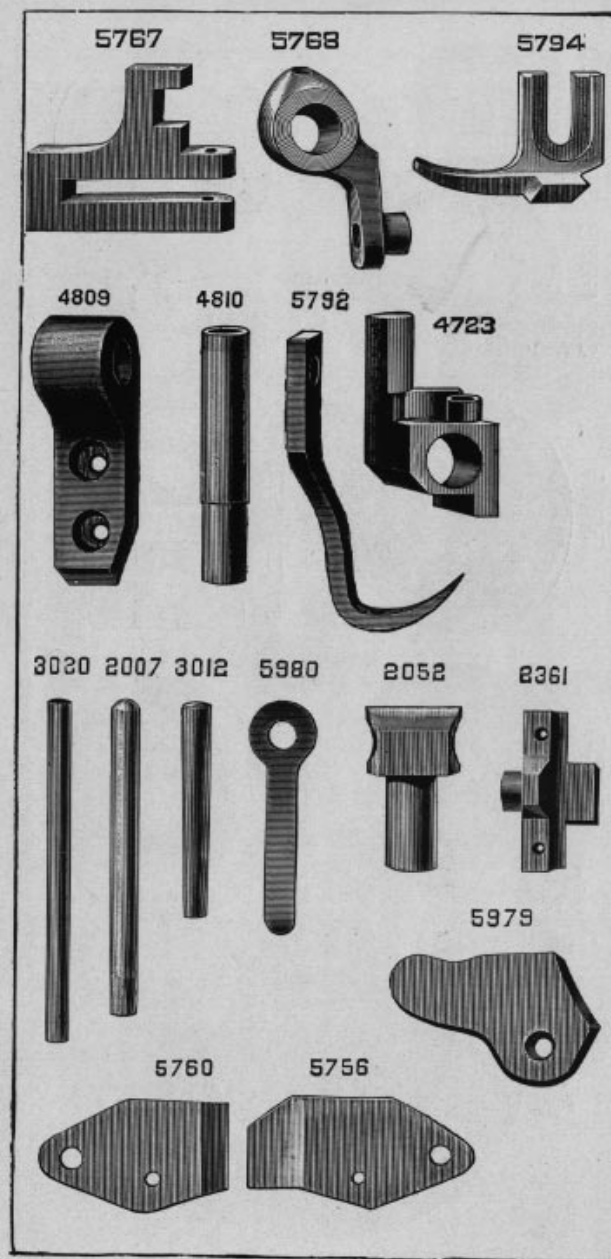


PLATE 683—FULL SIZE



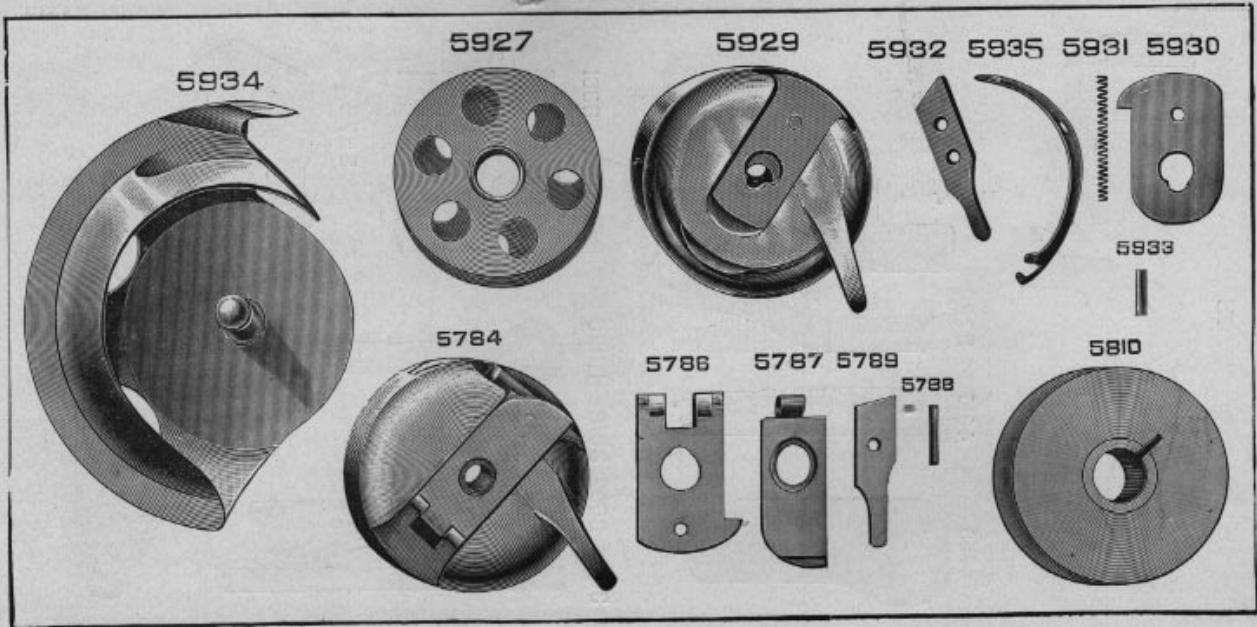
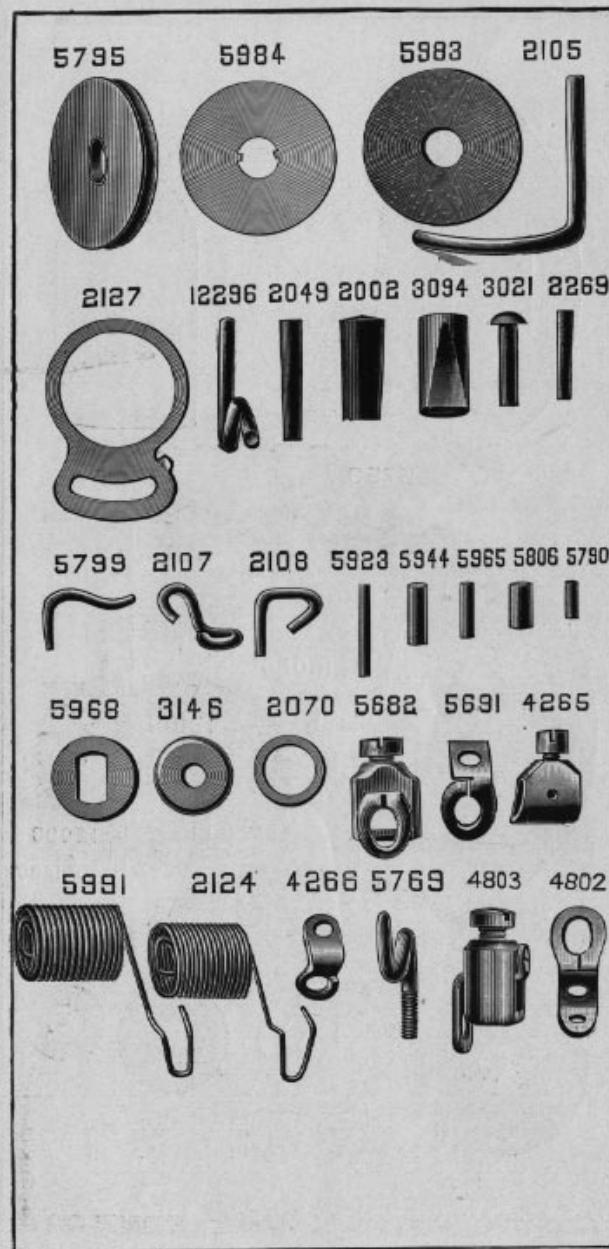


PLATE 684—FULL SIZE

PLATE 685—FULL SIZE



PLATE 686—FULL SIZE



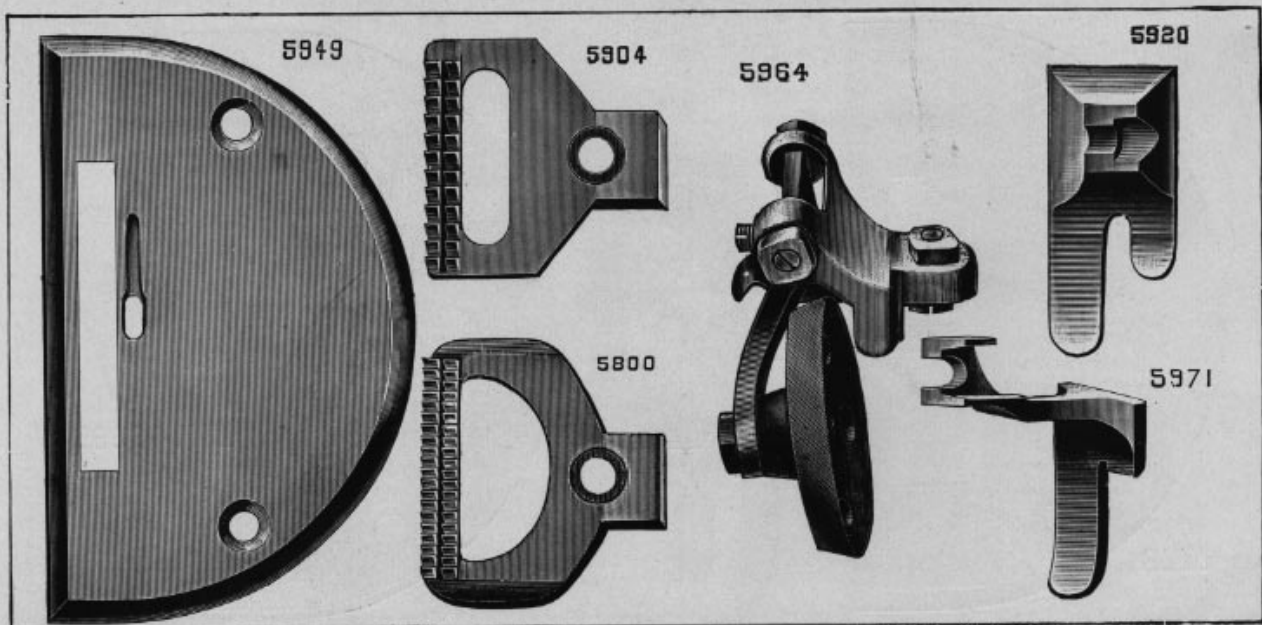


PLATE 687—FULL SIZE

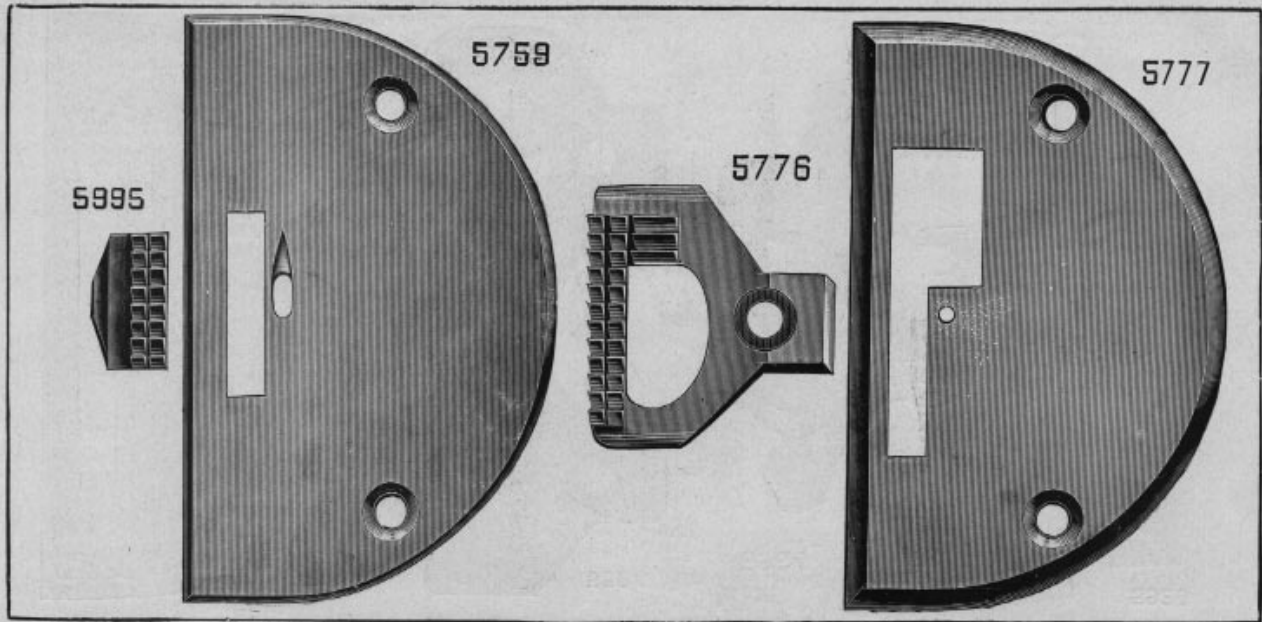


PLATE 688—FULL SIZE

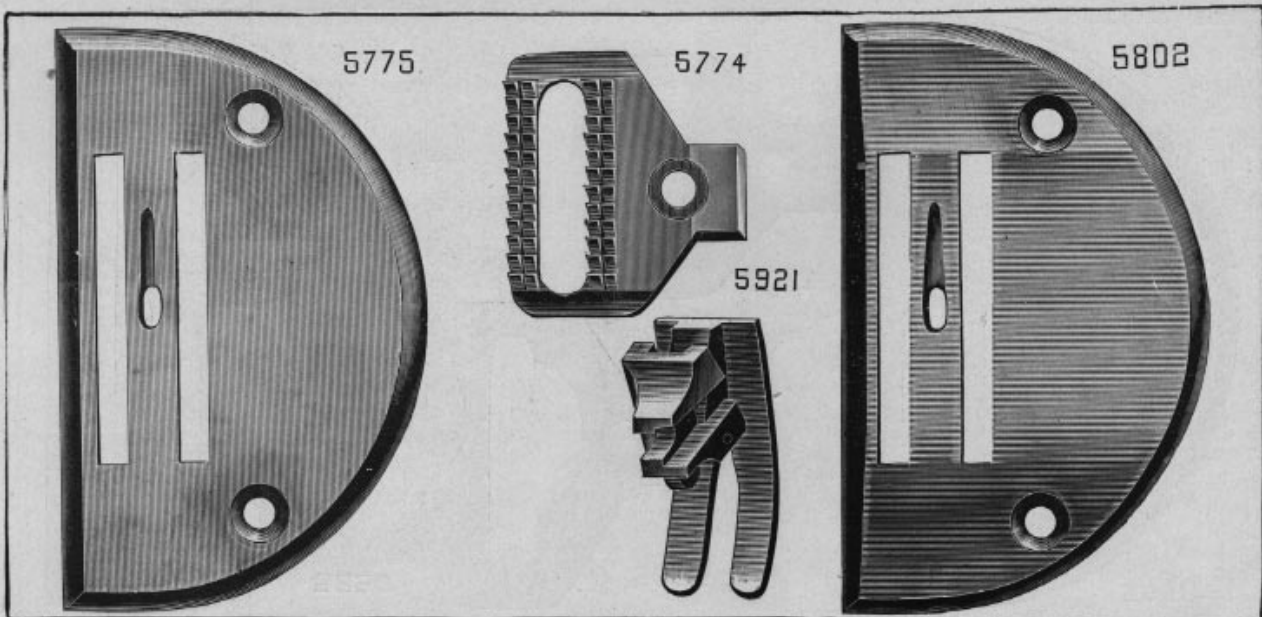


PLATE 689—FULL SIZE

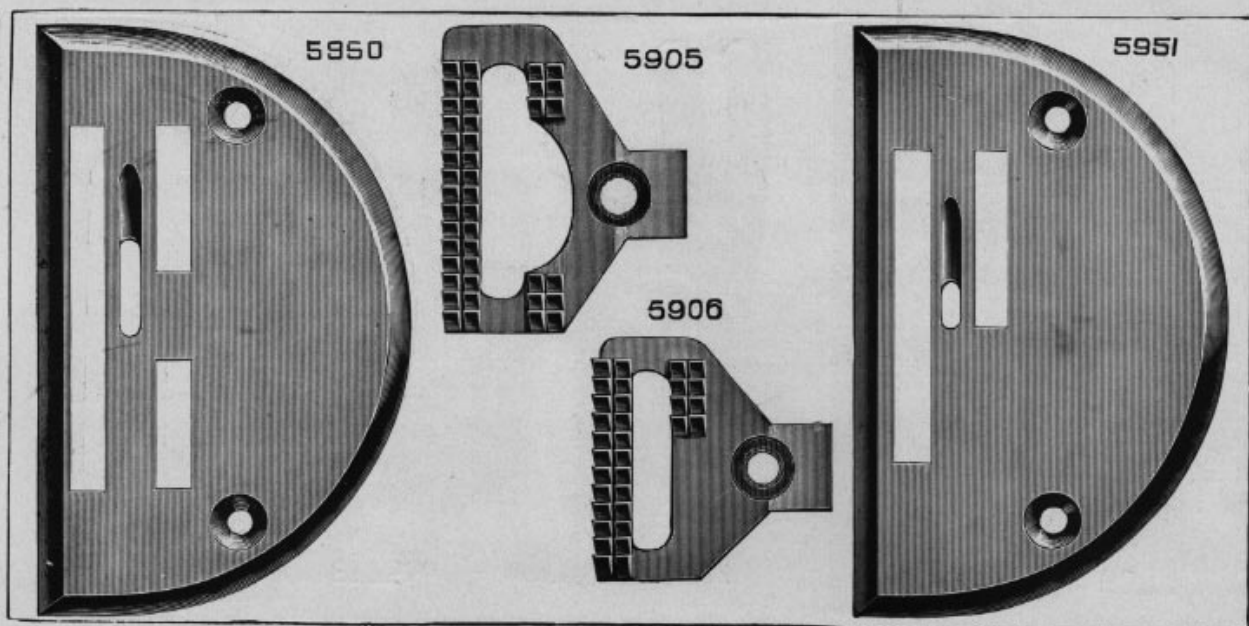


PLATE 690—FULL SIZE

# PLATE 691—FULL SIZE

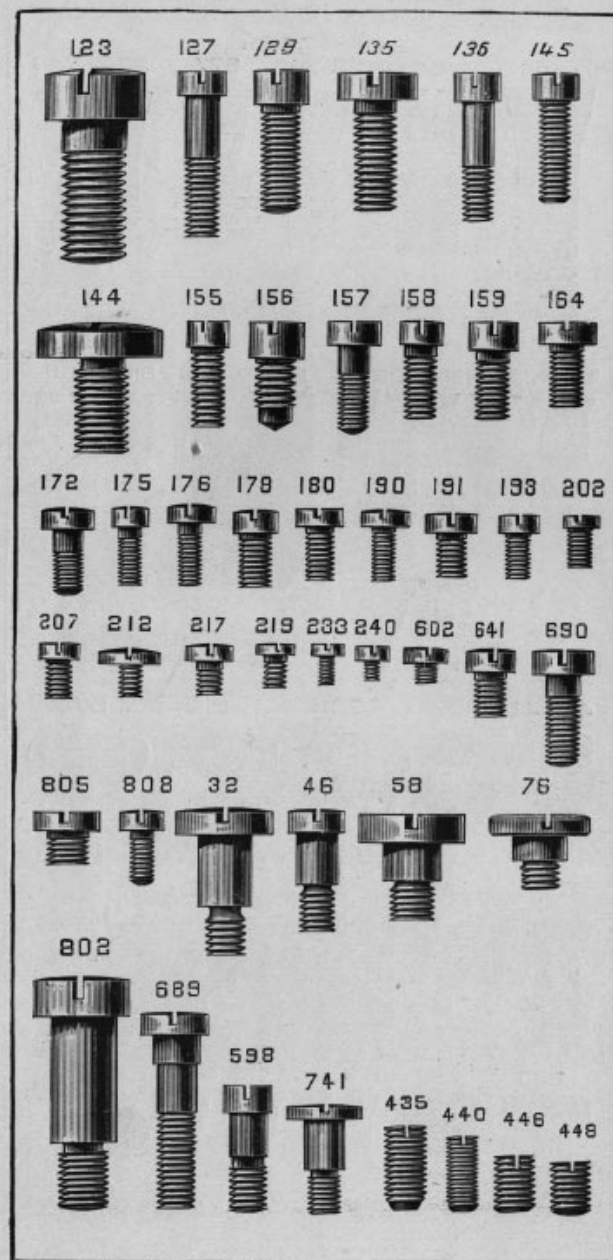


PLATE 692—FULL SIZE

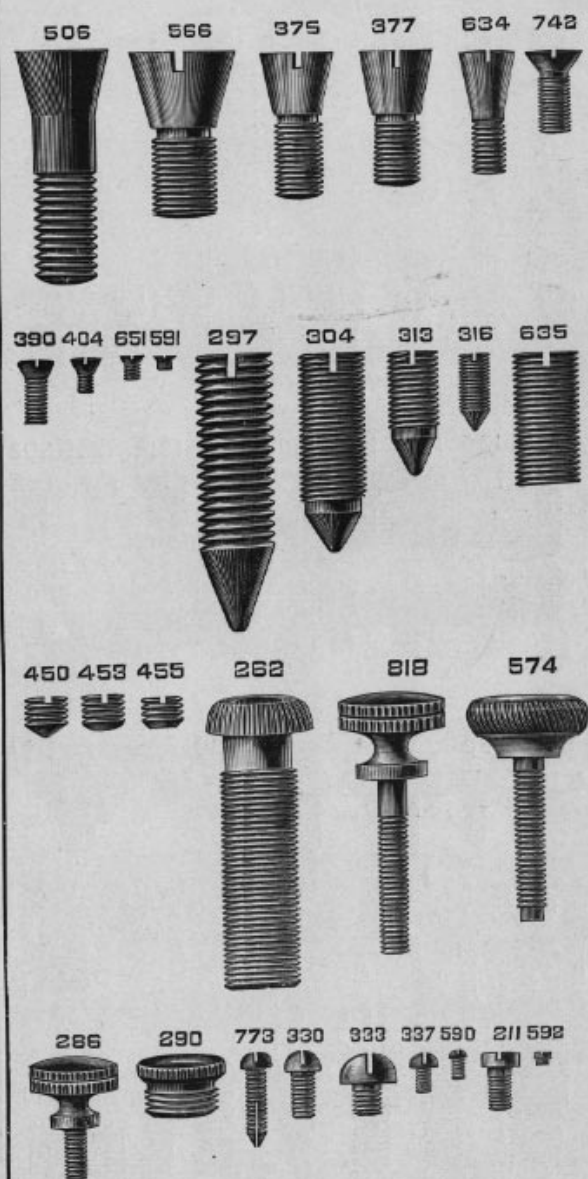
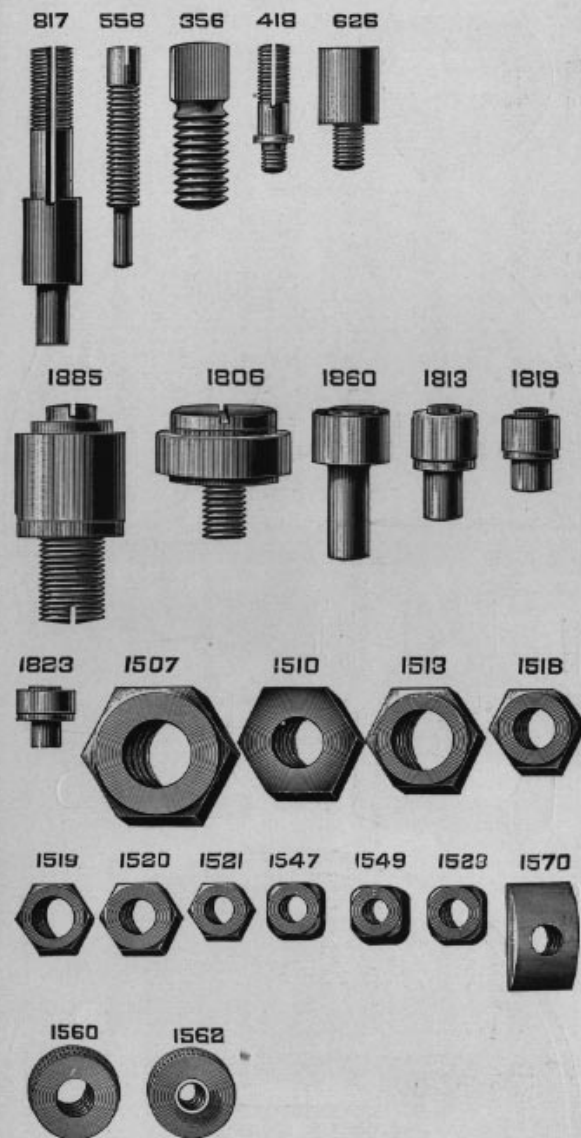


PLATE 693—FULL SIZE



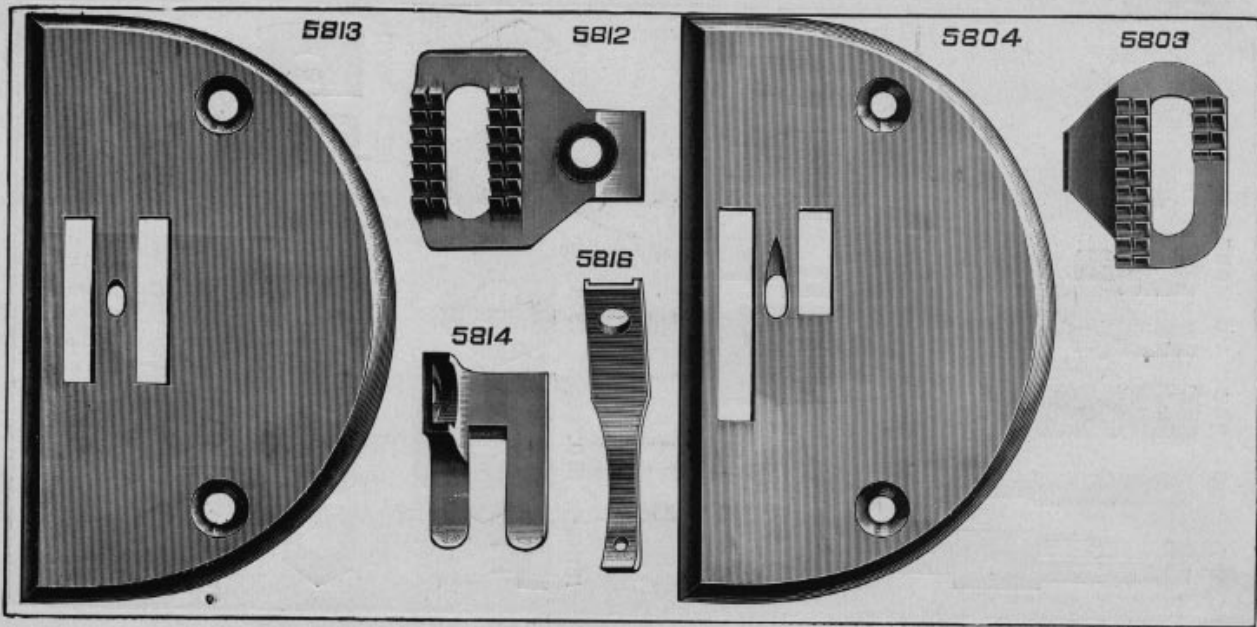


PLATE 694—FULL SIZE

PLATE 695—FULL SIZE

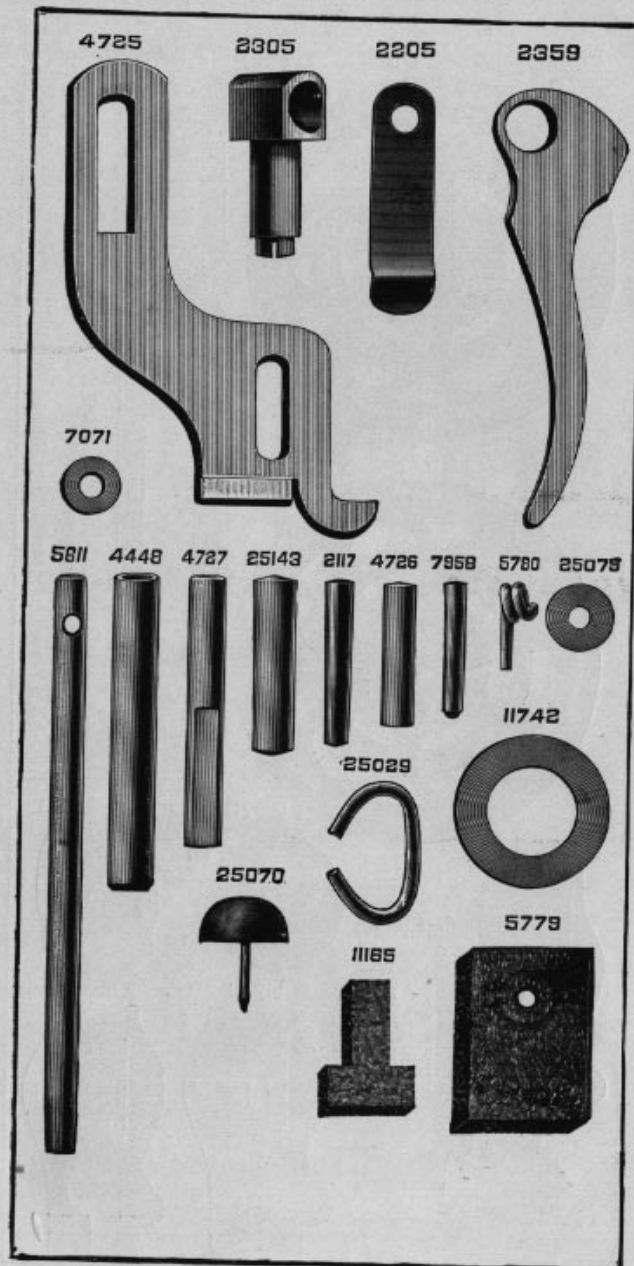


PLATE 696—ONE-FOURTH SIZE

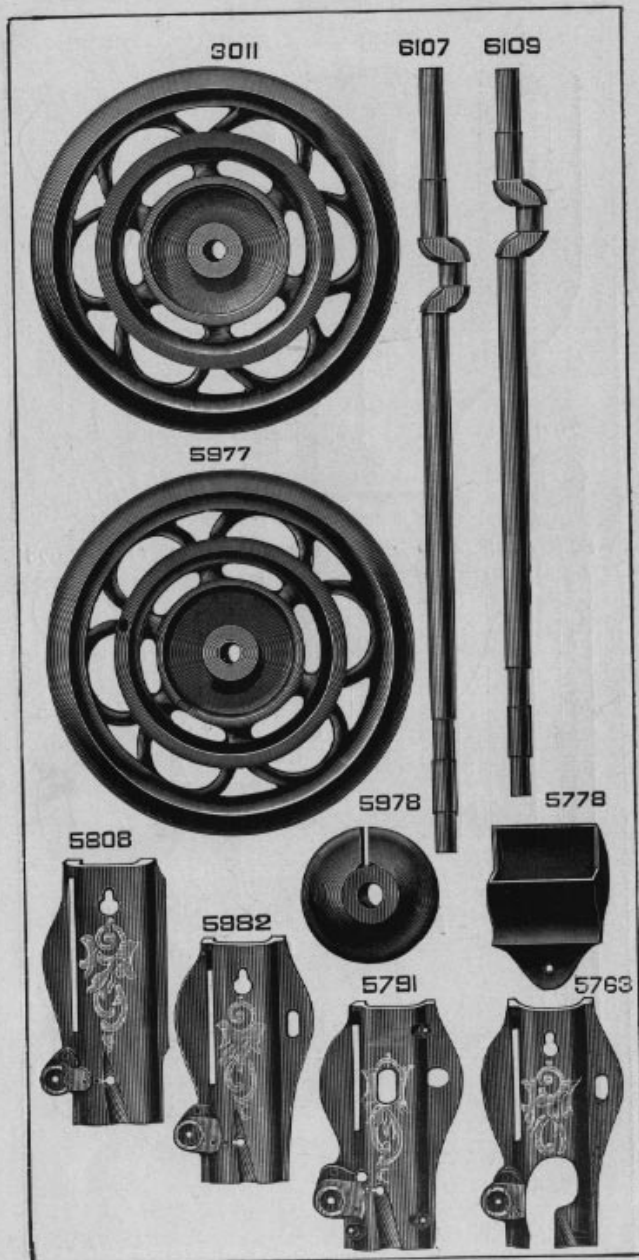
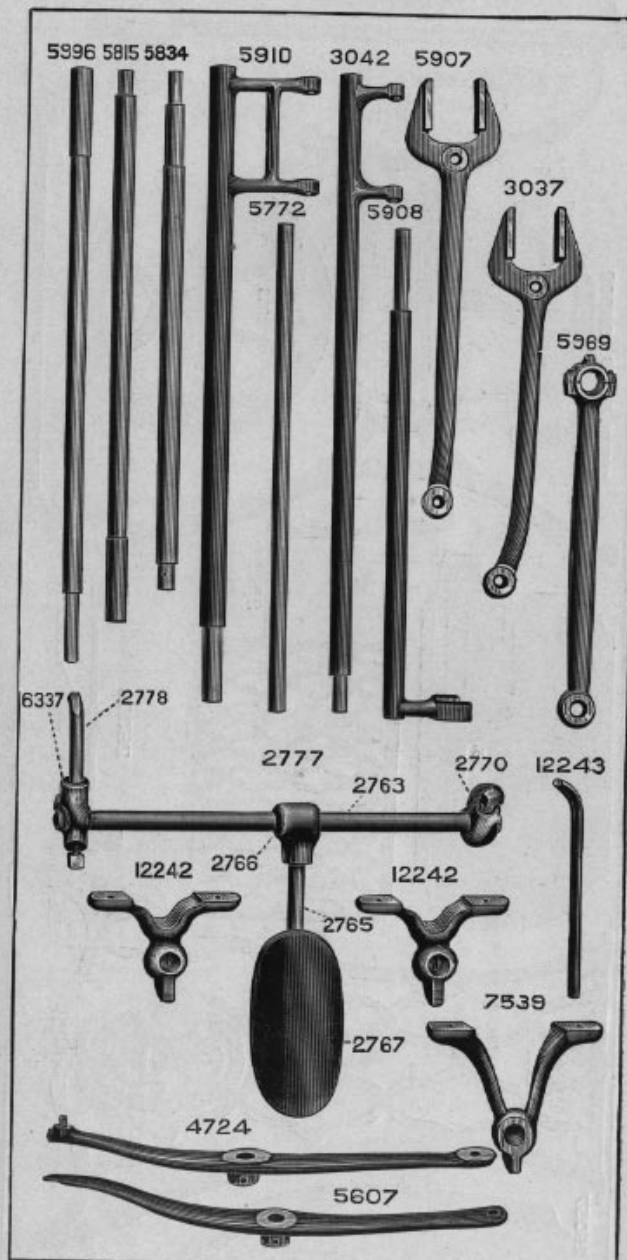


PLATE 697—ONE-FOURTH SIZE



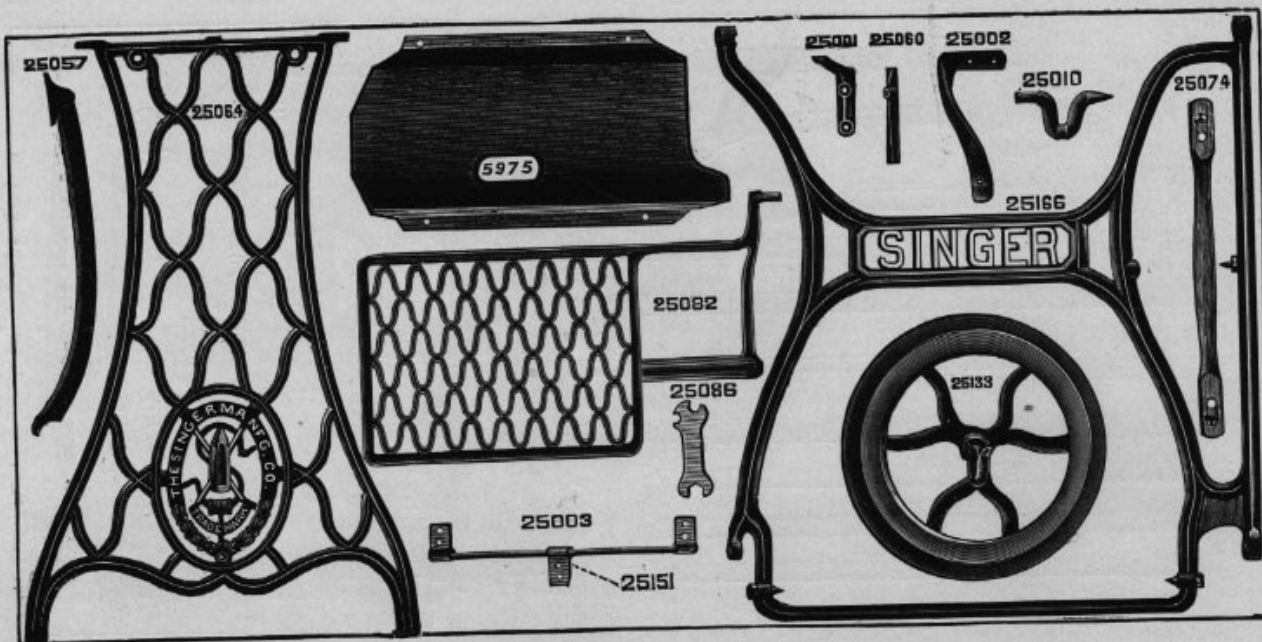


PLATE 698—ONE-EIGHTH SIZE