


SINGER
45K57,75,76,87

DO NOT REMOVE
ILLUSTRATED LIST OF PARTS


FOR

Nos. 45K57, 45K75, 45K76
and 45K87 MACHINES

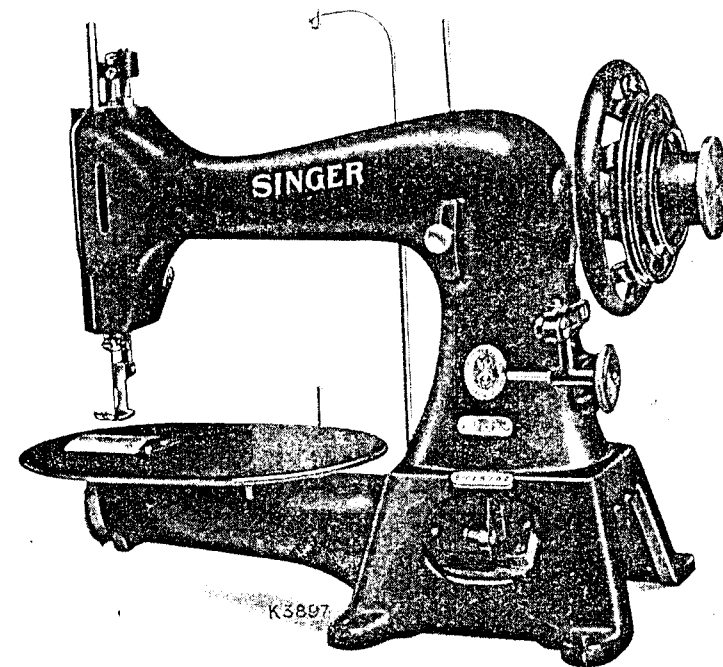


45K57 Machine

**A Trade Mark of
THE SINGER MANUFACTURING COMPANY

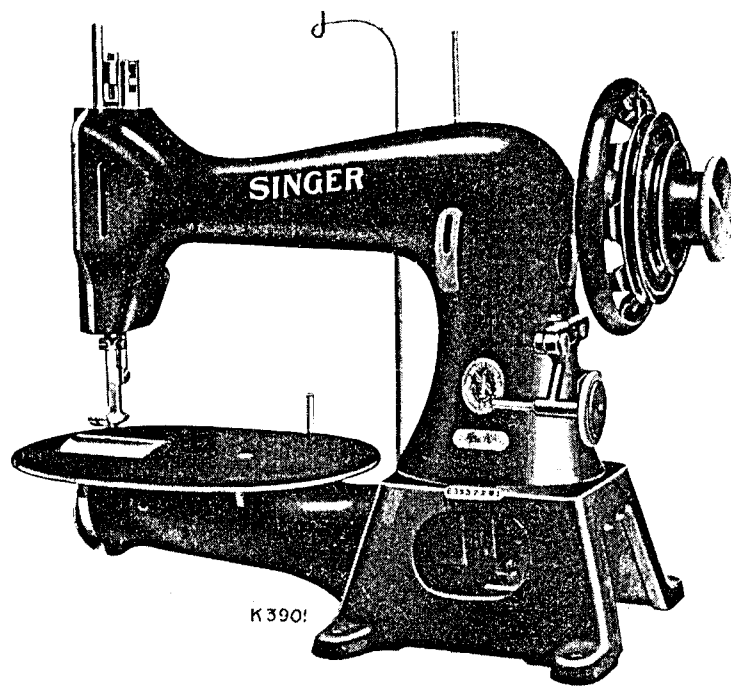


K3901

45K76 Machine

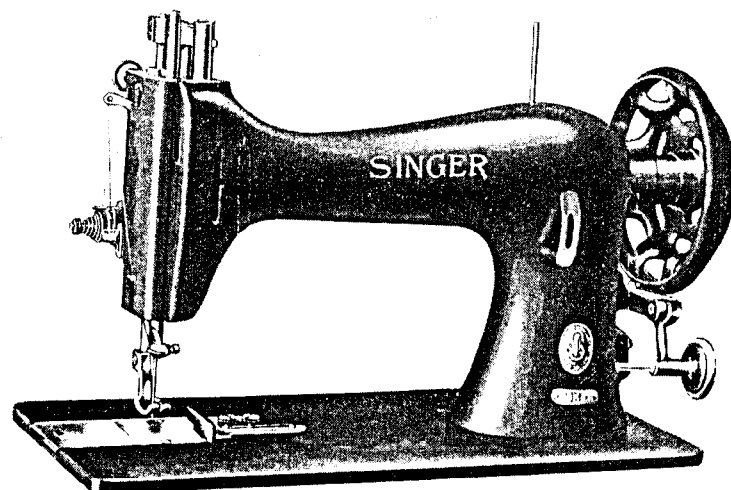


K1562

45K87 Machine

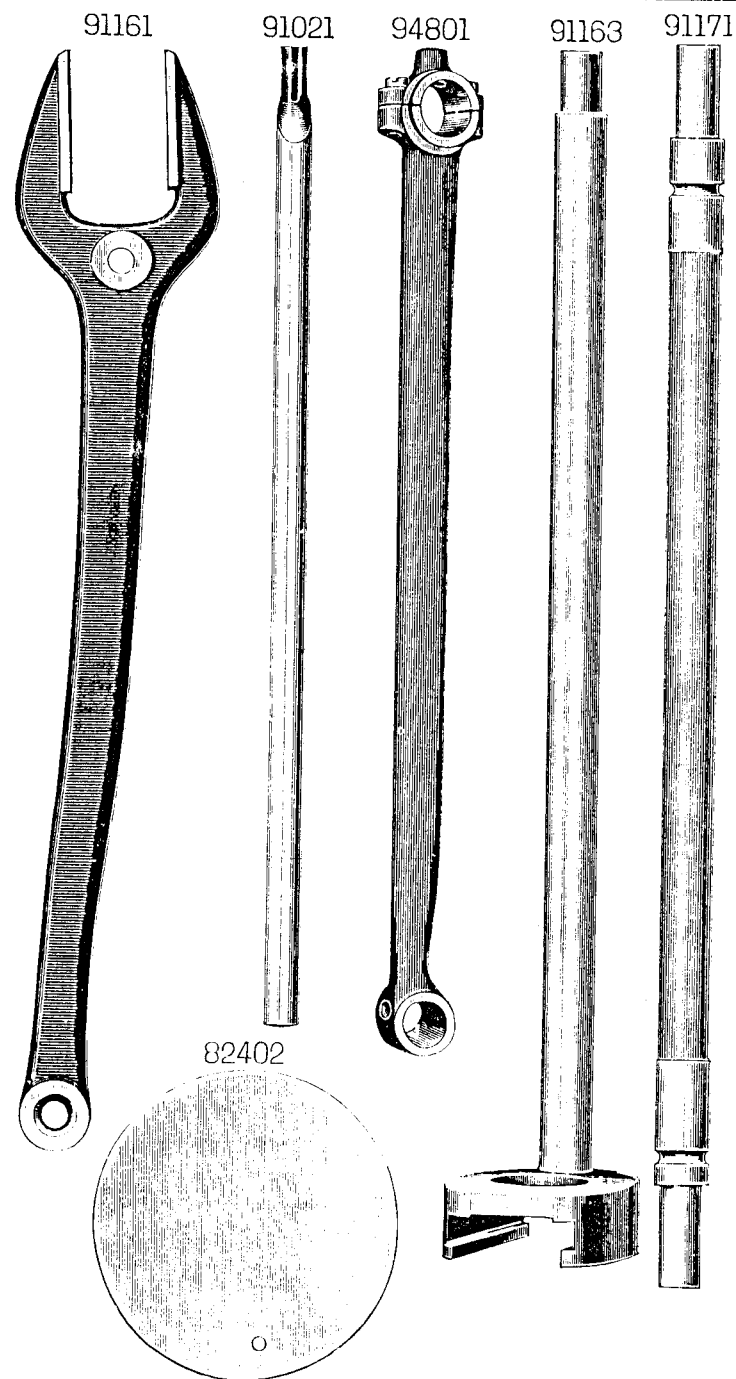

91233

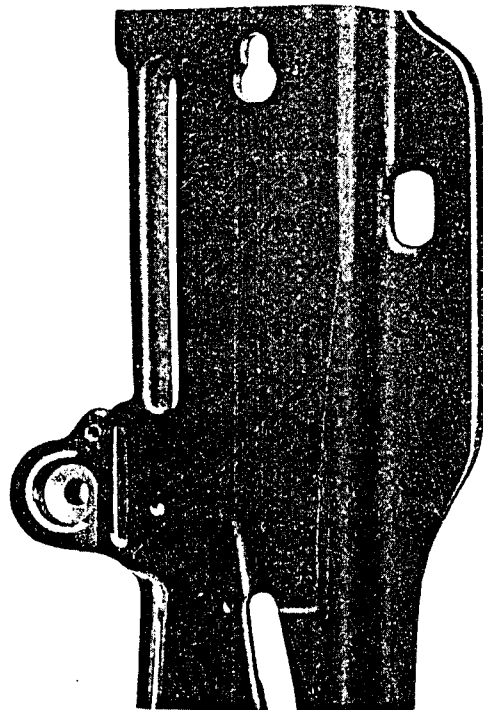


98664




91028




91714

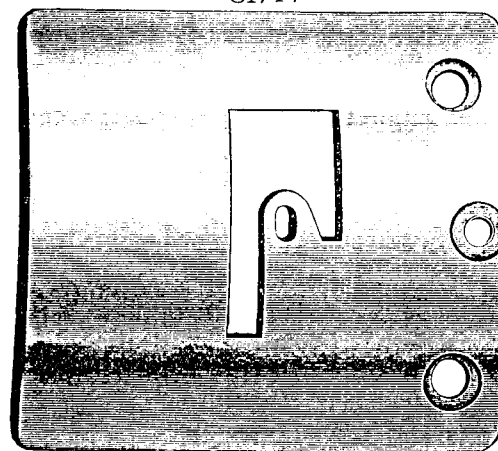


82499

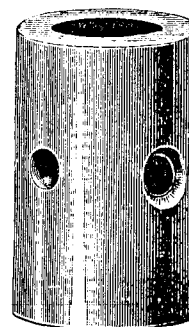


82414


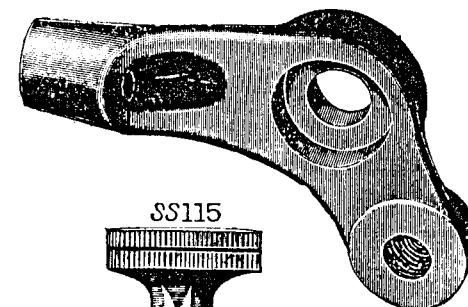




SS115

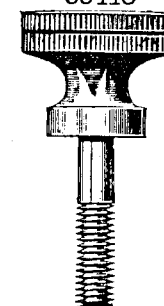


91315

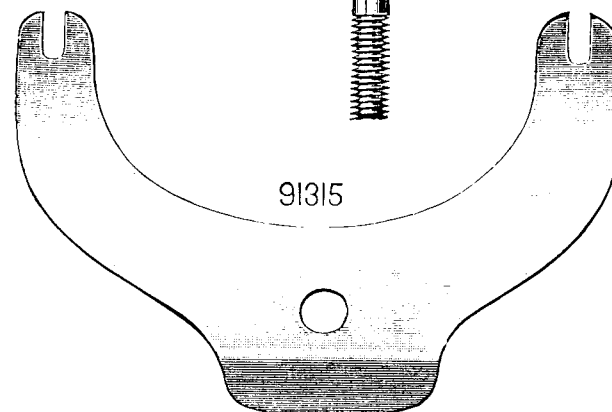

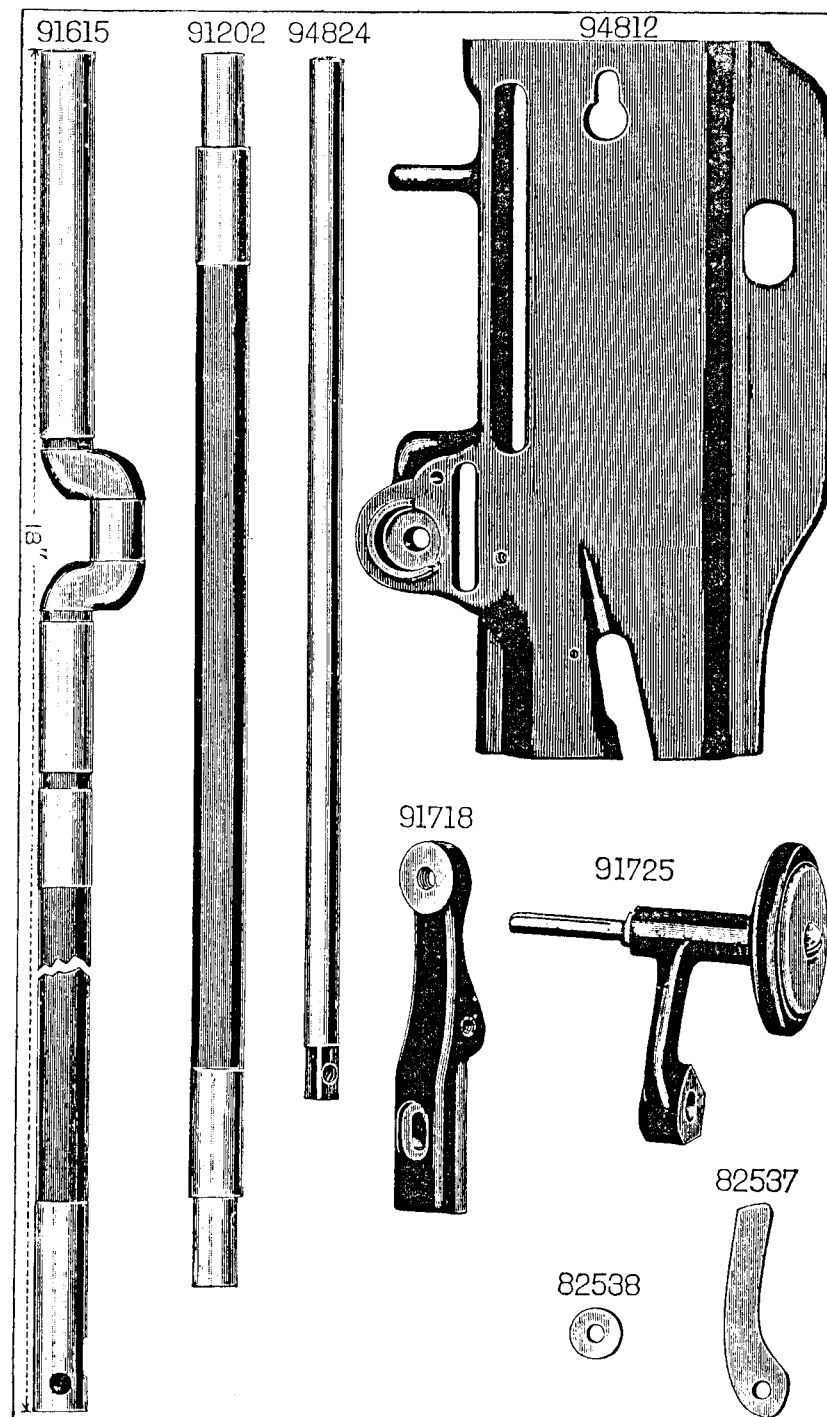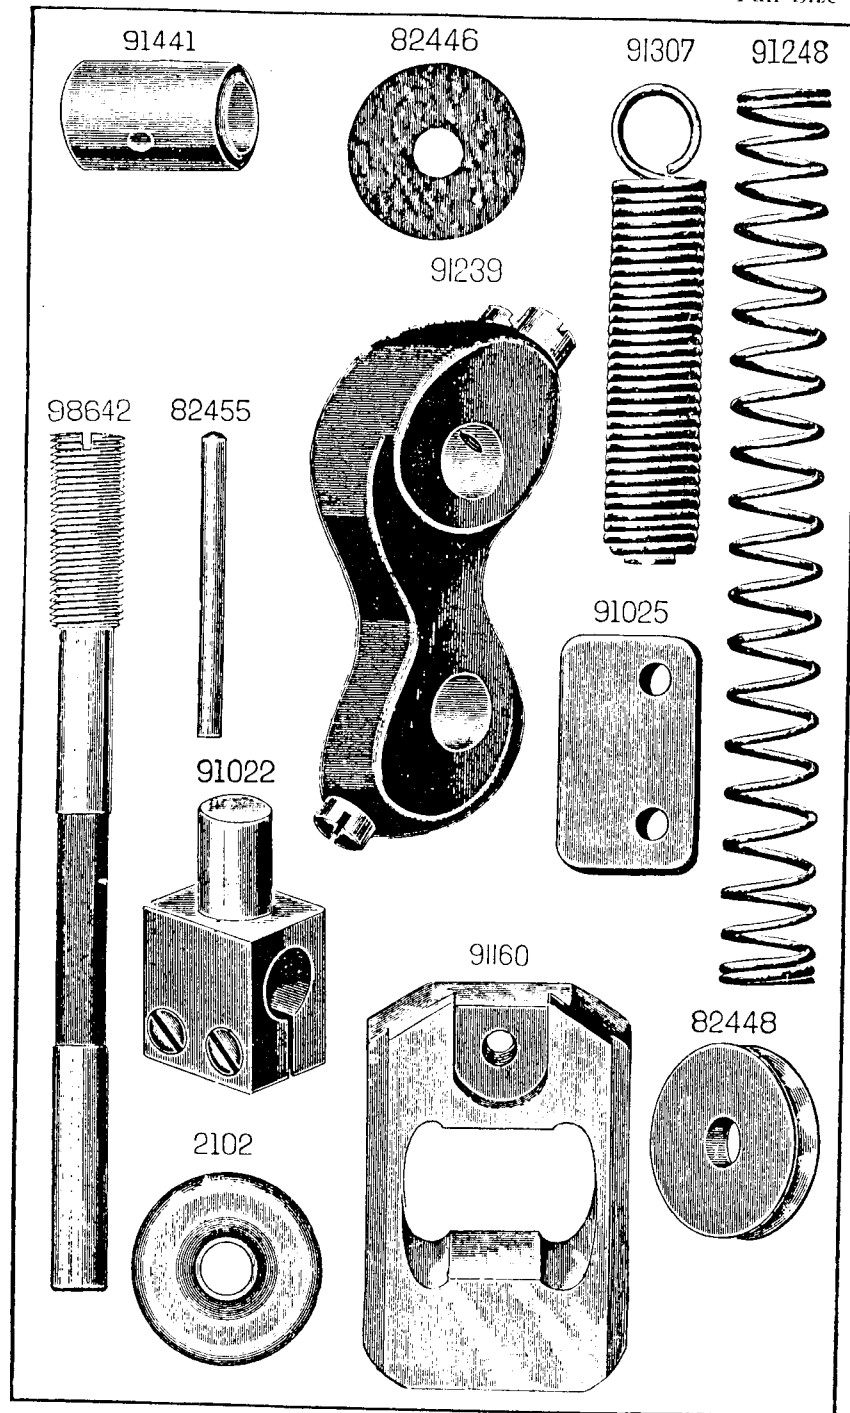


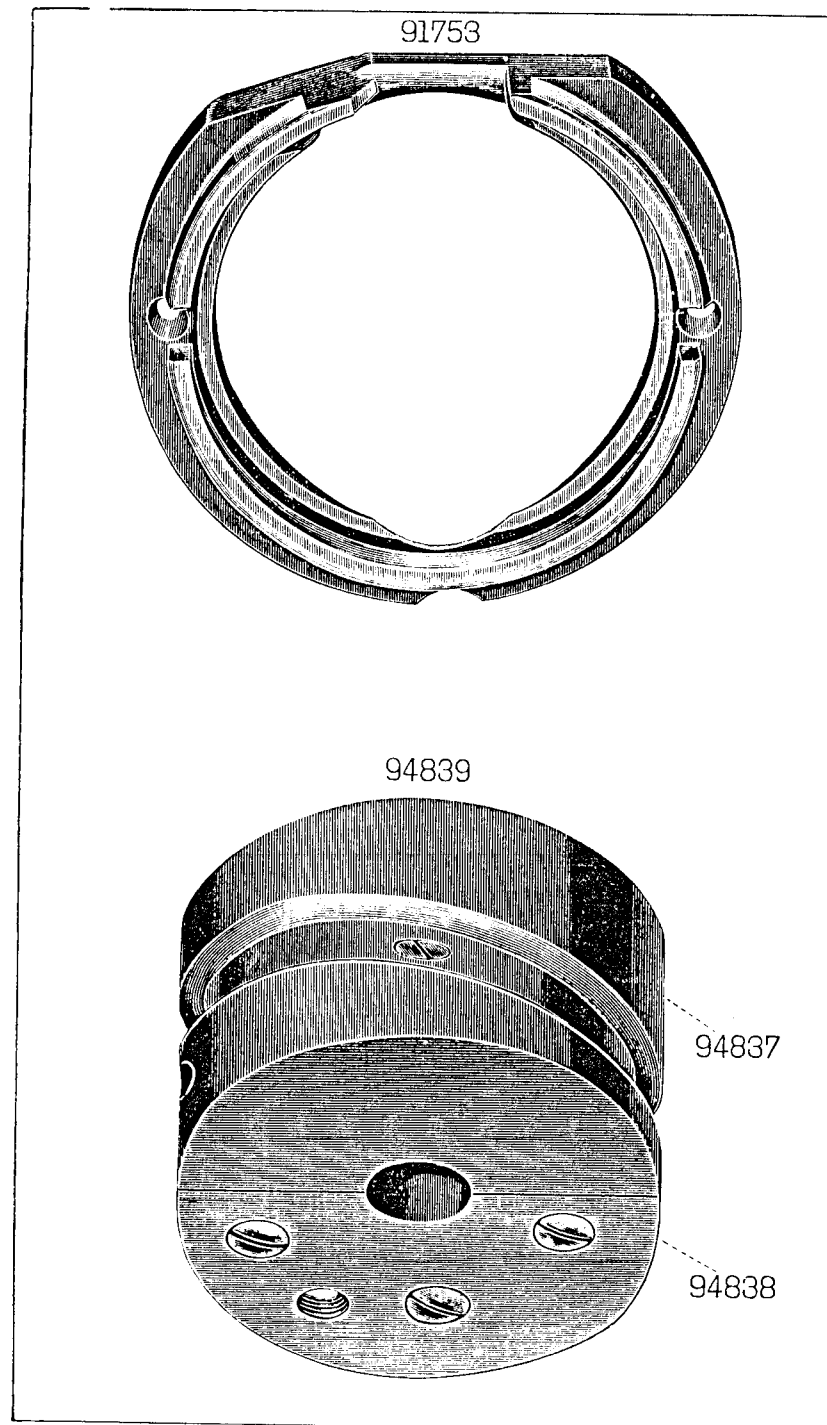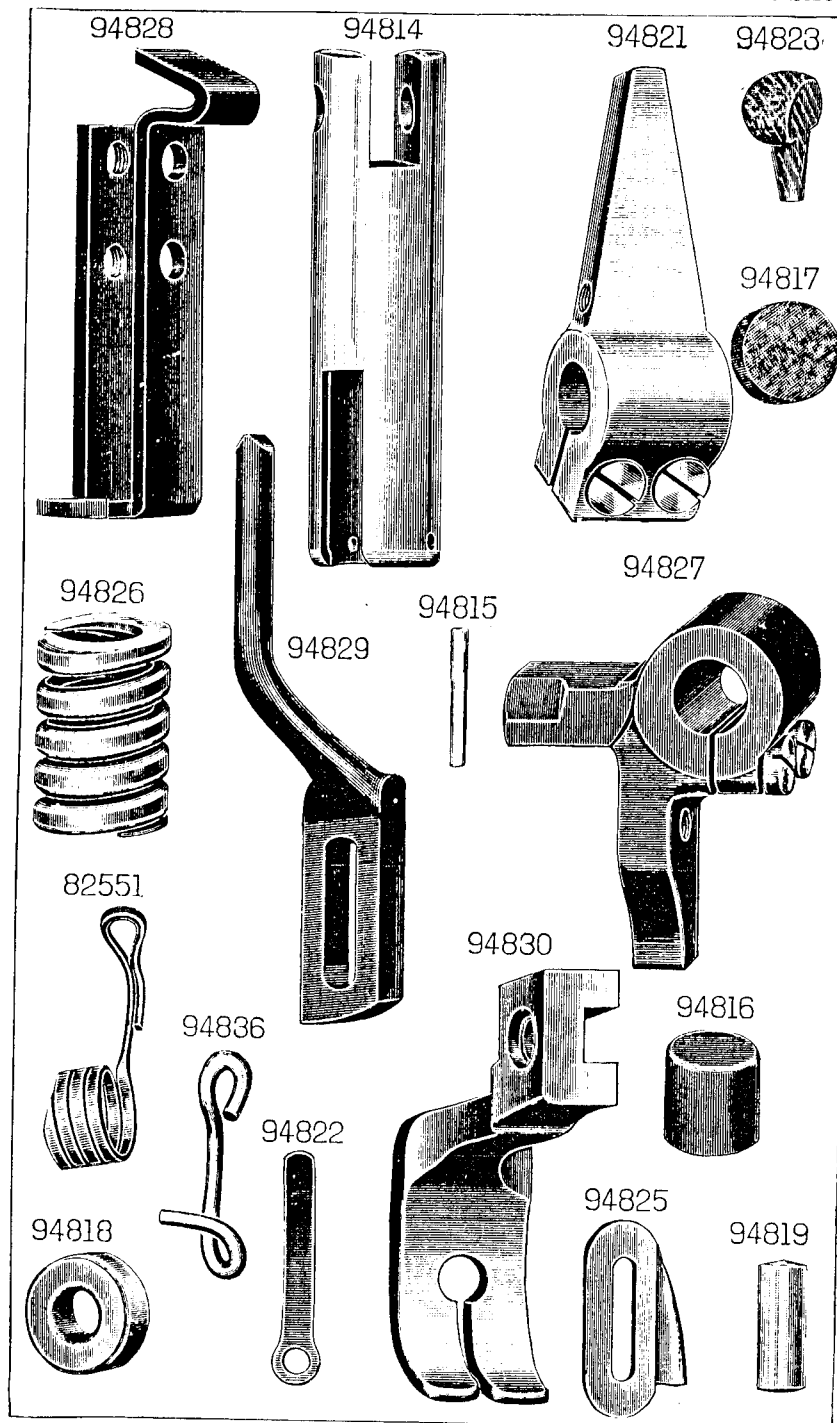


94840

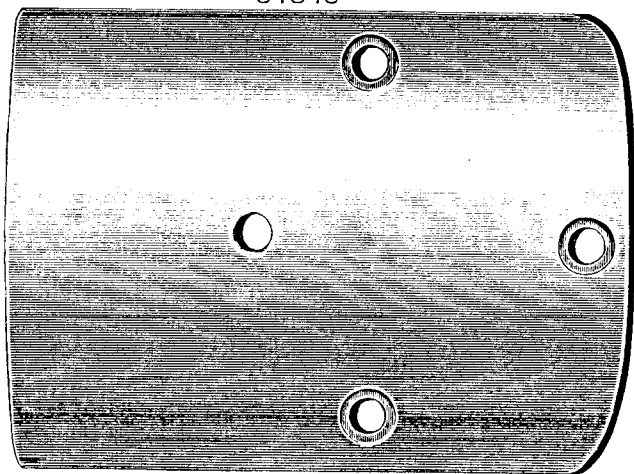


91153

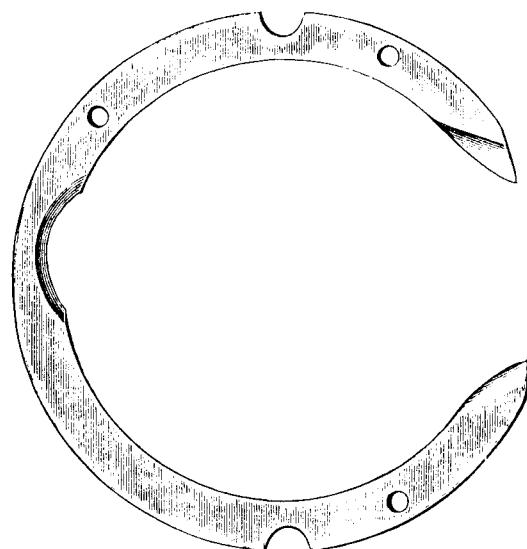


SS425

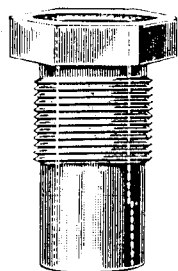

82549

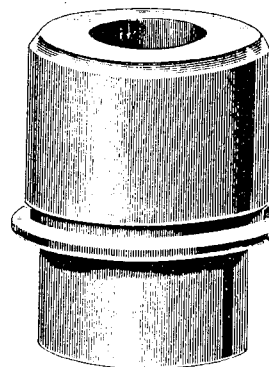

91652


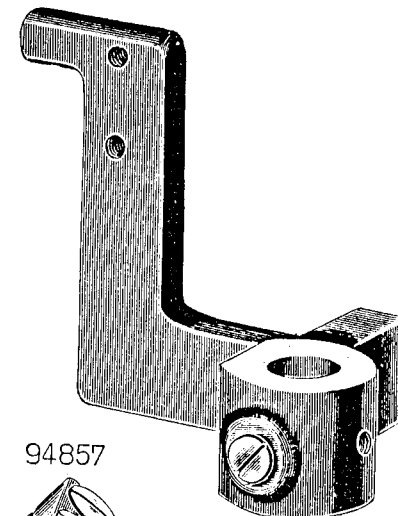


SS517


98674




94857

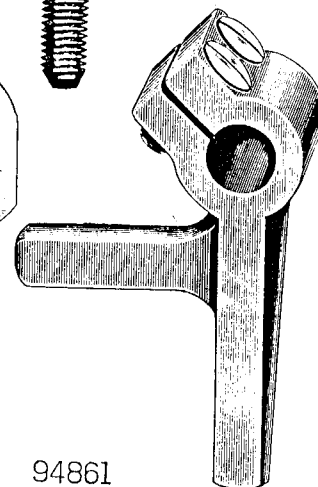
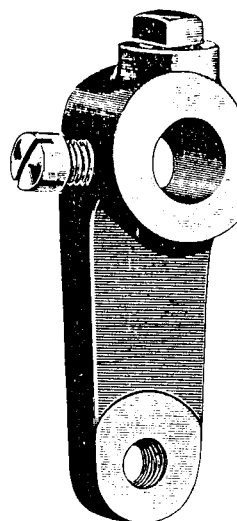


94860

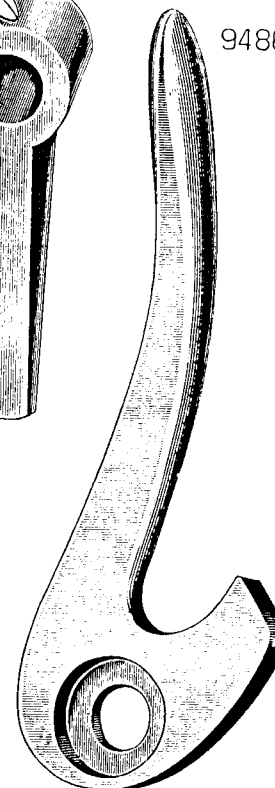

94861

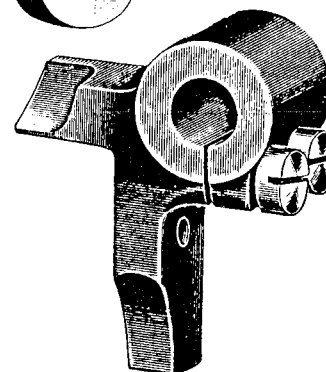

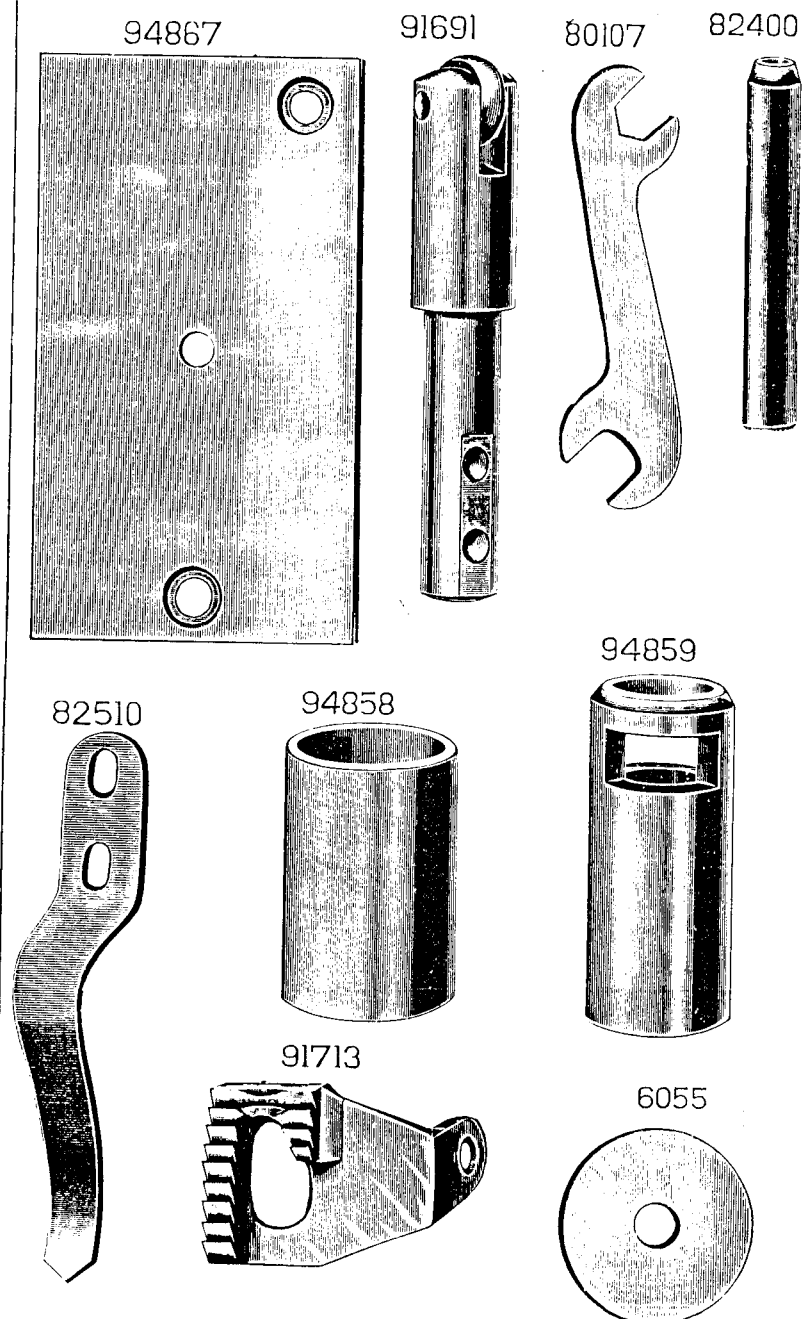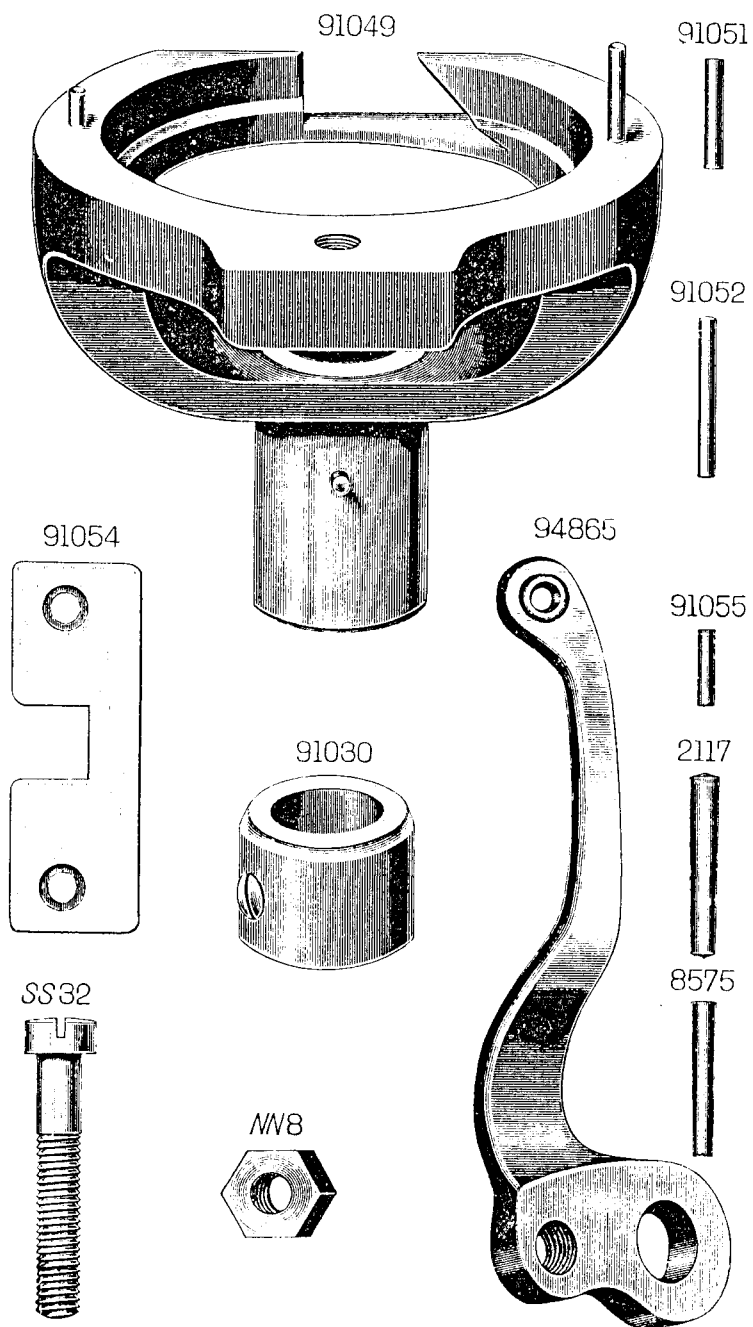

94854

95149




95148

95150

7958 91298

91306




91166

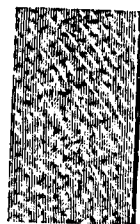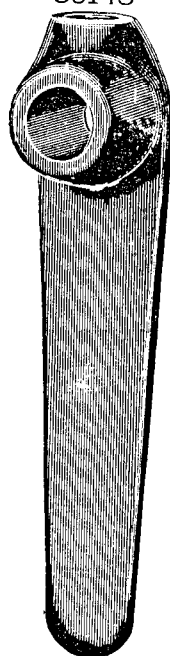
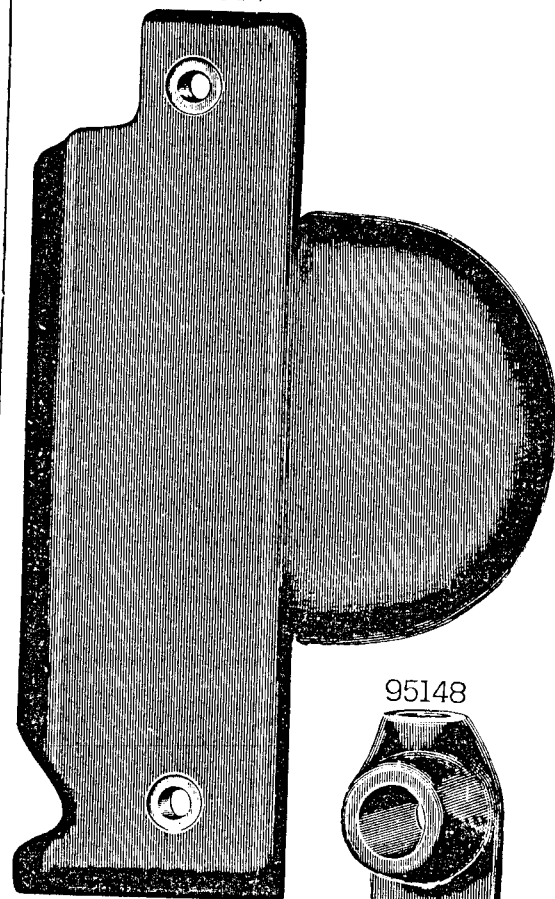




91057



91059

91058

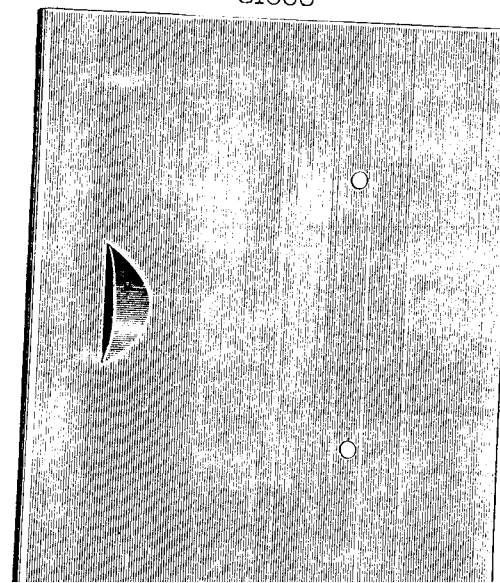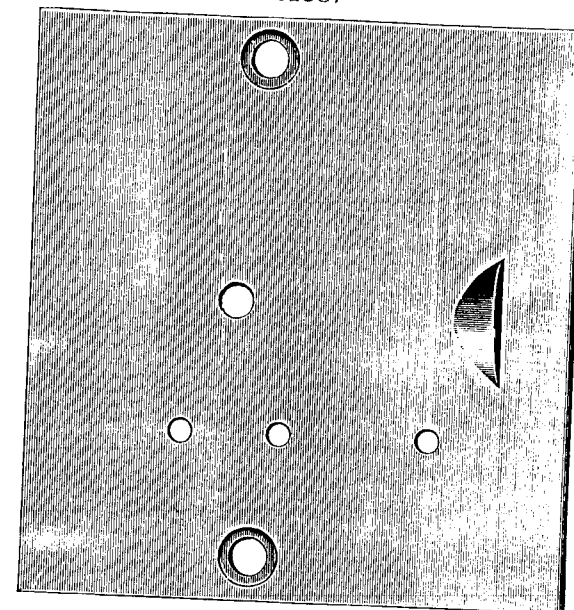


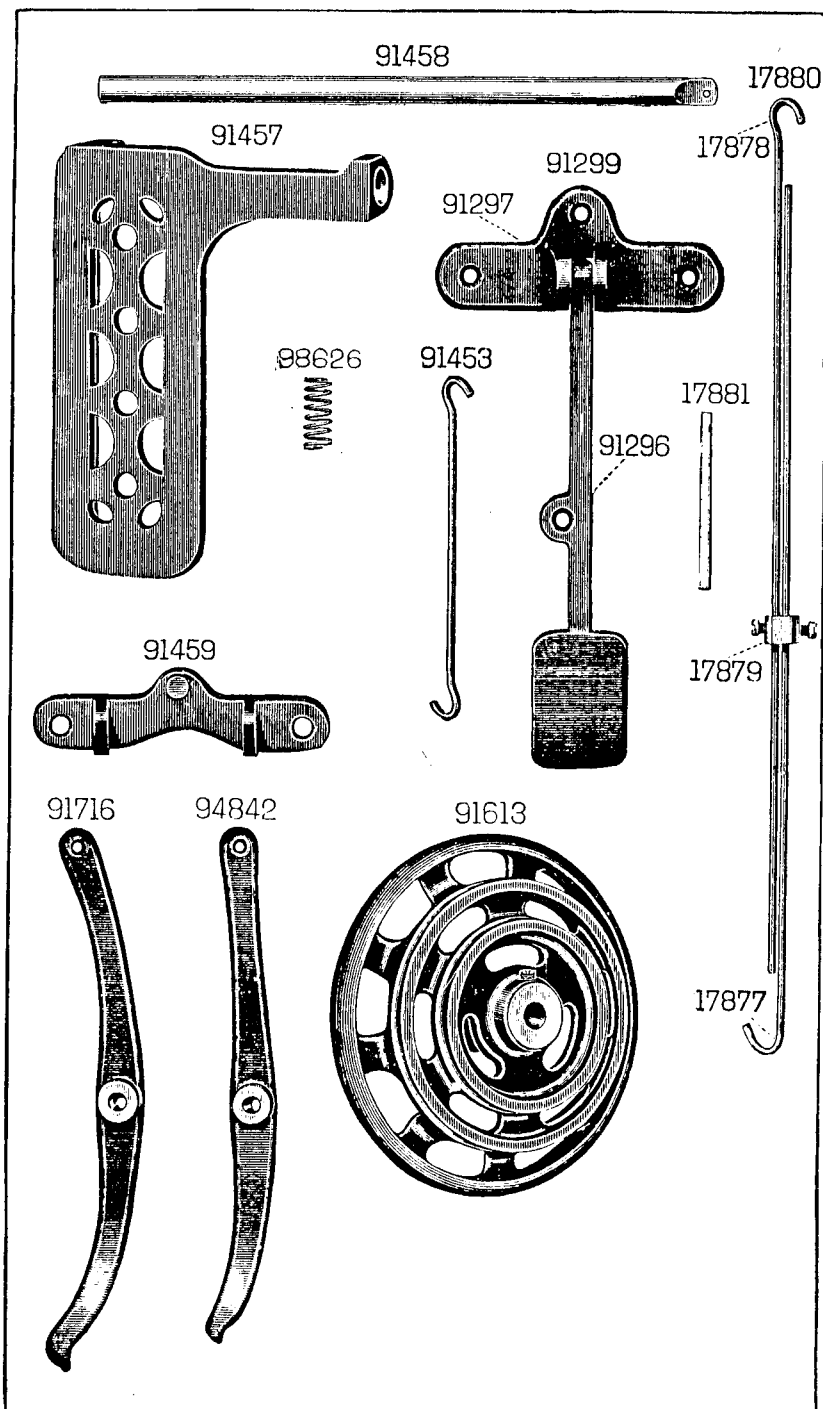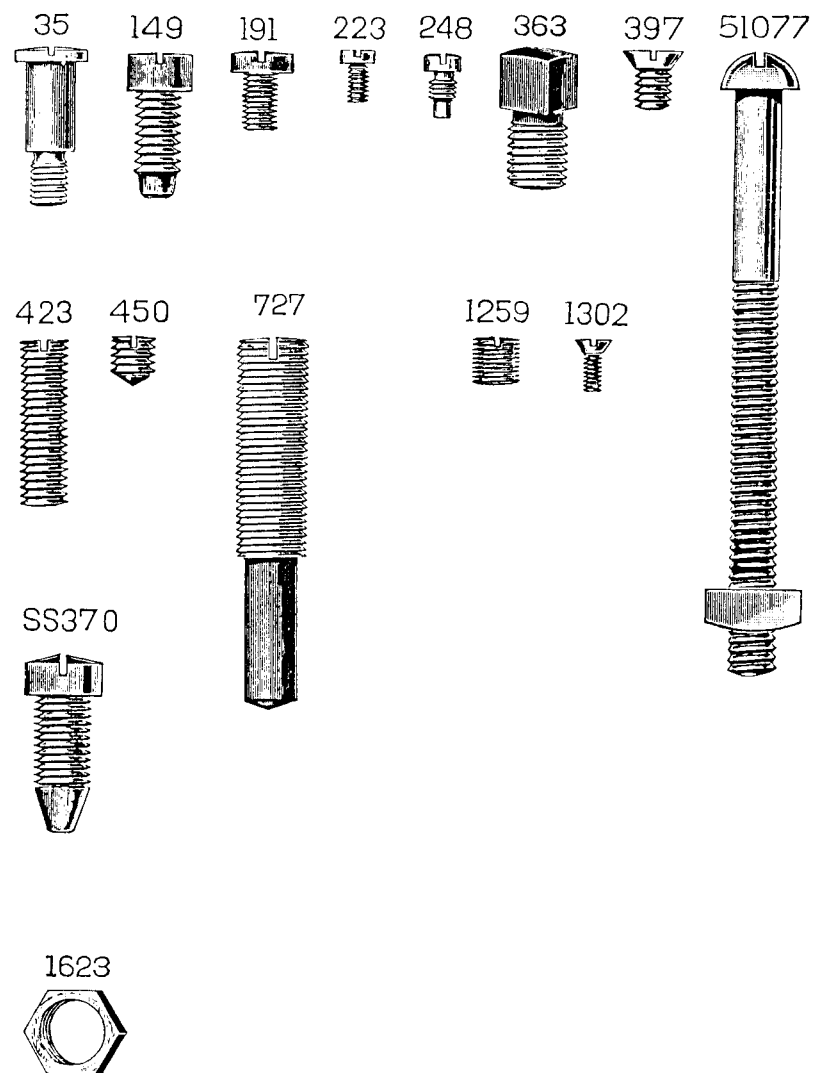

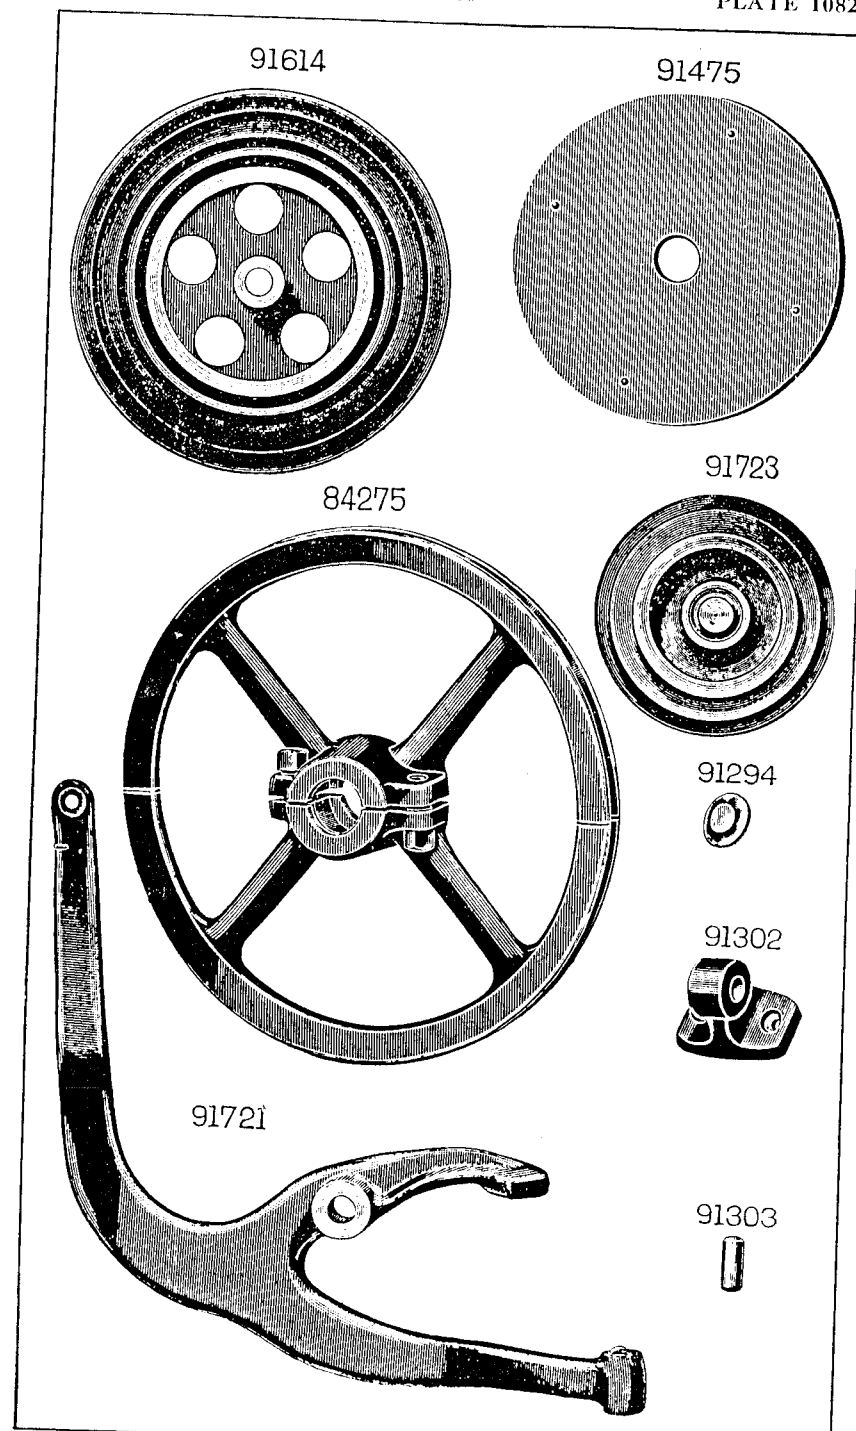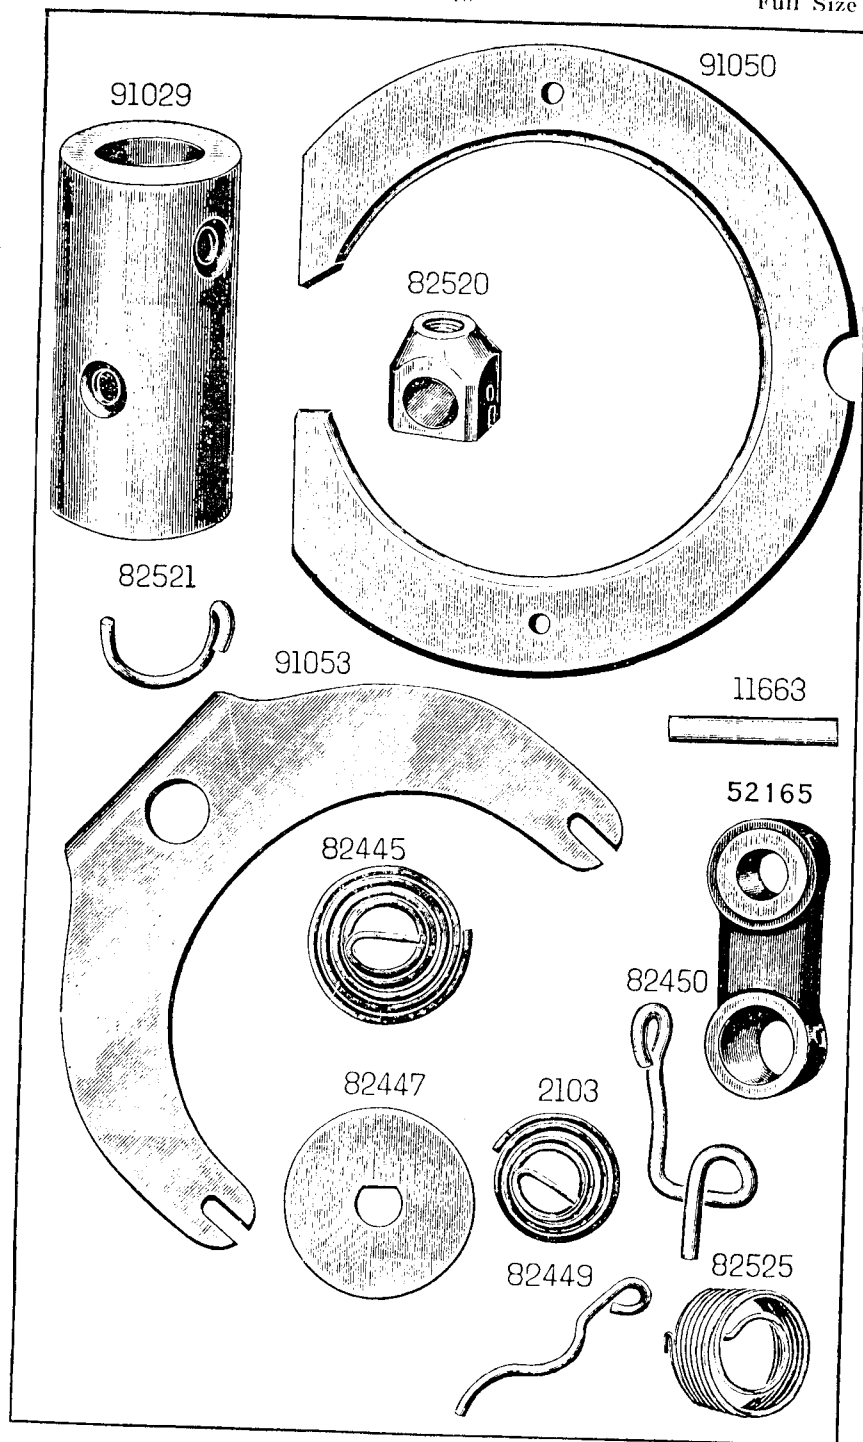


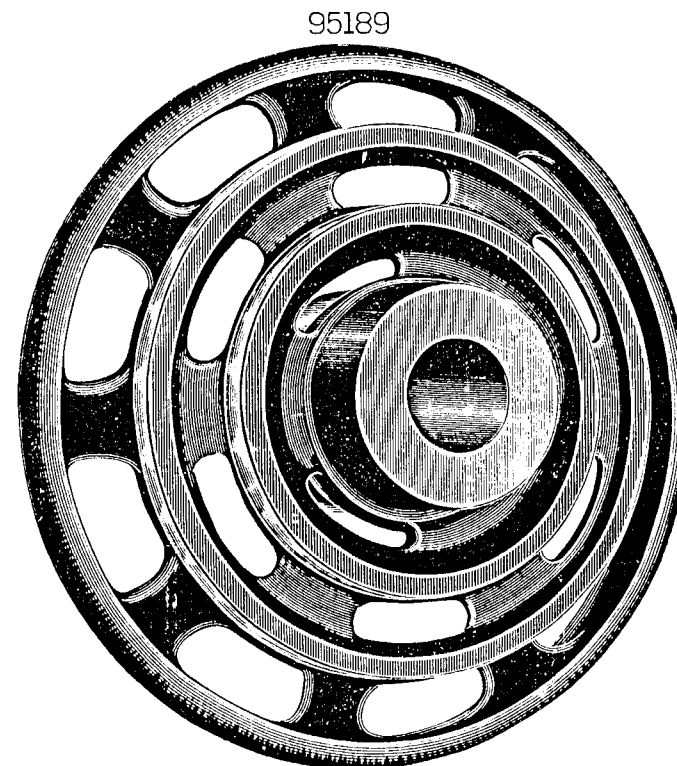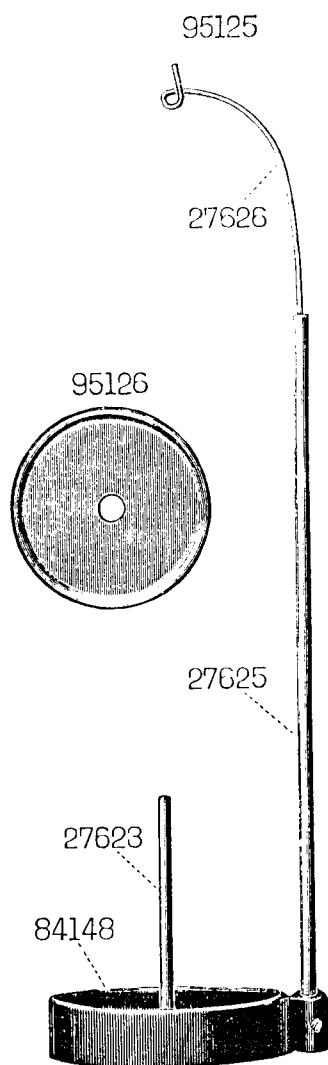


SS463


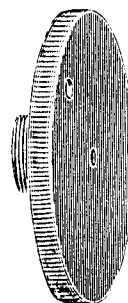









95146

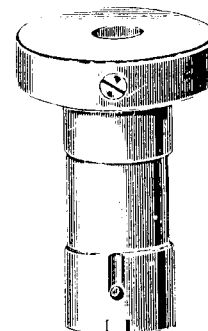

95145

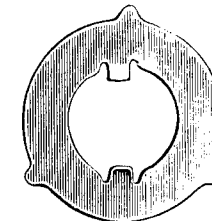

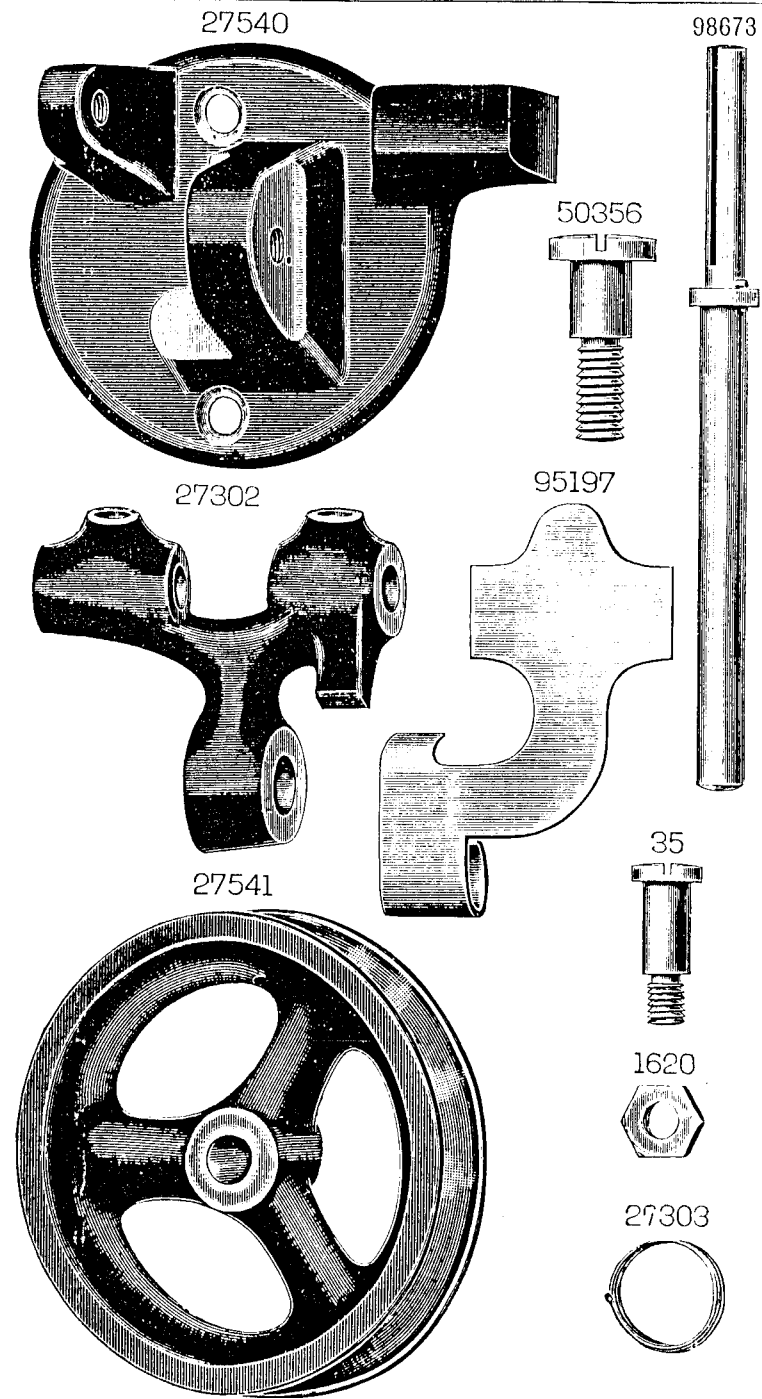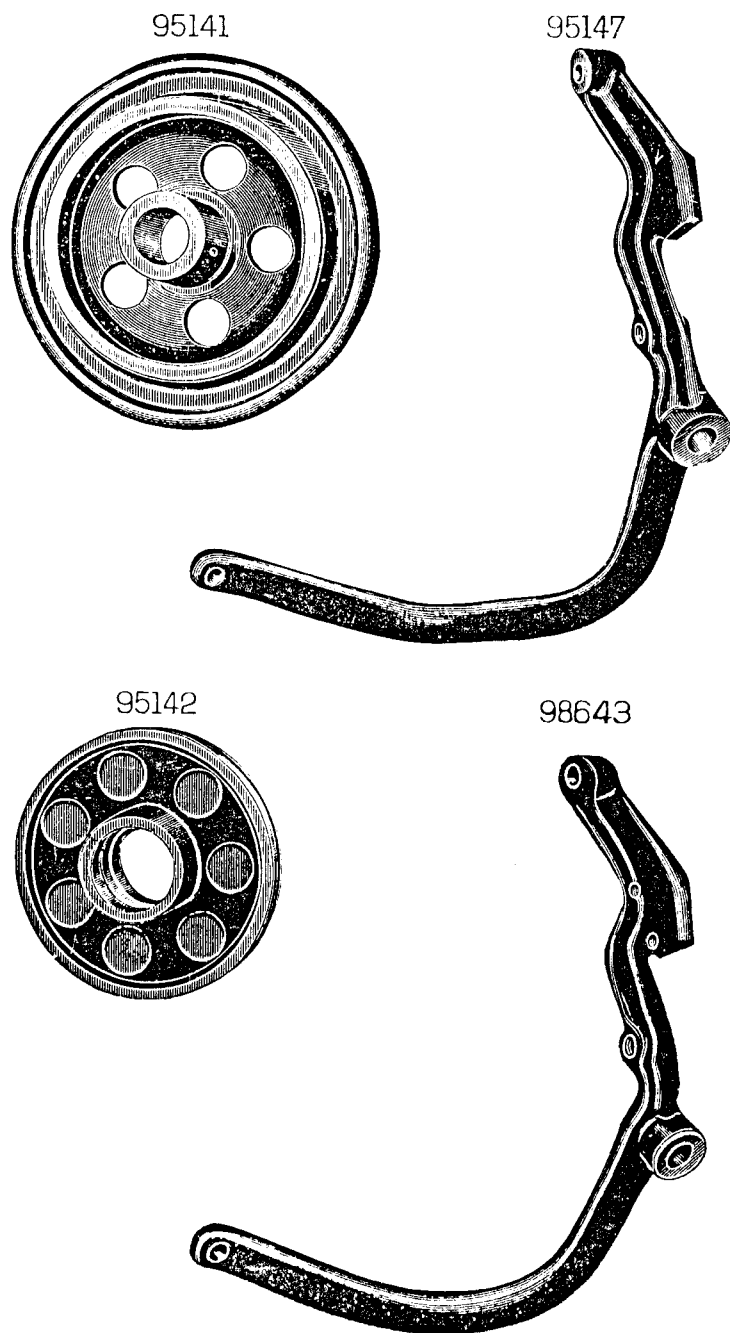

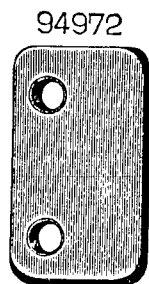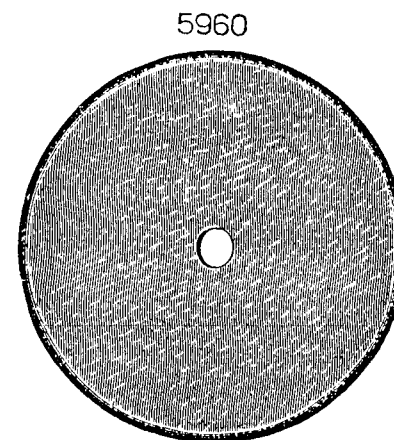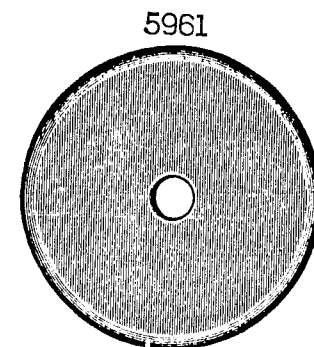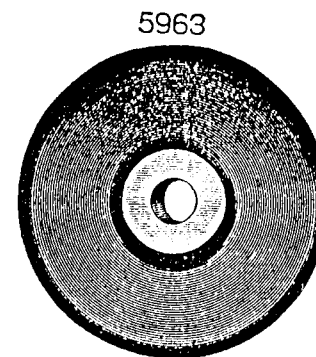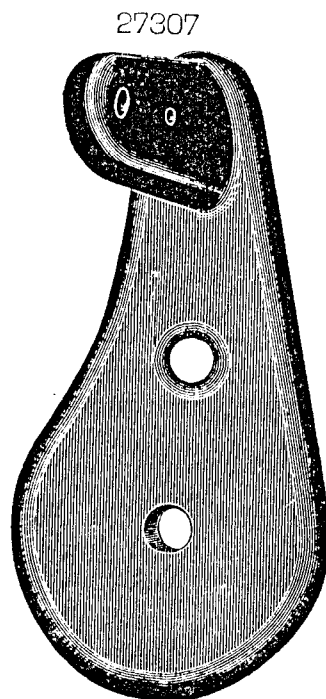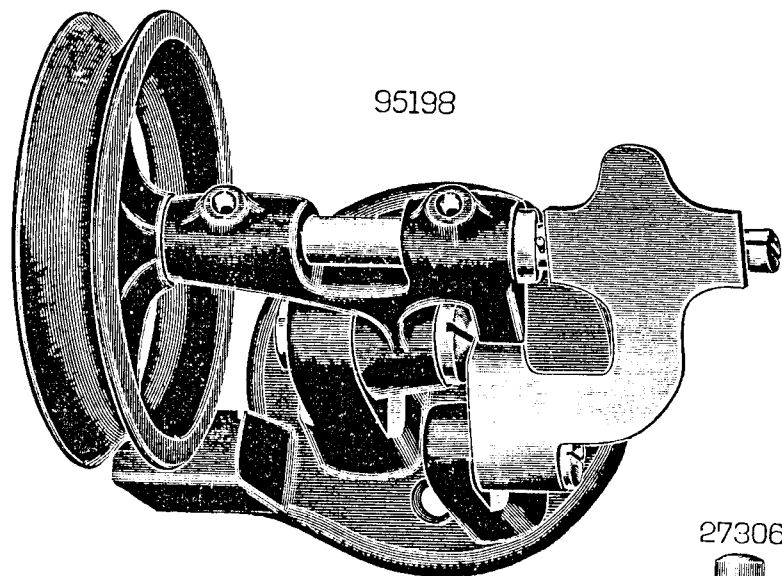


120378




86611



120342

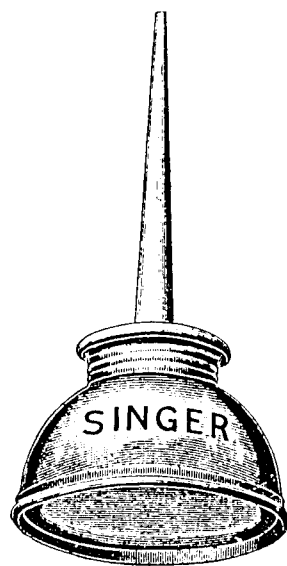


SS22

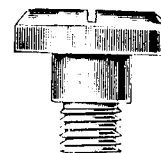


SS32



SS38



SS39



41



SS45




SS46



32



SS50




SS56



SS65




SS115

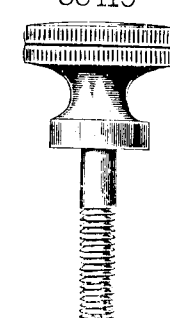

118



144

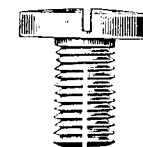

156



157



158




176



180



SS186

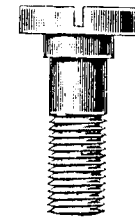

190



207



219



50406



233









313







SS313



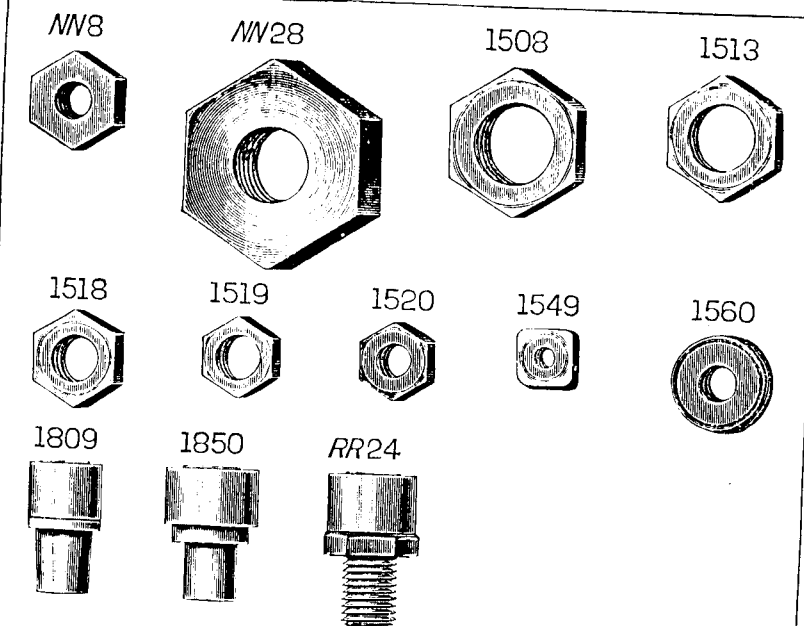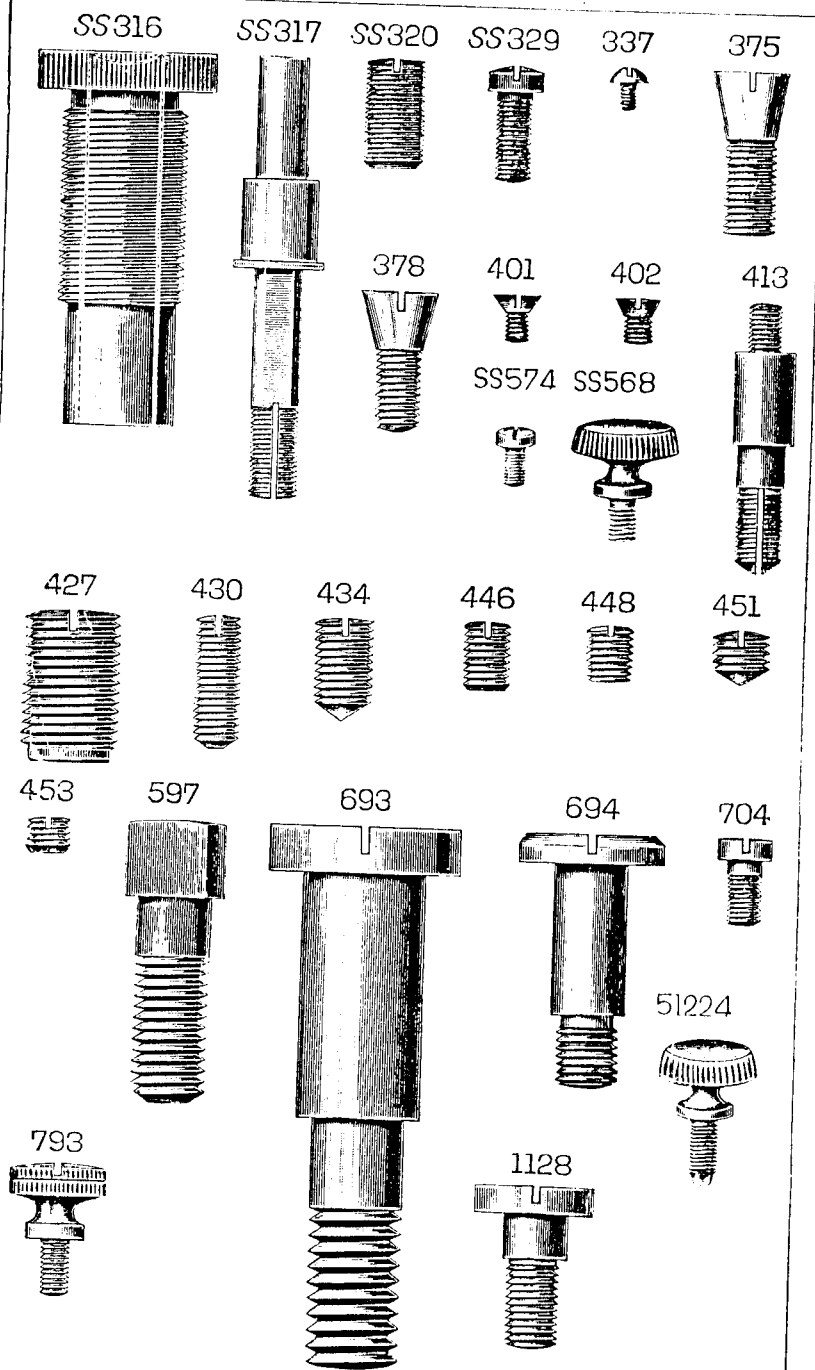


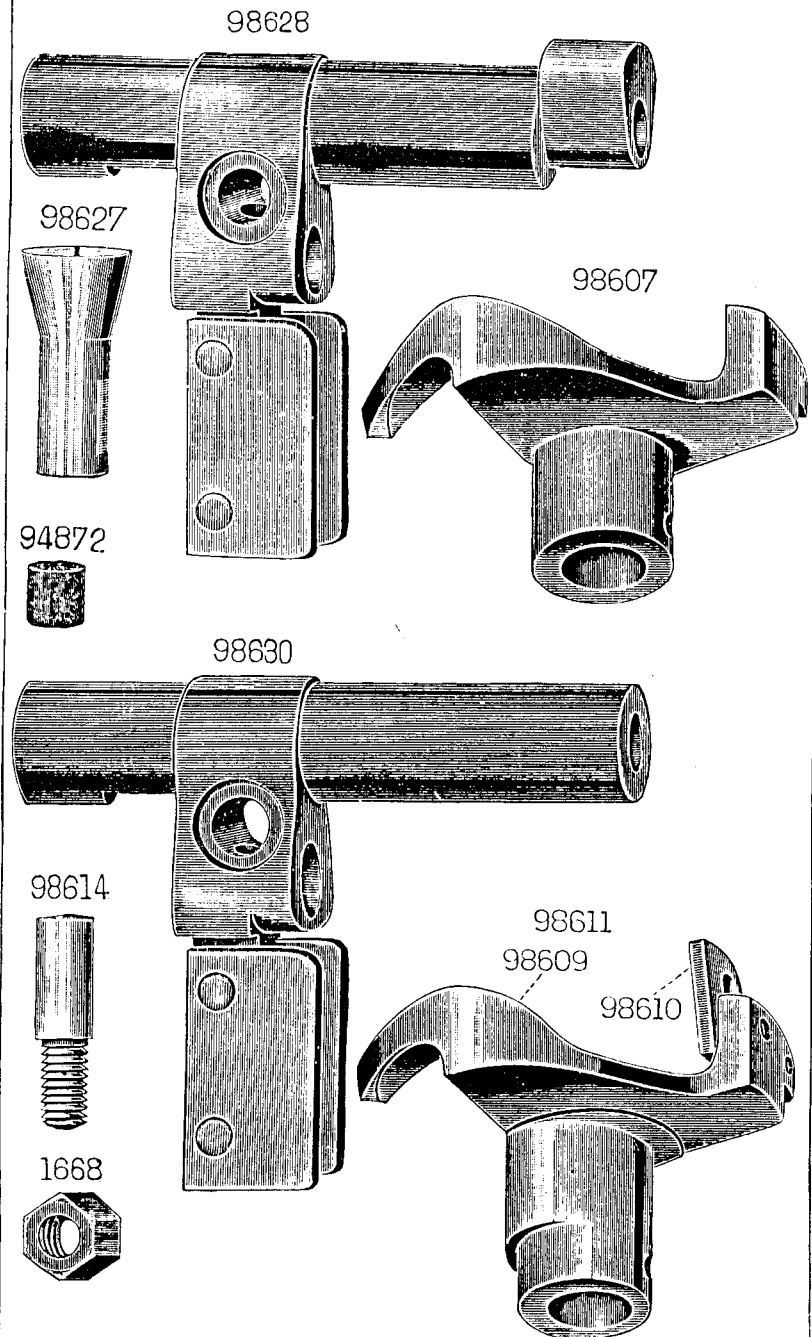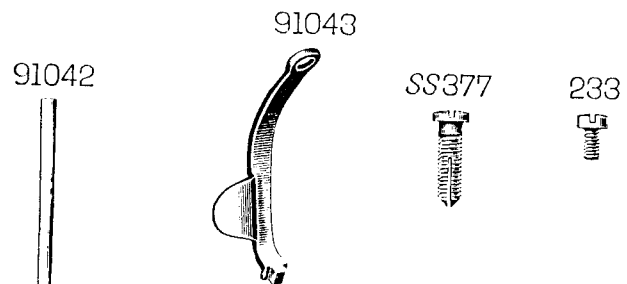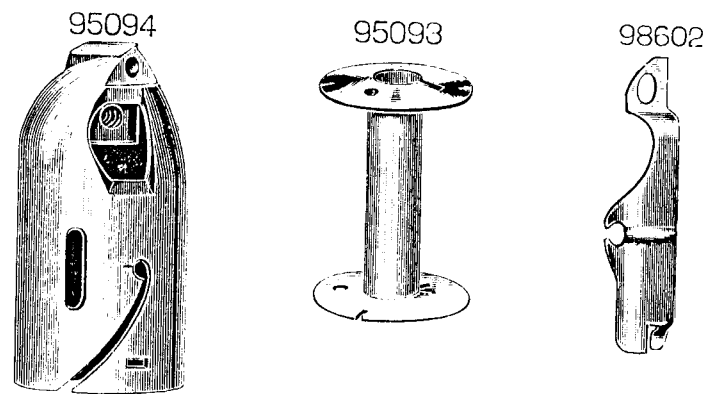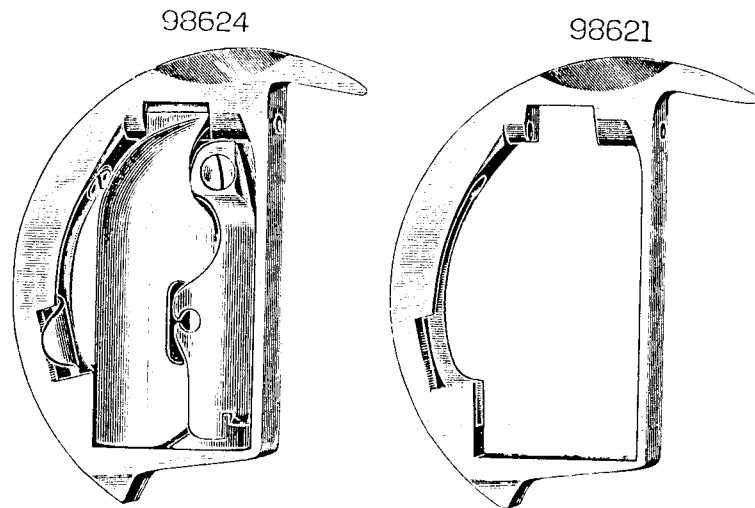

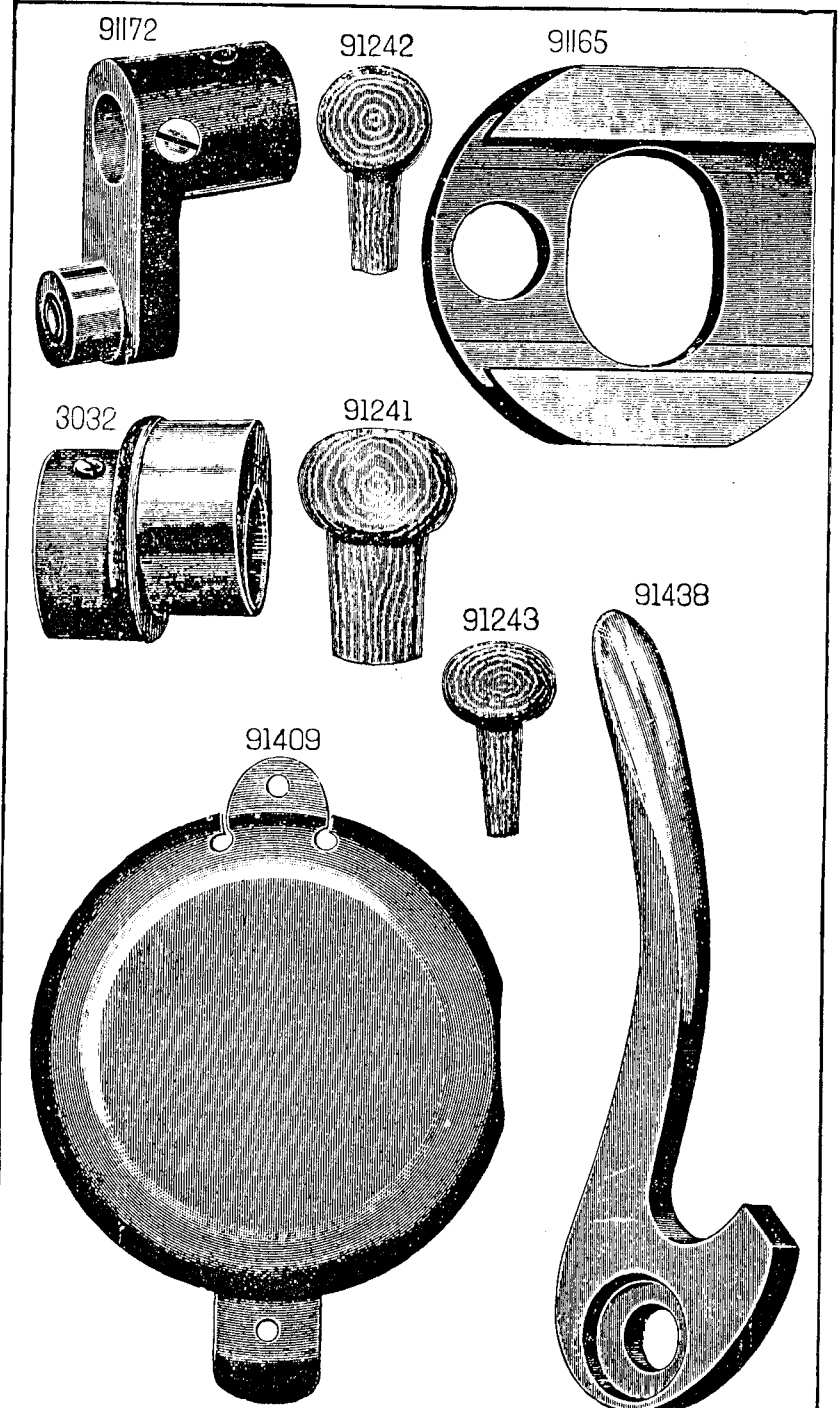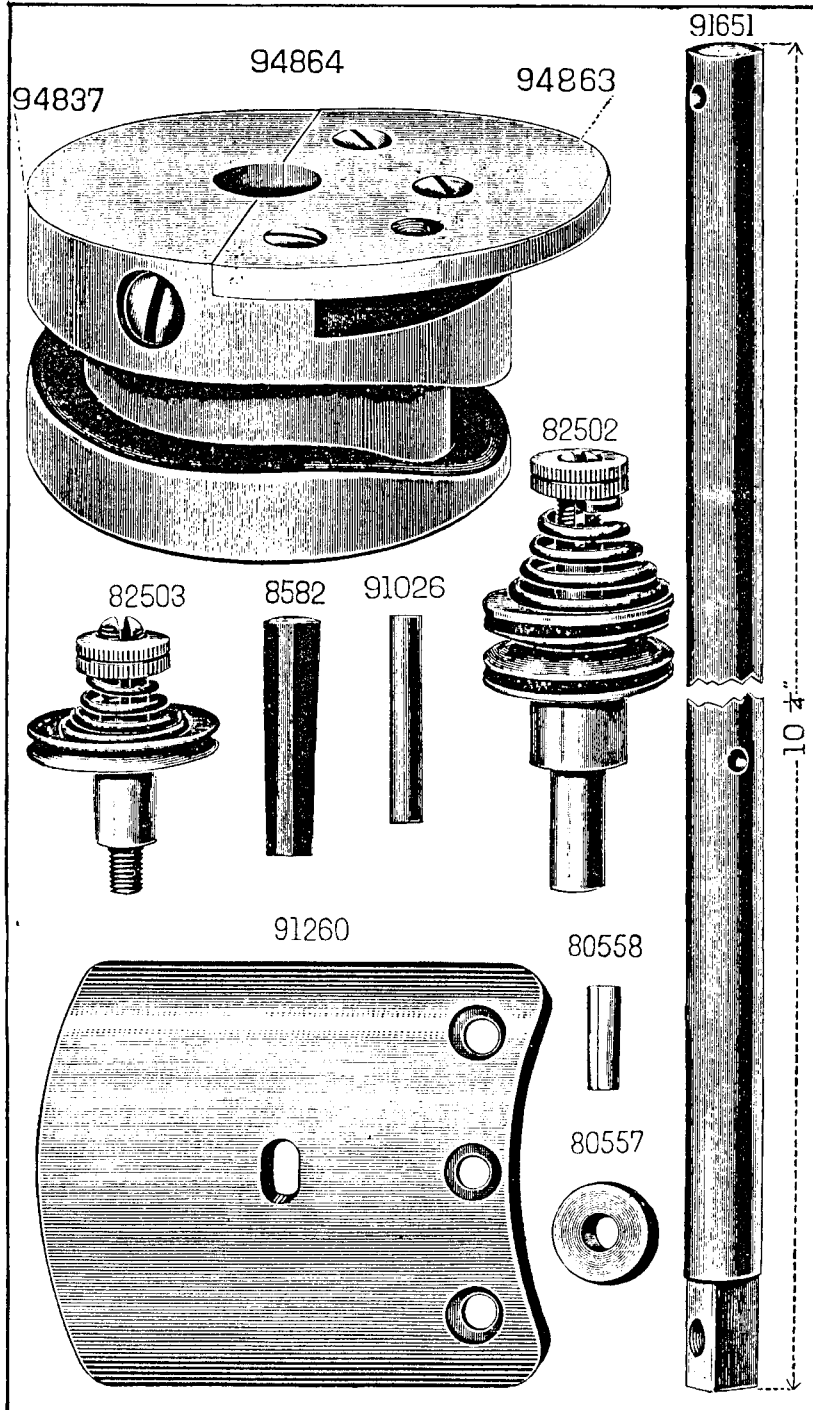


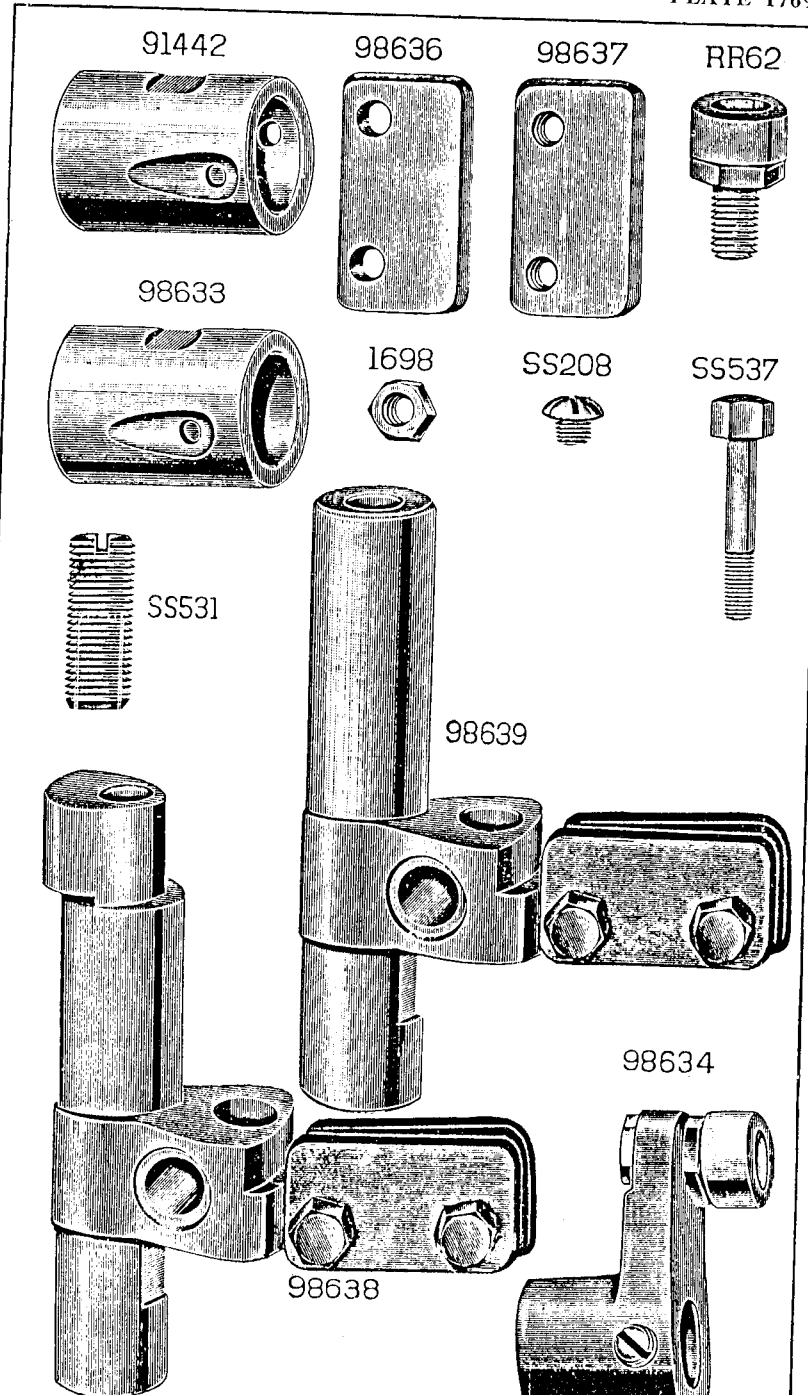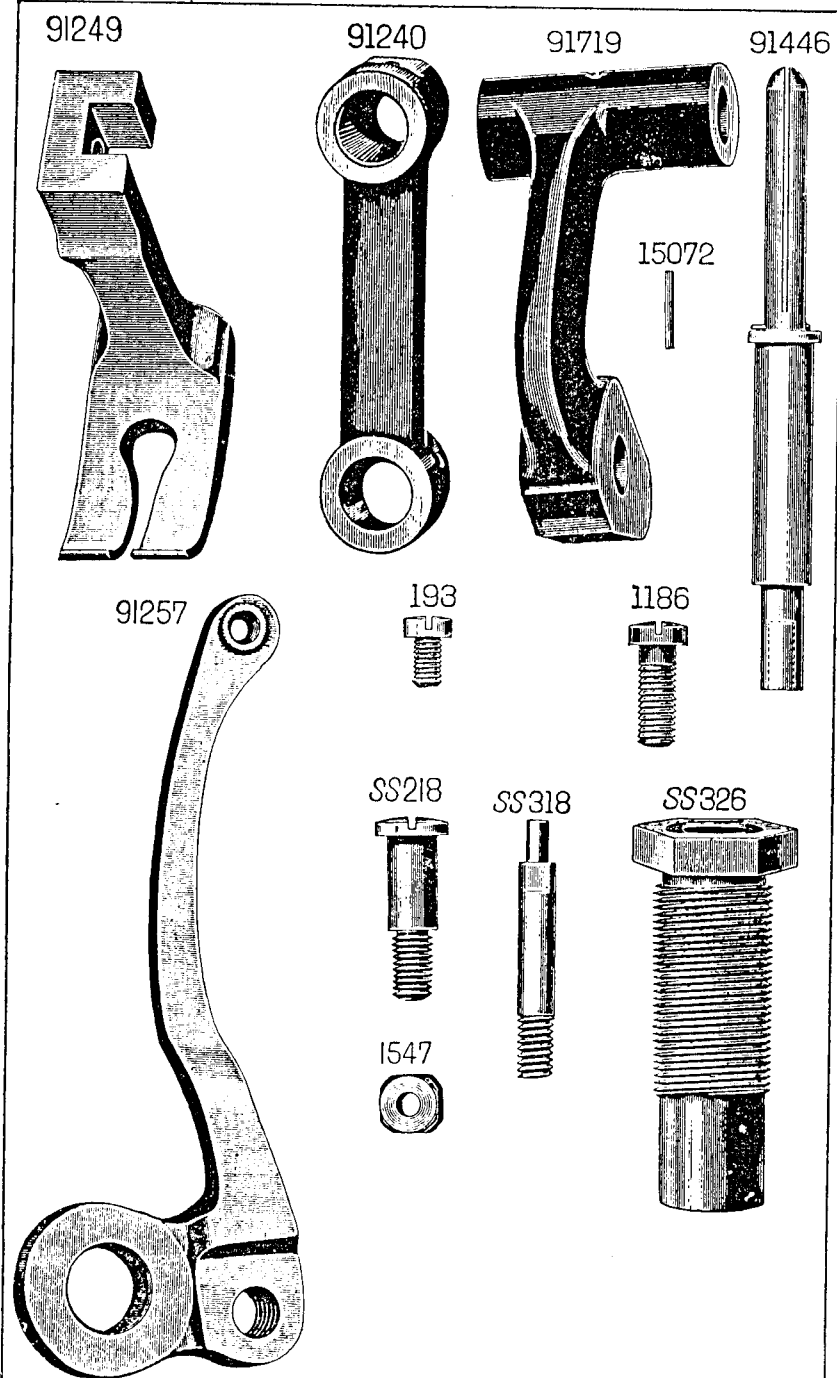


98680

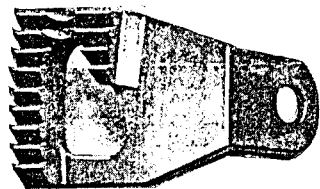

98507

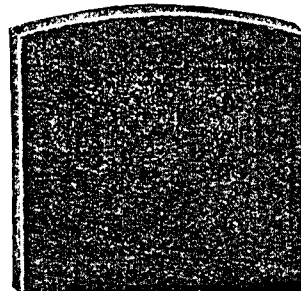

98635

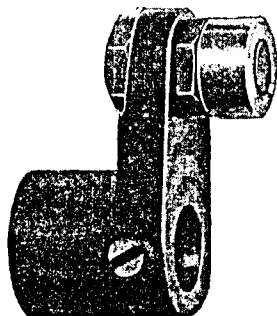

98606



PARTS COMPLETE FOR No. 45K76 MACHINE

Cylinder Bed. No Feeding Mechanism. For Sack Darning.

No.	Plate	
(5-61) 94810	—	Arm with 446c, 450a, 15404, 82499, 82549, 91441 and two 15405
8582	1749	" Dowel Pin (2) ...
118c	1601	" Screw (3) ...
91615	1040	Arm Shaft ...
82499	777	" " Bushing (back) ...
82549	1054	" " " (front) ...
446c	1602	" " " Set Screw for 82499 ...
82400	1056	" " Oil Tube ...
144c	1601	" " Screw ...
(5-61) 82402	775	Arm Side Cover ...
51224d	1602	" " " Thumb Screw ...
82403	1489	" Spool Pin ...
95189	1465	Balance Wheel ...
(5-61) 94811	—	Bed (Cylinder) with 423c and 98633 ...
98606	2354	" Oil Pad ...
SS463d	1465	Clamp Stop Motion Clamp Screw ...
248f	1060	" " " " Stop Screw ...
95145	1465	" " " " Washer ...
95146	1465	" " " " Flanged Bushing with two 434c ...
434c	1602	" " " " " Set Screw ...
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145, 95146 and 95189 ...
94801	775	Crank Connecting Rod with 94802, 94872 and two 458c/09779 (105)
*94802	—	" " " " Cap ...
94872	1743	" " " " Oil Pad ...
109779 (105) 458c	4601 10/62	" " " " Screw ...
98627	1743	" " " " Hinge Stud ...
98614	1743	" " " " " Cotter Pin ...
1608c	1743	" " " " " " Nut ...
(5-61) 94812	1040	Face Plate ...
SS45d	1601	" " Screw (to attach to machine) ...
94813	—	Face Plate, complete, Nos. 219f, 233d, 446c, 82449, 82450, 82455 82502 82503 82525 82551, 94812, 94825, 94836 and
† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 729) (5-61)		

No.	Plate	
94814	1041	Lifting Presser Plunger ...
94817	1041	" " " Buffer (rubber) ...
94815	1041	" " " Pin ...
94816	1041	" " " Plug ...
94818	1041	" " " Roller ...
94819	1041	" " " " Pin ...
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94816, 94818, 94819 and five 94817 ...
94821	1041	Lifting Presser Plunger Bracket with two 1186f ...
1186f	1751	" " " " Clamping Screw ...
94822	1041	" " " " Spring ...
193d	1751	" " " " " Screw ...
91021	775	Needle Bar ...
91441	779	" " Bushing ...
450a	1060	" " " Set Screw ...
91022	779	" " Connection with two 458c/09779 (105) 10/62
109779 (105) 458c	4601 10/62	" " Clamping Screw ...
91240	1751	" " " Link ...
375c	1602	" " " " Hinge Screw ...
1518c	1603	" " " " " Nut ...
82520	1081	Needle Clamp ...
82522	—	" " " 82520 with 156f, 50406d and 82521 ...
156f	1601	" " " Screw ...
82521	1081	" " " Thread Eyelet ...
50406d	1601	" " " " " Screw ...
91241	1750	Oil Hole Plug (wood, large) ...
91242	1750	" " " (" medium) ...
91243	1750	" " " (" small) (5) ...
94823	1041	" " " (" small), for Plunger ...
98639	1769	Oscillating Rock Shaft with 98636, 98637, two each SS537e and 1698c
98642	779	" " " " Hinge Pin ...
1513j	1603	" " " " " Nut ...
SS531c	1769	" " " " " Screw Bearing ...
1513j	1603	" " " " " " Nut ...
98636	1769	" " " " Steel Plate (bottom) ...
98637	1769	" " " " " (top) ...
SS537e	1769	" " " " " Binding Screw ...
1698c	1769	" " " " " " Lock Nut ...
98641	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98614, 98627 and 98639 ...

No.	Plate								
91202	1040	Oscillating Shuttle Shaft							
98633	1769	"	"	"	Bushing	...	...	...	...
423c	1060	"	"	"	"	Set Screw	...	...	...
98635	2354	"	"	"	Crank with RR62, 453c and 1518c...				
11663	1081	"	"	"	"	Pin	...	...	...
RR62	1769	"	"	"	"	Roller and Screw Stud	...	...	...
1518c	1603	"	"	"	"	"	"	"	Nut
453c	1602	"	"	"	"	Set Screw	...	...	...
94824	1040	Presser Bar (with squared end)							
94826	1041	"	"	"	Cushion Spring	...	...	...	...
91438	1750	"	"	"	Lifter	...	...	...	...
SS186d	1601	"	"	"	"	Hinge Screw	...	...	...
1518c	1603	"	"	"	"	"	Nut	...	...
94827	1041	"	"	"	Lifting Bracket with two 1186d	...	...	...	...
1186d	1751	"	"	"	"	Clamping Screw	...	...	...
94828	1041	"	"	"	"	Sleeve	...	...	...
94829	1041	"	"	"	"	Tension Release	...	...	...
157f	1601	"	"	"	"	"	"	Binding Screw (2)	...
SS125c	1044	"	"	"	"	Screw Bushing	...	...	...
91248	779	"	"	"	"	Spring	...	...	...
94830	1041	Presser Foot							
SS329f	1602	"	"	"	"	Screw	...	...	...
1547c	1751	"	"	"	"	Nut	...	...	...
95093	1696	Shuttle Bobbin							
95094	1696	"	"	"	Cylinder	...	...	...	...
91042	1696	"	"	"	"	Hinge Pin	...	...	...
91043	1696	"	"	"	"	Latch Spring	...	...	...
SS574d	1602	"	"	"	"	"	Screw	...	...
98621	1696	"	"	"	Frame	...	...	...	...
98602	1696	"	"	"	"	Tension Spring	...	...	...
SS377f	1696	"	"	"	"	"	Adjusting Screw	...	...
98624	1696	Shuttle (Cylinder), 2½" diam., complete, Nos. SS377f, SS574d, 91042, 91043, 95093, 95094 98602 and 98621							

No. 98624 can only be used with No. 98611 and not with old style Shuttle Drivers.

98609	1743	Shuttle Driver and Feed Raising Cam							
11663	1081	"	"	"	"	Pin	...	...	...
98610	1743	"	"	"	"	Thread Guard	...	...	...
223d	1060	"	"	"	"	"	Screw	...	...
98611	1743	Shuttle Driver and Feed Raising Cam , complete, Nos. 98609, 98610 and two 223d							

No. 98611 can only be used with No. 98624 and not with old style Shuttles.

No.	Plate								
91753	1043	Shuttle Race (steel, hardened)							
91315	777	"	"	"	"	Cap Spring	...	...	...
SS218d	1751	"	"	"	"	"	Screw	...	...
SS318c	1751	"	"	"	"	Position Screw Stud (2)	...	...	...
91153	1044	"	"	"	"	Ring	...	...	...
1302c	1060	"	"	"	"	"	Screw (3)	...	...
SS317c	1602	Tension Screw Stud							
1560d	1603	"	"	"	"	Regulating Thumb Nut	...	...	...
446c	1602	"	"	"	"	Set Screw	...	...	...
82445	1081	"	"	"	"	Spring	...	...	...
82446	779	"	"	"	"	Washer (felt)	...	...	...
82447	1081	"	"	"	"	(steel)	...	...	...
82448	779	"	"	"	"	Wheel	...	...	...
82502	1749	Tension , complete, Nos. SS317c, 1560d, 82445, 82448, two each 82446 and 82447							
94836	1041	Tension Thread Guide							
SS50f	1601	"	"	"	"	"	Screw	...	...
82551	1041	Thread Controlling Lever							
82525	1081	"	"	"	"	Spring	...	...	...
82455	779	"	"	"	"	Stop Pin	...	...	...
82450	1081	Thread Eyelet							
SS50f	1601	"	"	"	"	"	Screw	...	...
82449	1081	"	"	"	"	Guard	...	...	...
233d	1696	"	"	"	"	"	Screw	...	...
2102	779	Thread Retainer Disc							
*413c	1602	"	"	"	"	"	Screw Stud	...	...
33892	—	"	"	"	"	"	413c with 1560d	...	...
1560d	1603	"	"	"	"	"	Regulating Thumb Nut	...	...
2103	1081	"	"	"	"	Spring	...	...	...
82503	1749	Thread Retainer , complete, Nos. 2103, 33892 and two 2102							
94837	1043	Thread Take-up Cam with SS320c and SS370c							
94839	1043	"	"	"	"	94837 with 94838 and three 191c	...	...	...
94838	1043	"	"	"	"	Lifting Cam	...	...	...
191c	1060	"	"	"	"	"	"	Screw	...
SS320c	1602	"	"	"	"	Set Screw	...	...	...
SS370c	1060	"	"	"	"	Timing Screw	...	...	...

No.	Plate						
91257	1751	Thread Take-up Lever with 9219	...	...	...	...	...
91258	—	" " " 91257 with RR24 and 1519c	...	...	...	...	...
SS22f	1601	" " " Hinge Screw	...	...	...	...	...
RR24	1603	" " " Roller and Screw Stud	...	...	...	...	...
1519c	1603	" " " " " " " Nut	...	...	...	...	...
*9219	—	" " " Thread Eyelet Bushing	...	...	...	...	...
94825	1041	" " " Spring Regulator	...	...	...	...	...
219f	1601	" " " " " Screw	...	...	...	...	...
94840	1044	Throat Plate	...	...	...	...	...
180f	1601	" " Screw (3)	...	...	...	...	...
94841	—	Work Plate	...	...	...	...	...
SS39d	1601	" " Screw	...	...	...	...	...
*15404	—	Trade Mark	...	...	...	...	...
15405	—	" " Rivet	...	...	...	...	...

Stop!

PARTS SPECIAL

TO

No. 45K75 MACHINE

Cylinder Bed. No Feeding Mechanism. Fast and Loose Pulleys and Belt Shipper. For Sack Darning.

This machine is the same as 45K76 with the following exceptions :—

No.	Plate						
*95154	—	Arm with 446c, 450c, 15404, 82549, 91441 and two 15405	...	...	...	...	...
95141	1466	Balance Wheel	...	...	...	...	...
95142	1466	" " Loose Pulley	...	...	...	...	...
95143	—	Balance Wheel, complete, Nos. 95141 and 95142, for fast and loose pulley	...	...	...	...	...
98625	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95143, 95145 and 95146	...	...	...	...	...
98643	1466	Driving Attachment Lever	...	...	...	...	...
727c	1060	" " " Adjusting Screw	...	...	...	...	...
1623c	1060	" " " " " Nut	...	...	...	...	...
95148	1057	" " " Belt Shifter	...	...	...	...	...
363c	1060	" " " " " Clamping Screw	...	...	...	...	...
95149	1057	" " " " " Rod	...	...	...	...	...
363c	1060	" " " " " Clamping Screw	...	...	...	...	...
91302	1082	" " " Bracket	...	...	...	...	...
SS38c	1601	" " " " " Screw	...	...	...	...	...
98507	2354	" " " Friction Pad (leather)	...	...	...	...	...
190d	1601	" " " " " Screw	...	...	...	...	...
693d	1602	" " " Hinge Screw	...	...	...	...	...
NN28e	1603	" " " " " Nut	...	...	...	...	...
95150	1057	" " " Spring	...	...	...	...	...
7958	1057	" " " " " Pin	...	...	...	...	...
95152	—	Driving Attachment Lever, complete, Nos. NN28e, 693d, 727c, 1623c, 7958, 91302, 95149, 95150, 98507, 98643, two each SS38c, 190d, 95148 and three 363c	...	...	...	...	...
84275	—	Driving Attachment Shaft Pulley (sectional, grooved) 10" diam., with two 597c	...	...	...	...	...
597c	1602	" " " " " Clamping Screw	...	...	...	...	...

Accessories

No.	Plate	
—	—	Instruction Book
51077c	1060	Machine Bolt, with 1524e, 3" x 1/4" (4), for 45K57, 45K75 and 45K76 Machines
6055	1056	Machine Bolt Washer (4) for 45K57, 45K75 and 45K76 Machines
84118	1489	Machine Button, with 84151 and wood screw 1 1/4" No. 9 R.H.B., for 45K87 Machine
(5-61) 4951	—	Needles (6) (2-14 x 5) 5-61
120342	1600	Oiler 2-22 7/16 x 5/8
86611	1600	Screw Driver (large)
7/60 120378	1489	" " (Shuttle Tension) 120378 will be supplied until stock is exhausted
95093	1696	Shuttle Bobbin (2) 9/5
80107	1056	Wrench for 1547

Thread Unwinder

No.	Plate	
27623	1401	Spool Pin
84148	1401	" Rest with 448c
95126	1401	" Weight 4" dia. (only supplied when specified on order)
27625	1401	Thread Eyelet Rod
448c	1602	" " " Set Screw
27626	1401	" " Wire
27627	—	Thread Eyelet, complete, Nos. 27625 and 27626
—	—	Screw (wood) 1 1/4" No. 10 (for fixing to table)
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148 and two wood screws 1 1/4" No. 10

Bobbin Winders

BOBBIN WINDER (Friction) for Fast Wheel and S.D.A. Machines

No.	Plate	
5-61 91718	1040	Bracket
SS56d	1601	" Screw
5-61 91719	1751	Frame
32d	1601	" Hinge Screw
5960	1489	Friction Wheel (leather)
5961	1489	" " Washer
333r	1489	" " " Screw
91446	1751	Spindle with 15072
15072	1751	" Bobbin Position Pin
5963	1489	" Flange
91725	1040	Frame, complete, Nos. 333r, 5960, 5961, 5963, 91446 and 91719
82537	1040	Spring
161d	1601	" Screw
82538	1040	" " Washer
91720	—	Bobbin Winder, complete, Nos. 32d, 161d, 82537, 82538, 91718 and 91725

BOBBIN WINDER (Swinging Automatic, Right Hand) for 95093

No.	Plate	
27540	1487	Base
—	—	" Screw (wood) 1" No. 7 R.H.
27302	1487	Frame
50356b	1487	" Hinge Screw
1620j	1487	" " " Nut
27303	1487	" Spring
27541	1487	Pulley
98673	1487	Spindle with 15072
15072	1751	" Bobbin Position Pin
27306	1488	Spool Pin
27307	1488	" Stand
† 27308	—	" " 27307, with 418d, 1562j, 2106, 10141, 27306, two each 2455 and wood screws 1" No. 10
95197	1487	Stop Latch
35d	1060	" " Hinge Screw
2455	1488	Tension Disc
1562j	1488	" Regulating Thumb Nut
418d	1488	" Screw Stud
10141	1488	" Spring
2106	1488	Thread Guide
95198	1488	Bobbin Winder, Nos. 35d, 1620j, 27302, 27303, 27540, 27541, 50356b, 95197, 98673 and two wood screws 1" No. 7 R.H.
95199	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 95198

† As No. 27308 can be supplied either Plated or Japanned, it is necessary when ordering to state which is required.

† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 728). (5-61)

Foot Lifter for Nos. 45K57 and 45K87 Machines

No.	Plate						
91716	1061	Arm Lever	...	...	...	...	...
694d	1602	" " Hinge Screw	...	...	...	...	...
91457	1061	Foot Lever with 176c	...	...	...	...	...
91459	1061	" " Bracket	...	...	...	...	...
17881	1061	" " " Hinge Pin	...	...	...	...	...
—	—	" " " Screw (wood) 1" No. 12	...	...	...	...	...
91458	1061	" " Extension	...	...	...	...	...
176c	1601	" " " Set Screw	...	...	...	...	...
98626	1061	" " Spring	...	...	...	...	...
91454	—	Foot Lever only, complete, Nos. 17881, 91457 to 91459, 98626 and two wood screws 1" No. 12...	...	...	...	...	...
91453	1061	Foot Lever Pitman Connecting Hook (7" long)	...	...	...	...	...
17877	1061	" " " Rod (lower)	...	...	...	...	...
17878	1061	" " " " (upper)	...	...	...	...	...
17879	1061	" " " " Clamp with two 161d	...	...	...	...	...
161d	1601	" " " " Screw	...	...	...	...	...
17880	1061	Foot Lever Pitman Rod, complete, Nos. 17877 to 17879	...	...	...	...	...
91455	—	Foot Lever, complete, Nos. 17880 and 91454	...	...	...	...	...
91456	—	Foot Lifter , complete, Nos. 694d, 91453, 91455 and 91716	...	...	...	...	...

Foot Lifter for 45K75 and 45K76 Machines

This Foot Lifter is the same as 91456 with the following exceptions:—

No.	Plate						
94842	1061	Arm Lever	...	...	...	...	...
94843	—	Foot Lifter , complete, Nos. 694d, 91453, 91455 and 94842	...	...	...	...	...

Driving Attachment

No.	Plate						
91614	1082 ✓	Balance Wheel with 434c, 451c, 91475 and four 402c	...	...	...	...	...
91723	1082 ✓	" " Friction Pulley (two-speeds) with 448c and 91294	...	...	...	...	...
91294	1082 ✓	" " " " Centre Bearing	...	...	...	...	...
91475	1082 ✓	" " " " Ring (cardboard)	...	...	...	...	...
402c	1602 ✓	" " " " " Screw	...	...	...	...	...
448c	1602 ✓	" " " " " Set Screw	...	...	...	...	...
434c	1602 ✓	" " " " Set Screw (long)	...	...	...	...	...
451c	1602 ✓	" " " " (short)	...	...	...	...	...
91721	1082 ✓	Lever with 7958 and 91306	...	...	...	...	...
91302	1082 ✓	" Bracket	...	...	...	...	...
SS38c	1601 ✓	" " Screw	...	...	...	...	...
91303	1082 ✓	" Centre Plug (wood)	...	...	...	...	...
427c	1602 ✓	" " " Adjusting Screw	...	...	...	...	...
1508c	1603 ✓	" " " " " Nut	...	...	...	...	...
91306	1057 ✓	" Friction Pad (leather)	...	...	...	...	...
693d	1602 ✓	" Hinge Screw	...	...	...	...	...
NN28c	1603 ✓	" " " Nut	...	...	...	...	...
91307	779 ✓	" Spring	...	...	...	...	...
161c	1601 ✓	" " Screw	...	...	...	...	...
7958	1057 ✓	" " " Pin	...	...	...	...	...
91722	— ✓	Lever, complete, Nos. NN28c, 161c, 427c, 693d, 1508c, 91302, 91303, 91307, 91721 and two SS38c	...	...	...	...	...
84275	1082 ✓	Shaft Pulley (sectional, grooved) 10" diam., with two 597c	...	...	...	...	...
597c	1602 ✓	" " Clamping Screw	...	...	...	...	...
91296	1061	Starting Lever	...	...	...	...	...
91297	1061 ✓	" " Bracket	...	...	...	...	...
91298	1057 ✓	" " " Hinge Pin	...	...	...	...	...
—	— ✓	" " " Screw (wood) 1 1/4" No. 15	...	...	...	...	...
91299	1061 ✓	" " Nos. 91296 to 91298 and three wood screws 1 1/4" No. 15	...	...	...	...	...
17877	1061 ✓	" " Pitman Rod (lower)	...	...	...	...	...
17878	1061 ✓	" " " " (upper)	...	...	...	...	...
17879	1061 ✓	" " " " Clamp with two 161d	...	...	...	...	...
161d	1601 ✓	" " " " Screw	...	...	...	...	...
17880	1061 ✓	Starting Lever Pitman Rod, complete, Nos. 17877 to 17879	...	...	...	...	...
91460	— ✓	Starting Lever and Pitman, complete, Nos. 17880 and 91299	...	...	...	...	...
91724	—	Driving Attachment , complete, Nos. 84275, 91460, 91614, 91722 and 91723	...	...	...	...	...

Obsolete Parts

No.	Plate	
91025	779	Oscillating Rock Shaft Steel Plate (bottom) for 98628 and 98630 ...
94972	1489	" " " " " (top) for 98628 and 98630 ...
91026	1749	" " " " " Rivet for 98628 and 98630 ...
98628	1743	" " " " with 91025, 94972 and two 91026, for 45K87 Machine
98630	1743	" " " " 91025, 94972 and two 91026, for 45K57, 45K75 and 45K76 Machines

Numerical List of Parts

No.	Plate	
NN8e	1603	Shuttle Race Bearing Clamping Screw Nut for 45K87 Machine ...
SS22f	1601	Thread Take-up Lever Hinge Screw ...
RR24	1603	Thread Take-up Lever Roller and Screw Stud for 91258 and 94866 ...
NN28e	1603	Driving Attachment Lever Hinge Screw Nut for 91722 and 95152 ...
32d	1601	Bobbin Winder Frame Hinge Screw for 91720
SS32f	1601	Shuttle Race Bearing Clamping Screw for 45K87 Machine ...
35d	1060	Bobbin Winder Stop Latch Hinge Screw for 95198 ...
SS38c	1601	Driving Attachment Lever Bracket Screw for 91722 and 95152 ...
SS39c	1601	Oscillating Shuttle Shaft Bushing Set Screw for 45K87 Machine ...
SS39d	1601	Work Plate Screw for 45K57, 45K75 and 45K76 Machines ...
41d	1601	Shuttle Race Cap Spring Screw for 94862 ...
SS45d	1601	Face Plate Screw (to attach to machine) ...
SS50f	1601	Thread Eyelet Screw for 91234, 94813 and 94856 ...
SS50f	1601	Tension Thread Guide Screw for 94813 ...
SS56d	1601	Bobbin Winder Bracket Screw for 91720 ...
RR62	1769	Oscillating Shuttle Shaft Crank Roller and Screw Stud for 98635 ...
SS115d	1601	Feed Regulator Thumb Screw for 45K57 Machine ...
118e	1601	Arm Screw ...
144c	1601	Arm Shaft Screw ...
149f	1060	Lifting Presser Plunger Yoke Clamping Screw for 91239 ...
149f	1060	Lifting Presser Plunger Yoke Set Screw for 91239 ...
156f	1601	Feed Rock Shaft Crank Position Screw for 98674 ...
156f	1601	Needle Clamp Screw for 82522 ...
157f	1601	Presser Bar Lifting Bracket Tension Release Binding Screw for 45K75 and 45K76 Machines ...
158e	1601	Crank Connecting Rod Cap Screw for 94801 and 98664 ...
158e	1601	Needle Bar Connection Clamping Screw for 91022 ...

*No. Cancelled
under
104779 (805)
10/62*

NUMERICAL LIST OF PARTS

No.	Plate	
161c	1601	Driving Attachment Lever Spring Screw for 91722
161d	1601	Bobbin Winder Spring Screw for 91720
161d	1601	Driving Attachment Starting Lever Pitman Rod Clamp Screw for 17879
161d	1601	Foot Lifter Foot Lever Pitman Rod Clamp Screw for 17879
176c	1601	Foot Lifter Foot Lever Extension Set Screw for 91457
180f	1601	Arm Cover Screw for 45K87 Machine
180f	1601	Shuttle Race Slide (back) Screw for 45K87 Machine
180f	1601	Throat Plate Screw
SS186d	1601	Presser Bar Lifter Hinge Screw
190d	1601	Driving Attachment Lever Friction Pad Screw for 95152
190f	1601	Presser Bar Lifting Bracket Tension Release Binding Screw for 91711
191c	1060	Thread Take-up Cam Lifting Cam Screw for 94839 and 94864
193d	1751	Lifting Presser Plunger Bracket Spring Screw for 45K75, 45K76 and 45K87 Machines
SS208f	1769	Throat Plate Oil Hole Screw for 45K57 Machine
SS218d	1751	Shuttle Race Cap Spring Screw for 45K57, 45K75 and 45K76 Machines
219f	1601	Thread Take-up Spring Regulator Screw for 91234, 94813 and 94856
223d	1060	Shuttle Driver Thread Guard Screw for 98611
233d	1696	Thread Guard Screw for 91234, 94813 and 94856
248f	1060	Clamp Stop Motion Clamp Stop Screw for 95190 and 98625
SS317e	1602	Tension Screw Stud for 82502
SS318e	1751	Shuttle Race Position Screw Stud for 45K57, 45K75 and 45K76 Machines
SS320c	1602	Thread Take-up Cam Set Screw for 94837
SS326e	1751	Presser Bar Screw Bushing for 45K57 Machine
SS329f	1602	Presser Foot Screw
333r	1489	Bobbin Winder Friction Wheel Washer Screw for 91725
337d	1602	Shuttle Race Slide (front) Spring Screw for 91060
363c	1060	Driving Attachment Lever Belt Shifter Clamping Screw for 95152

NUMERICAL LIST OF PARTS

No.	Plate	
363c	1060	Driving Attachment Lever Belt Shifter Rod Clamping Screw for 95152
SS370c	1060	Thread Take-up Cam Timing Screw for 94837
375c	1602	Feed Connecting Link Hinge Screw for 45K57 Machine
375c	1602	Feed Forked Connection Hinge Screw for 45K57 Machine
375c	1602	Needle Bar Connection Link Hinge Screw
SS377f	1696	Shuttle Tension Spring Adjusting Screw for 98624
397c	1060	Lifting Presser Dash Pot Screw for 45K87 Machine
401f	1602	Shuttle Race Loop Spreader Screw for 94973
402e	1602	Driving Attachment Balance Wheel Friction Pulley Ring Screw for 91614
*413c	1602	Thread Retainer Screw Stud for 33892
418d	1488	Bobbin Winder Tension Screw Stud for 27308
423c	1060	Oscillating Shuttle Shaft Bushing Set Screw for 91151 and 94811
SS425e	1044	Presser Bar Screw Bushing for 45K75, 45K76 and 45K87 Machines
427c	1602	Driving Attachment Lever Centre Plug Adjusting Screw for 91722
434c	1602	Balance Wheel Set Screw for 91613
434c	1602	Clamp Stop Motion Flanged Bushing Set Screw for 95146
434c	1602	Driving Attachment Balance Wheel Set Screw for 91614
446c	1602	Arm Shaft Bushing Set Screw for 91444, 94810, 94853 and 95154
446c	1602	Feed Cam Set Screw for 3032
446c	1602	Presser Bar Lifting Bracket Set Screw for 91652
446c	1602	Tension Screw Stud Set Screw for 91234, 94813 and 94856
448c	1602	Driving Attachment Balance Wheel Friction Pulley Set Screw for 91723
448c	1602	Thread Unwinder Thread Eyelet Rod Set Screw for 84148
450a	1060	Needle Bar Bushing Set Screw for 91444, 94810, 94853 and 95154
451c	1602	Driving Attachment Balance Wheel Set Screw for 91614
453c	1602	Oscillating Shuttle Shaft Crank Set Screw for 91172 and 98635

NUMERICAL LIST OF PARTS

No.	Plate	
453c	1602	Oscillating Shuttle Shaft Collar Set Screw for 91030
SS463d	1465	Clamp Stop Motion Clamp Screw for 95190 and 98625
SS517c	1054	Feed Rock Shaft Crank Clamping Screw for 98674
SS531c	1769	Oscillating Rock Shaft Hinge Pin Screw Bearing
SS537e	1769	Oscillating Rock Shaft Steel Plate Binding Screw for 98638 and 98639
SS574d	1602	Shuttle Cylinder Latch Spring Screw for 98624
597c	1602	Driving Attachment Shaft Pulley Clamping Screw for 84275
693d	1602	Driving Attachment Lever Hinge Screw for 91722 and 95152
694d	1602	Foot Lifter Arm Lever Hinge Screw for 91456 and 94843
704c	1602	Feed Dog Screw for 45K57 Machine
727c	1060	Driving Attachment Lever Adjusting Screw for 95152
1128c	1602	Feed Regulator Hinge Screw for 45K57 Machine
1186d	1751	Presser Bar Lifting Bracket Clamping Screw for 94827 and 94861
1186f	1751	Lifting Presser Plunger Bracket Clamping Screw for 94821 and 94857
1259c	1060	Feed Rock Shaft Carrier Slide Set Screw for 91165 2/52
1302c	1060	Shuttle Race Ring Screw for 45K57, 45K75 and 45K76 Machines
1508e	1603	Driving Attachment Lever Centre Plug Adjusting Screw Nut for 91722
1513j	1603	Oscillating Rock Shaft Hinge Pin Nut
1513j	1603	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut
1518e	1603	Feed Connecting Link Hinge Screw Nut for 45K57 Machine
1518e	1603	Feed Forked Connection Hinge Screw Nut for 45K57 Machine
1518e	1603	Needle Bar Connection Link Hinge Screw Nut
1518e	1603	Oscillating Shuttle Shaft Crank Roller and Screw Stud Nut for 98635
1518e	1603	Presser Bar Lifter Hinge Screw Nut
1519e	1603	Thread Take-up Lever Roller and Screw Stud Nut for 91258 and 94866

NUMERICAL LIST OF PARTS

No.	Plate	
1547c	1751	Presser Foot Screw Nut
1560d	1603	Tension Screw Stud Regulating Thumb Nut for 82502
1560d	1603	Thread Retainer Screw Stud Regulating Thumb Nut for 33892
1562j	1488	Bobbin Winder Tension Regulating Thumb Nut for 27308
1620j	1487	Bobbin Winder Frame Hinge Screw Nut for 95198
1623c	1060	Driving Attachment Lever Adjusting Screw Nut for 95152
1668c	1743	Crank Connecting Rod Hinge Stud Cotter Pin Nut for 98640 and 98641
1698c	1769	Oscillating Rock Shaft Steel Plate Binding Screw Lock Nut for 98638 and 98639
1850	1603	Oscillating Shuttle Shaft Crank Roller and Stud for 91172
2102	779	Thread Retainer Disc for 82503
2103	1081	Thread Retainer Spring for 82503
2106	1488	Bobbin Winder Thread Guide for 27308
2117	1055	Lifting Presser Plunger Yoke Pin for 45K57 Machine
2455	1488	Bobbin Winder Tension Disc for 27308
3032	1750	Feed Cam, with 446c, for 45K57 Machine
5960	1489	Bobbin Winder Friction Wheel (leather) for 91725
5961	1489	Bobbin Winder Friction Wheel Washer for 91725
5963	1489	Bobbin Winder Spindle Flange for 91725
6055	1056	Machine Bolt Washer for 45K57, 45K75 and 45K76 Machines (Accessories)
7958	1057	Driving Attachment Lever Spring Pin for 95152
7958	1057	Driving Attachment Lever Spring Screw Pin for 91721
8575	1055	Presser Bar Lifting Bracket Pin for 45K57 Machine
8582	1749	Arm Dowel Pin
*9219	—	Thread Take-up Lever Thread Eyelet Bushing for 91257 and 94865
10141	1488	Bobbin Winder Tension Spring for 27308
11663	1081	Oscillating Shuttle Shaft Crank Pin
11663	1081	Shuttle Driver Pin
15072	1751	Bobbin Winder Spindle Bobbin Position Pin for 91446 and 98673
*15404	—	Trade Mark for 91444, 94810, 94853 and 95154

NUMERICAL LIST OF PARTS

No.	Plate	
15405	—	Trade Mark Rivet for 91444, 94810, 94853 and 95154 ...
17877	1061	Driving Attachment Starting Lever Pitman Rod (lower) for 17880 ...
17877	1061	Foot Lifter Foot Lever Pitman Rod (lower) for 17880 ...
17878	1061	Driving Attachment Starting Lever Pitman Rod (upper) for 17880 ...
17878	1061	Foot Lifter Foot Lever Pitman Rod (upper) for 17880 ...
17879	1061	Driving Attachment Starting Lever Pitman Rod Clamp, with two 161d, for 17880 ...
17879	1061	Foot Lifter Foot Lever Pitman Rod Clamp with two 161d, for 17880 ...
17880	1061	Driving Attachment Starting Lever Pitman Rod, complete, Nos. 17877 to 17879 for 91460 ...
17880	1061	Foot Lifter Foot Lever Pitman Rod, complete, Nos. 17877 to 17879 for 91455 ...
17881	1061	Foot Lifter Foot Lever Bracket Hinge Pin for 91454 ...
27302	1487	Bobbin Winder Frame for 95198 ...
27303	1487	Bobbin Winder Frame Spring for 95198 ...
27306	1488	Bobbin Winder Spool Pin for 27308 ...
27307	1488	Bobbin Winder Spool Stand for 27308 ...
†27308	—	Bobbin Winder Spool Stand 27307, with 418d, 1562j, 2106, 10141, 27306, two each 2455 and wood screws 1" No. 10 for 95199 ...
27540	1487	Bobbin Winder Base for 95198 ...
27541	1487	Bobbin Winder Pulley for 95198 ...
27623	1401	Thread Unwinder Spool Pin for 95125 ...
27625	1401	Thread Unwinder Thread Eyelet Rod for 27627 ...
27626	1401	Thread Unwinder Thread Eyelet Wire for 27627 ...
27627	—	Thread Unwinder Thread Eyelet, complete, Nos. 27625 and 27626, for 95125 ...
33892	—	Thread Retainer Screw Stud 413e with 1560d, for 82503 ...
50356b	1487	Bobbin Winder Frame Hinge Screw for 95198 ...
50406d	1601	Needle Clamp Thread Eyelet Screw for 82522 ...
51077e	1060	Machine Bolt, with 1524e, 3" x 1", for 45K57, 45K75 and 45K76 Machines (Accessories)
51224d	1602	Arm Side Cover Thumb Screw ...
52165	1081	Feed Connecting Link for 45K57 Machine ...

†As No. 27308 can be supplied either Plated or Japanned, it is necessary, when ordering, to state which is required.

NUMERICAL LIST OF PARTS

No.	Plate	
80107	1056	Wrench for 1547 ... (Accessories)
80557	1749	Lifting Presser Plunger Roller for 91691 ...
80558	1749	Lifting Presser Plunger Roller Pin for 91691 ...
82400	1056	Arm Shaft Oil Tube ...
82402	775	Arm Side Cover ...
82403	1489	Arm Spool Pin ...
82414	777	Feed Regulator for 45K57 Machine ...
82445	1081	Tension Spring for 82502 ...
82446	779	Tension Washer (felt) for 82502 ...
82447	1081	Tension Washer (steel) for 82502 ...
82448	779	Tension Wheel for 82502 ...
82449	1081	Thread Guard for 91234, 94813 and 94856 ...
82450	1081	Thread Eyelet for 91234, 94813 and 94856 ...
82455	779	Thread Controlling Lever Stop Pin for 91234, 94813 and 94856 ...
82499	777	Arm Shaft Bushing (back) for 91444, 94810, 94853 and 95154 ...
82502	1749	Tension, complete, Nos. SS317e, 1560d, 82445, 82448, two each 82446 and 82447 for 91234, 94813 and 94856 ...
82503	1749	Thread Retainer, complete, Nos. 2103, 33892 and two 2102 for 91234, 94813 and 94856 ...
82510	1056	Presser Bar Lifting Bracket Tension Release for 91711 ...
82520	1081	Needle Clamp for 82522 ...
82521	1081	Needle Clamp Thread Eyelet for 82522 ...
82522	—	Needle Clamp 82520 with 156f, 50406d and 82521 ...
82525	1081	Thread Controlling Lever Spring for 91234, 94813 and 94856 ...
82537	1040	Bobbin Winder Spring for 91720 ...
82538	1040	Bobbin Winder Spring Screw Washer for 91720 ...
82549	1054	Arm Shaft Bushing (front) for 91444, 94810, 94853 and 95154 ...
82550	—	Drip Pan for 45K87 Machine ...
82551	1041	Thread Controlling Lever for 91234, 94813 and 94856 ...
84118	1489	Machine Button, with 84151 and wood screw 1 1/4" No. 9 R.H.B., for 45K87 Machine (Accessories)
84148	1401	Thread Unwinder Spool Rest, with 448c, for 95125 ...
84275	1082	Driving Attachment Shaft Pulley (sectional, grooved), 10" diam., with two 597c, for 91724 and 95153 ...
86611	1600	Screw Driver (large) ... (Accessories)

† For Two-Tone Machines the finish of these parts is G. ev Metallic (Colour Code No. 728). (5-41)

No.	Plate	
*91003	—	Bed for 45K87 Machine ...
91021	775	Needle Bar ...
91022	779	Needle Bar Connection with two-158c/09 72.9 (pos) 10/62
91025	779	Oscillating Rock Shaft Steel Plate (bottom) for 98628 and 98630 ... (Obsolete)
91026	1749	Oscillating Rock Shaft Steel Plate Rivet for 98628 and 98630 ... (Obsolete)
91028	776	Oscillating Shuttle Shaft for 45K87 Machine
91029	1081	Oscillating Shuttle Shaft Bushing for 45K87 Machine ...
91030	1055	Oscillating Shuttle Shaft Collar, with 453c, for 45K87 Machine ...
91042	1696	Shuttle Cylinder Hinge Pin for 98624 ...
91043	1696	Shuttle Cylinder Latch Spring for 98624 ...
91049	1055	Shuttle Race, with 91051, 91052 and 91055, for 94973 ...
91050	1081	Shuttle Race Cap for 94862 ...
91051	1055	Shuttle Race Cap Pin (short) for 91049 ...
91052	1055	Shuttle Race Cap Pin (long) for 91049 ...
91053	1081	Shuttle Race Cap Spring for 94862 ...
91054	1055	Shuttle Race Loop Spreader for 94973 ...
91055	1055	Shuttle Race Position Pin for 91049 ...
91057	1058	Shuttle Race Slide (back) for 45K87 Machine
91058	1058	Shuttle Race Slide (front) for 91060 ...
91059	1058	Shuttle Race Slide (front) Spring for 91060
91060	—	Shuttle Race Slide 91058, with 91059 and two 337d, for 45K87 Machine ...
(5-6) † 91151	—	Bed (Cylinder), with 423c and 91442, for 45K57 Machine ...
91153	1044	Shuttle Race Ring for 45K57, 45K75 and 45K76 Machines ...
91160	779	Feed Dog Carrier for 45K57 Machine ...
91161	775	Feed Forked Connection for 45K57 Machine
*91162	—	Feed Rock Shaft for 91163 756 ...
91163	775	Feed Rock Shaft 91162, with 91165 and 91166, for 91585 756 ...
91165	1750	Feed Rock Shaft Carrier Slide, with 1259c, for 91163 756 ...
91166	1057	Feed Rock Shaft Carrier Slide Steady Pin for 91165 756 ...
91171	775	Oscillating Shuttle Shaft for 45K57 Machine
91172	1750	Oscillating Shuttle Shaft Crank, with 453c and 1850, for 45K57 Machine ...
91202	1040	Oscillating Shuttle Shaft for 45K75 and 45K76 Machines ...
91233	776	Face Plate for 91234 ...

† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 728). (5-6)

No.	Plate	
91234	—	Face Plate, complete, Nos. SS50f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 91233 and 94825 for 45K57 Machine ...
91238	—	Lifting Presser Plunger Yoke for 91239 ...
(5-6) † 91239	779	Lifting Presser Plunger Yoke 91238, with three 149f, for 45K57 Machine ...
91240	1751	Needle Bar Connection Link ...
91241	1750	Oil Hole Plug (wood, large) ...
91242	1750	Oil Hole Plug (wood, medium) ...
91243	1750	Oil Hole Plug (wood, small) ...
91248	779	Presser Bar Spring ...
91249	1751	Presser Foot for 45K57 and 45K87 Machines
91257	1751	Thread Take-up Lever, with 9219, for 91258
91258	—	Thread Take-up Lever 91257, with RR24 and 1519c, for 45K57, 45K75 and 45K76 Machines ...
91260	1749	Throat Plate for Darning, for 45K57 Machine
91261	—	Work Plate for 45K57 Machine ...
91294	1082	Driving Attachment Balance Wheel Friction Pulley Centre Bearing for 91723 ...
91296	1061	Driving Attachment Starting Lever for 91299
91297	1061	Driving Attachment Starting Lever Bracket for 91299 ...
91298	1057	Driving Attachment Starting Lever Bracket Hinge Pin for 91299 ...
91299	1061	Driving Attachment Starting Lever, Nos. 91296 to 91298 and three wood screws 1 1/4" No. 15, for 91460 ...
91302	1082	Driving Attachment Lever Bracket for 91722 and 95152 ...
91303	1082	Driving Attachment Lever Centre Plug (wood) for 91722 ...
91306	1057	Driving Attachment Lever Friction Pad (leather) for 91721 ...
91307	779	Driving Attachment Lever Spring for 91722
91315	777	Shuttle Race Cap Spring for 45K57, 45K75 and 45K76 Machines ...
91409	1750	Shuttle Race Cover for 45K57 Machine ...
91438	1750	Presser Bar Lifter for 45K57, 45K75 and 45K76 Machines ...
91441	779	Needle Bar Bushing for 91444, 94810, 94853 and 95154 ...
91442	1769	Oscillating Shuttle Shaft Bushing for 91151
(5-6) † *91444	—	Arm, with 446c, 4508, 15404, 82499, 82549, 91441 and two 15405, for 45K57 Machine
91446	1751	Pushing Wheel ... 15072, for 91725

† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 728). (5-6)

No.	Plate	
91453	1061	Foot Lifter Foot Lever Pitman Connecting Hook (7" long) for 91456 and 94843 ...
91454	—	Foot Lifter Foot Lever only, complete, Nos. 17881, 91457 to 91459, 98626 and two wood screws 1" No. 12 for 91455 ...
91455	—	Foot Lifter Foot Lever, complete, Nos. 17880 and 91454 for 91456 and 94843 ...
91456	—	Foot Lifter, complete, Nos. 694d, 91453, 91455 and 91716 for 45K57 and 45K87 Machines ...
91457	1061	Foot Lifter Foot Lever, with 176c, for 91454
91458	1061	Foot Lifter Foot Lever Extension for 91454
91459	1061	Foot Lifter Foot Lever Bracket for 91454 ...
91460	—	Driving Attachment Starting Lever and Pitman, complete, Nos. 17880 and 91299 for 91724 and 95153 ...
91475	1082	Driving Attachment Balance Wheel Friction Pulley Ring (cardboard) for 91614 ...
91565	—	Feed Rock Shaft 91163, with 98674, for 45K57 Machine ...
91613	1061	Balance Wheel (two-speeds), with two 434c, for 45K87 Machine ...
91614	1082	Driving Attachment Balance Wheel, with 434c, 451c, 91475 and four 402c, for 91724
91615	1040	Arm Shaft ...
91651	1749	Presser Bar (with squared end) for 45K57 Machine ...
91652	1054	Presser Bar Lifting Bracket, with 446c, for 91711 ...
91690	—	Lifting Presser Plunger for 91691 ...
91691	1056	Lifting Presser Plunger 91690, with 80557 and 80558, for 45K57 Machine ...
91711	—	Presser Bar Lifting Bracket 91652, with 82510 and two 190f, for 45K57 Machine ...
91714	777	Throat Plate for 98680 for Patching, for 45K57 Machine ...
91716	1061	Foot Lifter Arm Lever for 91456 ...
561 † 91718	1040	Bobbin Winder Bracket for 91720 ...
561 † 91719	1751	Bobbin Winder Frame for 91725 ...
91720	—	Bobbin Winder (friction), complete, Nos. 32d, 161d, 82537, 82538, 91718 and 91725 for Fast Wheel and S.D.A. Machines ...
91721	1082	Driving Attachment Lever, with 7958 and

† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 728). (561)

No.	Plate	
91722	—	Driving Attachment Lever, complete, Nos. NN28c, 161c, 427c, 603d, 1508e, 91302, 91303, 91307, 91721 and two SS38c for 91724 ...
91723	1082	Driving Attachment Balance Wheel Friction Pulley (two-speeds), with 448c and 91294, for 91724 ...
91724	—	Driving Attachment, complete, Nos. 84275, 91460, 91614, 91722 and 91723 ...
91725	1040	Bobbin Winder Frame, complete, Nos. 333r, 5960, 5961, 5963, 91446 and 91719 for 91720 ...
91753	1043	Shuttle Race (steel, hardened) for 45K57, 45K75 and 45K76 Machines ...
94801	775	Crank Connecting Rod, with 94802, 94872 and two 158c, for 45K57, 45K75 and 45K76 Machines ...
*94802	—	Crank Connecting Rod Cap for 94801 and 98664 ...
(561) † 94810	—	Arm, with 446c, 450c, 15404, 82499, 82549, 91441 and two 15405, for 45K76 Machines
" † 94811	—	Bed (Cylinder), with 423c and 98633, for 45K75 and 45K76 Machines ...
" † 94812	1040	Face Plate for 94813 ...
94813	—	Face Plate, complete, Nos. 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 94812, 94825, 94836 and two SS50f, for 45K75 and 45K76 Machines ...
94814	1041	Lifting Presser Plunger for 94820 ...
94815	1041	Lifting Presser Plunger Pin for 94820 ...
94816	1041	Lifting Presser Plunger Plug for 94820 ...
94817	1041	Lifting Presser Plunger Buffer (rubber) for 94820 ...
94818	1041	Lifting Presser Plunger Roller for 94820 ...
94819	1041	Lifting Presser Plunger Roller Pin for 94820
94820	—	Lifting Presser Plunger, complete, Nos. 94814 to 94816, 94818, 94819 and five 94817 for 45K75, 45K76 and 45K87 Machines...
94821	1041	Lifting Presser Plunger Bracket, with two 1186f, for 45K75 and 45K76 Machines ...
94822	1041	Lifting Presser Plunger Bracket Spring for 45K75, 45K76 and 45K87 Machines ...
94823	1041	Oil Hole Plug (wood, small), for Plunger ...
94824	1040	Presser Bar (with squared end) for 45K75, 45K76 and 45K87 Machines ...
94825	1041	Thread Take-up Spring Regulator for 91234, 91212 and 94050 ...

† For Two-Tone Machines the finish of these parts is Grey Metallic (Colour Code No. 728). (561)

No.	Plate	
94826	1041	Presser Bar Cushion Spring for 45K75 and 45K76 Machines
94827	1041	Presser Bar Lifting Bracket, with two 1186d, for 45K75 and 45K76 Machines ...
94828	1041	Presser Bar Lifting Bracket Sleeve for 45K75 and 45K76 Machines
94829	1041	Presser Bar Lifting Bracket Tension Release for 45K75 and 45K76 Machines ...
94830	1041	Presser Foot for 45K75 and 45K76 Machines
94836	1041	Tension Thread Guide for 94813
94837	1749	Thread Take-up Cam, with SS320c and SS370c, for 94839 and 94864
94838	1043	Thread Take-up Cam Lifting Cam for 94839
94839	1043	Thread Take-up Cam 94837, with 94838 and three 191c, for 45K57, 45K75 and 45K76 Machines
94840	1044	Throat Plate for 45K75 and 45K76 Machines
94841	—	Work Plate for 45K75 and 45K76 Machines
94842	1061	Foot Lifter Arm Lever for 94843
94843	—	Foot Lifter, complete, Nos. 694d, 91453, 91455 and 94842, for 45K75 and 45K76 Machines ... <i>AL 9/51</i>
*94853	—	Arm, with 446c, 450c, 15404, 82499, 82549, 91441 and two 15405, for 45K87 Machine
94854	1057	Arm Cover for 45K87 Machine
94855	—	Face Plate for 94856
94856	—	Face Plate, complete, Nos. SS50f, 219f, 233d, 446c, 82449, 82450, 82455, 82502, 82503, 82525, 82551, 94825 and 94855 for 45K87 Machine
94857	1054	Lifting Presser Plunger Bracket, with two 1186f, for 45K87 Machine
94858	1056	Lifting Presser Dash Pot for 45K87 Machine
94859	1056	Lifting Presser Dash Pot Plunger for 45K87 Machine
94860	1054	Presser Bar Lifter for 45K87 Machine
94861	1054	Presser Bar Lifting Bracket, with two 1186d, for 45K87 Machine
94862	—	Shuttle Race (adjustable), complete, Nos. 41d, 91050, 91053 and 94973, for 45K87 Machine
94863	1749	Thread Take-up Cam Lifting Cam for 94864
94864	1749	Thread Take-up Cam 94837, with 94863 and three 191c, for 45K87 Machine
94865	1055	Thread Take-up Lever, with 9219, for 94866
94866	—	Thread Take-up Lever 94865, with <i>RR</i> 24 and 1519c, for 45K87 Machine

No.	Plate	
94867	1056	Throat Plate for 45K87 Machine
94872	1743	Crank Connecting Rod Cap Oil Pad for 94801 and 98664
94972	1489	Oscillating Rock Shaft Steel Plate (top) for 98628 and 98630 ... (Obsolete)
94973	—	Shuttle Race 91049, with 91054 and two 401f, for 94862
95093	1696	Shuttle Bobbin for 98624
95094	1696	Shuttle Cylinder for 98624
95125	1401	Thread Unwinder, complete, Nos. 27623, 27627, 84148 and two wood screws 1 1/4" No. 10
95126	1401	Thread Unwinder Spool Weight, 4" diam., for 95125 (<i>only supplied when specified on order</i>)
95141	1466	Balance Wheel for 95143
95142	1466	Balance Wheel Loose Pulley for 95143
95143	—	Balance Wheel, complete, Nos. 95141 and 95142, for fast and loose pulley, for 98625
95145	1465	Clamp Stop Motion Clamp Washer for 95190 and 98625
95146	1465	Clamp Stop Motion Flanged Bushing, with two 434c, for 95190 and 98625
95148	1057	Driving Attachment Lever Belt Shifter for 95152
95149	1057	Driving Attachment Lever Belt Shifter Rod for 95152
95150	1057	Driving Attachment Lever Spring for 95152
95152	—	Driving Attachment Lever, complete, Nos. <i>NN</i> 28c, 693d, 727c, 1623c, 7958, 91302, 95149, 95150, 98507, 98643, two each SS38c, 190d, 95148 and three 363c, for 95153
95153	—	Driving Attachment, complete, Nos. 84275, 91460, 95152 and 98625 for 45K75 Machine ... <i>AL 9/51</i>
*95154	—	Arm, with 446c, 450c, 15404, 82499, 82549, 91441 and two 15405, for 45K75 Machine
95189	1465	Balance Wheel for 95190
95190	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95145, 95146 and 95189 for 45K57 and 45K76 Machines
95197	1487	Bobbin Winder Stop Latch for 95198
95198	1488	Bobbin Winder, Nos. 35d, 1620j, 27302, 27303, 27540, 27541, 50356b, 95197, 98673 and two wood screws 1" No. 7 R.H. for 95199

No.	Plate	
95199	—	Bobbin Winder (Swinging Automatic, right hand), complete, Nos. 27308 and 95198 for 95093
98507	2354	Driving Attachment Lever Friction Pad (leather) for 95152
98601	1489	Presser Bar Cushion Spring for 45K87 Machine
98602	1696	Shuttle Tension Spring for 98624
98606	2354	Bed Oil Pad for 45K75 and 45K76 Machines
98607	1743	Shuttle Driver for 45K87 Machine ...

No. 98607 can only be used with No. 98624 and not with old style Shuttles.

98609	1743	Shuttle Driver and Feed Raising Cam for 98611
98610	1743	Shuttle Driver Thread Guard for 98611 ...
98611	1743	Shuttle Driver and Feed Raising Cam, complete, Nos. 98609, 98610 and two 223d, for 45K57, 45K75 and 45K76 Machines

No. 98611 can only be used with No. 98624 and not with old style Shuttles.

98614	1743	Crank Connecting Rod Hinge Stud Cotter Pin for 98640 and 98641
98621	1696	Shuttle Frame for 98624
98624	1696	Shuttle (Cylinder), 2½" diam., complete, Nos. SS377f, SS574d, 91042, 91043, 95093, 95094, 98602 and 98621

No. 98624 can only be used with Nos. 98607 and 98611 and not with old style Shuttle Drivers.

98625	—	Clamp Stop Motion, complete, Nos. 248f, SS463d, 95143, 95145 and 95146, for 95153
98626	1061	Foot Lifter Foot Lever Spring for 91454 ...
98627	1743	Crank Connecting Rod Hinge Stud for 98640 and 98641
98628	1743	Oscillating Rock Shaft, with 91025, 94972 and two 91026, for 45K87 Machine (Obsolete)
98630	1743	Oscillating Rock Shaft, with 91025, 94972 and two 91026, for 45K57, 45K75 and 45K76 Machines ... (Obsolete)
98633	1769	Oscillating Shuttle Shaft Bushing for 94811

No.	Plate	
98635	2354	Oscillating Shuttle Shaft Crank, with RR62, 453c and 1518c, for 45K75, 45K76 and 45K87 Machines
98636	1769	Oscillating Rock Shaft Steel Plate (bottom) for 98638 and 98639
98637	1769	Oscillating Rock Shaft Steel Plate (top) for 98638 and 98639
98638	1769	Oscillating Rock Shaft, with 98636, 98637, two each SS537c and 1698c, for 98640 ...
98639	1769	Oscillating Rock Shaft, with 98636, 98637, two each SS537c and 1698c, for 98641 ...
98640	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98614, 98627 and 98638, for 45K87 Machine
98641	—	Oscillating Rock Shaft, complete, Nos. 1668c, 98614, 98627 and 98639, for 45K57, 45K75 and 45K76 Machines
98642	779	Oscillating Rock Shaft Hinge Pin ...
98643	1466	Driving Attachment Lever for 95152 ...
98664	776	Crank Connecting Rod, with 94802, 94872 and two 168c, for 45K87 Machine ...
98673	1487	Bobbin Winder Spindle with 15072, for 95198
98674	1054	Feed Rock Shaft Crank with 156f and SS517c, for 91565
98680	2354	Feed Dog for 45K57 Machine

NUMERICAL LIST OF PARTS

No. Plate

1 1
1 1

NUMERICAL LIST OF PARTS

No. Plate

109779(805) -- Crank Connecting Rod Cap Screw for
94801 and 98664
109779(805) — Needle Bar Connection Clamping Screw
for 91022

1 1
1 11 1
1 1

NUMERICAL LIST OF PARTS

No.	Plate				
120342	1600	Oiler ...	...	...	(Accessories)
120378	1489	Screw Driver (Shuttle Tension)	Accessories)		
7/60	161295	—	Screw Driver (shuttle tension)	(Accessories)	

No. Cancelled order 161295

Name	Plate
J. Conklin	9/51
C. MacDonald	2/56
J. Redziak	7/60
Emily Brady	6/59
Mary Anavich	10/62

