


SINGER


96K40,K45,K49,K51

ILLUSTRATED LIST OF PARTS
FOR
Nos. 96K40 to 96K45,
96K49 and 96K51
MACHINES

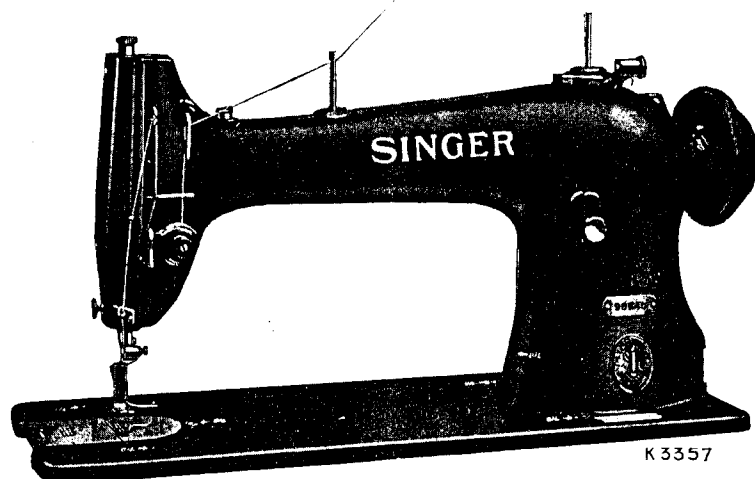


No. 96K51 Machine

** A Trade Mark of
THE SINGER MANUFACTURING COMPANY

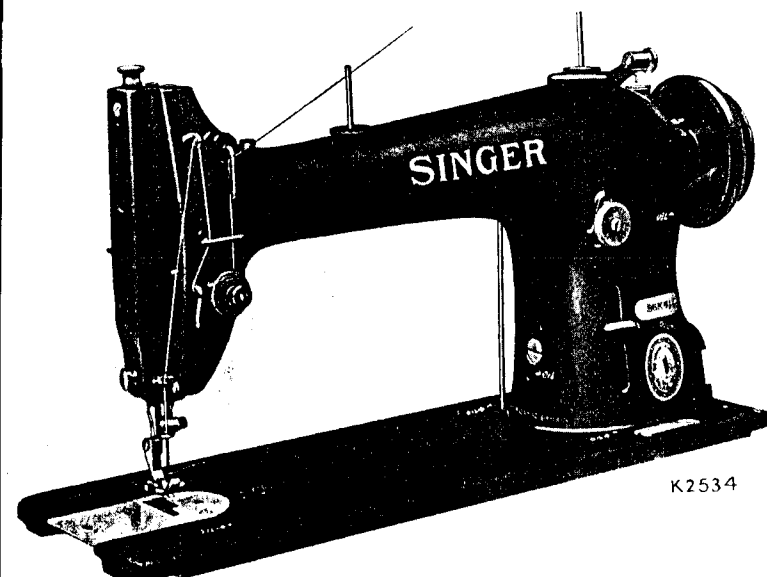


K2534

No. 96K41 Machine

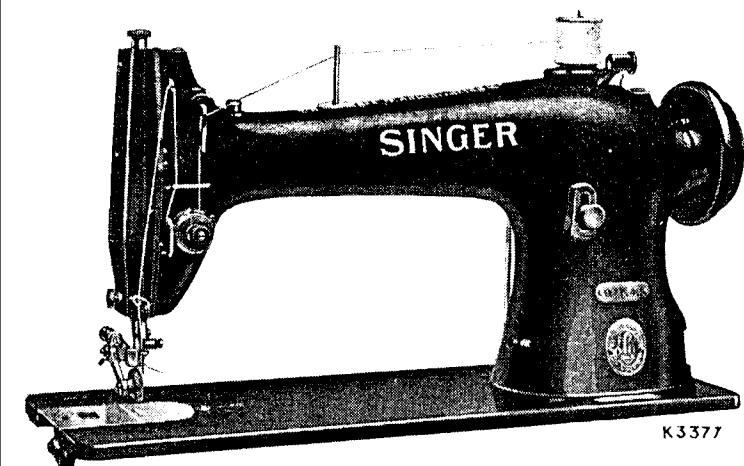


K3377

No. 96K42 Machine

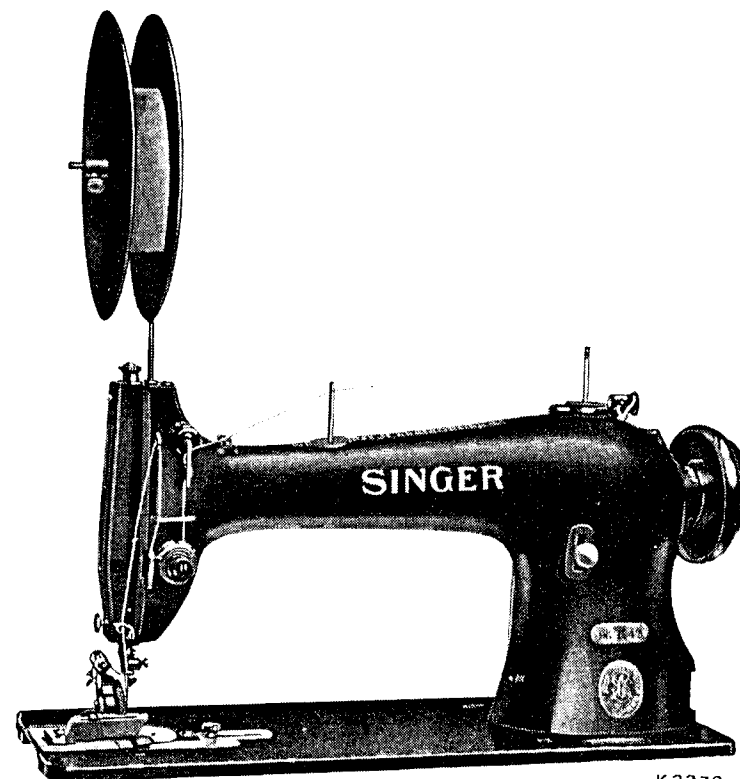


K3378

No. 96K43 Machine

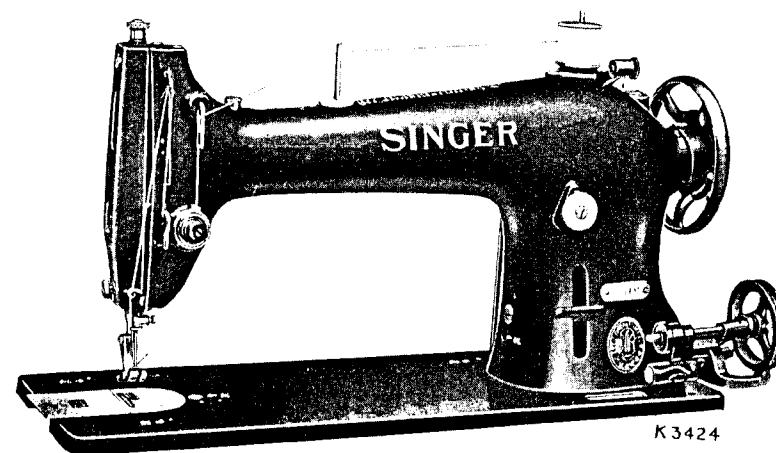


K3424

No. 96K44 Machine

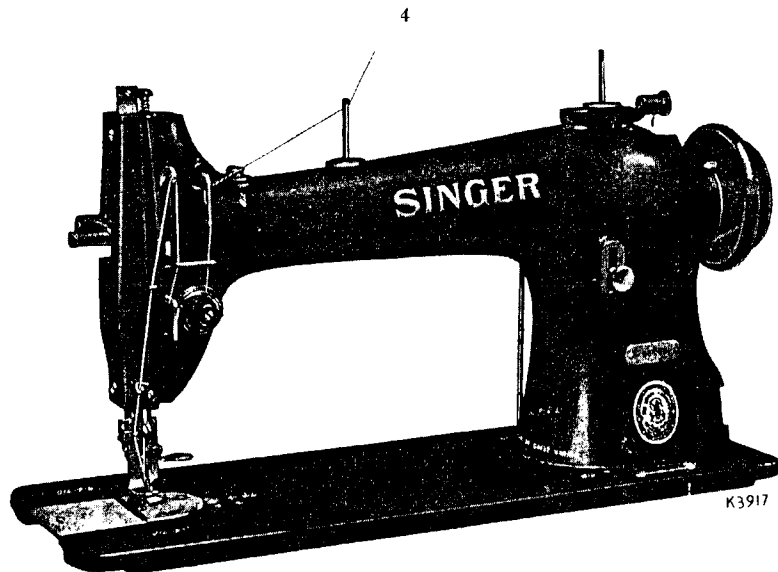

No. 96K45 Machine

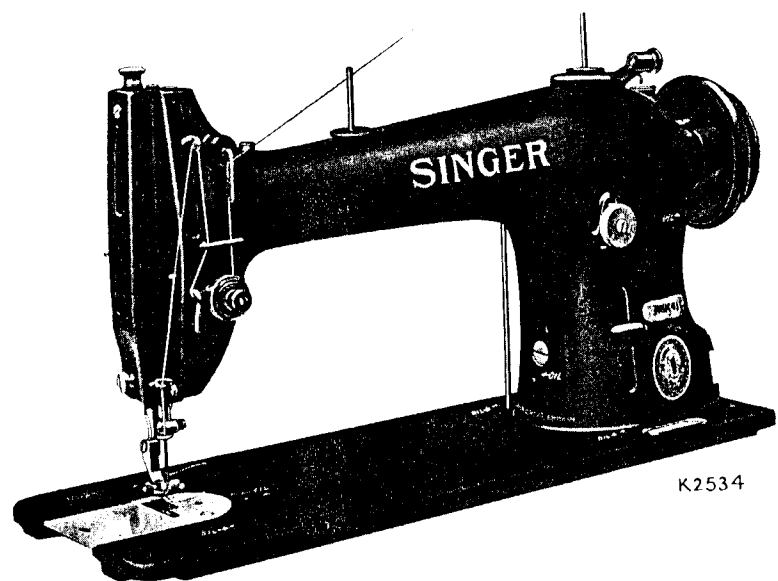




No. 96K49 Machine



Full Size

5


PLATE 88

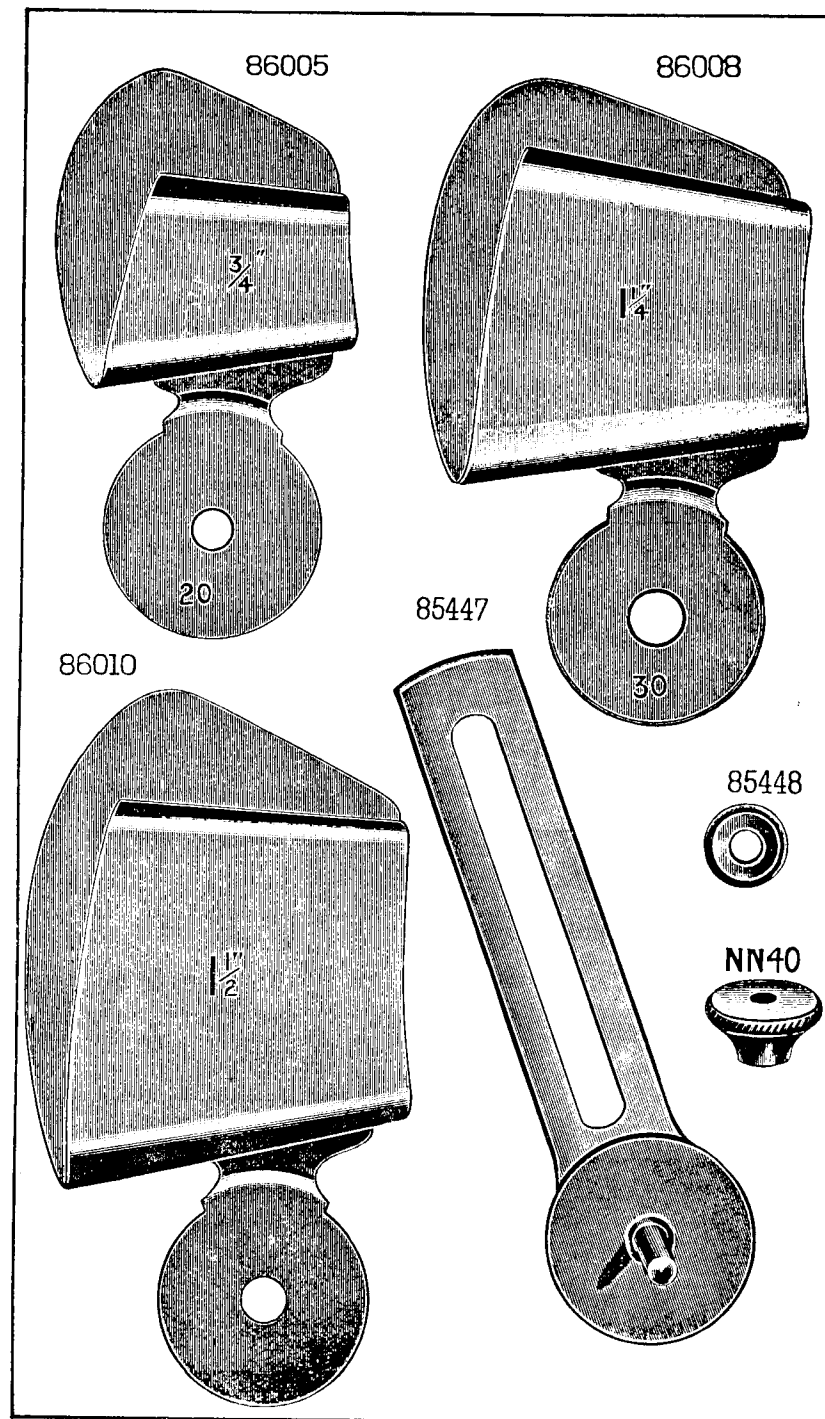

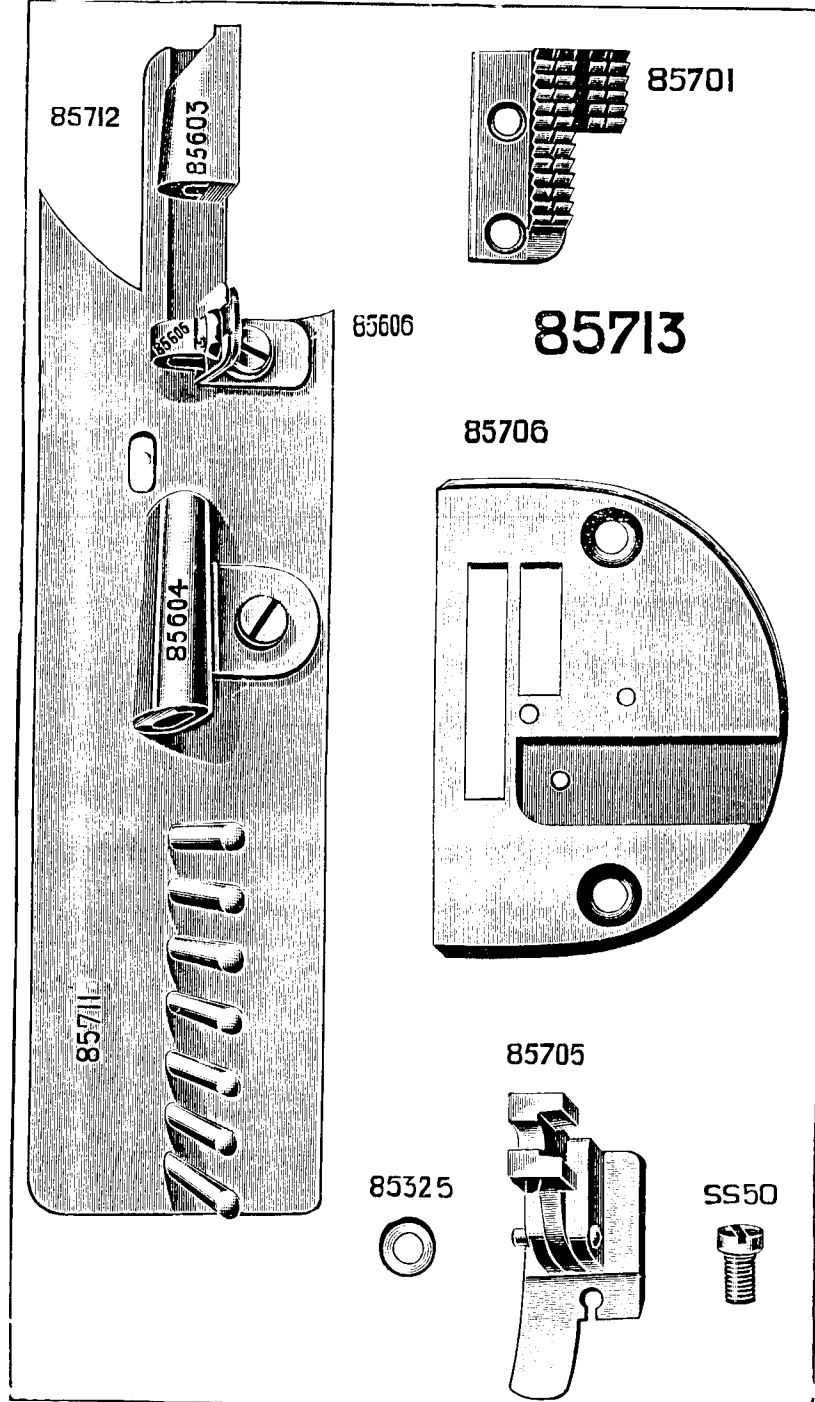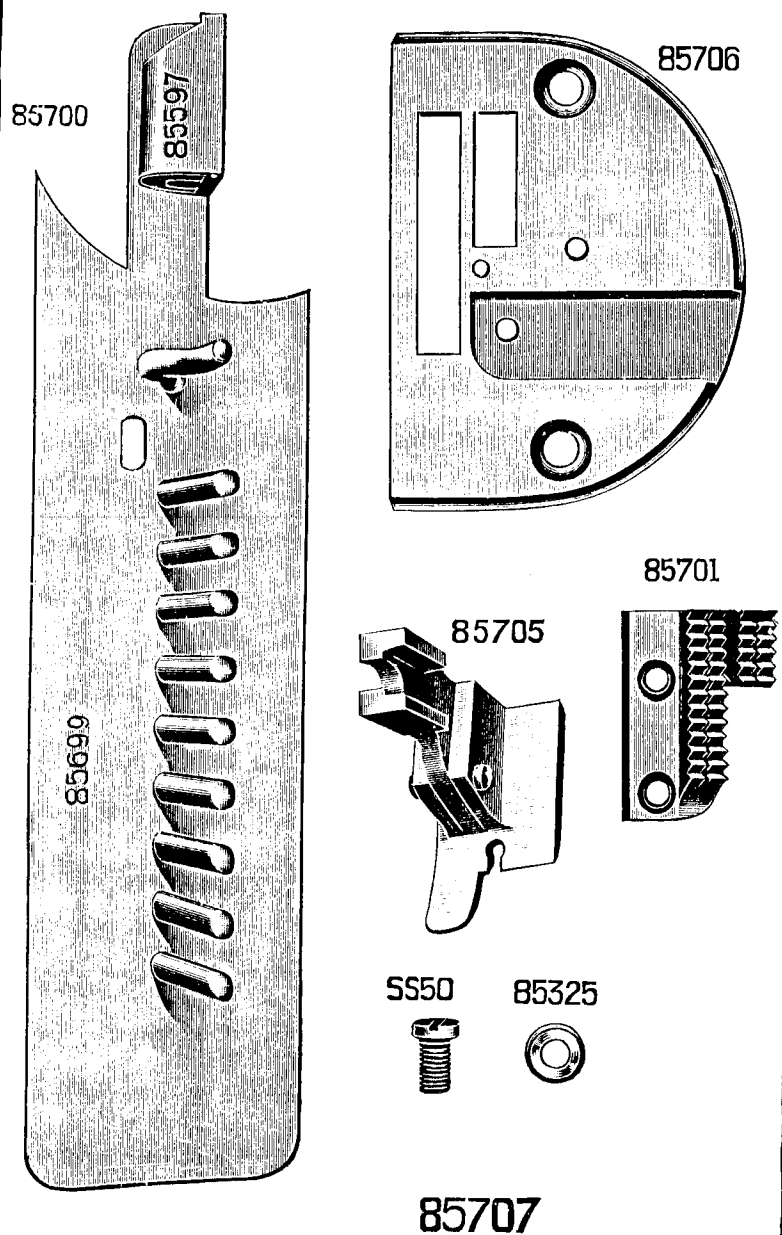


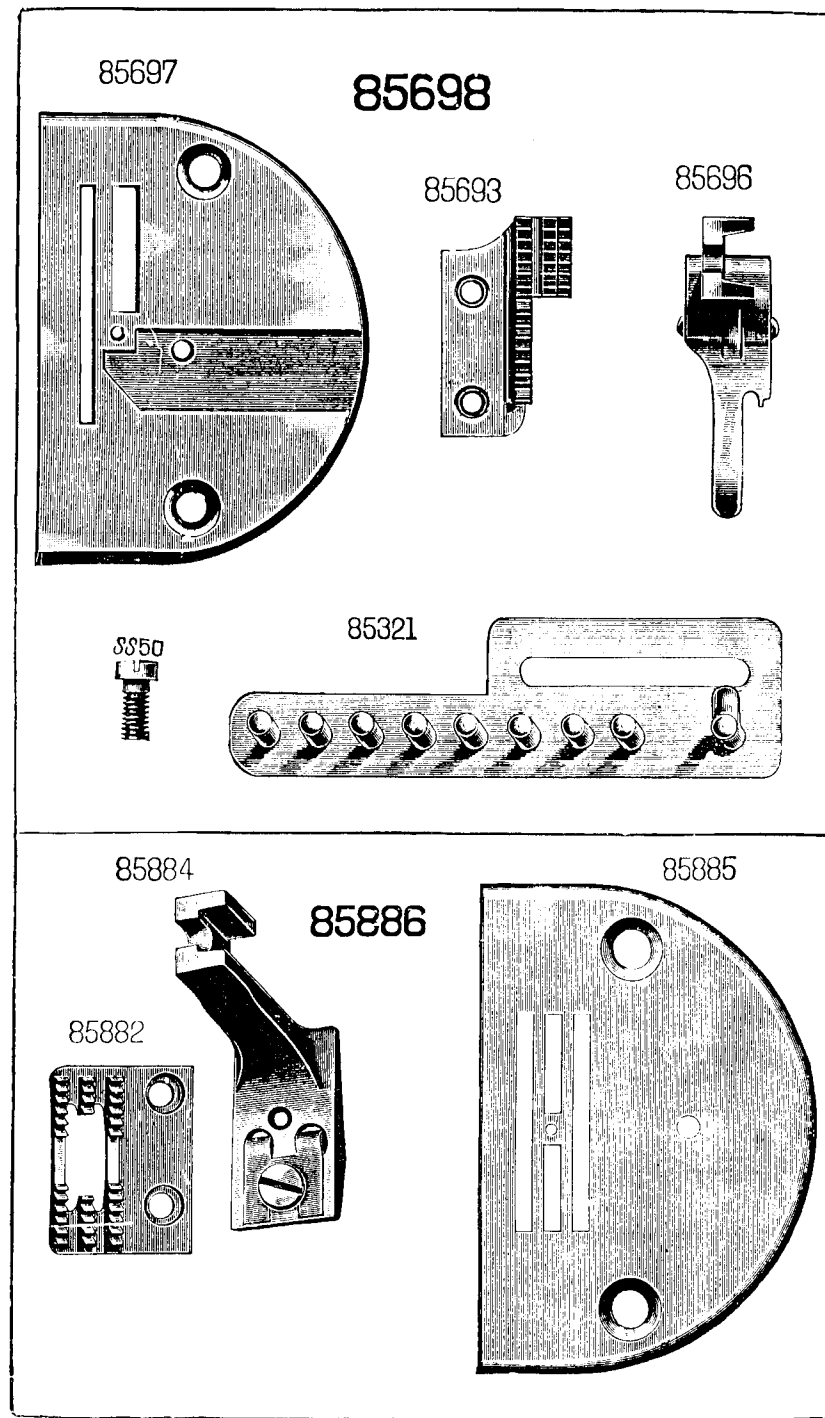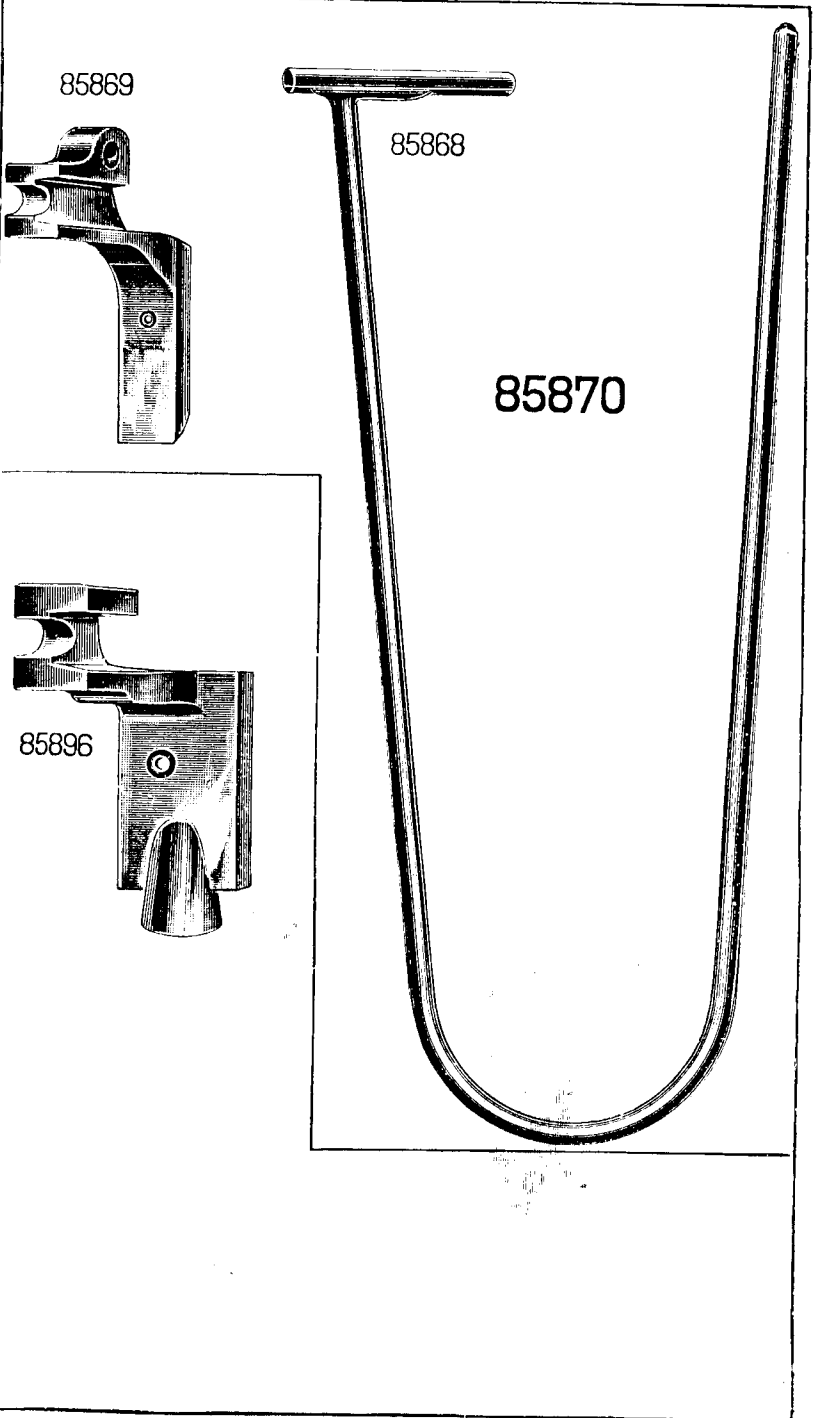


85691

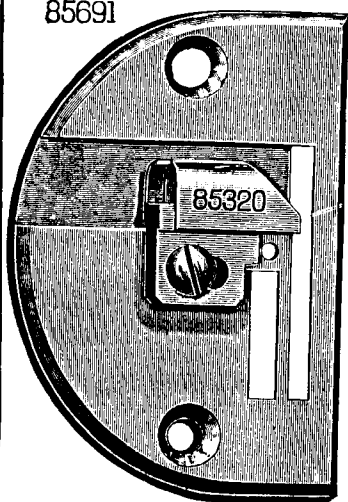


85686

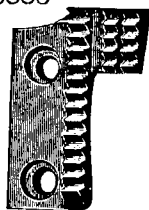

85321

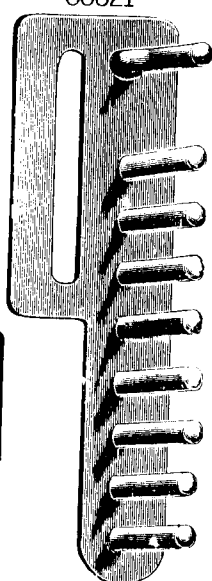


85692

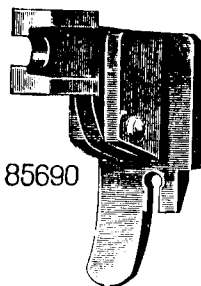


85690

85684

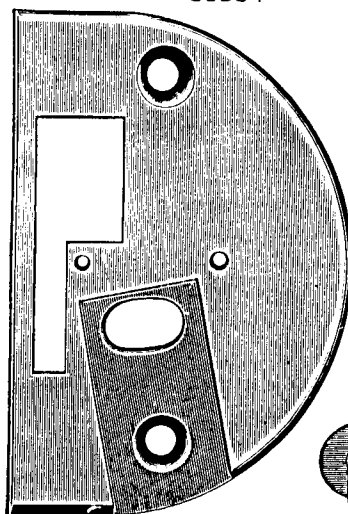

85685

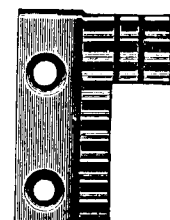


85682

85683




85339

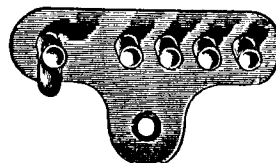


85325




85680

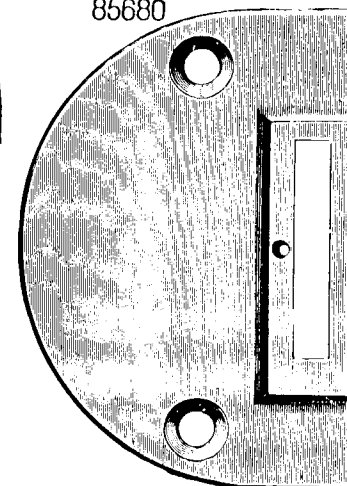


85681

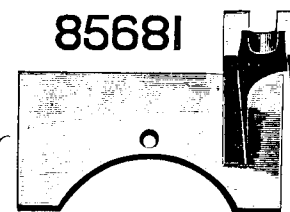


85679

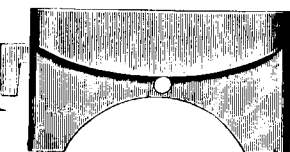


85678



85458

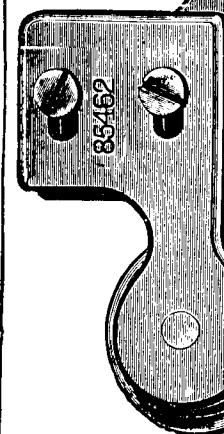


85459


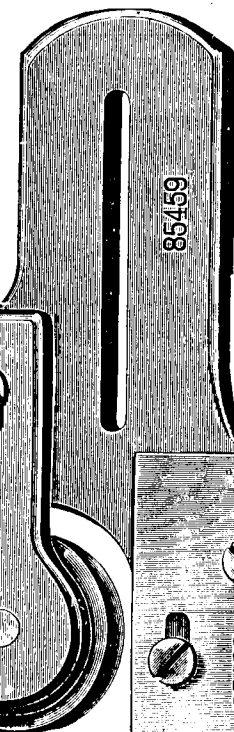




85325




85460

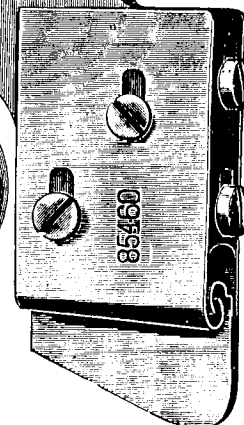

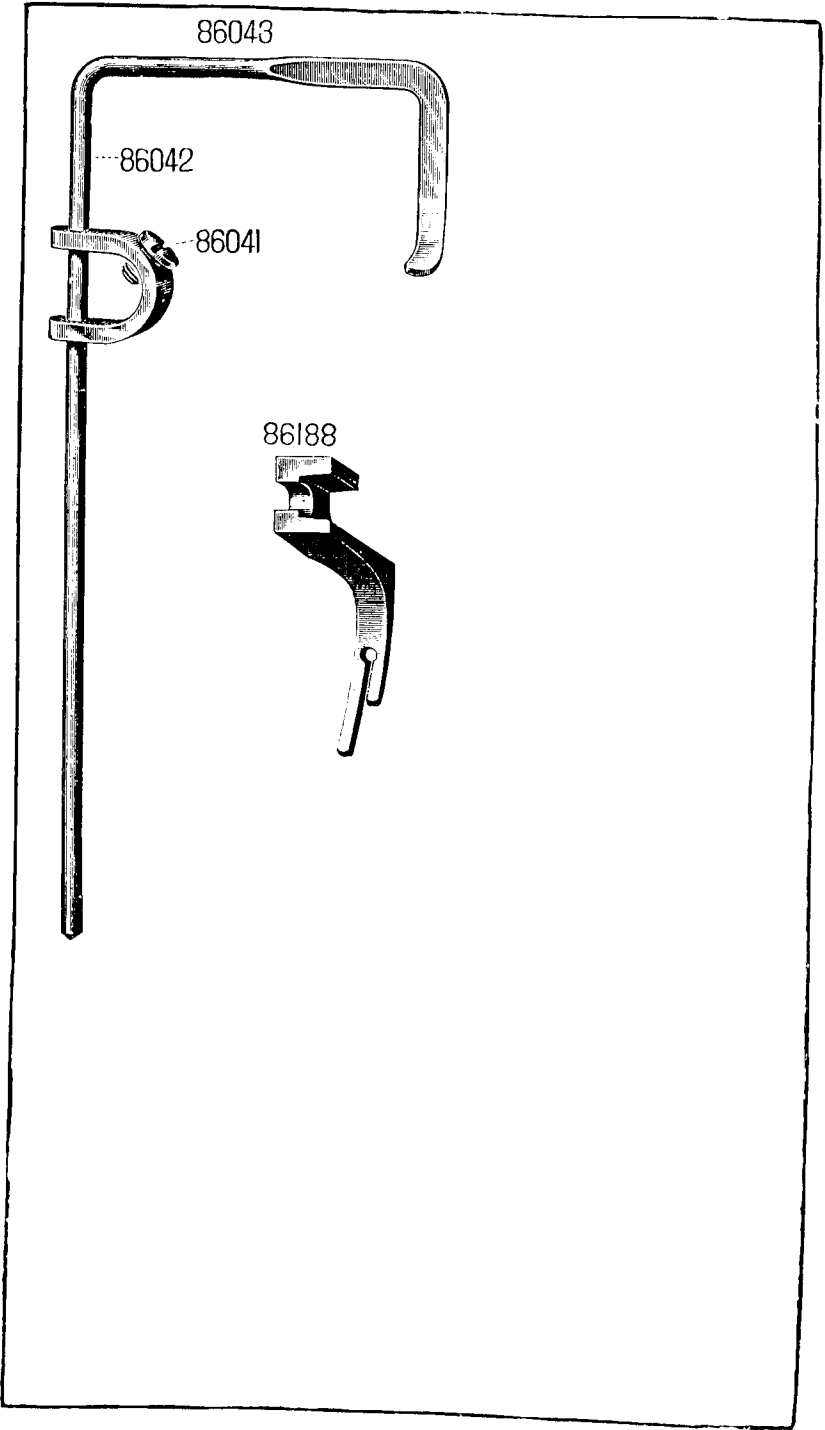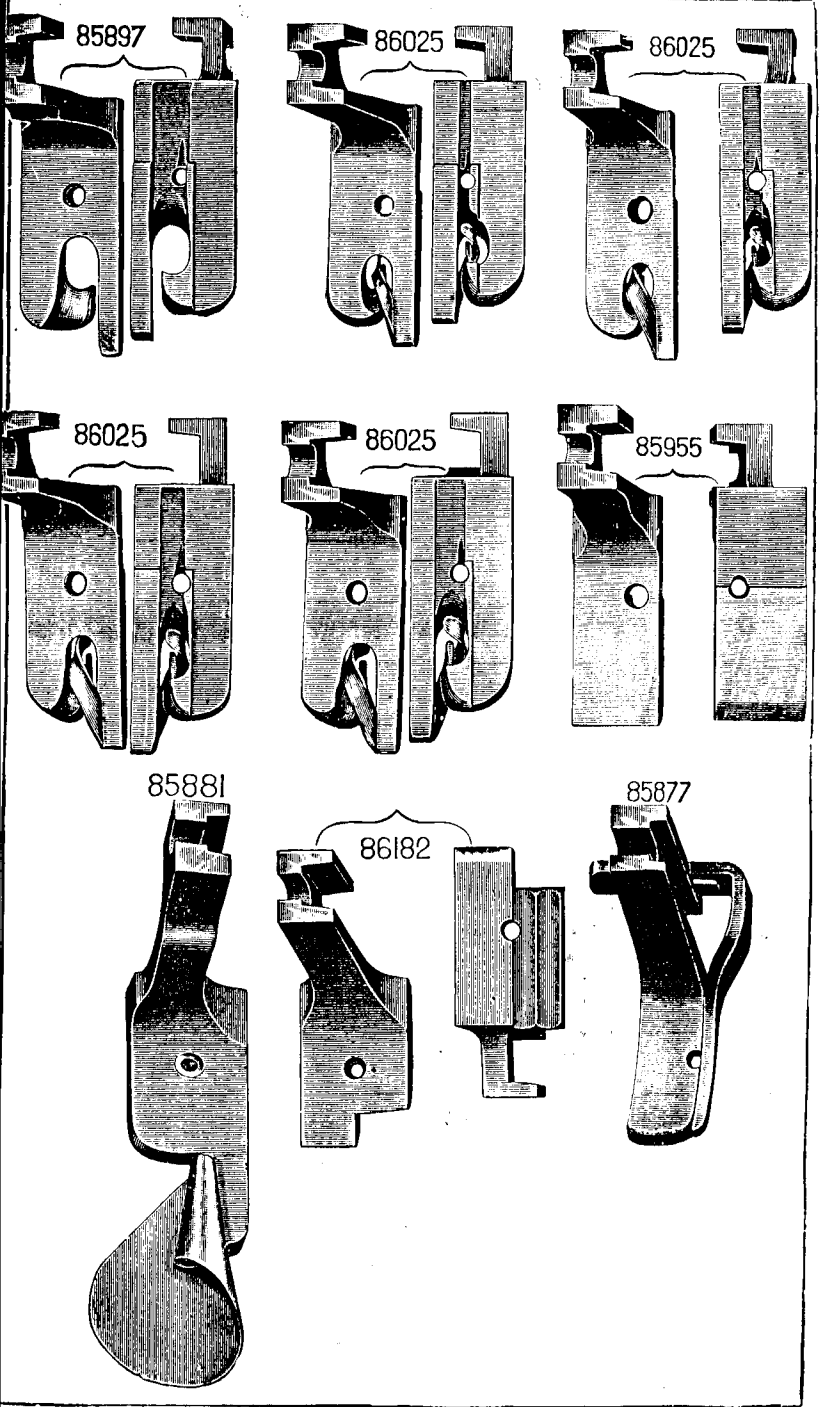


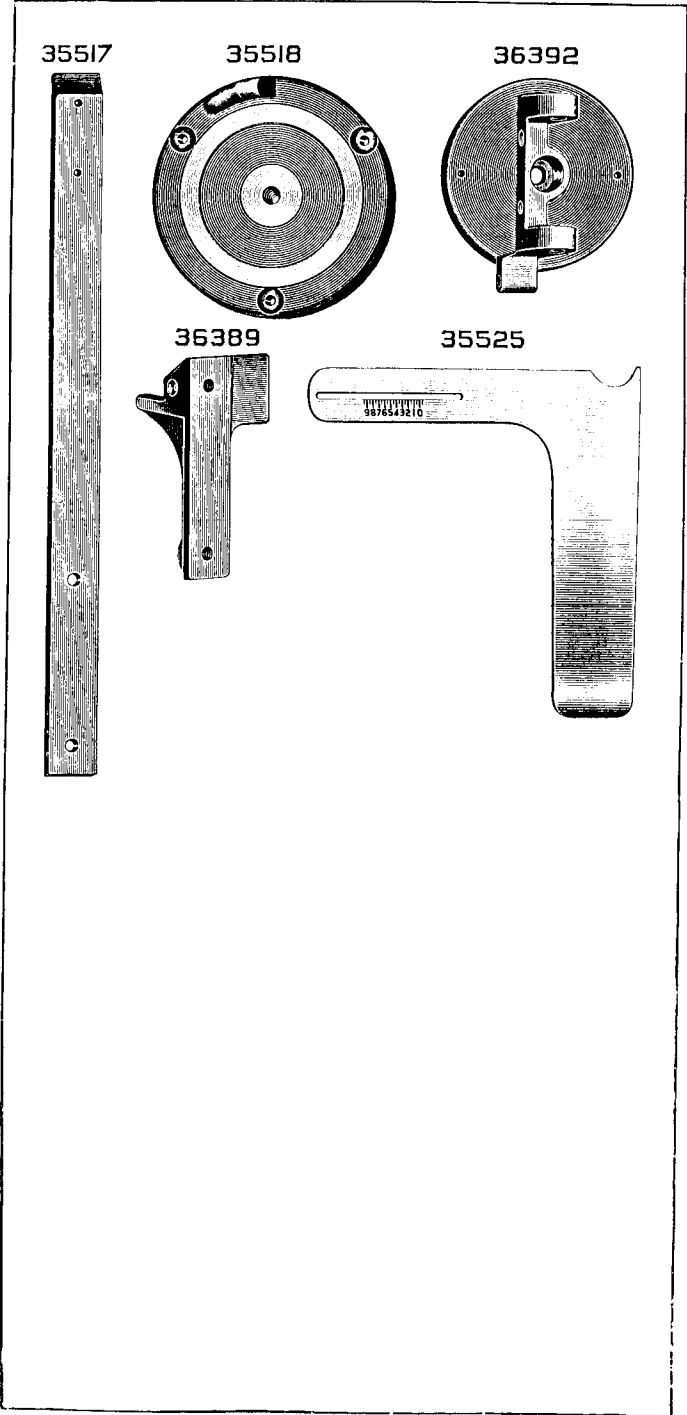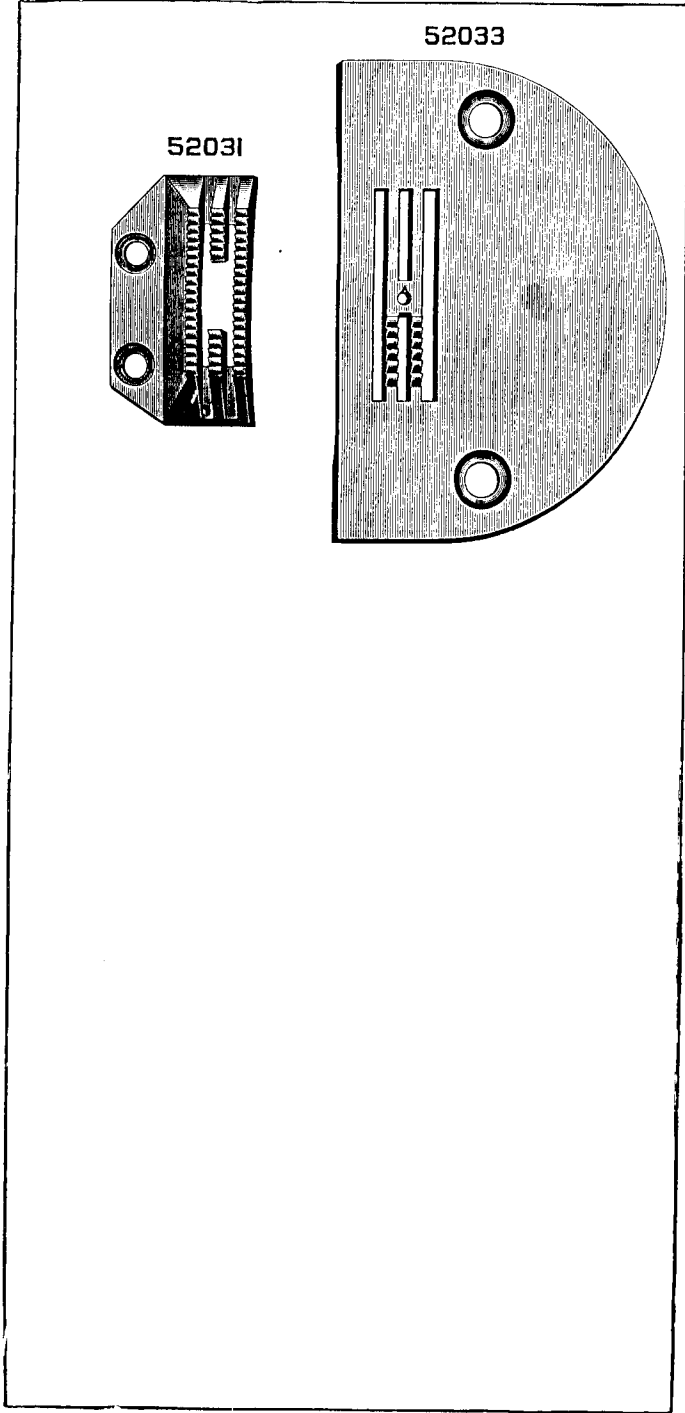


36387




35510

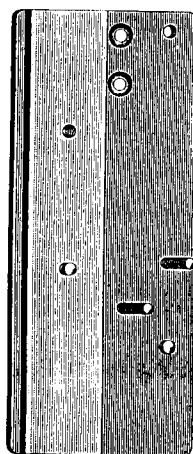

36391



52338

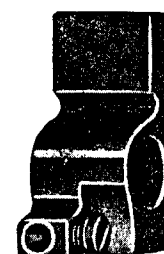


12329




12398



43944

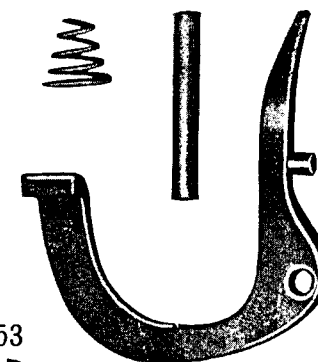

12327

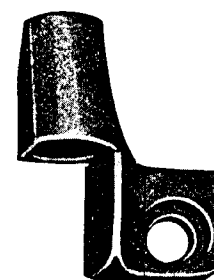

453




41593



41594




41595



223



52337

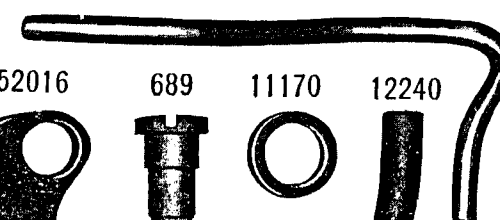

52016



689



11170



12240



1520




12241







12416





8879

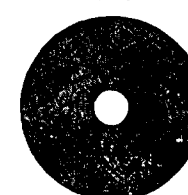


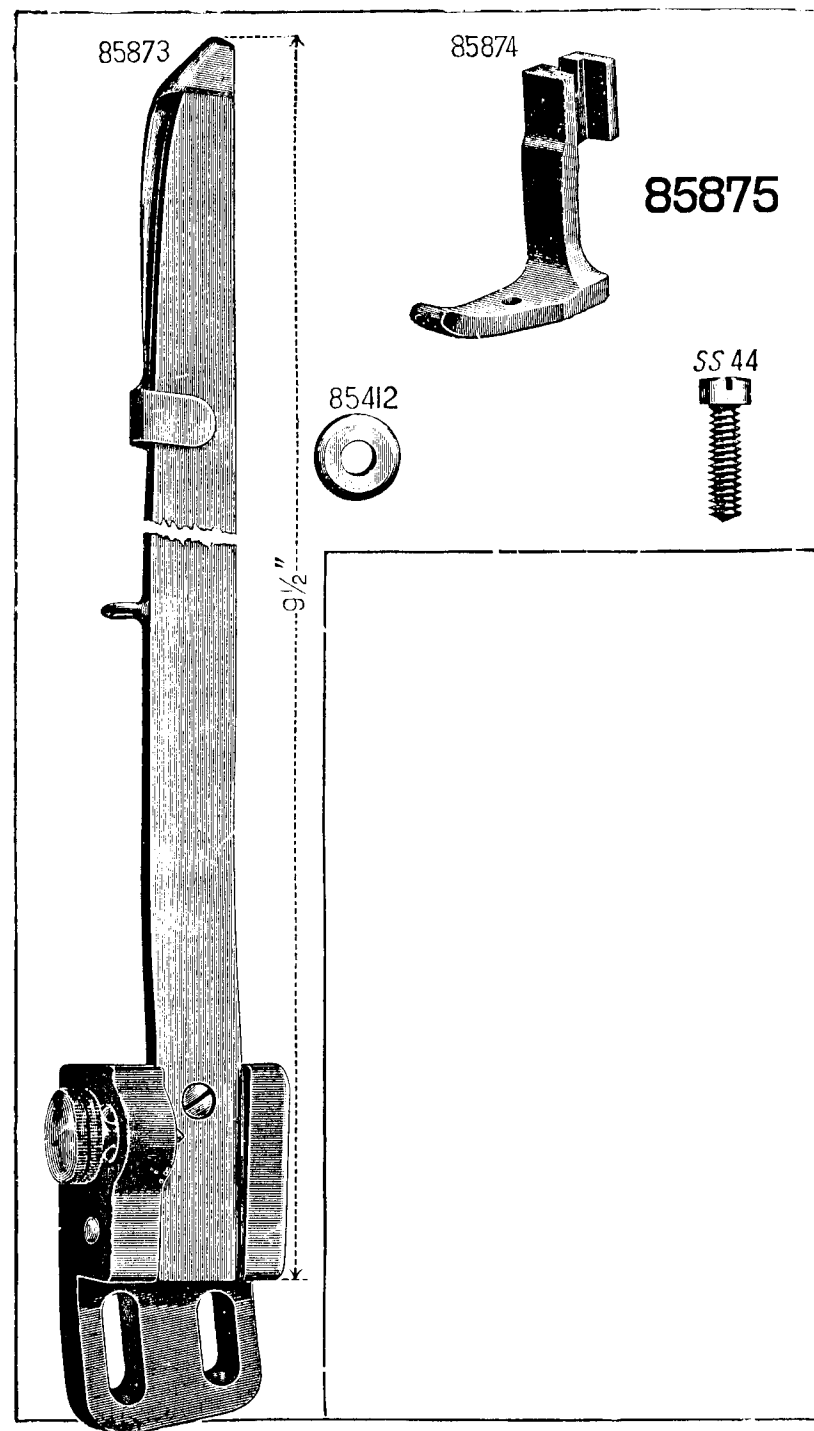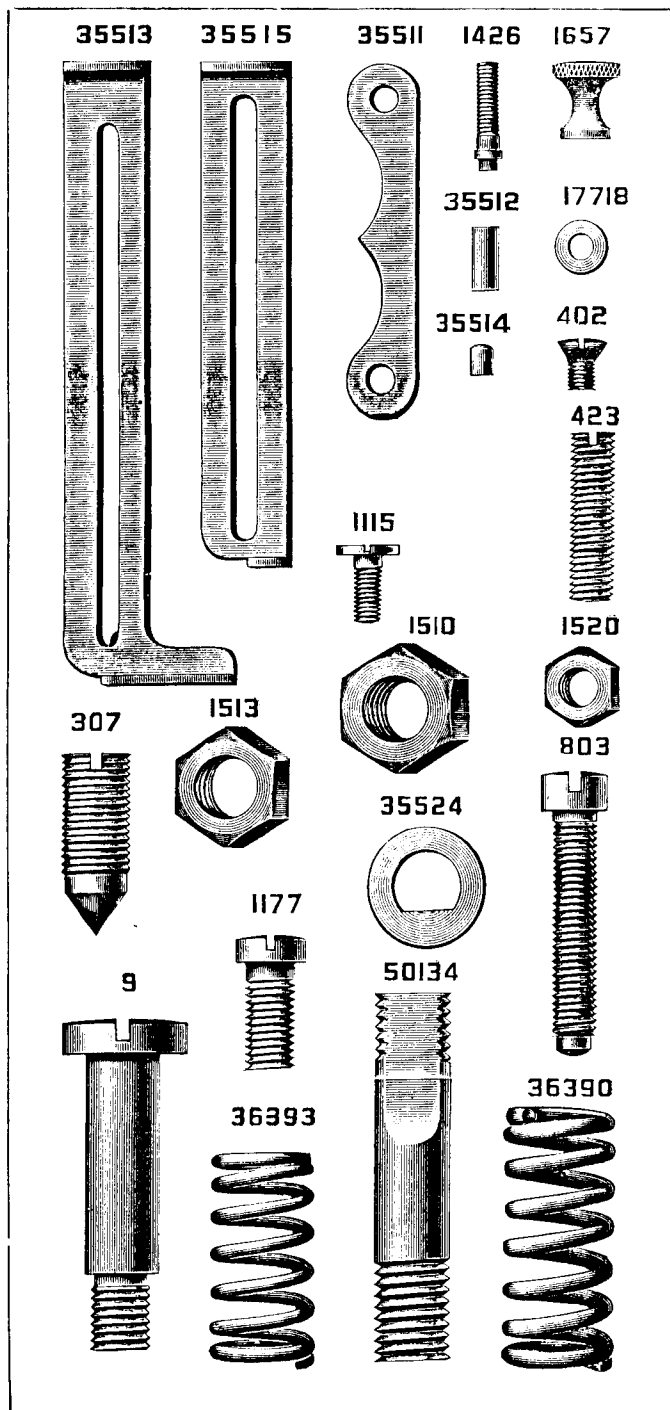

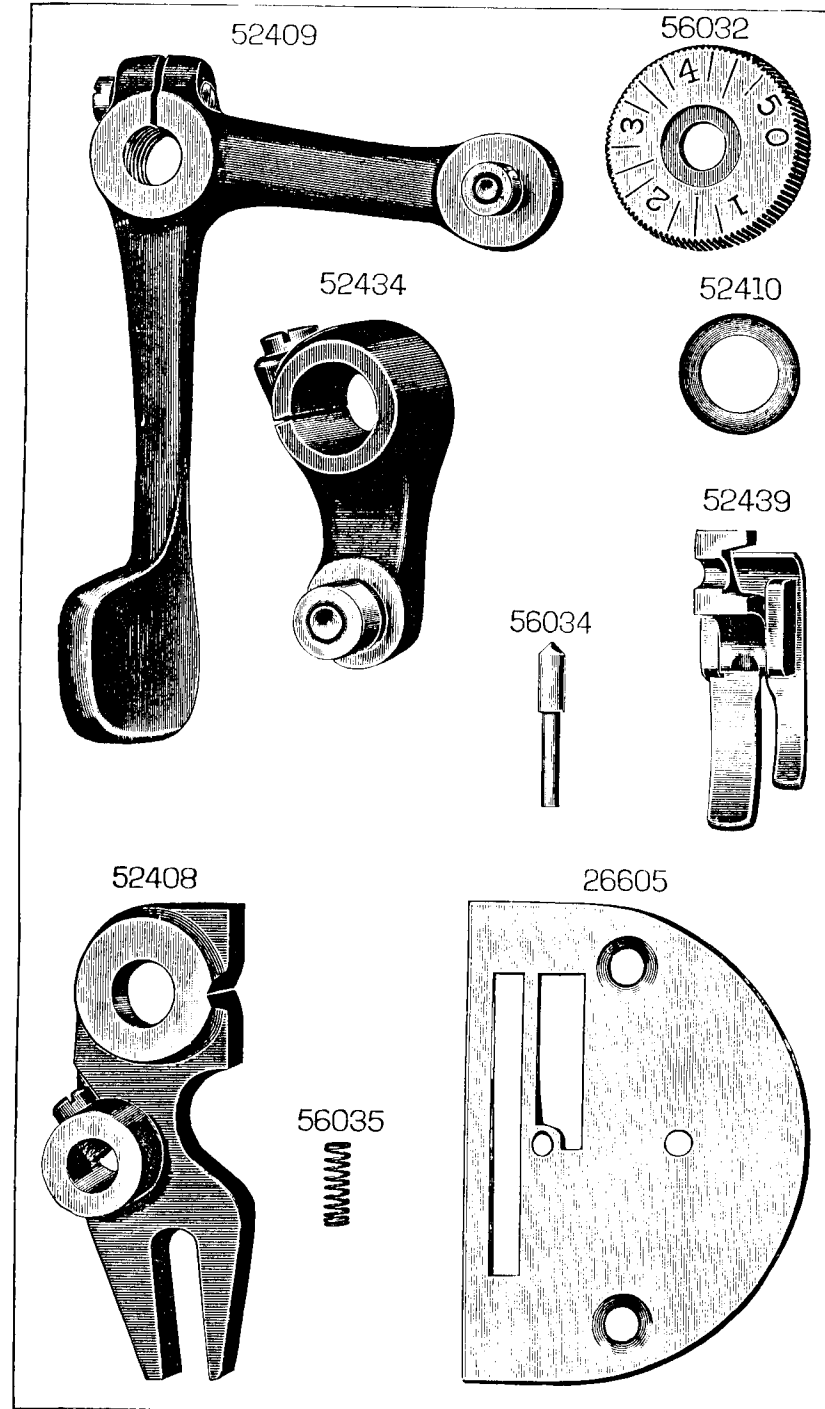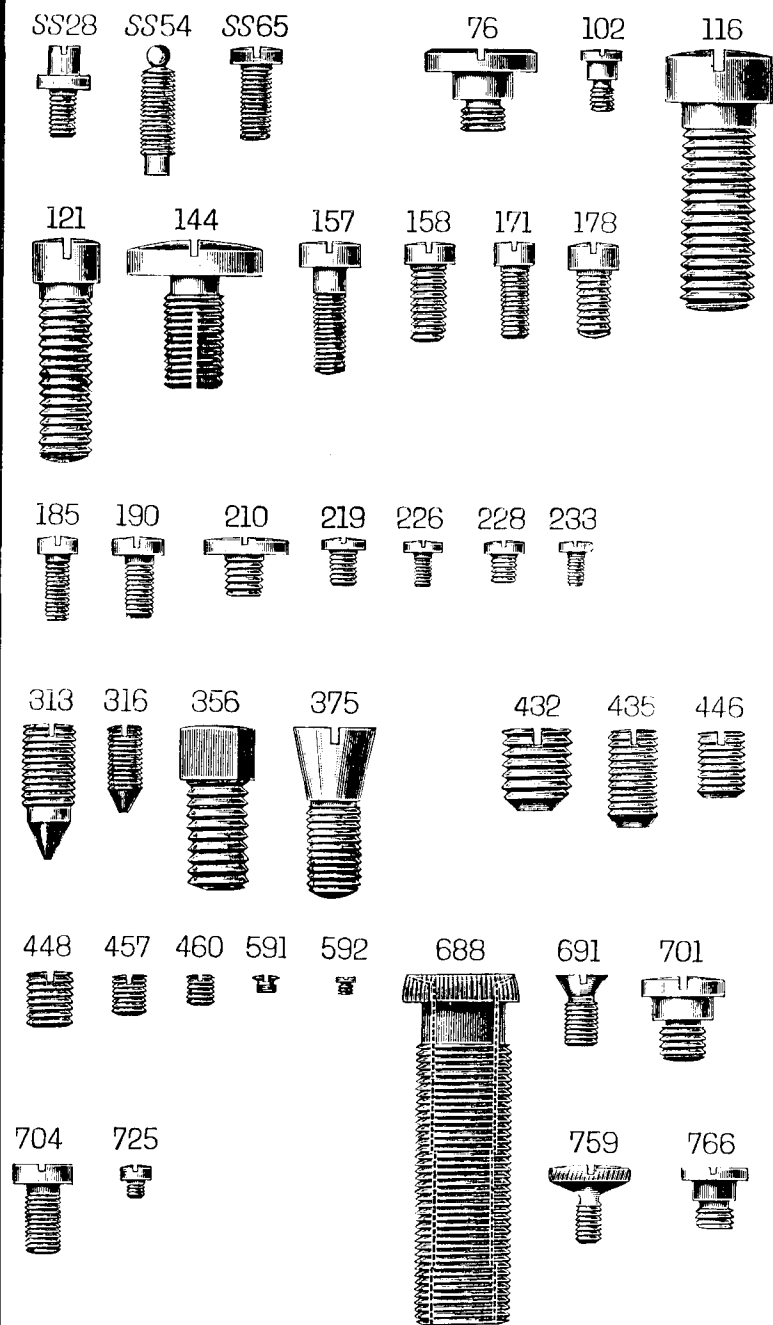


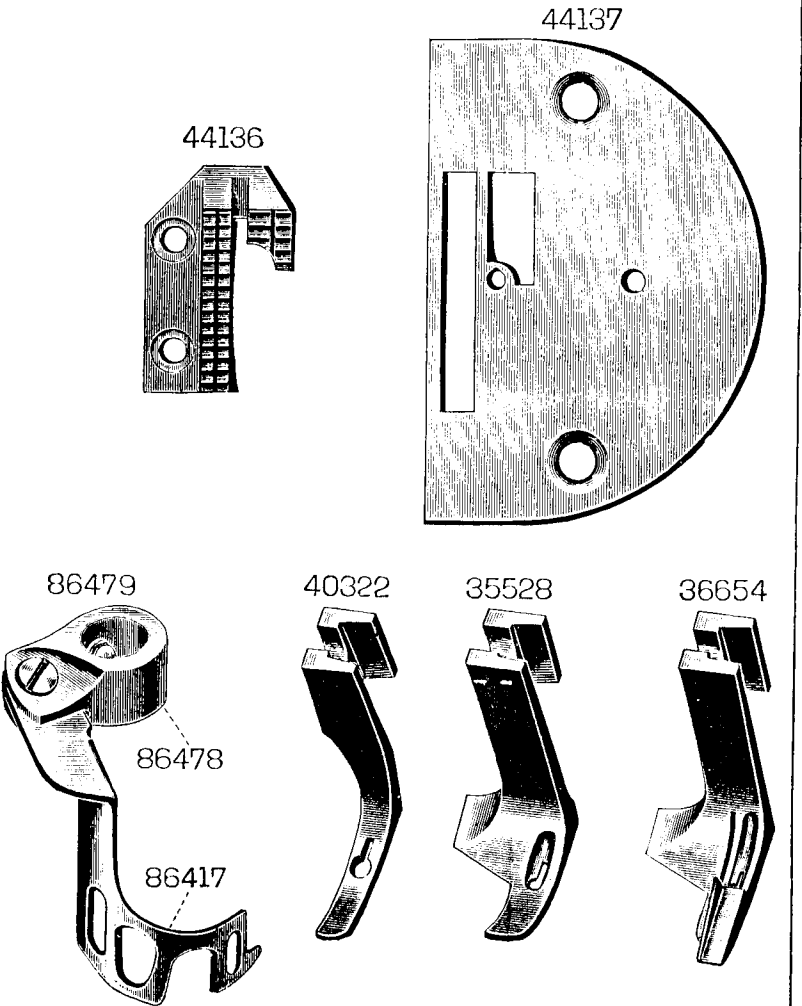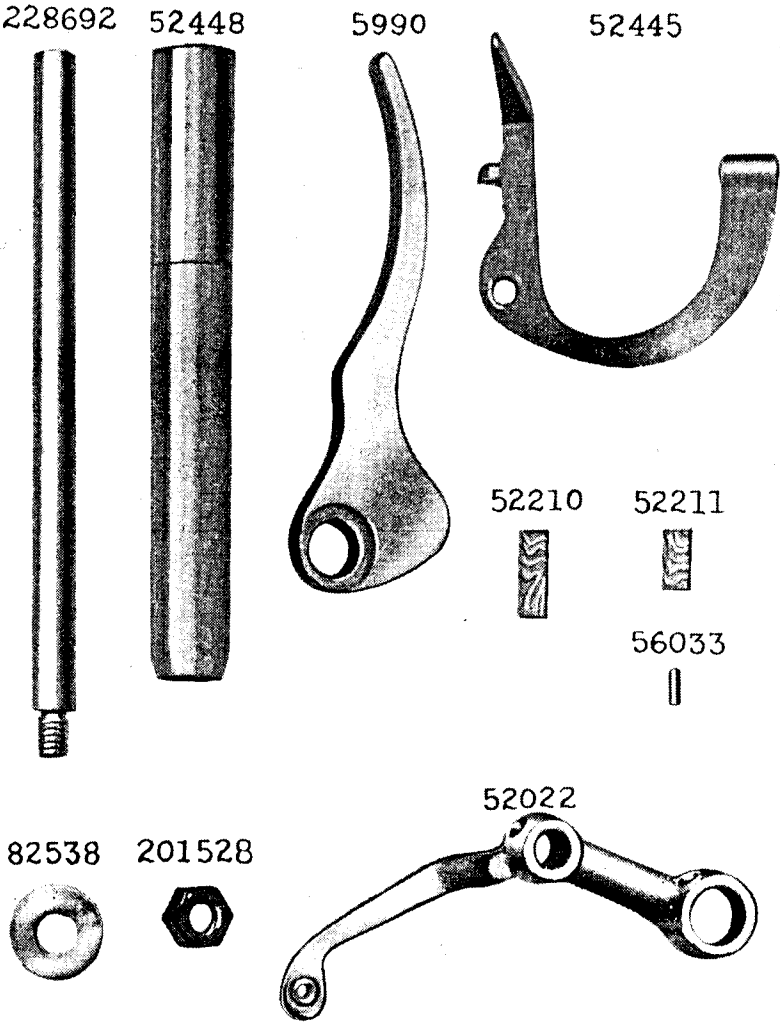


20067

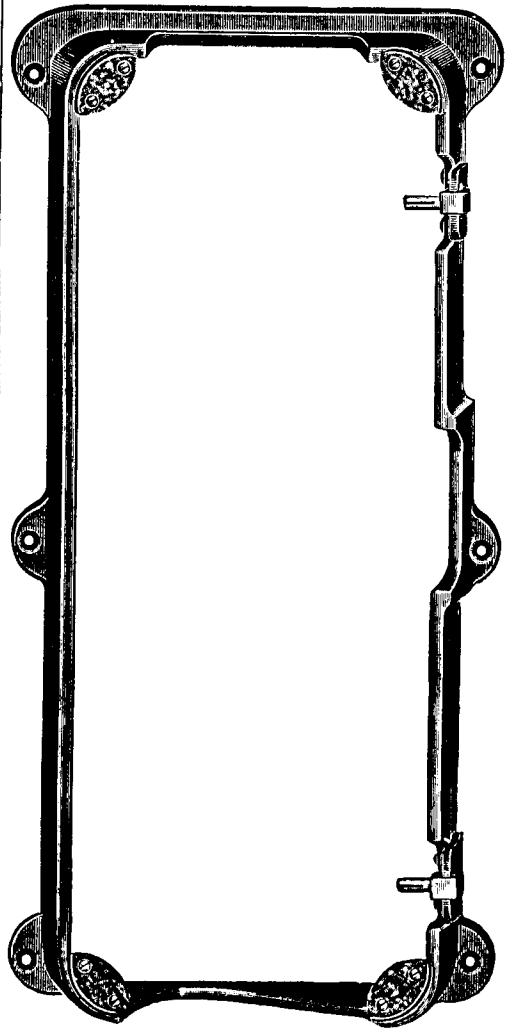


26603

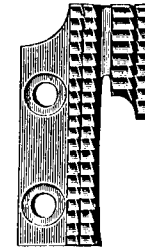


28360

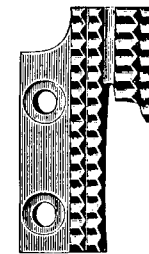


20356

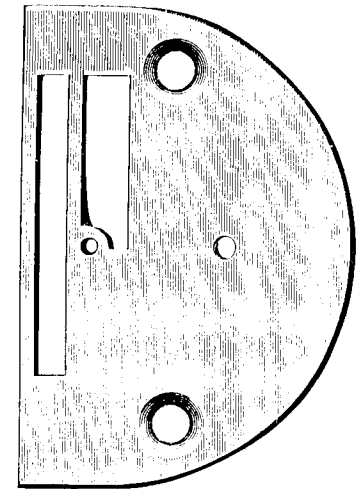


52427


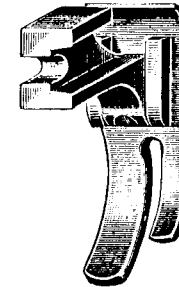




52401

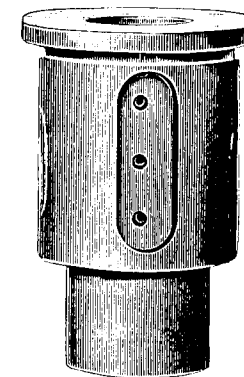

52404

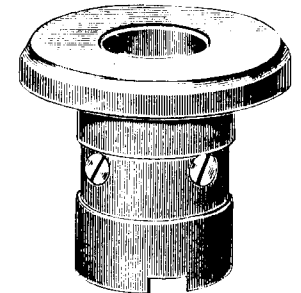


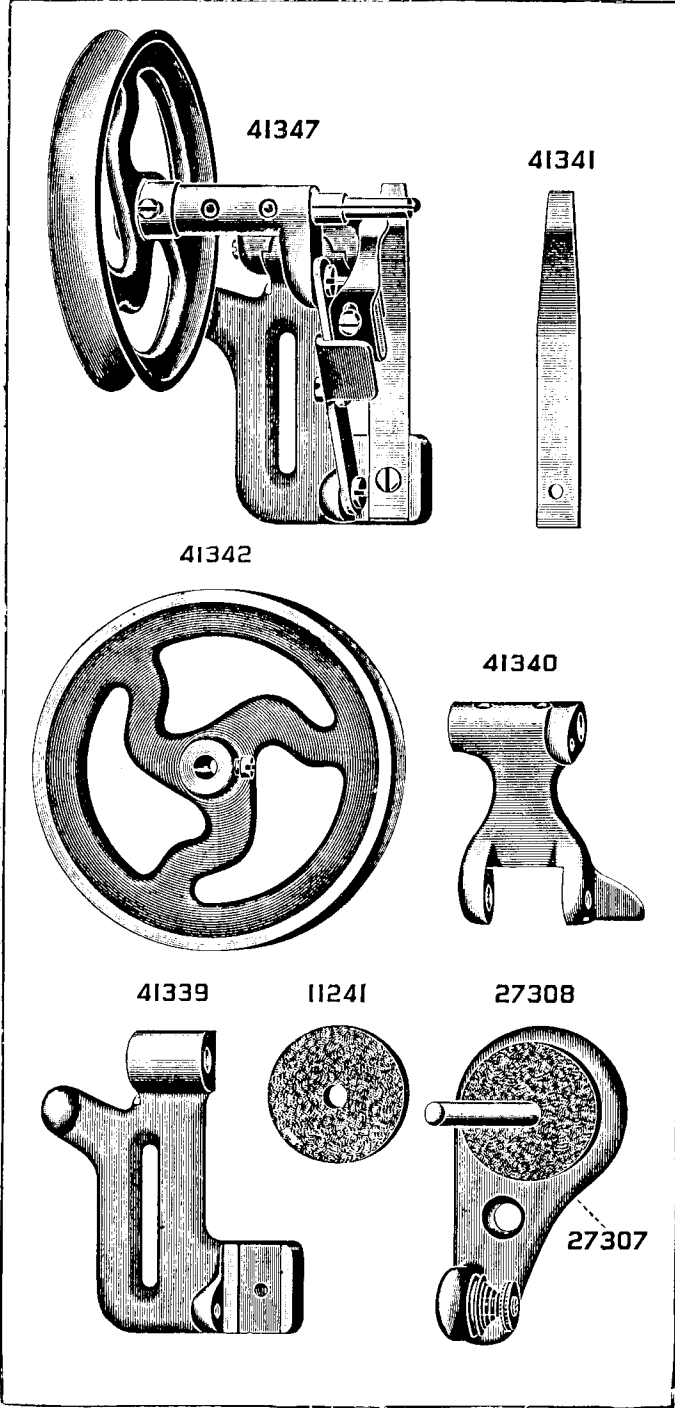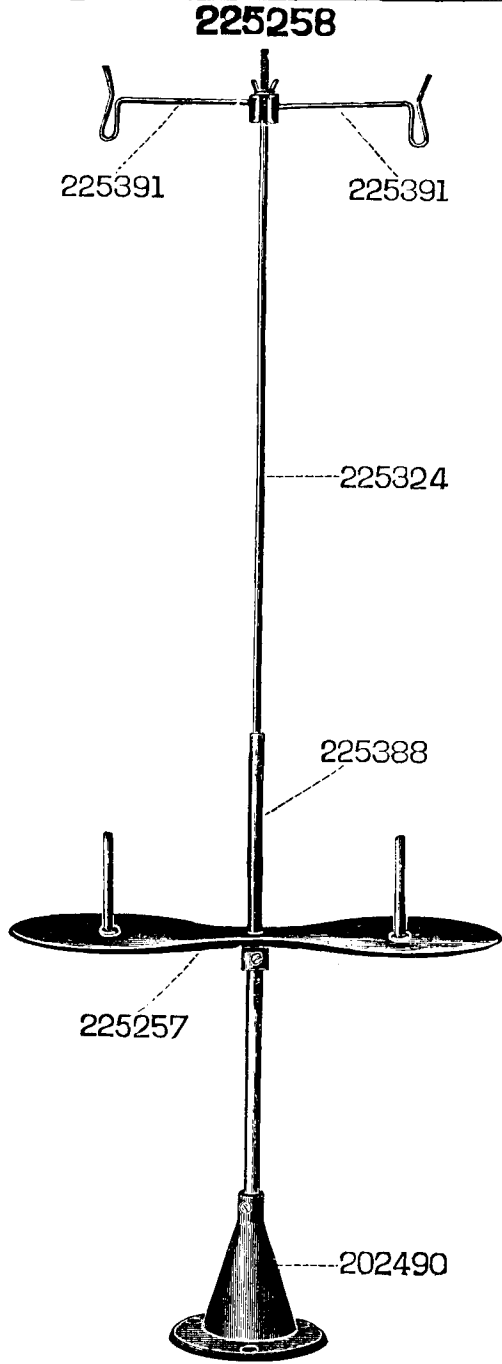

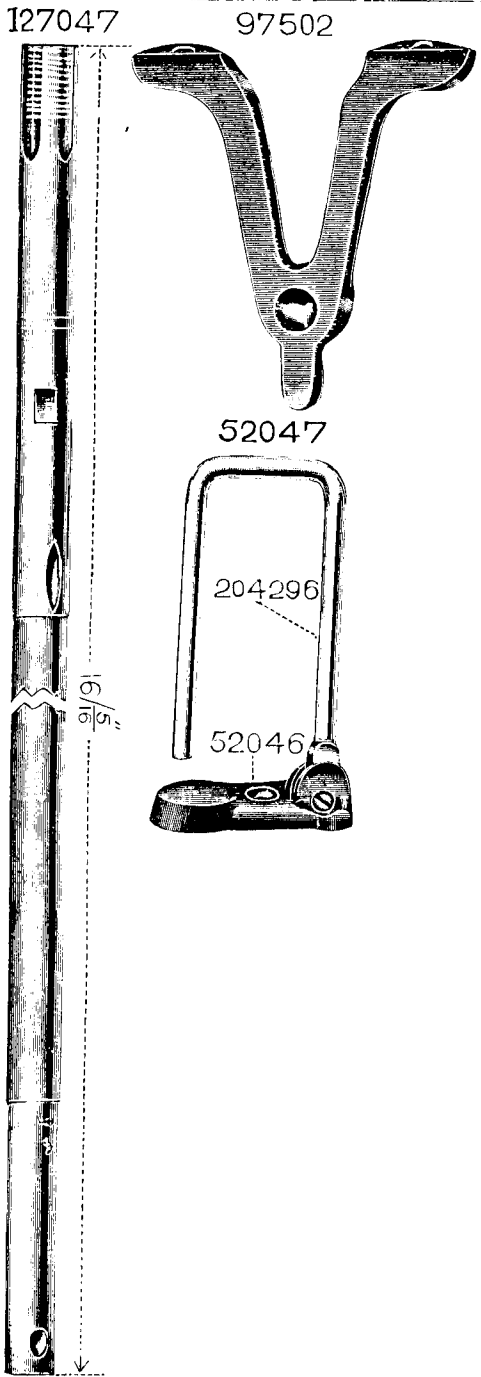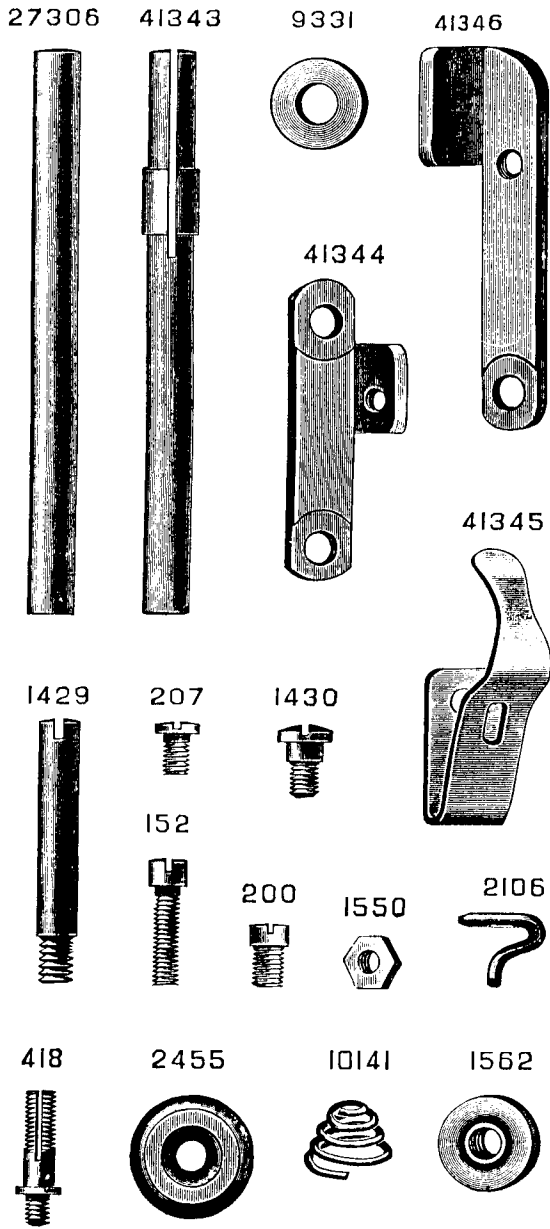

86546




86539

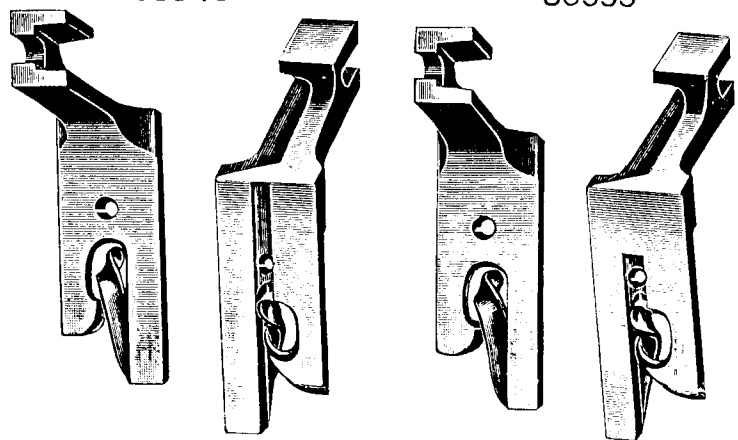

41587

60845

41585

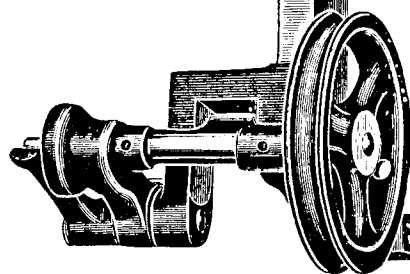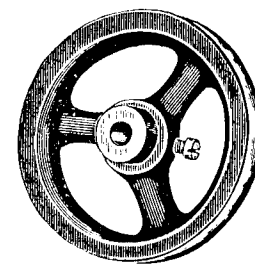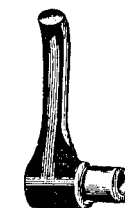


41588




41913

41586

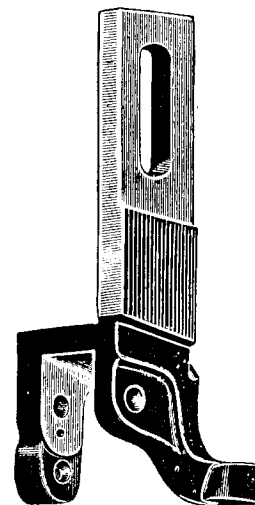

41583


41914


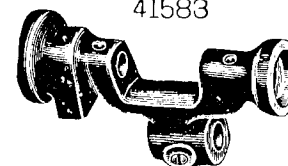




34105







42614





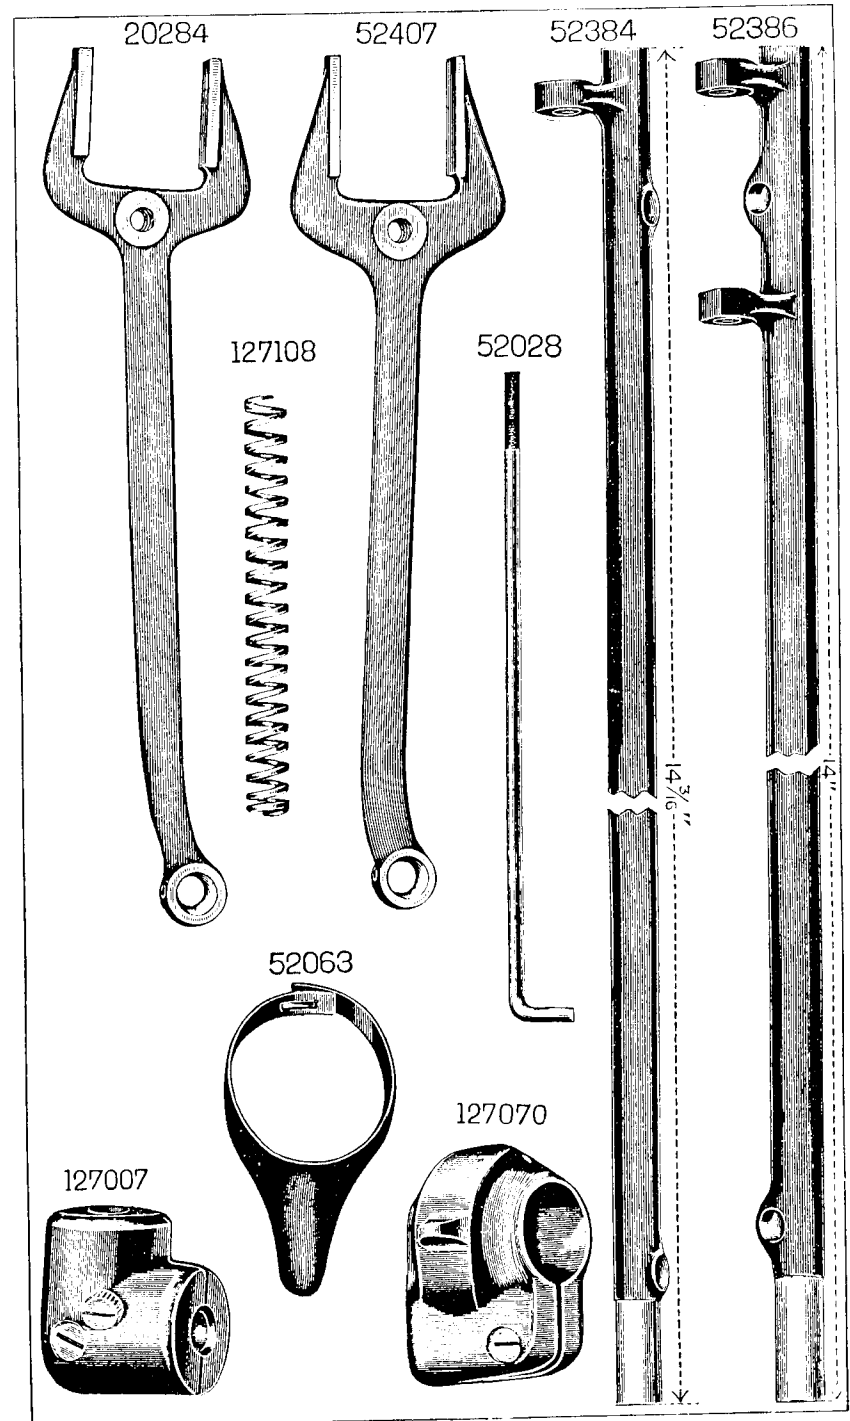
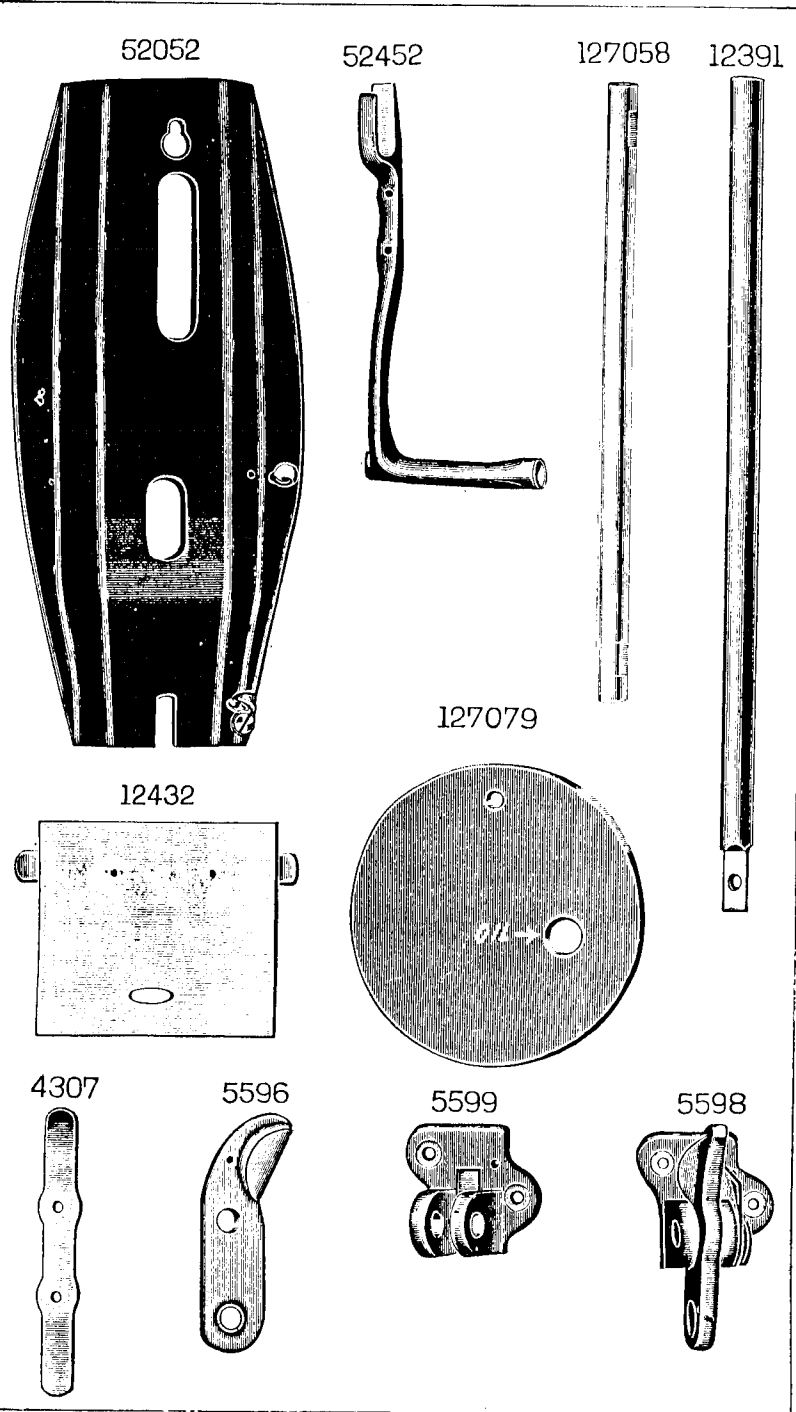


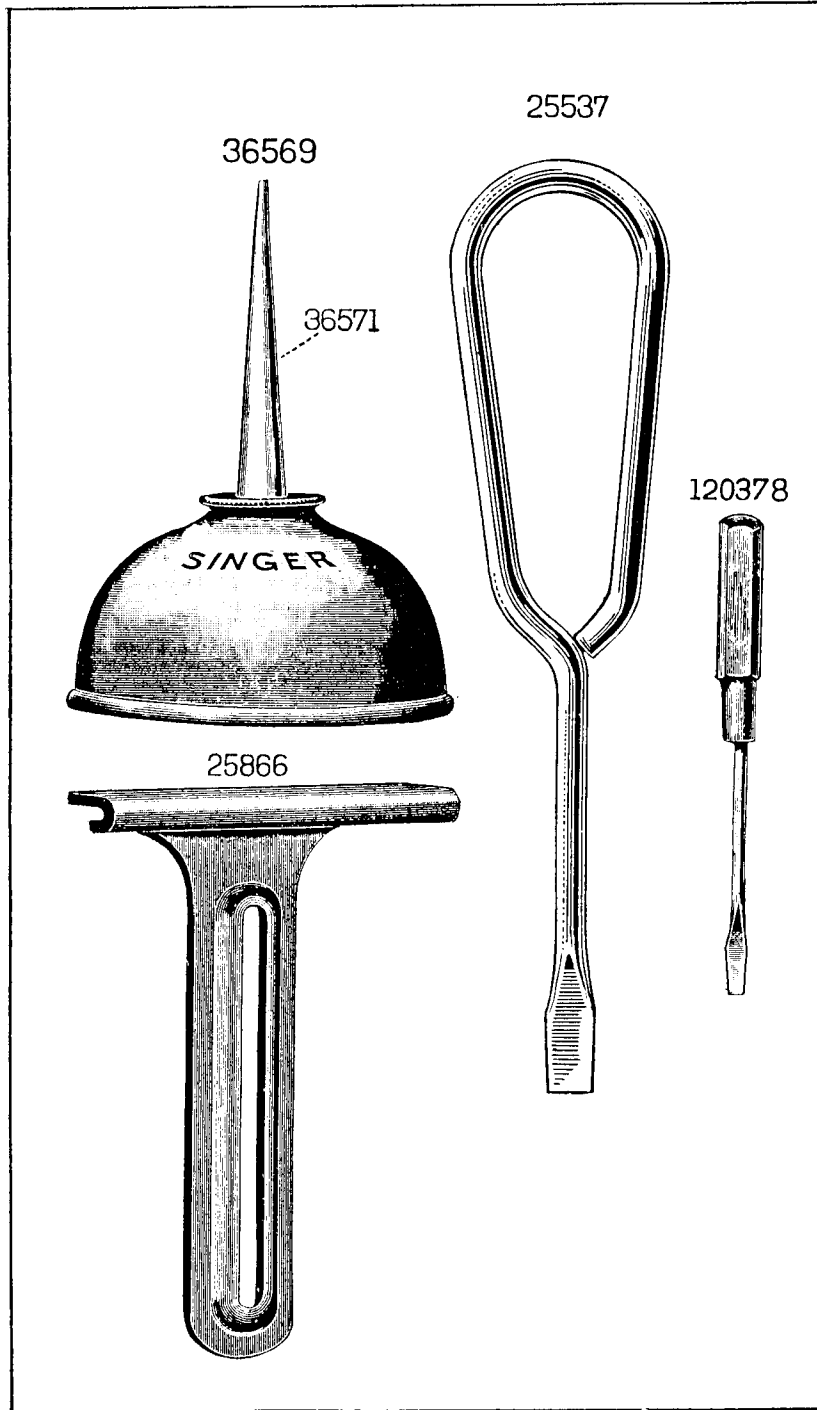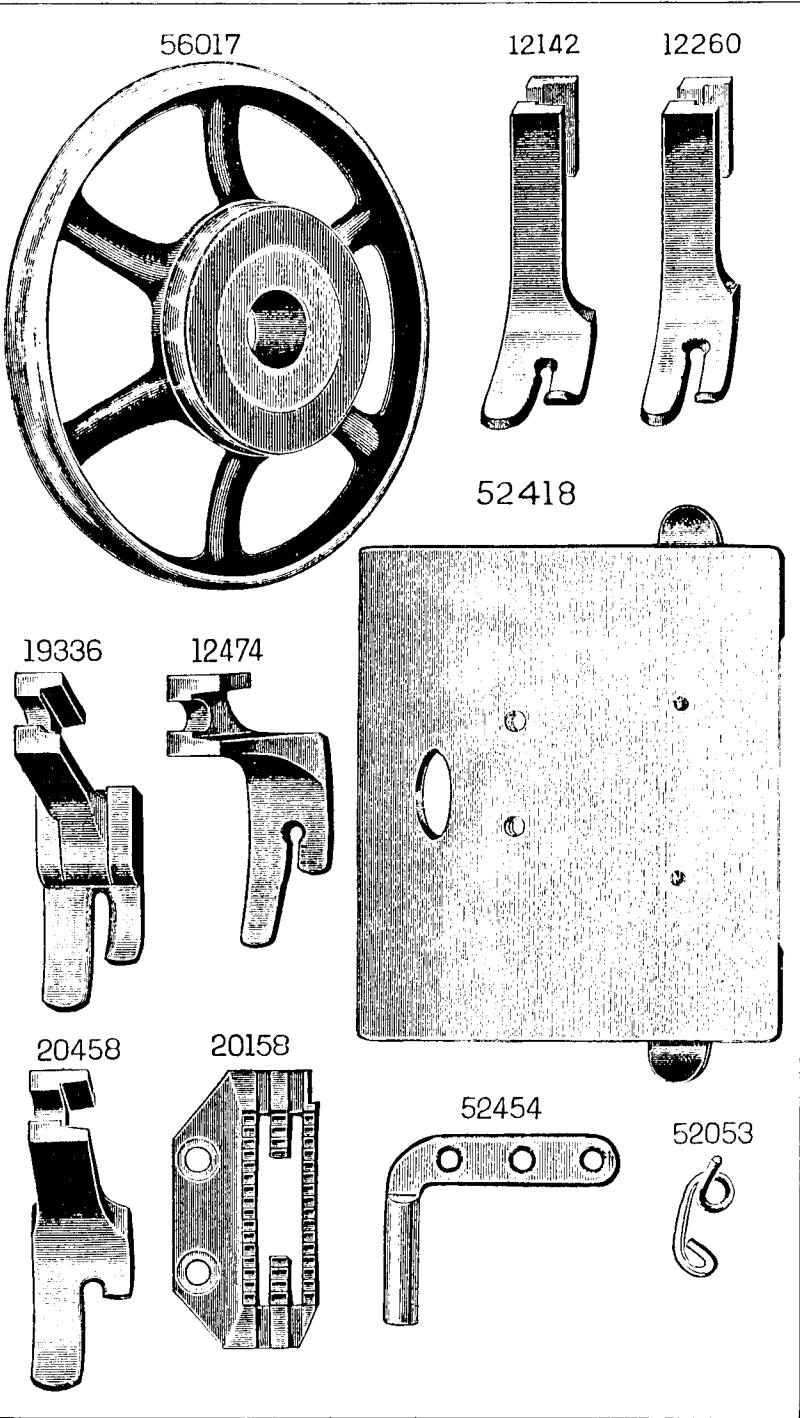

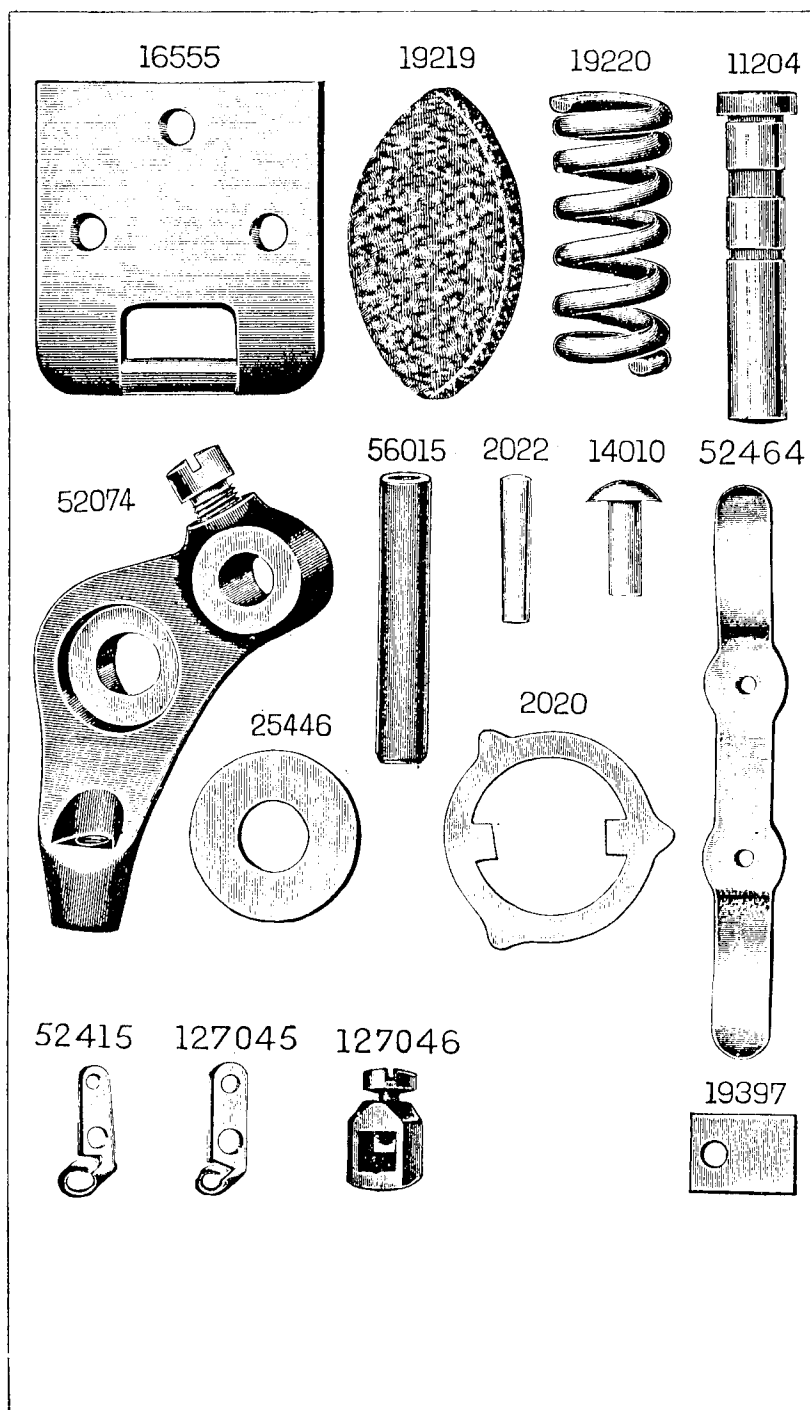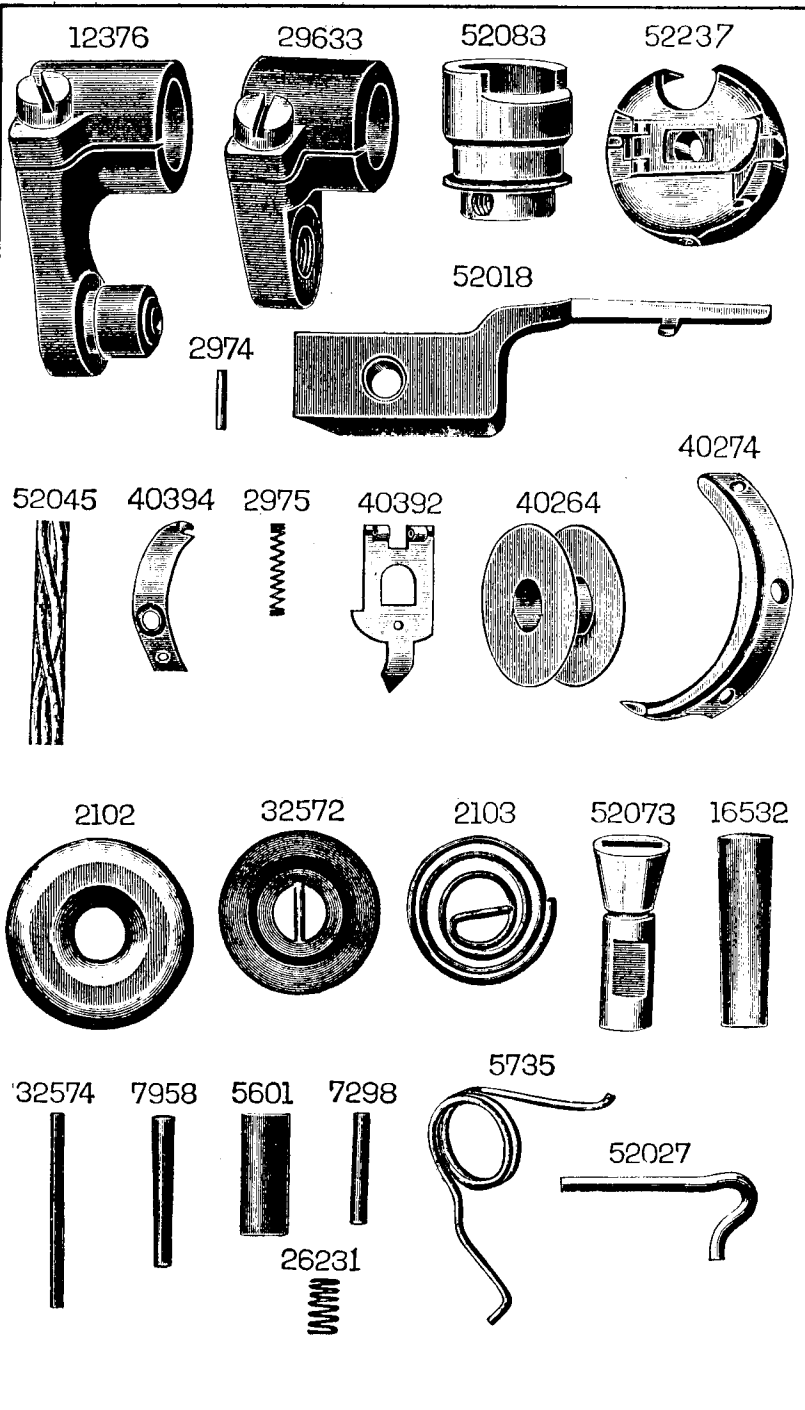

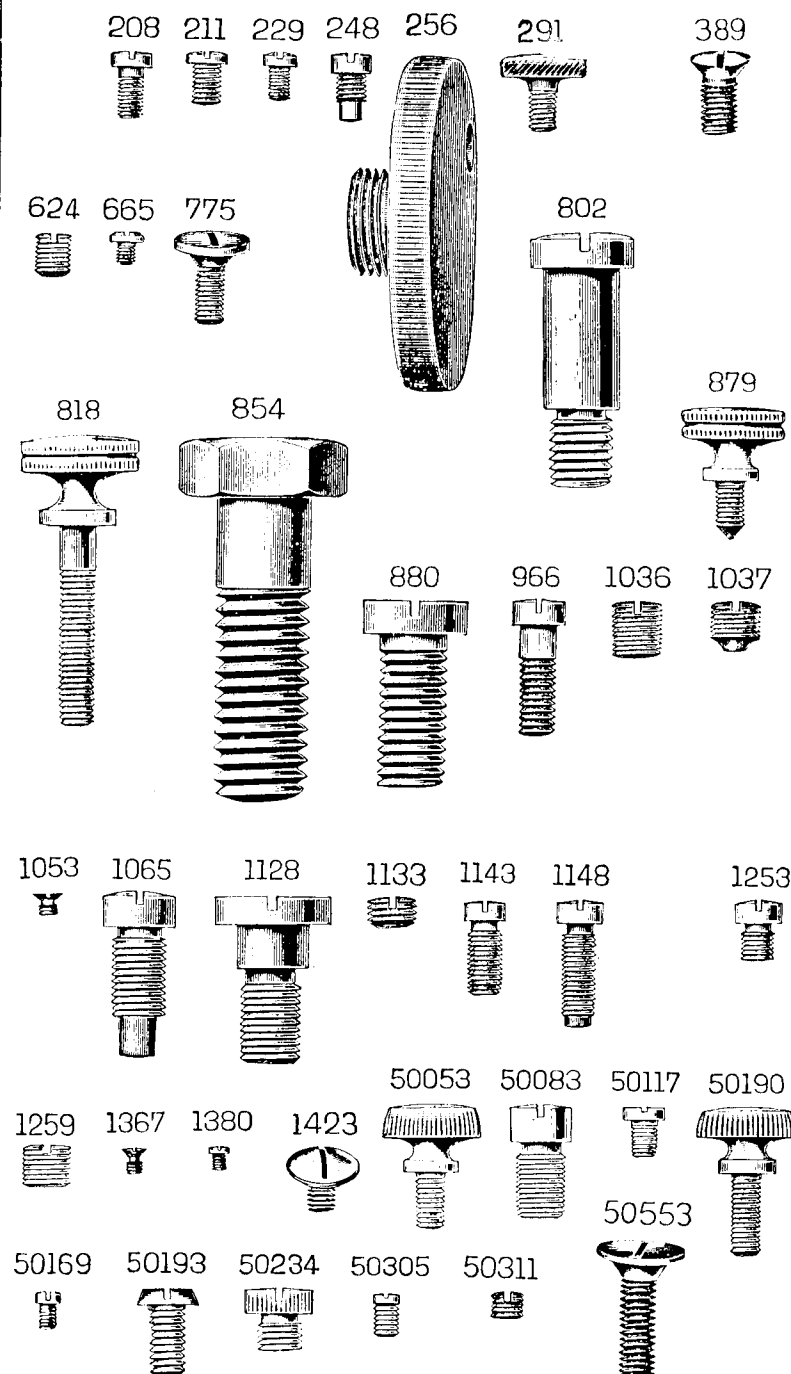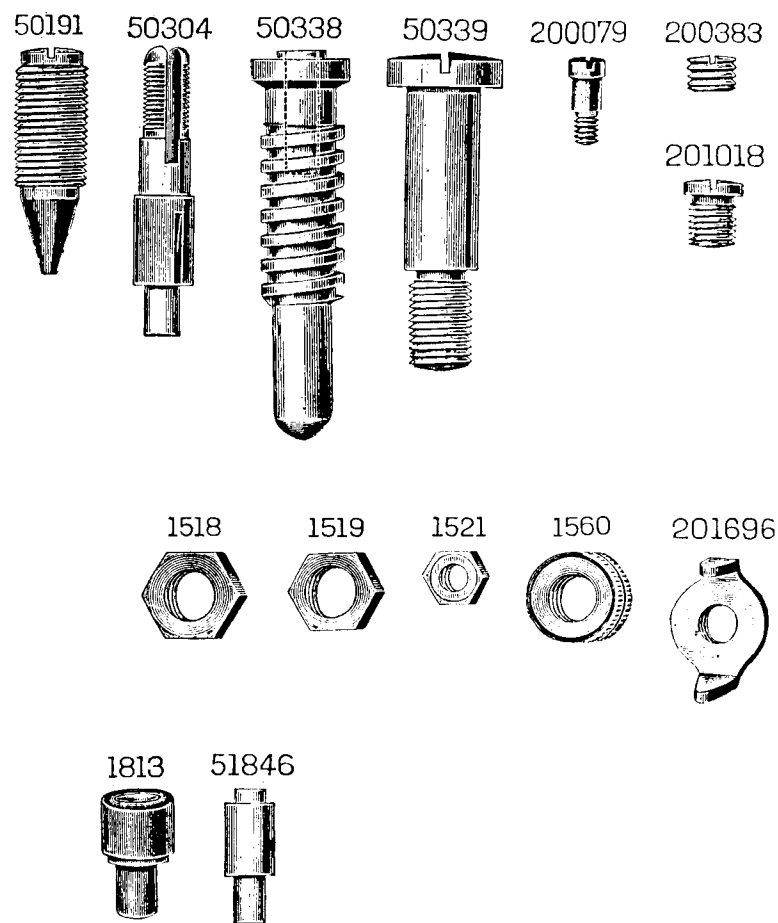


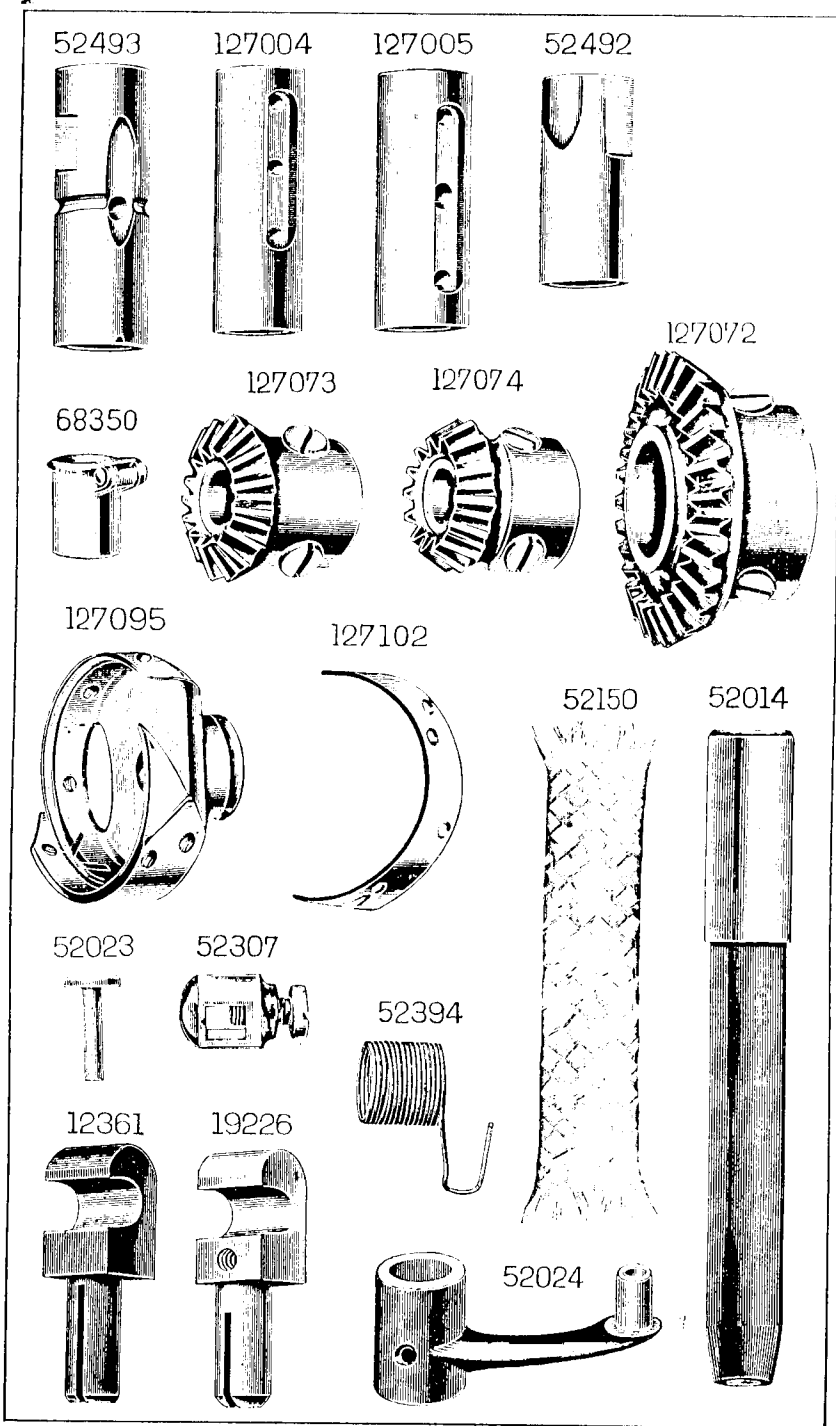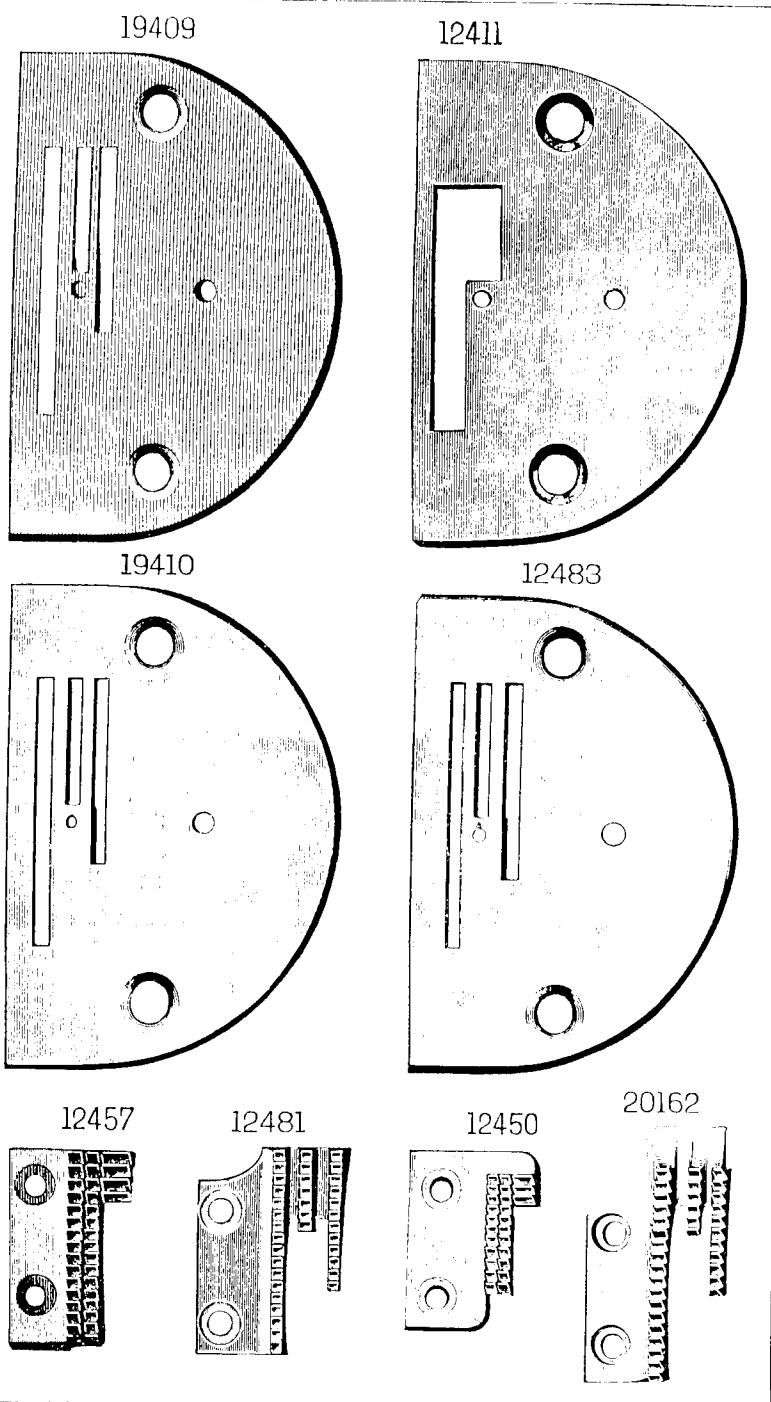

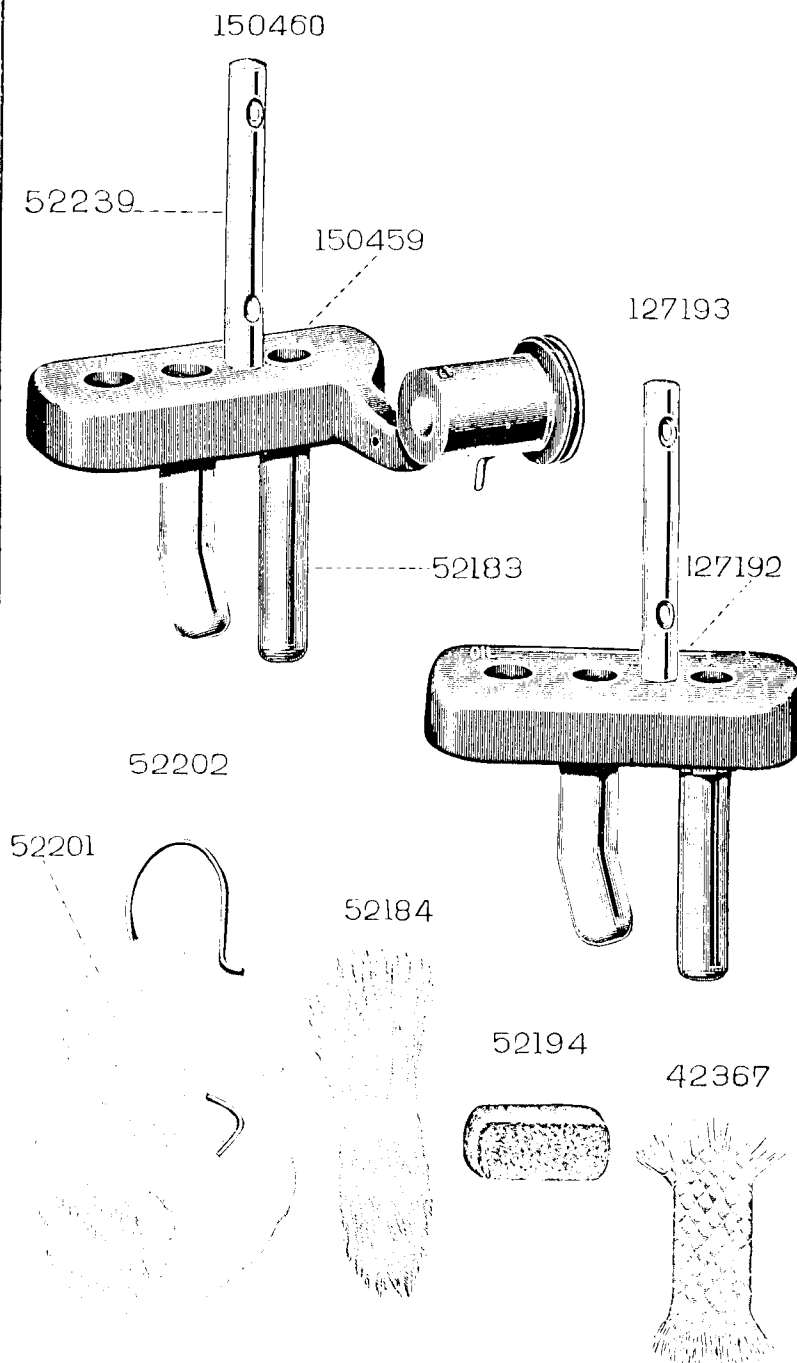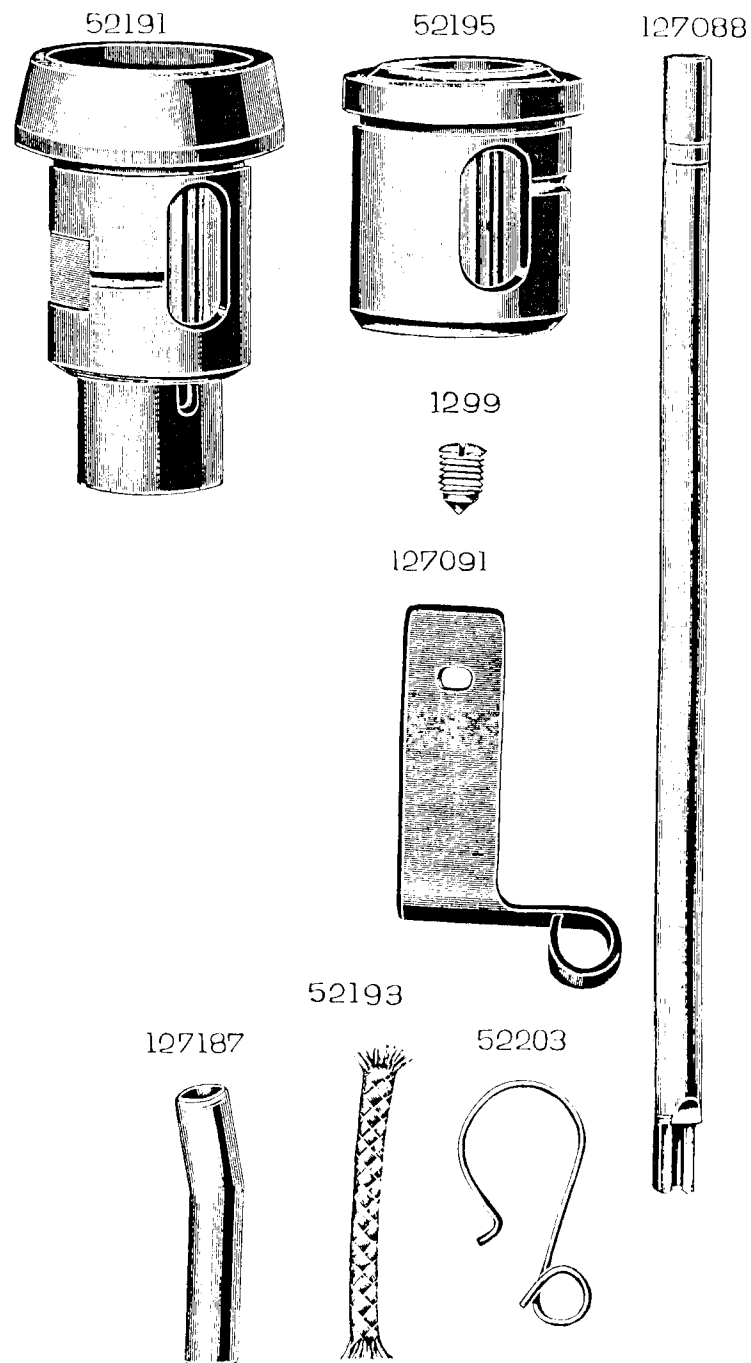


127059

127156


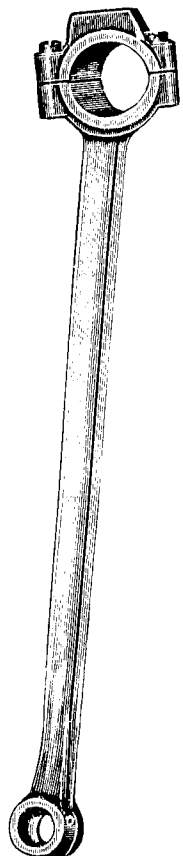


52187

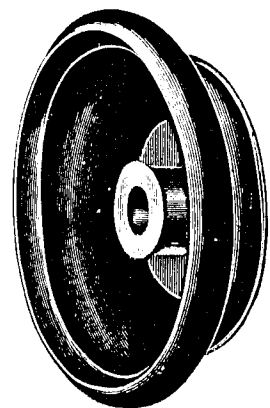



127146

127152

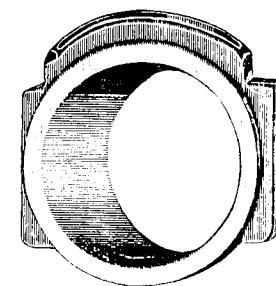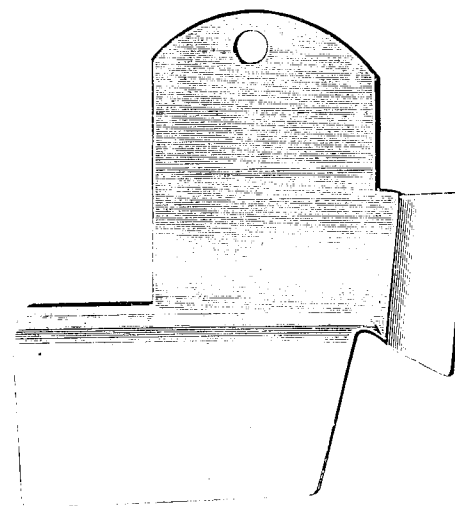

52205

52165

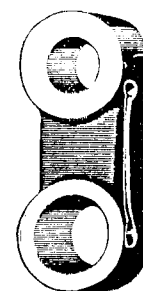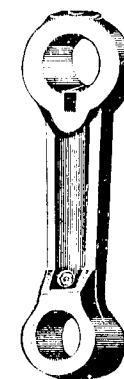

52185




52180



52182





24041

125320



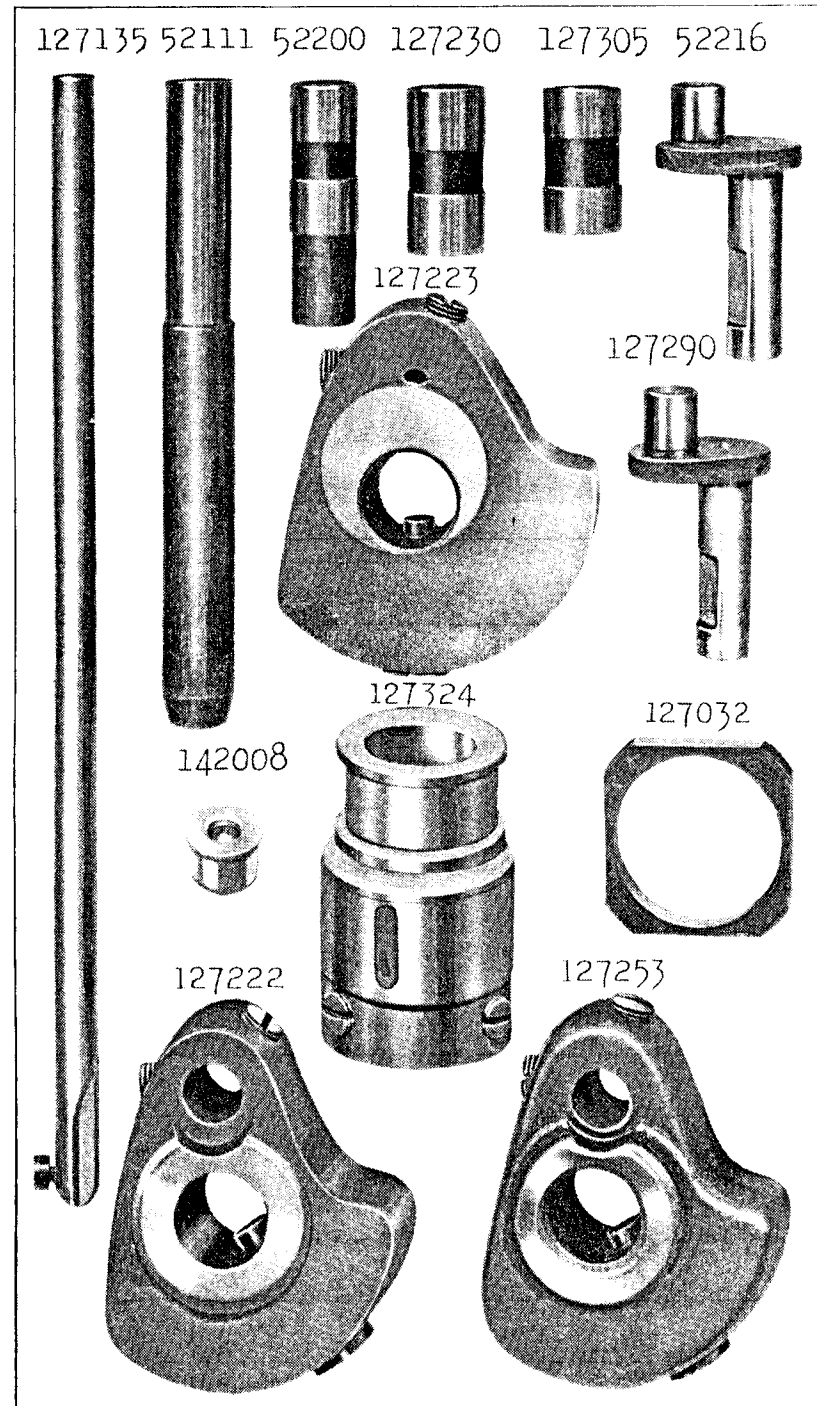
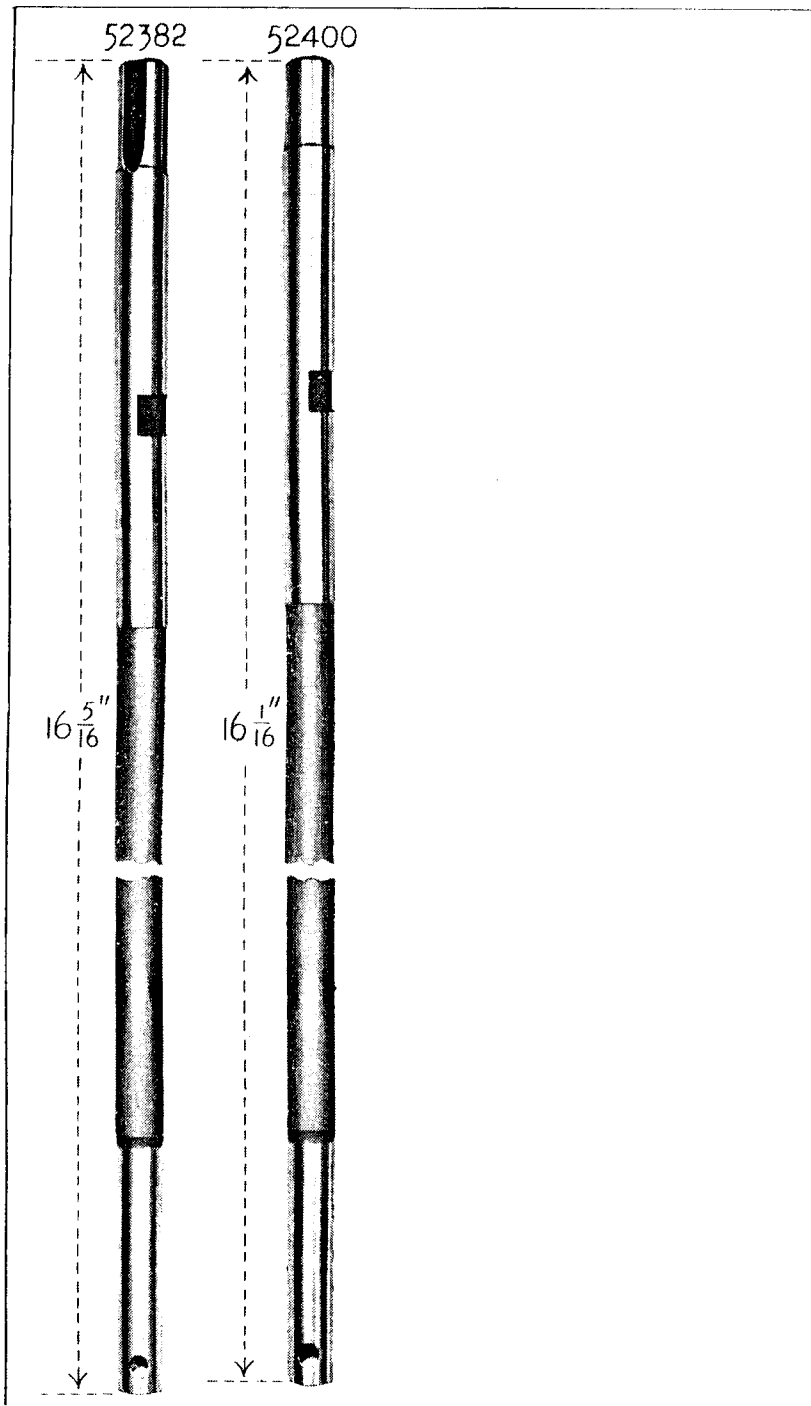


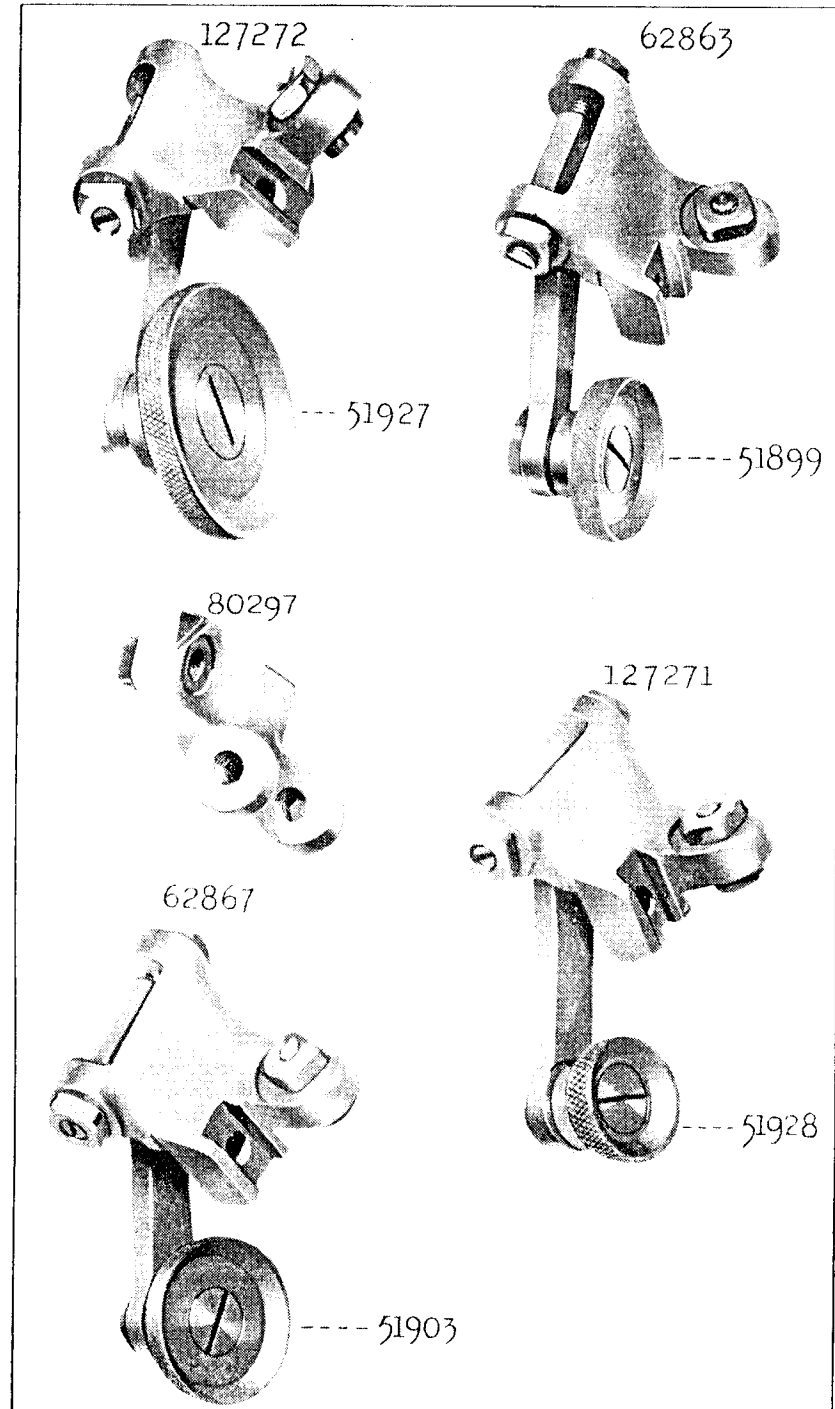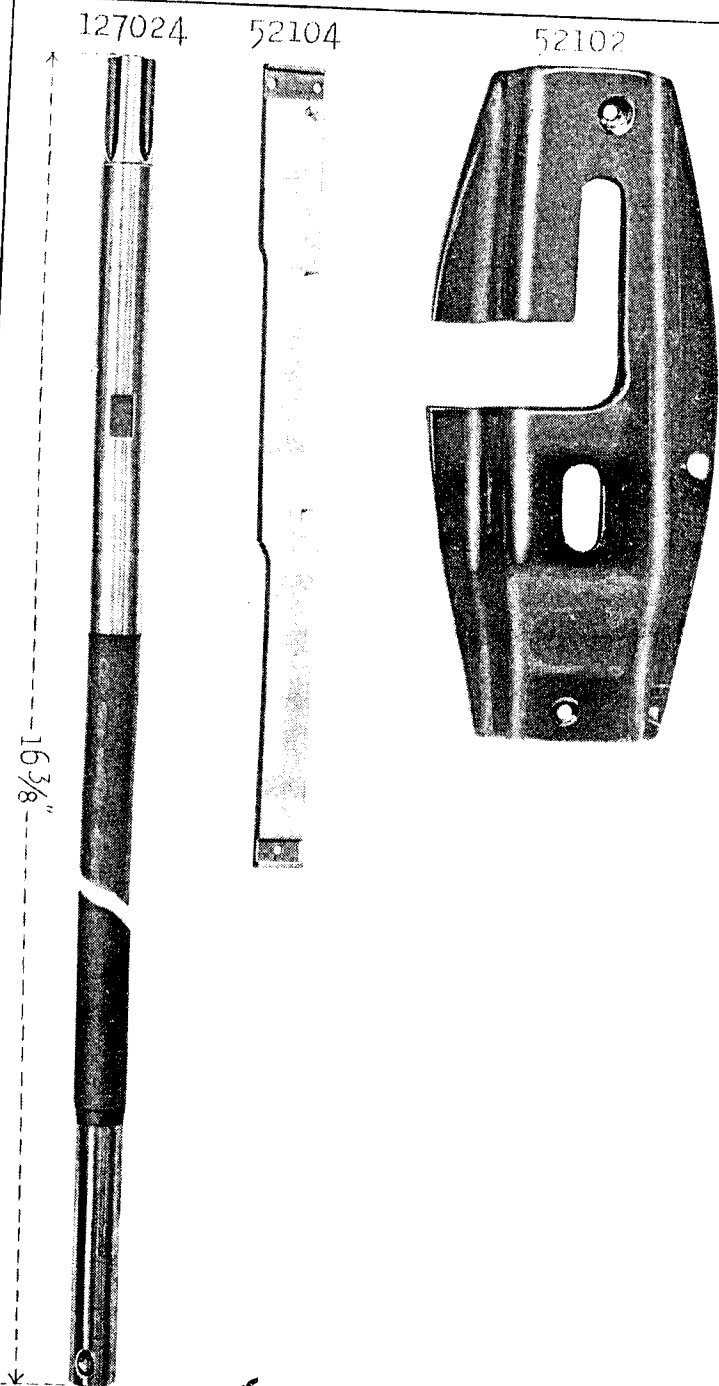

142032

52131



127040

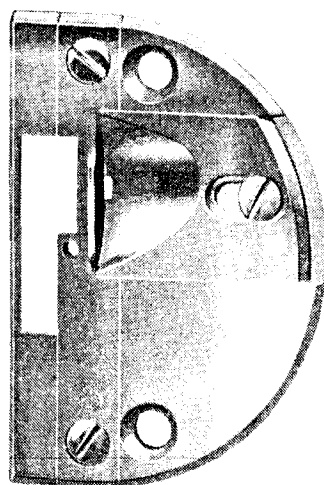

127034

127033

127036


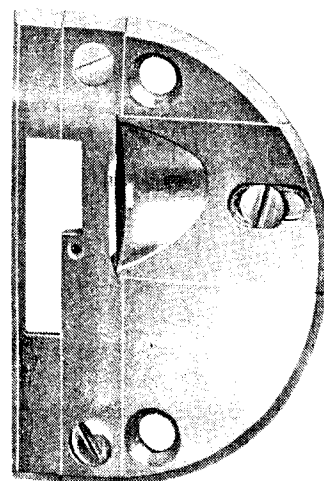
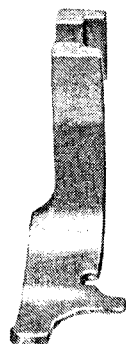


121446

127025

127035


578

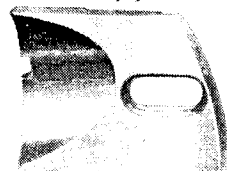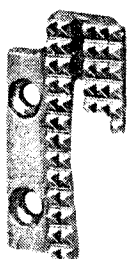

127028

16564

24122



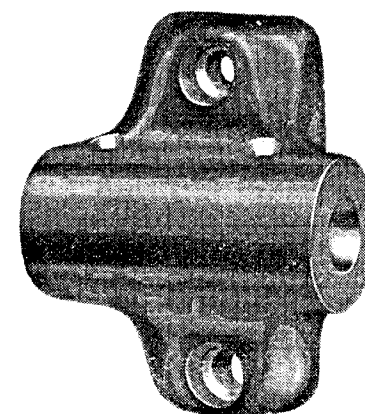


24431

24123

52108

24109 127026

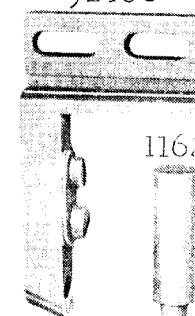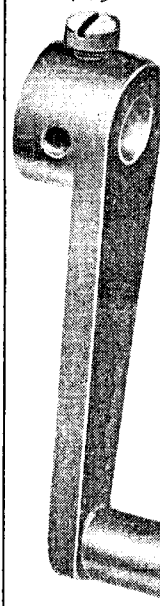

647

127027





1162



2291

24906


1564 2301 2523 621 620 2297



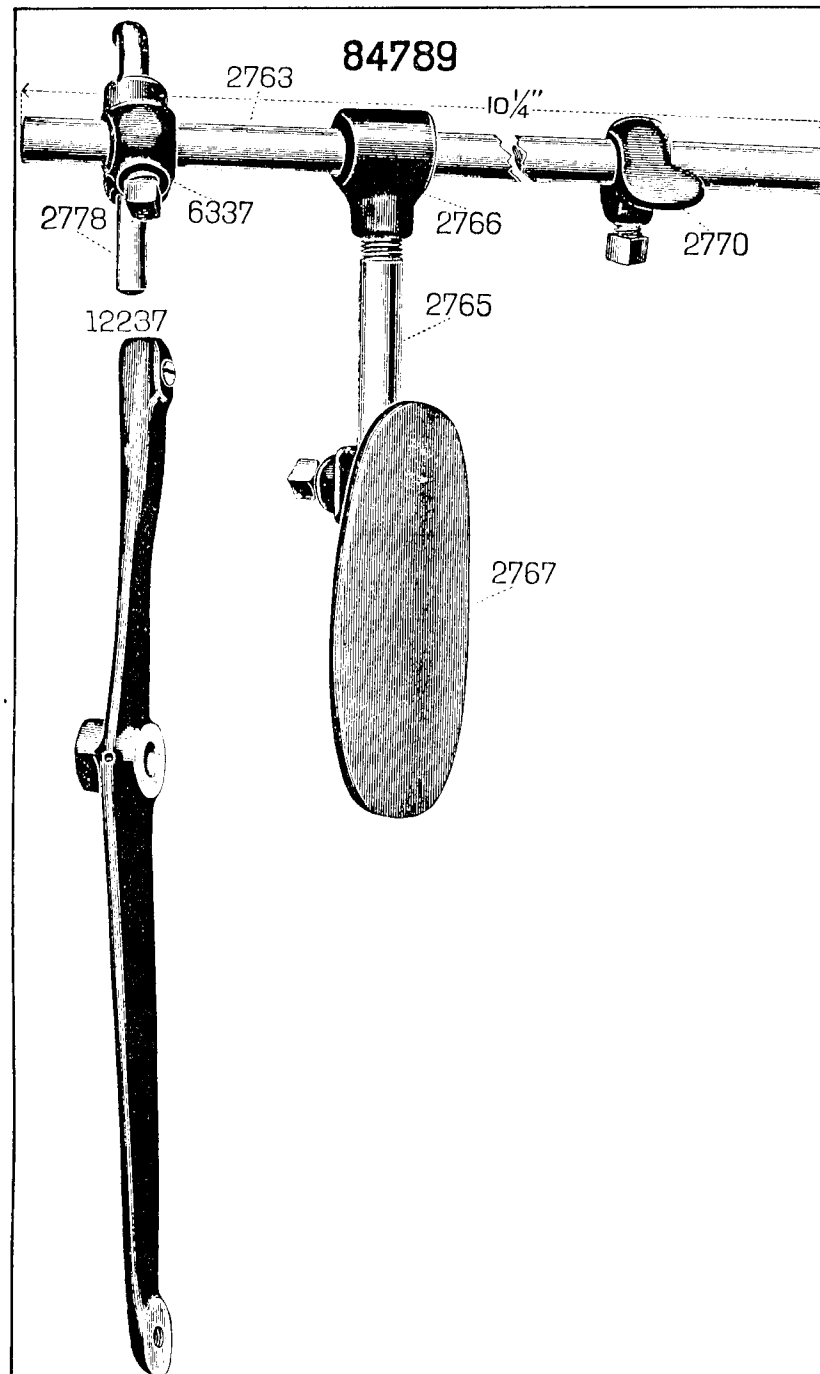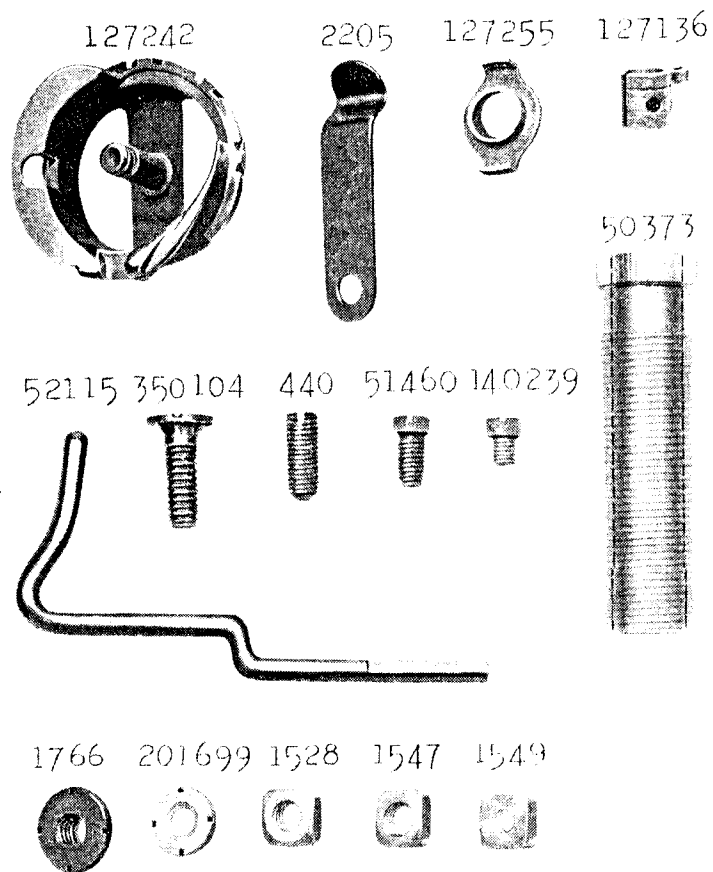


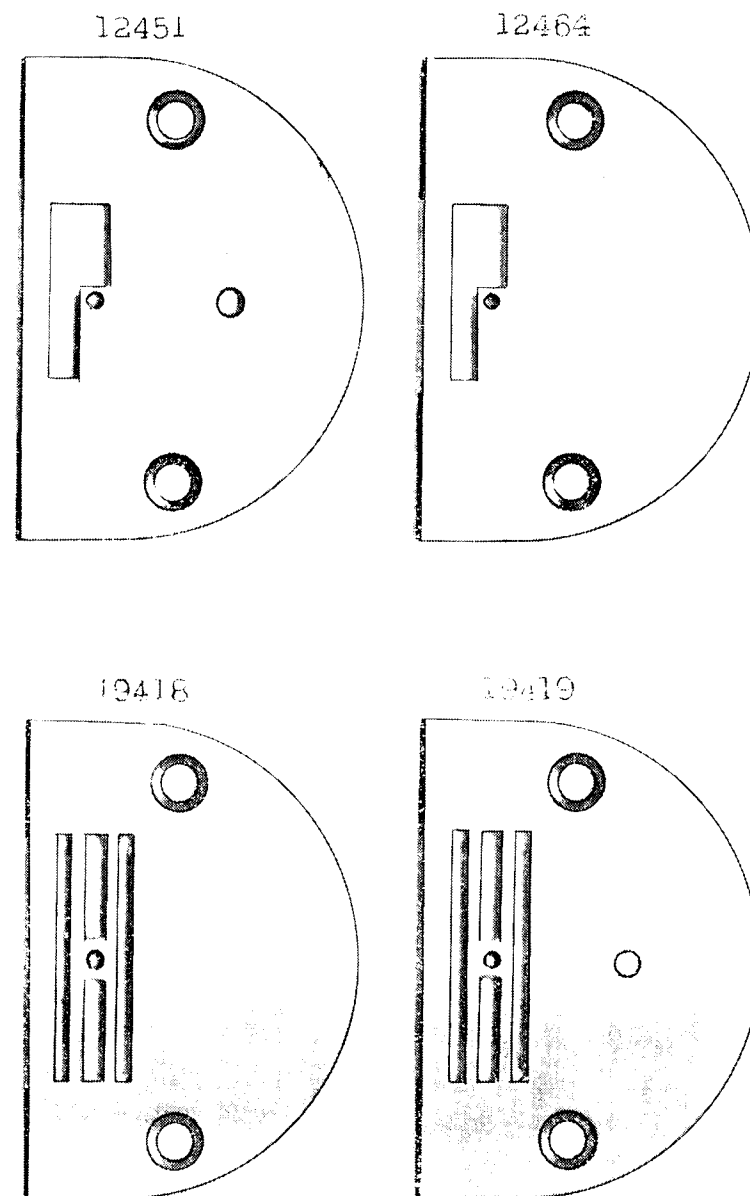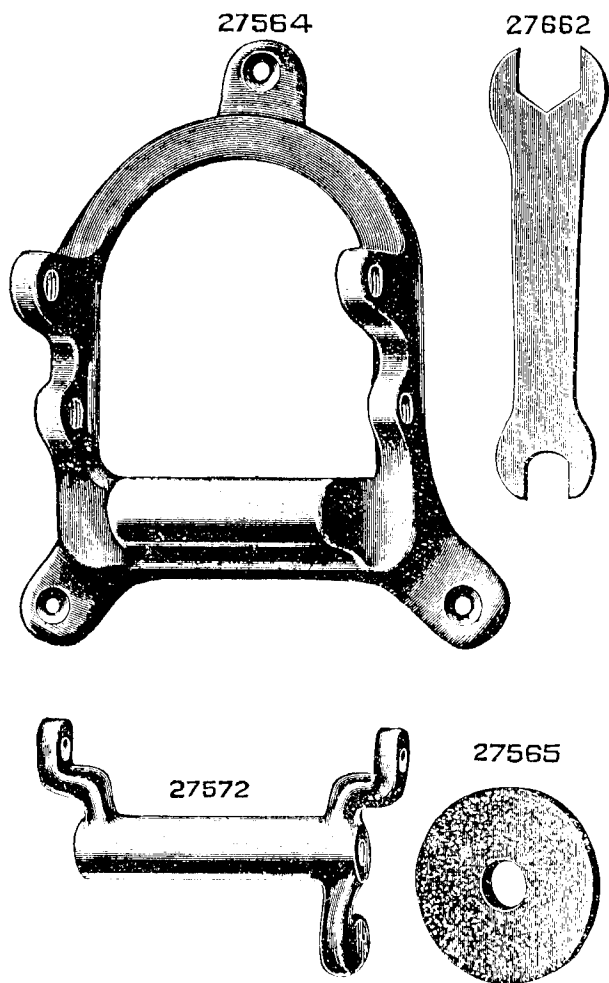


88621 106058 88622 SS648 52171



142069

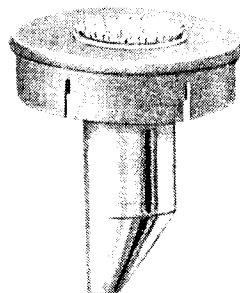

86193

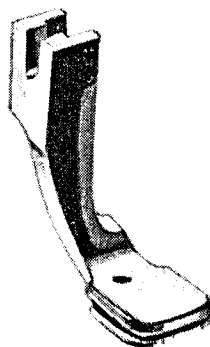

20340 12415 139623 16586 62920



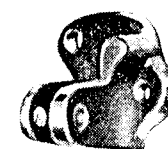


PLATE 7699—FULL SIZE

24443

12436

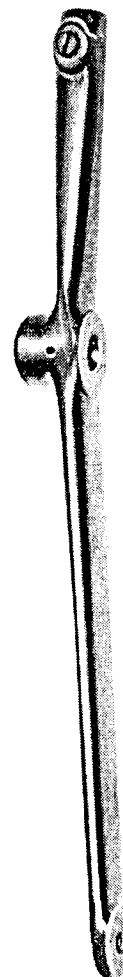

12435

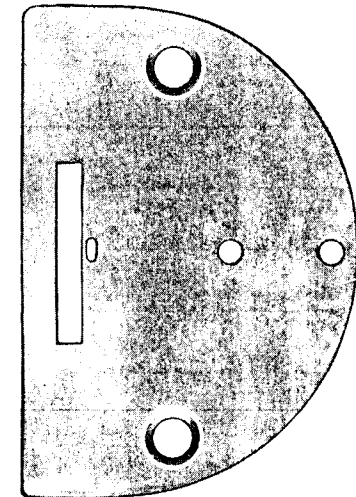
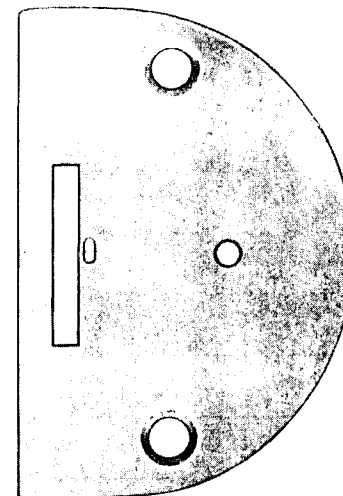


PLATE 7703—FULL SIZE

120063


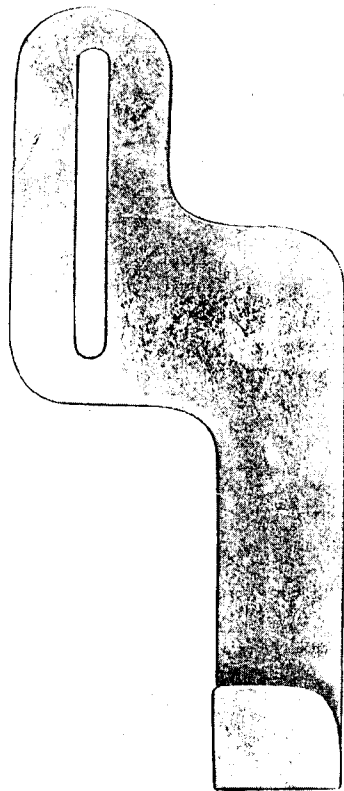


PLATE 7704—FULL SIZE

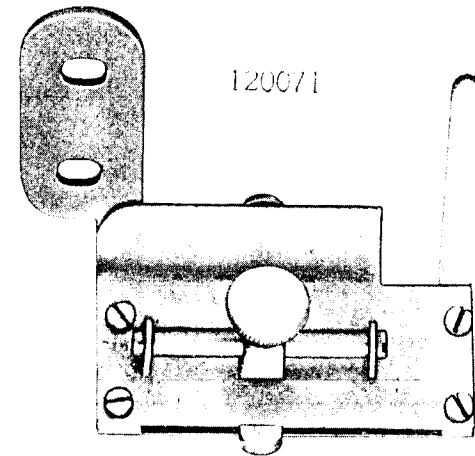


120071


120067

120068

120069

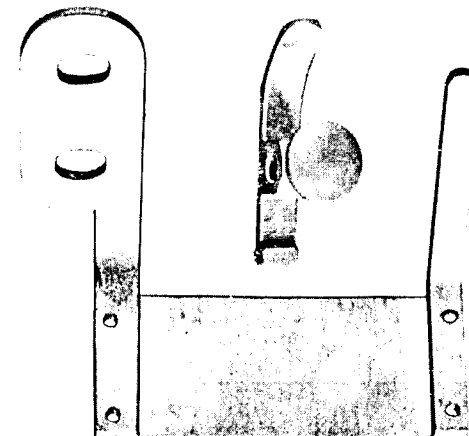

120070

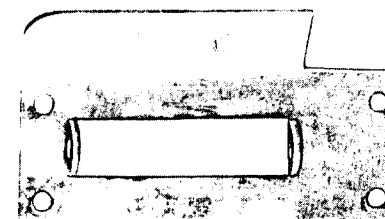

1423




50169



PLATE 7708—ONE-HALF SIZE


26063

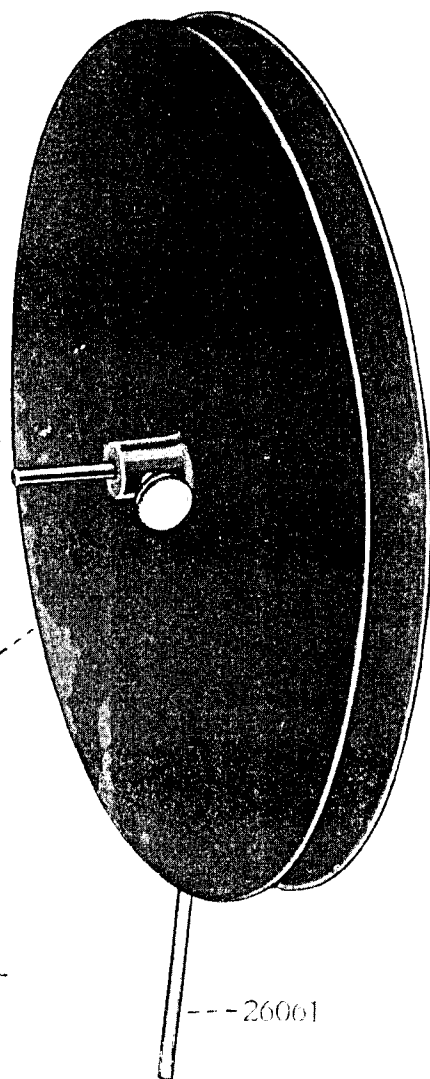

26062

---26061

225461

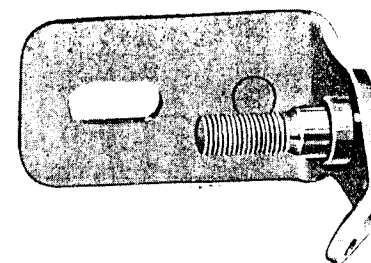


200082


202104



2102

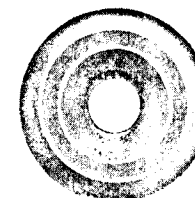

225462

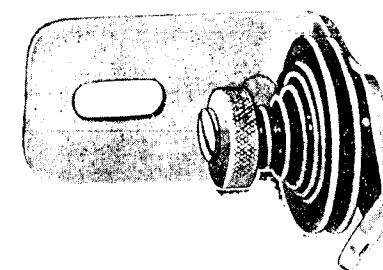

202407






201499



201572



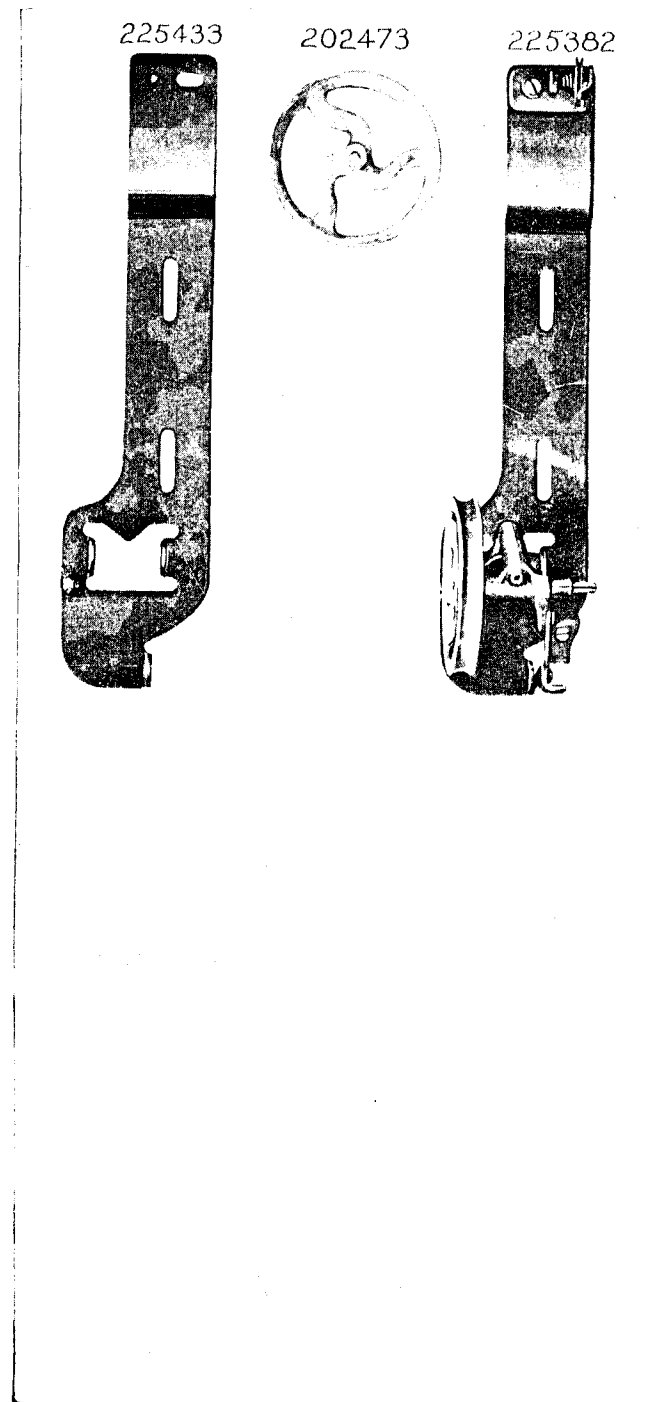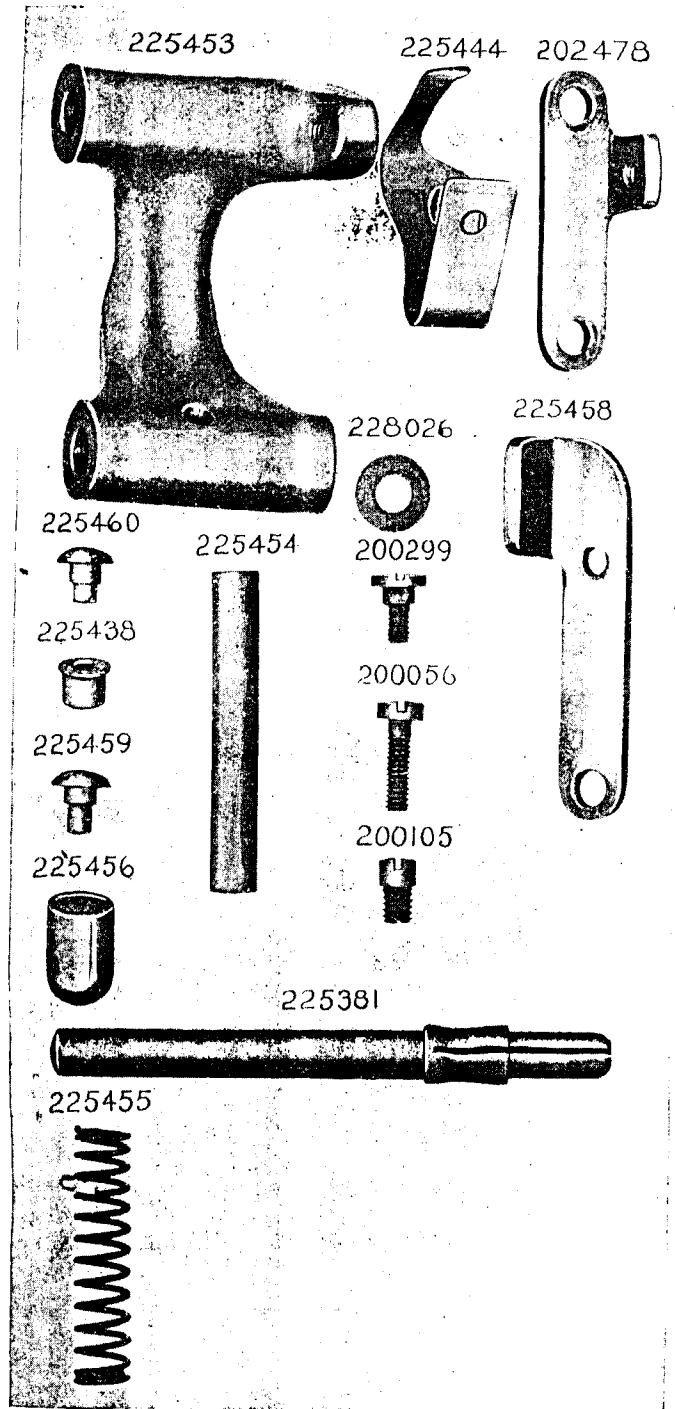

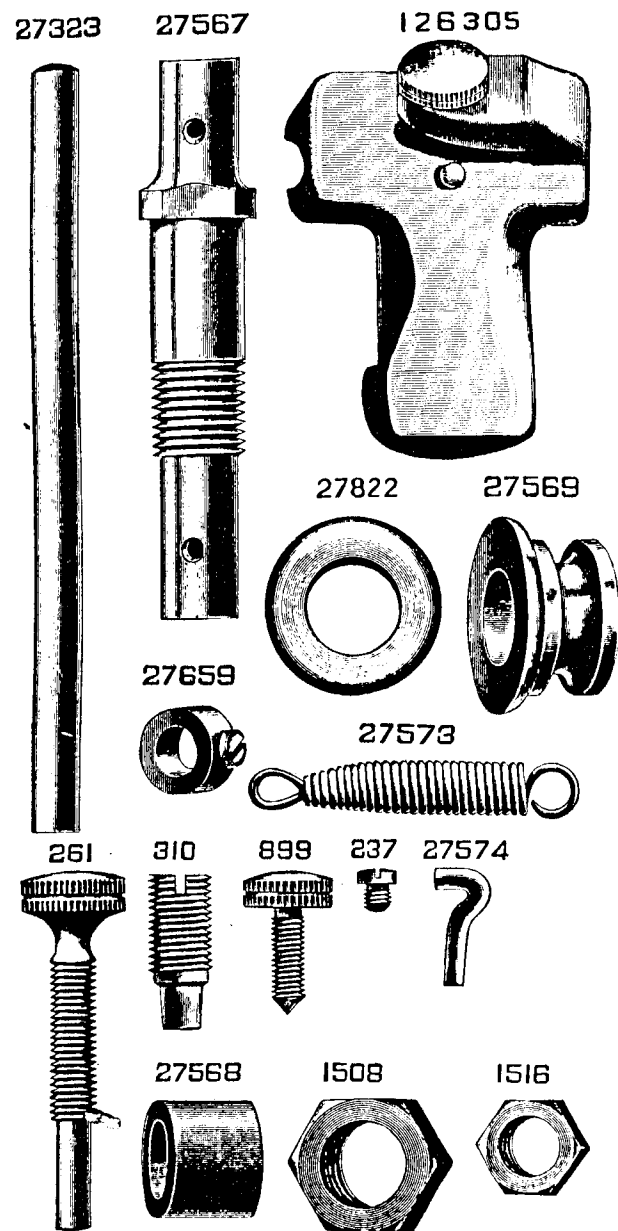

ILLUSTRATED LIST OF PARTS

FOR

Nos. 96K40 to 96K45,
96K49 and 96K51 MACHINES

CONTENTS

	Page
Parts, complete, for 96K40 Machine (obsolete)	73
" " " 96K41 " (")	81
" " " 96K42 "	89
" " " 96K43 "	97
" " " 96K44 "	105
" " " 96K45 "	113
" Special to 96K49 Machine	88
" " " 96K51 "	80
Accessories	125
Attachments	129
Bobbin Winders	126
Iron Base	125
Knee Lifter	137
Knife Grinder	139
Numerical List of Parts	141
Tape Holder	125
Thread Unwinder	140

INSTRUCTIONS FOR ORDERING

In ordering from this List, the prefix and affix letters with the part number **MUST BE** quoted exactly as they are shown in the first column.

A number always indicates the same part in whatever List it may appear, or for whatever machine.

The affix letters (where shown) indicate the style of finish, as follows :—

- A. Hardened, Polished, Nickel Plated and Buffed.
- A.A. Buffed and Chromium Plated.
- A.B. Hardened, Polished, Buffed and Chromium Plated.
- A.C. Brown Baking Enamel Finish.
- A.D. Grey Baking Enamel Finish.
- A.E. Hardened, Bright Rumbled and Nickel Plated.
- A.F. Hardened, Bright Rumbled and Nickel Plated, Bright Rumbled and Chromium Plated.
- A.J. Polished, Nickel Plated and Chromium Plated.
- A.K. Hardened, Polished, Nickel Plated and Chromium Plated.
- A.L. Heat Treated for Toughness.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- C.R. Hardened and Merlized.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- F.J. Hardened, Polished and Nickel Plated.
- G. Bright Rumbled and Nickel Plated.
- H. Blued.
- J. Nickel Plated only.
- K. Hardened and Nickel Plated.
- L. Brass Plated.
- M. Oxidized.
- N. Japanned, Dull.
- P. Japanned, Bright.
- P.P. Wrinkle Finish.
- R. Merlized.
- S. Cadmium Plated.
- T. Copper Plated.
- T.A. Hardened, Polished, Copper and Nickel Plated and Buffed.
- T.B. Copper and Nickel Plated and Polished.
- T.J. Copper and Nickel Plated only.
- T.K. Hardened, Copper and Nickel Plated.
- T.L. Copper and Brass Plated.
- T.M. Copper Plated and Oxidized.
- U. Zinc Plated.
- V. Silver Plated.
- W. Polished and Nickel Plated.
- X. Black Oxide for Iron and Steel.
- X.C. Hardened and Black Oxide for Iron and Steel.
- Y. Black Nickel Plated only.
- Z. Chromium Plated.
- Z.A. Hardened, Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.B. Polished, Nickel Plated, Buffed and Chromium Plated.
- Z.C. Hardened and Chromium Plated.
- Z.D. Polished and Chromium Plated.
- Z.G. Bright Rumbled, Nickel Plated, Bright Rumbled and Chromium Plated.
- Z.J. Nickel and Chromium Plated.
- Z.T. Copper and Chromium Plated.

Parts marked with an asterisk (*) are furnished only when the repairs are made at Factory.

PARTS COMPLETE

FOR

No. 96K40 MACHINE (obsolete)

For Cloaks, Clothing and other work in Cloth. Maximum Stitch 5 to the inch Drop Feed. Knee Lifter.

No.	Plate	
*127328	—	Arm with two 50015

NOTE:— Due to the accuracy required for gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

16532	2032	Arm Dowel Pin (2)
52182	2066	" Oil Tube with 52184, for oiling 52205
52183	2064	" " " " 52184, " " 52024
52180	2066	" " " (long) with 52184, for oiling 52022
52185	2066	" " " (short) " 42367, " " 52022
142087	—	" " " with Hole Cover and Holder
142069	2545	" " " 142087 with 52150, for oiling 127072 and 127074
50015	2033	" " " for oiling 127058 (2)
52150	2039	" " " Packing (braided cotton) for 142069
42367	2064	" " " " (" ") " 52185
52184	2064	" " " " (cotton wick) for 52180, 52182, 52183, and 127191
116e	1324	" Screw (back) (2)
854e	2035	" " (front) (2)
127047	1815	Arm Shaft (horizontal)
88615	—	" " (") 127047 with 127253
127072	2039	" " (") Bevel Gear with two 1036e
127070	2029	" " (") " " Case (two pieces) with 121e
121e	1324	" " (") " " " Screw
1036e	2035	" " (") " " Set Screw
52191	2040	" " (") Flanged Bushing (back)
52192	—	" " (") " " (") 52191 with 52193 and 52194
52193	2040	" " (") " " (") Oil Pad (braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
446c	1324	" " (") " " (") Set Screw
52195	2040	" " (") " " (front)
52196	—	" " (") " " (") 52195 with 52193 and 52194

No.	Plate	
52194	2064	Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (felt)
52193	2040	" " (") " " (") " "
		(braided cotton)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bezring Oil Cup (spring lid) ...
144d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " (") Set Screw ...
52493	2039	" " (") " (upper) ...
435c	1324	" " (") " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " Screw ...
127079	2028	" " Cover ...
50053d	2035	" " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " Washer (cloth) ...
127192	2064	Arm Top Cover ...
127193	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton) ...
127255	2378	" " " Positioning Disc ...
158j	1324	" " " Screw ...
150459	2064	" " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2046	" " " " " Packing (braided cotton) ...
158j	1324	" " " " " Screw ...
52239	2064	" " " " " Spool Pin ...
8879	1316	" " " " " Washer (cloth) ...
2455	1688	" " " " " Disc ...
41593	1316	" " " " " Spring ...
41594	1316	" " " " " Stud ...
460c	1324	" " " " " Set Screw ...
41595	1316	" " " " " Thread Guide ...

No.	Plate	
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455
NOTE.—No. 150460 is supplied with this machine unless No. 427493 is specified on order.		
142033	127193	150460
52487	2065	Balance Wheel (power, disc), 2 $\frac{3}{16}$ " pulley, with two 448c ...
52081	—	" " (stand, heavy rim) 2 $\frac{1}{16}$ " pulley, with two 448c ...
52063	2029	" " Oil Cover ...
2107	1324	" " " " Screw ...
448c	1324	" " Set Screw ...
NOTE.—No. 52487 is supplied with this machine unless otherwise specified on order.		
*52383	—	Bed ...
NOTE.—Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.		
12431	—	Bed Slide ...
12432	2028	" " complete, Nos. 4307, 12431 and two 725c ...
4307	2028	" " Spring ...
725c	1324	" " " Screw ...
52051	—	Face Plate ...
176d	559	" " Screw ...
52053	2030	" " Thread Guard (lower) ...
226d	1324	" " " " (") Screw ...
52170	—	" " " " (upper) ...
226d	1324	" " " " (") Screw ...
50190d	2035	" " Thumb Screw ...
52052	2028	Face Plate , complete, Nos. 52051, 52053, 52170 and two 226d ...
52452	2028	Feed Bar ...
313c	1324	" " Screw Centre (2) ...
1519c	2034	" " " " Nut (2) ...
52165	2066	" Connecting Link ...
375c	1324	" " " Hinge Screw ...
1518c	2034	" " " " " Nut ...
52073	2032	" " " " Stud ...
50083c	2035	" " " " Set Screw ...
44136	1510	Feed Dog for tailor work ...
12457	2036	" " " cloth, 16 teeth (16 teeth to the inch) ...
12450	2036	" " " " 11 " (18 " " " ") ...
20158	2030	" " " shirt work, 17 teeth (16 teeth to the inch) ...
20162	2036	" " " " " bevelled for hemmer, 17 teeth (16 teeth to the inch) ...
12481	2036	" " " general work, 18 teeth (16 teeth to the inch) ...
50117c	2035	" " Screw (2) ...
NOTE.—Feed Dog No. 44136 is sent with this machine unless otherwise specified on order.		

No.	Plate	
127202	—	Feed and Feed Lifting Eccentric with 448c, 1299c, 52210 and 52211
127225	—	" " " " " 127202 with 127152 ...
52210	1503	" " " " " Lubricating Pad (wood, long)
52211	1503	" " " " " " " (" short)
1299c	2040	" " " " " Position Screw ...
448c	1324	" " " " " Set Screw ...
127152	2066	" " " " " Sleeve ...
20284	2029	Feed Forked Connection ...
52393	—	" " " " 20284 with 375c, 1518c and 52165 ...
375c	1324	" " " " Hinge Screw ...
1518c	2034	" " " " " " Nut ...
52384	2029	Feed Lifting Rock Shaft ...
127156	2065	" " " " " Connecting Rod with 127157 and two 966e
*127157	—	" " " " " " " Cap ...
966e	2035	" " " " " " " Screw ...
375c	1324	" " " " " " " Hinge Screw ...
1518c	2034	" " " " " " " " Nut ...
12376	2032	" " " " " Crank with 157c and 1813 ...
157c	1324	" " " " " " Clamping Screw ...
1813	2034	" " " " " " Roller and Stud ...
50191c	2034	" " " " " Screw Centre (2) ...
1513j	1317	" " " " " " Nut (2) ...
52385	—	Feed Lifting Rock Shaft, complete, Nos. 12376 and 52384 ...
52074	2033	Feed Regulator with 50083c ...
52118	—	" " 52074 with 52073 ...
52093	—	" " 52118 with 818d ...
1128c	2035	" " Hinge Screw ...
818d	2035	" " Thumb Screw ...
52074	2029	Feed Rock Shaft ...
29633	2032	" " " " Crank with 157c ...
157c	1324	" " " " Clamping Screw ...
50191c	2034	" " " " Screw Centre (2) ...
1513j	1317	" " " " " Nut (2) ...
142033	—	Machine Pulley (disc) "V" belt groove (outside diam. of belt groove 2-9"), with two 435al
52081	—	Machine Pulley (stand, heavy rim), 2 1/8" pulley, with two 448c
52063	2029	Machine Pulley Oil Cover
210d	1324	" " " " Screw ...
448c	1324	" " Set Screw for 52081 ...
435al	1324	" " " " " 142033 ...

Note—No. 142033 is supplied with machine unless otherwise specified on order

No.	Plate	
1133c	2035	Needle Bar Bushing (lower) Set Screw ...
52014	2039	" " " (upper) ...
1133c	2035	" " " (") Set Screw ...
52205	2066	" " Connecting Link with 52207 ...
52206	—	" " " " 52205 with 24041 ...
775c	2035	" " " " Cap Screw ...
52207	—	" " " " Lubricating Pad (wood) ...
24041	2066	" " " " Stud with 207 1/2 ...
207 1/2	1688	" " " " Clamping Screw ...
127253	2373	" " Crank with 1036al, 1037al and 1065al ...
1065al	2035	" " " Position Screw ...
127323	—	" " Thread Guard ...
229d	2035	" " " " Screw ...
52307	2039	" Clamp with 51460f ...
51460f	2378	" " Screw ...
*52201	2064	Oil Absorbent Wick ...
52202	2064	" " " 52201, with 52203, for lower cavity in head of arm
*52203	2040	" " " Wire ...
127191	—	Oil Tube, with 52184 ...
127091	2040	" " Bracket ...
127092	—	" " " 127091, with 127191, for oiling 52165
52184	2064	" " Packing (cotton wick) ...
12391	2028	Presser Bar (hollow) ...
52338	1316	" " Guide Bracket with 223c and 453c
453c	1316	" " " " Set Screw ...
52016	1316	" " Lifter ...
689c	1316	" " " Screw ...
1520r	1317	" " " " Nut ...
12327	1316	" " Lifting and Releasing Lever Bracket ...
127108	2029	" " Spring ...
11170	1316	" " " Washer ...
7298	2032	Presser Foot Hinge Pin ...
19334	—	" " Plate ...
19335	—	" " Shank ...
19336	2030	Presser Foot (hinged), complete, Nos. 7298, 19334 and 19335 for 44136
20458	2030	" " for 44136 ...
12142	2030	" " " 20158 ...
12260	2030	" " " 12450 ...
12474	2030	" " " 20162 ...
190d	1324	" " Screw ...

NOTE.—Presser Foot No. 20458 is sent with this machine unless otherwise specified on order.

No.	Plate	
688j	1324	Pressure Regulating Thumb Screw
127095	2039	Rotating Hook with three 1253c
127096	144829	" " 127095 with 127102 and four 1053e
127239	144830	" " 127096 " 40274, 127242 and three 1367d
127097	144821	" " 127096 " 40274 and three 1367d (for agents only)
127240	144832	" " 127239 " 52237
40264	2032	" " Bobbin
52235	—	" " Case
52236	—	" " " " 52235 with 591f, 1380d and 40394
40393	3346	" " " " Hinge, Nos. 2974, 40392 and 125320
127242	20378	" " " " Holder
52018	2032	" " " " " Position Bracket
704j	1324	" " " " " " Screw
40392	2032	" " " " Latch
125320	2066	" " Bobbin Case Latch Lever
2974	2032	" " " " " Fulcrum Pin
2975	2032	" " " " " Spring
592e	1324	" " " " " Stop Screw
591f	1324	" " " " " Tension Regulating Screw
40394	2032	" " " " " Spring
1380d	2035	" " " " " " Screw
52237	2032	" " " " " complete, Nos. 592e, 2975, 40393 and 52236
127241	—	" " " " " 52237 with 127242 (for agents only)
40274	2032	" " Section
1367d	2035	" " " Screw
1253c	2035	" " Set Screw
127059	2065	" " Shaft
127073	2039	" " " Bevel Gear with two 1259c
127007	2029	" " " " " Case (two pieces) with 121e and 50234d
50234d	2035	" " " " " " Plug Screw
121e	1324	" " " " " " Screw
1259c	2035	" " " " " " Set Screw
127004	2039	" " " " " Bushing (back)
127043	—	" " " " " (") 127004 with 52045
52045	2032	" " " " " (") Packing (cotton)
1143c	2035	" " " " " (") Set Screw
127005	2039	" " " " " (front)
127044	—	" " " " " (") 127005 with 52045
142008	2373	" " " " " (") 127005 with 52045
144828	—	Rotating Hook with three 1253c (ton)
144829	—	Rotating Hook 144828 with 270083 and four 1053e
144830	—	Rotating Hook 144829 with 40274, 143346 and three 1367e
144832	—	Rotating Hook 144830 with 52237
144831	—	Rotating Hook 144829 with 40274 and three 1367e (for agents only)

No.	Plate	
52337	1316	Slack Thread Regulator
223c	1316	" " " Set Screw
2102	2032	Tension Disc
1560c	2034	" " Regulating Thumb Nut
32572	2032	" " Releasing Disc
43944	1316	" " " Lever
12398	1316	" " " " Hinge Pin
12329	1316	" " " " Spring
32574	2032	" " " Pin
2103	2032	" " Spring
*50304c	2034	" " Stud
52098	—	" " Stud 50304c with 1560c
50305c	2035	" " " Set Screw
52397	—	Tension , complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102
52027	2032	Thread Guard (side of arm)
52454	2030	" " Retainer
624c	2035	" " " Set Screw
52215	—	Thread Take-up , complete, Nos. 11204, 52025 and 52217
52216	2373	Thread Take-up Crank
52217	—	" " " " 52216 with 775c and 52206
1037al	2035	" " " " Position Screw
1036al	2035	" " " " Set Screw
52022	1503	Thread Take-up Lever with 52130
52023	2039	" " " " Hinge Pin
52024	2039	" " " " Link
11204	2033	" " " " " Hinge Pin
435c	1324	" " " " " " Set Screw
52130	—	" " " " " Thread Eyelet Bushing
52025	—	Thread Take-up Lever , complete, Nos. 52022 to 52024
52394	2039	Thread Take-up Spring
52083	2032	" " " " " Regulator with 50305c
448c	1324	" " " " " " Set Screw
44137	1510	Throat Plate , large needle hole, for 44136
12411	2036	" " " " " " " 12457
19409	2036	" " " " " " " 20162
19410	2036	" " " small " " " 20162
12482	—	" " " large " " " 12481
12483	2036	" " " small " " " 12481
12464	2544	" " " large " " " 12450

No.	Plate					
12451	2544	Throat Plate, small needle hole, for 12450 ...	...	...	...	...
19418	2544	" " large " " " 20158 ...	...	...	...	...
19419	2544	" " small " " " 20158 ...	...	...	...	...
691f	1324	" " Screw (2) ...	...	...	...	...

NOTE.—Throat Plate No. 44137 is sent with this machine unless otherwise specified on order.

139622	—	Drip Pan with four $\frac{3}{4}$ " wire nails ...	...	...	...	...
--------	---	---	-----	-----	-----	-----

PARTS SPECIAL TO No. 96K51 MACHINE

For Cloaks, Clothing and other work in Cloth. Maximum Stitch 5 to the inch. Drop Feed. Knee Lifter.

This machine is the same as No. 96K40 with the following exceptions:—

No.	Plate					
88621	2545	Needle Bar (hollow) ...	...	...	...	...
106058	2545	" " Bushing (lower) ...	...	...	...	...
88622	2545	" Clamp with SS648c ...	...	...	...	...
SS648c	2545	" " Screw ...	...	...	...	...
19336	2030	Presser Foot (hinged), complete, Nos. 7298, 19334 and 19335, for 44136 ...	...	...	...	...
19371	2545	Thread Eyelet ...	...	...	...	...

PARTS COMPLETE

FOR

No. 96K41 MACHINE (obsolete)

For Cloaks, Clothing, Overalls and other work in Cloth. Maximum Stitch 5 to the inch. Reversible Feed. Knee Lifter.

No.	Plate					
*127329	—	Arm with two 56015 ...	...	...	...	...

NOTE.—Due to the accuracy required for gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

16532	2032	Arm Dowel Pin (2) ...	...	...	...	...
52182	2066	" Oil Tube, with 52184, for oiling 52205 ...	...	...	...	...
52183	2064	" " " " 52184, " " 52024 ...	...	...	...	...
52180	2066	" " " (long), with 52184, for oiling 52022 ...	...	...	...	...
52185	2066	" " " (short), with 42367, for oiling 52022 ...	...	...	...	...
142087	—	" " " with Hole Cover and Holder ...	...	...	...	...
142069	2545	" " " 142087, with 52150, for oiling 127072 and 127074 ...	...	...	...	...
56015	2033	" " " for oiling 127058 (2) ...	...	...	...	...
52150	2039	" " " Packing (braided cotton) for 142069 ...	...	...	...	...
42367	2064	" " " " (" ") " 52185 ...	...	...	...	...
52184	2064	" " " " (cotton wick) for 52180, 52182, 52183, and 127191 ...	...	...	...	...
116e	1324	" Screw (back) (2) ...	...	...	...	...
854e	2035	" " (front) (2) ...	...	...	...	...

52382	2372	Arm Shaft (horizontal) ...	...	...	...	...
88616	—	" " (") 52382 with 127253 for 52081 and 52187 ...	...	...	...	...

NOTE.—No. 88616 is supplied with this machine unless otherwise specified on order.

52400	2372	Arm Shaft (horizontal) ...	...	...	...	...
88617	—	" " (") 52400 with 127253 for 56017 ...	...	...	...	...
127072	2039	" " (") Bevel Gear with two 1036c ...	...	...	...	...
127070	2029	" " (") " " Case (two pieces) with 121e ...	...	...	...	...
121e	1324	" " (") " " Screw ...	...	...	...	...
1036c	2035	" " (") " " Set Screw ...	...	...	...	...
52191	2040	" " (") Flanged Bushing (back) ...	...	...	...	...
52192	—	" " (") " " (") 52191 with 52193 and 52194 ...	...	...	...	...

No.	Plate	
52401	1529	Arm Shaft (horizontal) Flanged Bushing (back) for 52405 ...
52193	2040	" " (") " " (") Oil Pad ... (braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
446c	1324	" " (") " " (") Set Screw ...
52195	2040	" " (") " " (front) ...
52196	—	" " (") " " (") 52195 with 52193 and 52194
52193	2040	" " (") " " (") Oil Pad ... (braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bearing Oil Cup (spring lid) ...
144d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " " (") Set Screw ...
52493	2039	" " (") " " (upper) ...
435c	1324	" " (") " " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " " Screw ...
127079	2028	" " Cover ...
50053d	2035	" " " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " " Washer (cloth) ...
127192	2064	Arm Top Cover ...
127193	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton) ...
127255	2378	" " " Positioning Disc ...
158j	1324	" " " Screw ...
150459	2064	" " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " " " Packing (braided cotton) ...
158j	1324	" " " " " " Screw ...
52239	2064	" " " " " " Spool Pin ...
8879	1316	" " " " " " Washer (cloth) ...

No.	Plate	
2455	1688	Arm Top Cover Tension Disc ...
41593	1316	" " " " Spring ...
41594	1316	" " " " Stud ...
460c	1324	" " " " " Set Screw ...
41595	1316	" " " " " Thread Guide ...
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455

NOTE:—No. ~~150460~~ is supplied with this machine unless No. 127193 is specified on order. 150460

142033		
52187	2065	Balance Wheel (power, disc) 2 $\frac{3}{16}$ " pulley, with two 448c
52001	—	" " (stand, heavy rim) 2 $\frac{11}{16}$ " pulley, with two 448c
56017	2030	" " 2 $\frac{1}{4}$ " pulley for 52405 ...
52003	2029	" " Oil Cover ...
2104	1324	" " " " Screw ...
448c	1324	" " " Set Screw ...

NOTE:—No. ~~52187~~ is supplied with this machine unless otherwise specified on order.

*52383	—	Bed ...
--------	---	----------------

NOTE:—Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

12431	—	Bed Slide ...
12432	2028	" " complete, Nos. 4307, 12431 and two 725c
4307	2028	" " Spring ...
725c	1324	" " " Screw ...

256w	2035	Clamp Stop Motion Clamp Screw ...
248a	2035	" " " " Stop Screw ...
2020	2033	" " " " Washer ...
*52403	—	" " " Flanged Bushing ...
52404	1529	" " " " " 52403 with two 50311al
2022	2033	" " " " " Pin ...
50311al	2035	" " " " " Set Screw ...
52405	—	Clamp Stop Motion , complete, Nos. 248a, 256w, 2020 and 52404, for 56017 ...

52051	—	Face Plate ...
176d	559	" " Screw ...
52053	2030	" " Thread Guard (lower) ...
226d	1324	" " " " (") Screw ...
52170	—	" " " " (upper) ...
226d	1324	" " " " (") Screw ...
50190d	2035	" " Thumb Screw ...
52052	2028	Face Plate , complete, Nos. 52051, 52053, 52170 and two 226d ...

No.	Plate						
52452	2028	Feed Bar	...	...	...	...	...
313c	1324	"	"	Screw Centre (2)	...	...	...
1519e	2034	"	"	"	Nut (2)	...	...
52165	2066	"	"	Connecting Link	...	...	...
375c	1324	"	"	"	Hinge Screw	...	...
1518e	2034	"	"	"	"	Nut	...
52073	2032	"	"	"	"	Stud	...
50083c	2035	"	"	"	"	Set Screw	...
26603	1529	Feed Dog	...	...	...	...	...
28360	1529	"	"	(15 conical teeth)	...	...	...
121446	2376	"	"	(spiked teeth)	...	...	...
50117c	2035	"	"	Screw (2)	...	...	...

NOTE.—Feed Dog No. 26603 is sent with this machine unless otherwise specified on order.

127324	2373	Feed and Feed Lifting Eccentric	with 52210, 52211 and two 448al				
127325	—	"	"	"	"	127324 with 127152	...
52210	1503	"	"	"	"	Lubricating Pad (wood, long)	...
52211	1503	"	"	"	"	"	(" short)
448al	1324	"	"	"	"	Set Screw	...
127152	2066	"	"	"	"	Sleeve	...
52407	2029	Feed Forked Connection	...	...	...	...	...
52451	—	"	"	"	"	52407 with 375c, 1518e and 52165	...
375c	1324	"	"	"	"	Hinge Screw	...
1518e	2034	"	"	"	"	"	Nut
52384	2029	Feed Lifting Rock Shaft	...	...	...	...	...
127156	2065	"	"	"	"	Connecting Rod with 127157 and two 966e	...
*127157	—	"	"	"	"	"	Cap
966e	2035	"	"	"	"	"	Screw
375c	1324	"	"	"	"	"	Hinge Screw
1518e	2034	"	"	"	"	"	"
12376	2032	"	"	"	"	Crank with 157c and 1813	...
157c	1324	"	"	"	"	"	Clamping Screw
1813	2034	"	"	"	"	"	Roller and Stud
50191c	2034	"	"	"	"	Screw Centre (2)	...
1513j	1317	"	"	"	"	"	Nut (2)
52385	—	Feed Lifting Rock Shaft, complete	Nos. 12376 and 52384	...	...	...	...
50338e	2034	Feed Regulating Screw Stud	...	...	...	...	...
56032	1502	"	"	"	"	Head with 56033	...
50193j	2035	"	"	"	"	"	Cap Screw
56033	1503	"	"	"	"	"	Stop Pin
56034	1502	"	"	"	"	"	Lock Pin
56035	1502	"	"	"	"	"	Spring

52408	1502	Feed Regulator	with 50083c	...	...	...	...
52411	—	"	"	52408 with 52073	...	...	...
1128e	2035	"	"	Hinge Screw	...	...	...
52409	1502	Feed Reverse Lever	with 158e and 51846	...	...	...	...
50339d	2034	"	"	"	Hinge Screw	...	...
158e	1324	"	"	"	"	Clamping Screw	...
52410	1502	"	"	"	"	Friction Washer	...
51846	2034	"	"	"	"	Roller and Stud	...
52386	2029	Feed Rock Shaft	...	...	...	...	...
29633	2032	"	"	"	Crank with 157c	...	...
157c	1324	"	"	"	"	Clamping Screw	...
50191c	2034	"	"	"	"	Screw Centre (2)	...
1513j	1317	"	"	"	"	"	Nut (2)
52387	—	Feed Rock Shaft, complete	Nos. 29633 and 52386	...	...	...	...
25866	2031	Guide	...	...	...	...	...
50190b	2035	"	Thumb Screw	...	...	...	...
127088	2040	Needle Bar	(hollow)	...	...	...	...
127322	—	"	"	127088 with 229d, 52307 and 127323	...	...	...
127230	2373	"	"	Bushing (lower)	...	...	...
1133c	2035	"	"	"	(")	Set Screw	...
52014	2039	"	"	"	(upper)	...	...
1133c	2035	"	"	"	(")	Set Screw	...
52205	2066	"	"	"	Connecting Link with 52207	...	...
52206	—	"	"	"	"	52205 with 24041	...
775c	2035	"	"	"	"	Cap Screw	...
52207	—	"	"	"	"	Lubricating Pad (wood)	...
24041	2066	"	"	"	"	Stud with 207 $\frac{1}{2}$	...
207 $\frac{1}{2}$	F1688	"	"	"	"	Clamping Screw	...
127253	2373	"	"	"	Crank with 1036al, 1037al and 1065al	...	...
1065al	2035	"	"	"	"	Position Screw	...
127323	—	"	"	"	"	Thread Guard	...
229d	2035	"	"	"	"	"	Screw
52307	2039	"	"	"	"	Clamp with 51460f	...
51460f	2378	"	"	"	"	"	Screw
*52201	2064	Oil Absorbent Wick	...	...	...	...	...
142033	—	Machine Pulley (disc)	" V " belt groove (outside diam. of belt groove 2-9"), with two 435al	...	...	...	...
52081	—	Machine Pulley (stand, heavy rim), 2 $\frac{1}{2}$ " pulley, with two 448c	...	...	...	...	...
56017	2030	Machine Pulley	2 $\frac{1}{2}$ " pulley, for 52405	...	...	52165	...
52063	2029	"	"	Oil Cover	...	...	...
210d	1324	"	"	"	"	Screw	...
448c	1324	"	"	"	"	Set Screw	...

Note—No. 142033 is supplied with machine unless otherwise specified on order

No.	Plate	
12391	2028	Presser Bar (hollow) ...
52338	1316	" " Guide Bracket with 223c and 453c ...
453c	1316	" " " " Set Screw ...
52016	1316	" " Lifter ...
689c	1316	" " " " Screw ...
1520r	1317	" " " " Nut ...
12327	1316	" " Lifting and Releasing Lever Bracket ...
127108	2029	" " Spring ...
11170	1316	" " " " Washer ...
7298	2032	Presser Foot Hinge Pin ...
52426	—	" " Plate ...
52390	—	" " Shank ...
26231	2032	" " Spring ...
52427	1529	Presser Foot (spring hinged), complete, Nos. 7298, 26231, 52390 and 52426
190d	1324	" " Screw ...
688j	1324	Pressure Regulating Thumb Screw ...
127095	2039	Rotating Hook with three 1253c ...
127096	—	" " 127095 with 127102 and four 1053c ...
127239	—	" " 127096 with 40274, 127242 and three 1367d ...
127097	—	" " 127096 with 40274 and three 1367d (for agents only)
127240	—	" " 127239 with 52237 ...
40264	2032	" " Bobbin ...
52235	—	" " " " Case ...
52236	—	" " " " 52235 with 591f, 1380d and 40394
40293	—	" " " " Hinge Nos. 2974, 40392 and 125320
127242	—	" " " " Holder ...
52018	2032	" " " " " " Position Bracket ...
704j	1324	" " " " " " " " Screw ...
40392	2032	" " " " " " Latch ...
125320	2066	" " " " " " Lever ...
2974	2032	" " " " " " Fulcrum Pin ...
2975	2032	" " " " " " Spring ...
592e	1324	" " " " " " Stop Screw ...
591f	1324	" " " " " " Tension Regulating Screw ...
40394	2032	" " " " " " Spring ...
1380d	2035	" " " " " " Screw ...
52237	2032	" " " " " " complete, Nos. 592e, 2975, 40393 and 52236
144828	—	Rotating Hook with three 1253c ... agents only)
144829	—	Rotating Hook 144828 with 270083 and four 1053c ...
144830	—	Rotating Hook 144829 with 40274, 143346 and three 1367e ...
144832	—	Rotating Hook 144830 with 52237 ...
144831	—	Rotating Hook 144829 with 40274 and three 1367e (for agents only) ...

No.	Plate	
1253c	2035	Rotating Hook Set Screw ...
127059	2065	" " Shaft ...
127073	2039	" " " " Bevel Gear with two 1259c ...
127007	2029	" " " " " " Case (two pieces) with 121e and 50234d
50234d	2035	" " " " " " Plug Screw ...
121e	1324	" " " " " " Screw ...
1259c	2035	" " " " " " Set Screw ...
127004	2039	" " " " " " Bushing (back) ...
127043	—	" " " " " " (") 127004 with 52045 ...
52045	2032	" " " " " " (") Packing (cotton) ...
1143c	2035	" " " " " " (") Set Screw ...
127005	2039	" " " " " " (front) ...
127044	—	" " " " " " (") 127005 with 52045 ...
142008	2373	" " " " " " (") Oil Cup ...
52045	2032	" " " " " " (") Packing (cotton) ...
1148c	2035	" " " " " " (") Set Screw ...
127102	2039	" " " " " " Thread Guard ...
1053c	2035	" " " " " " Screw ...
52337	1316	Slack Thread Regulator ...
223c	1316	" " " " " " Set Screw ...
2102	2032	Tension Disc ...
1560c	2034	" " Regulating Thumb Nut ...
32572	2032	" " Releasing Disc ...
43944	1316	" " " " Lever ...
12398	1316	" " " " " " Hinge Pin ...
12329	1316	" " " " " " Spring ...
32574	2032	" " " " " " Pin ...
2103	2032	" " Spring ...
*50304c	2034	" " Stud ...
52098	—	" " " " 50304c with 1560c ...
50305c	2035	" " " " Set Screw ...
52397	—	Tension , complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102 ...
52027	2032	Thread Guard (side of arm) ...
52454	2030	" " Retainer ...
624c	2035	" " " " Set Screw ...
52215	—	Thread Take-up , complete, Nos. 11204, 52025 and 52217 ...
52216	2373	Thread Take-up Crank ...
52217	—	" " " " 52216 with 775c and 52206 ...
1037al	2035	" " " " " " Position Screw ...
1036al	2035	" " " " " " Set Screw ...

No.	Plate	
52195	2040	Arm Shaft (horizontal) Flanged Bushing (front) ...
52196	—	" " (") " " (") 52195 with 52193 and 52194
52193	2040	" " (") " " (") Oil Pad (braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bearing Oil Cup (spring lid) ...
144d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " " (") Set Screw ...
52493	2039	" " (") " " (upper) ...
435c	1324	" " (") " " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " " Screw ...
127079	2028	" " Cover ...
50053d	2035	" " " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " " Washer (cloth) ...

127192	2064	Arm Top Cover ...
127493	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton)
127255	2378	" " " Positioning Disc ...
158j	1324	" " " Screw ...
150459	2064	" " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " " " Packing (cotton wick)
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " " " Packing (braided cotton)
158j	1324	" " " " " Screw ...
52239	2064	" " " " " Spool Pin ...
8879	1316	" " " " " " " Washer (cloth) ...
2455	1688	" " " " " Disc ...

No.	Plate	
41593	1316	Arm Top Cover Tension Spring ...
41594	1316	" " " " Stud ...
460c	1324	" " " " " Set Screw ...
41595	1316	" " " " " Thread Guide ...
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455

NOTE.—No. ~~150460~~ is supplied with this machine unless No. ~~127193~~ is specified on order. ~~150460~~

14283	2065	Balance Wheel (power, disc) 2 $\frac{3}{16}$ " pulley, with two 448c ...
52187	—	" " (stand, heavy rim) 2 $\frac{3}{16}$ " pulley, with two 448c
52081	—	" " Oil Cover ...
52063	2029	" " " " Screw ...
240d	1324	" " " " " Set Screw ...
448c	1324	" " " " " Set Screw ...

NOTE.—No. ~~52187~~ is supplied with this machine unless otherwise specified on order.

*52383	—	Bed ...
--------	---	----------------

NOTE.—Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

12431	—	Bed Slide ...
12432	2028	" " complete, Nos. 4307, 12431 and two 725c ...
4307	2028	" " Spring ...
725c	1324	" " " " Screw ...

52051	—	Face Plate ...
176d	559	" " Screw ...
52053	2030	" " Thread Guard (lower) ...
226d	1324	" " " " (") Screw ...
52170	—	" " " " (upper) ...
226d	1324	" " " " (") Screw ...
50190d	2035	" " " Thumb Screw ...
52052	2028	Face Plate , complete, Nos. 52051, 52053, 52170 and two 226d ...

52452	2028	Feed Bar ...
313c	1324	" " Screw Centre (2) ...
1519c	2034	" " " " Nut (2) ...
52165	2066	" Connecting Link ...
375c	1324	" " " Hinge Screw ...
1518c	2034	" " " " " Nut ...
52073	2032	" " " " Stud ...
50083c	2035	" " " " " Set Screw ...

12436	7699	Feed Dog ...
50117c	2035	" " Screw (2) ...

No.	Plate	
127202	—	Feed and Feed Lifting Eccentric with 448c, 1299c, 52210 and 52211
127225	—	" " " " " 127202 with 127152
52210	1503	" " " " " Lubricating Pad (wood, long)
52211	1503	" " " " " " " (" short)
1299c	2040	" " " " " Position Screw
448c	1324	" " " " " Set Screw
127152	2066	" " " " " Sleeve
20284	2029	Feed Forked Connection
52393	—	" " " 20284 with 375c, 1518c and 52165
375c	1324	" " " Hinge Screw
1518c	2034	" " " " " Nut
52384	2029	Feed Lifting Rock Shaft
127156	2065	" " " " " Connecting Rod with 127157 and two 966c
*127157	—	" " " " " " Cap
966c	2035	" " " " " " " Screw
375c	1324	" " " " " " Hinge Screw
1518c	2034	" " " " " " " Nut
12373	2032	" " " " " Crank with 157c and 1813
157c	1324	" " " " " " Clamping Screw
1813	2034	" " " " " " Roller and Stud
50191c	2034	" " " " " Screw Centre (2)
1513j	1317	" " " " " " Nut (2)
52385	—	Feed Lifting Rock Shaft, complete, Nos. 12376 and 52384
52074	2033	Feed Regulator with 50083c
52118	—	" " 52074 with 52073
52093	—	" " 52118 with 818d
1128c	2035	" " Hinge Screw
818d	2035	" " Thumb Screw
52386	2029	Feed Rock Shaft
29633	2032	" " " Crank with 157c
157c	1324	" " " " Clamping Screw
50191c	2034	" " " " Screw Centre (2)
1513j	1317	" " " " " Nut (2)
142033	—	Machine Pulley (disc) "V" belt groove (outside diam. of belt groove 2-9"), with two 435al
52081	—	Machine Pulley (stand, heavy rim), 2 1/8" pulley, with two 448c
52063	2029	Machine Pulley Oil Cover
210d	1324	" " " " " Screw
448c	1324	" " " " " Set Screw for 52081
435al	1324	" " " " " " 142033

No.	Plate	
127088	2040	Needle Bar (hollow)
127131	—	" " 127088 with 229d, 127045 and 127046
127230	2373	" " Bushing (lower)
1133c	2035	" " " (") Set Screw
52044	2039	" " " (upper)
1133c	2035	" " " (") Set Screw
52205	2066	" " Connecting Link with 52207
52206	—	" " " " 52205 with 24041
775c	2035	" " " " Cap Screw
52207	—	" " " " Lubricating Pad (wood)
24041	2066	" " " " Stud with 2074
2074	1688	" " " " Clamping Screw
127253	2373	" " Crank with 1036al, 1037al, and 1065al
1065al	2035	" " " " Position Screw
127045	2033	" " Thread Guard
229d	2035	" " " " " Screw
127046	2033	" " Clamp with 51460f
51460f	2378	" " " " " Screw
*52201	2064	Oil Absorbent Wick
52202	2064	" " " 52201, with 52203, for lower cavity in head of arm
*52203	2040	" " " " Wire
127191	—	Oil Tube, with 52184
127091	2040	" " " Bracket
127092	—	" " " 127091, with 127191, for oiling 52165
52184	2064	" " " Packing (cotton wick)
12391	2028	Presser Bar (hollow)
52338	1316	" " " Guide Bracket with 223c and 453c
453c	1316	" " " " " Set Screw
52016	1316	" " " Lifter
689c	1316	" " " " " Screw
1520r	1317	" " " " " Nut
12327	1316	" " " Lifting and Releasing Lever Bracket
127108	2029	" " " Spring
11170	1316	" " " " " Washer
688j	1324	Pressure Regulating Thumb Screw
51928	2375	Roller (ball-bearing) 3/8" diam., 3/16" face, coarse, complete, Nos. 1528d, 201699f, 350104f and twenty-eight 206417, for 127271
51903	2375	Roller (ball-bearing), 7/8" diam., 3/16" face, fine, complete, Nos. 1528d, 201699f, 350104f and twenty-eight 206417, for 62867
51899	2375	Roller (ball-bearing), 7/8" diam., 3/16" face, fine, complete, Nos. 1528d, 201699f, 350104f and twenty-eight 206417, for 62863

No.	Plate	
127273	—	Roller Arm for 127271 ...
62897	—	" " " 62867 ...
62856	—	" " " 62863 ...
440f	2378	" " Adjusting Screw ...
1547j	2378	" " " " Nut ...
80297	2375	" " Bracket ...
316f	1324	" " " Screw Centre ...
1547j	2378	" " " " Nut ...
2205	2378	" " Lock Spring ...
176d	559	" " " " Screw ...
1549j	2378	" " " " Nut ...
206417	—	" Ball, $\frac{3}{16}$ " diam. ...
201699f	2378	" Retaining Nut ...
350104f	2378	" Screw ...
1528d	2378	" " Nut ...
127271	2375	Roller Presser (ball-bearing), $\frac{3}{8}$ " diam., $\frac{3}{16}$ " face, coarse, complete, Nos. 176d, 440f, 1549j, 2205, 51928, 80297, 127273, two 316f and three 1547j ...
62867	2375	Roller Presser (ball-bearing), $\frac{3}{8}$ " diam., $\frac{3}{16}$ " face, fine, complete, Nos. 176d, 440f, 1549j, 2205, 51903, 62897, 80297, two 316f and three 1547j ...
62863	2375	Roller Presser (ball-bearing), $\frac{3}{8}$ " diam., $\frac{3}{16}$ " face, fine, complete, Nos. 176d, 440f, 1549j, 2205, 51899, 62856, 80297, two 316f and three 1547j ...
176d	559	Roller Presser Screw ...
127095	2039	Rotating Hook with three 1253c ...
127096	—	" " 127095 with 127102 and four 1053e ...
127239	—	" " 127096 " 40274, 127242 and three 1367d ...
127097	—	" " 127096 " 40274 and three 1367d (for agents only) ...
127240	—	" " 127239 " 52237 ...
10264	2032	" " Bobbin ...
52235	—	" " " Case ...
52236	—	" " " " 52235 with 591f, 1380d and 40394 ...
40393	—	" " " " Hinge, Nos. 2974, 40392 and 125320 ...
127242	—	" " " " Holder ...
52018	2032	" " " " " Position Bracket ...
704j	1324	" " " " " " Screw ...
40392	2032	" " " " " Latch ...
125320	2066	" " " " " Lever ...
2974	2032	" " " " " Fulcrum Pin ...
2975	2032	" " " " " Spring ...
144828	—	Rotating Hook with three 1253c ...
144829	—	Rotating Hook 144828 with 270083 and four 1053e ...
144830	—	Rotating Hook 144829 with 40274, 143346 and three 1367e ...
144832	—	Rotating Hook 144830 with 52237 ...
144831	—	Rotating Hook 144829 with 40274 and three 1367e (for agents only) ...

No.	Plate	
40394	2032	Rotating Hook Bobbin Case Tension Spring ...
1380d	2035	" " " " " " Screw ...
52237	2032	" " " " " complete, Nos. 592e, 2975, 40393 and 52236 ...
127244	—	" " " " " 52237 with 127242 (for agents only) ...
40274	2032	" " Section ...
1367d	2035	" " " Screw ...
1253c	2035	" " Set Screw ...
127059	2065	" " Shaft ...
127073	2039	" " " Bevel Gear with two 1259c ...
127007	2029	" " " " " Case (two pieces) with 121e and 50234d ...
50234d	2035	" " " " " Plug Screw ...
121e	1324	" " " " " Screw ...
1259c	2035	" " " " " Set Screw ...
127004	2039	" " " " " Bushing (back) ...
127043	—	" " " " " (") 127004 with 52045 ...
52045	2032	" " " " " (") Packing (cotton) ...
1143c	2035	" " " " " (") Set Screw ...
127005	2039	" " " " " (front) ...
127044	—	" " " " " (") 127005 with 52045 ...
142008	2373	" " " " " (") Oil Cup ...
52045	2032	" " " " " (") Packing (cotton) ...
1148c	2035	" " " " " (") Set Screw ...
127102	2039	" " " " " Thread Guard ...
1053c	2035	" " " " " Screw ...
52337	1316	Slack Thread Regulator ...
223c	1316	" " " " " Set Screw ...
52046	1815	Spool Holder Base ...
389d	2035	" " " " " Screw ...
204296	1815	" " " " " Wire ...
200079h	2034	" " " " " Hinge Screw ...
52047	1815	Spool Holder , complete, Nos. 52046, 200079h and 204296 ...
2102	2032	Tension Disc ...
1560c	2034	" Regulating Thumb Nut ...
32572	2032	" Releasing Disc ...
43944	1316	" " Lever ...
12398	1316	" " " Hinge Pin ...
12329	1316	" " " Spring ...
32571	2032	" " Pin ...
2103	2032	" Spring ...
*50304c	2034	" Stud ...
52098	—	" " 50304c with 1560c ...
50305c	2035	" " Set Screw ...

No.	Plate						
52397	—	Tension , complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102	...	...	...	...	...
52027	2032	Thread Guard (side of arm)	...	...	...	...	...
52454	2030	" Retainer	...	...	...	...	...
624c	2035	" " Set Screw	...	...	...	...	...
52215	—	Thread Take-up , complete, Nos. 11204, 52025 and 52217	...	...	...	...	...
52216	2373	Thread Take-up Crank	...	...	...	...	...
52217	—	" " " 52216 with 775e and 52206	...	...	...	...	...
1037al	2035	" " " Position Screw	...	...	...	...	...
1036al	2035	" " " Set Screw	...	...	...	...	...
52022	1503	Thread Take-up Lever with 52130	...	...	...	...	...
52023	2039	" " " Hinge Pin	...	...	...	...	...
52024	2039	" " " Link	...	...	...	...	...
11204	2033	" " " Hinge Pin	...	...	...	...	...
435c	1324	" " " " " " Set Screw	...	...	...	...	...
52130	—	" " " Thread Eyelet Bushing	...	...	...	...	...
52025	—	Thread Take-up Lever , complete, Nos. 52022 to 52024	...	...	...	...	...
52394	2039	Thread Take-up Spring	...	...	...	...	...
52083	2032	" " " Regulator with 50305c	...	...	...	...	...
448c	1324	" " " " " " Set Screw	...	...	...	...	...
24444	—	Throat Plate , large oblong needle hole, for 12436	...	...	...	...	...
24443	7699	" " small " " " " 12436	...	...	...	...	...
691f	1324	" " " Screw (2)	...	...	...	...	...

NOTE. Throat Plate No. 24444 is sent with this machine unless otherwise specified on order.

139622	—	Drip Pan with four $\frac{3}{4}$ " wire nails	...	...	...	...	...
--------	---	--	-----	-----	-----	-----	-----

PARTS COMPLETE

FOR

No. 96K43 MACHINE

For Stitching Top Facings to Shoe Lining, also for Side and Back Stays. Maximum Stitch 7 to the inch. Drop Feed. Roller Presser. Knee Lifter.

No.	Plate						
*127330	—	Arm with two 56045	...	...	...	...	...

NOTE. Due to the accuracy required for gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

16532	2032	Arm Dowel Pin (2)	...	...	...	...	...
52182	2066	" Oil Tube, with 52184, for oiling 52205	...	...	...	...	...
52183	2064	" " " " 52184, " " 52024	...	...	...	...	...
52180	2066	" " " (long) with 52184, for oiling 52022	...	...	...	...	...
52185	2066	" " " (short) " 12367, " " 52022	...	...	...	...	...
142087	—	" " " with Hole Cover and Holder	...	...	...	...	...
142069	2545	" " " 142087, with 52150, for oiling 127072 and 127074	...	...	...	...	...
56045	2033	" " " for oiling 127058 (2)	...	...	...	...	...
52150	2039	" " " Packing (braided cotton) for 142069	...	...	...	...	...
42367	2064	" " " " (" ") " 52185	...	...	...	...	...
52184	2064	" " " " (cotton wick) for 52180, 52182, 52183, and 127191	...	...	...	...	...
116e	1324	" Screw (back) (2)	...	...	...	...	...
854c	2035	" " (front) (2)	...	...	...	...	...
127047	1815	Arm Shaft (horizontal)	...	...	...	...	...
88615	—	" " (") 127047 with 127253	...	...	...	...	...
127072	2039	" " (") Bevel Gear with two 1036c	...	...	...	...	...
127070	2029	" " (") " " Case (two pieces) with 121e	...	...	...	...	...
121e	1324	" " (") " " " Screw	...	...	...	...	...
1036c	2035	" " (") " " " Set Screw	...	...	...	...	...
52191	2040	" " (") Flanged Bushing (back)	...	...	...	...	...
52192	—	" " (") " " " (") 52194, with 52193 and 52194	...	...	...	...	...
52193	2040	" " (") " " " (") Oil Pad (braided cotton)	...	...	...	...	...
52194	2064	" " (") " " " (") Oil Pad (felt)	...	...	...	...	...
446c	1324	" " (") " " " (") Set Screw	...	...	...	...	...
52195	2040	" " (") " " " (front)	...	...	...	...	...
52196	—	" " (") " " " (") 52195 with 52193 and 52194	...	...	...	...	...

No.	Plate	
52193	2040	Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bearing Oil Cup (spring lid) ...
144d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " " (") Set Screw ...
52493	2039	" " (") " " (upper) ...
435c	1324	" " (") " " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " " Screw ...
127079	2028	" " " Cover ...
50053d	2035	" " " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " " Washer (cloth) ...

127192	2064	Arm Top Cover ...
127193	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton) ...
127255	2378	" " " Positioning Disc ...
158j	1324	" " " Screw ...
150459	2064	" " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton) ...
158j	1324	" " " " " Screw ...
52239	2064	" " " " " Spool Pin ...
8879	1316	" " " " " Washer (cloth) ...
2455	1688	" " " " " Disc ...
41593	1316	" " " " " Spring ...
41594	1316	" " " " " Stud ...
460c	1324	" " " " " Set Screw ...
41595	1316	" " " " " Thread Guide ...

No.	Plate	
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455

NOTE: No. 150460 is supplied with this machine unless No. 127193 is specified on order. 150460

142033		
52487	2065	Balance Wheel (power, disc) 2 $\frac{3}{16}$ " pulley, with two 448c ...
52081		" " (stand, heavy rim) 2 $\frac{1}{16}$ " pulley, with two 448c ...
52063	2029	" " Oil Cover ...
240d	1324	" " " " " Screw ...
448c	1324	" " " " " Set Screw ...

NOTE: No. 52487 is supplied with this machine unless otherwise specified on order.

*52383		Bed ...
--------	--	----------------

NOTE: Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

52417		Bed Slide ...
52418	2030	" " complete, Nos. 52417, 52464 and two 665c ...
52464	2033	" " Spring ...
665c	2035	" " " " " Screw ...

120063	7703	Edge Guide ...
50190b	2035	" " Thumb Screw ...

52051		Face Plate ...
176d	559	" " " Screw ...
52053	2030	" " " Thread Guard (lower) ...
226d	1324	" " " " " (") Screw ...
52170		" " " " " (upper) ...
226d	1324	" " " " " (") Screw ...
50190d	2035	" " " Thumb Screw ...

Face Plate, complete, Nos. 52051, 52053, 52170 and two 226d ...

52452	2028	Feed Bar ...
343c	1324	" " " Screw Centre (2) ...
1519c	2034	" " " " " Nut (2) ...
52165	2066	" Connecting Link ...
375c	1324	" " " " " Hinge Screw ...
1518c	2034	" " " " " Nut ...
52073	2032	" " " " " Stud ...
50083c	2035	" " " " " Set Screw ...

12436	7699	Feed Dog ...
50117c	2035	" " " Screw (2) ...

127202		Feed and Feed Lifting Eccentric with 448c, 1299c, 52210 and 52211
--------	--	--

127225		" " " " " 127202 with 127152 ...
52210	1503	" " " " " Lubricating Pad (wood, long)
52211	1503	" " " " " " " (" " short)

No.	Plate						
1299c	2040	Feed and Feed Lifting Eccentric Position Screw					
448c	1324	"	"	"	"	"	Set Screw
127152	2066	"	"	"	"	"	Sleeve
20284	2029	Feed Forked Connection					
52393	—	"	"	"	"	20284 with 375c, 1518c and 52165	...
375c	1324	"	"	"	"	"	Hinge Screw
1518c	2034	"	"	"	"	"	" Nut
52384	2029	Feed Lifting Rock Shaft					
127156	2065	"	"	"	"	Connecting Rod with 127157 and two 966e	...
*127157	—	"	"	"	"	"	" Cap
966e	2035	"	"	"	"	"	" Screw
375c	1324	"	"	"	"	"	" Hinge Screw
1518c	2034	"	"	"	"	"	" Nut
12376	2032	"	"	"	"	Crank with 157c and 1813	...
157c	1324	"	"	"	"	"	Clamping Screw
1813	2034	"	"	"	"	"	Roller and Stud
50191c	2034	"	"	"	"	"	Screw Centre (2)
1513j	1317	"	"	"	"	"	" Nut (2)
52385	—	Feed Lifting Rock Shaft, complete, Nos. 12376 and 52384					
52614	2033	Feed Regulator with 50083c					
52118	—	"	"	"	"	52074 with 52073	...
52093	—	"	"	"	"	52118 with 818d	...
1128c	2035	"	"	"	"	"	Hinge Screw
818d	2035	"	"	"	"	"	Thumb Screw
52386	2029	Feed Rock Shaft					
29633	2032	"	"	"	"	Crank with 157c	...
157c	1324	"	"	"	"	"	Clamping Screw
50191c	2034	"	"	"	"	"	Screw Centre (2)
1513j	1317	"	"	"	"	"	" Nut (2)
52387	—	Feed Rock Shaft, complete, Nos. 29633 and 52386					
127088	2040	Needle Bar (hollow)					
127132	—	"	"	"	"	127088 with 229d, 52307 and 52415	...
127230	2373	"	"	"	"	"	...
142033	—	Machine Pulley (disc) "V" belt groove (outside diam. of belt groove 2-9"), with two 435al					...
52081	—	Machine Pulley (stand, heavy rim), 2 $\frac{11}{16}$ " pulley, with two 448c					...
52063	2029	Machine Pulley Oil Cover					
210d	1324	"	"	"	"	"	Screw
448c	1324	"	"	"	"	"	Set Screw for 52081 (d)
435al	1324	"	"	"	"	"	142033

Note—No. 142033 is supplied with machine unless otherwise specified on order

No.	Plate						
24041	2066	Needle Bar Connecting Stud with 207a^F					
207c ^F	1688	"	"	"	"	"	Clamping Screw
127253	2373	"	"	"	"	Crank with 1036al, 1037al, and 1065al	...
1065al	2035	"	"	"	"	"	Position Screw
52415	2033	"	"	"	"	"	Thread Guard
229d	2035	"	"	"	"	"	" Screw
52307	2039	"	"	"	"	"	Clamp with 51460f
51460f	2378	"	"	"	"	"	" Screw
*52201	2064	Oil Absorbent Wick					
52202	2064	"	"	"	"	52201, with 52203, for lower cavity in head of arm	...
*52203	2040	"	"	"	"	"	Wire
127191	—	Oil Tube, with 52184					
127091	2040	"	"	"	"	"	Bracket
127092	—	"	"	"	"	127091, with 127191, for oiling 52165	...
52184	2064	"	"	"	"	"	Packing (cotton wick)
12391	2028	Presser Bar (hollow)					
52338	1316	"	"	"	"	"	Guide Bracket with 223c and 453c
453c	1316	"	"	"	"	"	Set Screw
52016	1316	"	"	"	"	"	Lifter
689c	1316	"	"	"	"	"	" Screw
1520r	1317	"	"	"	"	"	" Nut
12327	1316	"	"	"	"	"	Lifting and Releasing Lever Bracket
127108	2029	"	"	"	"	"	Spring
11170	1316	"	"	"	"	"	Washer
688j	1324	Pressure Regulating Thumb Screw					
51928	2375	Roller (ball-bearing), $\frac{5}{8}$" diam., $\frac{3}{16}$" face, coarse, complete, Nos. 1528d, 201699f, 350104f and twenty eight 206417, for 127271					
51903	2375	Roller (ball-bearing), $\frac{7}{8}$" diam., $\frac{3}{16}$" face, fine, complete, Nos. 1528d, 201699f, 350104f and twenty eight 206417, for 62867					
51927	2375	Roller (ball-bearing), $1\frac{1}{4}$" diam., $\frac{11}{16}$" face, coarse, complete, Nos. 1528d, 1766c, 50553c and twenty-four 16232, for 127272					
127273	—	Roller Arm for 127271					
62897	—	"	"	"	"	62867	...
127274	—	"	"	"	"	127272	...
440f	2378	"	"	"	"	"	Adjusting Screw
1547j	2378	"	"	"	"	"	" Nut
80297	2375	"	"	"	"	"	Bracket
316f	1324	"	"	"	"	"	Screw Centre
1547j	2378	"	"	"	"	"	" Nut
2205	2378	"	"	"	"	"	Lock Spring
176d	559	"	"	"	"	"	" Screw
1549j	2378	"	"	"	"	"	" Nut

176d 559
 127095 - 144828
 127096 - 144829
 *127097 - 144830
 127097 - 144831
 127240 144832

No.	Plate								
1253c	2035	Rotating Hook Set Screw			...	...	...	...	...
127059	2065	"	"	Shaft	...	...	...	...	...
127073	2039	"	"	"	Bevel Gear with two 1259c				
127007	2029	"	"	"	"	"	Case (two pieces) with 121e and 50234d		
50234d	2035	"	"	"	"	"	"	Plug Screw	...
121e	1324	"	"	"	"	"	"	Screw	...
1259c	2035	"	"	"	"	"	"	Set Screw	...
127004	2039	"	"	"	Bushings (back)				...
127043	"	"	"	"	"	(")	127004 with 52045		
52045	2032	"	"	"	"	(")	Packing (cotton)		
1143c	2035	"	"	"	"	(")	Set Screw		
127005	2039	"	"	"	"	(front)	...	...	...
127044	"	"	"	"	"	(")	127005 with 52045		
112008	2373	"	"	"	"	(")	Oil Cup		
52045	2032	"	"	"	"	(")	Packing (cotton)		
1148c	2035	"	"	"	"	(")	Set Screw		
127102	2039	"	"	Thread Guard			...	...	...
1053c	2035	"	"	"	"	Screw	...	...	...
52337	1316	Slack Thread Regulator				...	...	...	...
223c	1316	"	"	"	"	Set Screw	...	...	...
52046	1815	Spool Holder Base			...	...	...	...	...
389d	2035	"	"	"	Screw	...	...	...	...
204296	1815	"	"	"	Wire	...	...	...	...
200079h	2034	"	"	"	"	Hinge Screw	...	...	...
52047	1815	Spool Holder, complete, Nos. 52046, 200079h and 204296							
120067	7704	Strip Guide			...	...	...	...	...
120068	7704	"	"	(adjustable) with 291f	...	...	...	...	...
120069	7704	"	"	{ " }	Bar	...	...	...	...
120070	7704	"	"	{ " }	"	Plate	...	...	...
50169d	7704	"	"	{ " }	"	"	Screw	...	...
50169d	7704	"	"	{ " }	"	Screw	...	...	...
291f	7704	"	"	{ " }	Thumb Screw	...	...	...	...
120071	7704	Strip Guide (adjustable), complete, Nos. 120067 to 120070 and six 50169d							
1423d	7704	"	"	Screw	...	...	...	...	...
2102	2032	Tension Disc			...	...	...	...	...
1560c	2034	"	Regulating Thumb Nut			...	...	...	...
32572	2032	"	Releasing Disc			...	...	...	...
43944	1316	"	"	Lever			...	...	...
12398	1316	"	"	"	"	Hinge Pin	...	...	...
12329	1316	"	"	"	"	Spring	...	...	...

No.	Plate						
32574	2032	Tension Releasing Pin	...	...	...	...	...
2103	2032	" Spring	...	...	...	...	...
*50304c	2034	" Stud	...	...	...	...	...
52098	—	" " 50304c with 1560c	...	...	...	...	...
50305c	2035	" " Set Screw	...	...	...	...	...
52397	—	Tension, complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102	...	...	...	...	...
52027	2032	Thread Guard (side of arm)	...	...	...	...	...
52454	2030	" Retainer	...	...	...	...	...
624c	2035	" " Set Screw	...	...	...	...	...
52245	—	Thread Take-up, complete, Nos. 11204, 52025 and 52217	...	...	...	...	...
52216	2373	Thread Take-up Crank	...	...	...	...	...
52217	—	" " " 52246 with 775c and 52206	...	...	...	...	...
1037al	2035	" " " Position Screw	...	...	...	...	...
1036al	2035	" " " Set Screw	...	...	...	...	...
52022	1503	Thread Take-up Lever with 52130	...	...	...	...	...
52023	2039	" " " Hinge Pin	...	...	...	...	...
52024	2039	" " " Link	...	...	...	...	...
11204	2033	" " " Hinge Pin	...	...	...	...	...
435c	1324	" " " " " Set Screw	...	...	...	...	...
52130	—	" " " Thread Eyelet Bushing	...	...	...	...	...
52025	—	Thread Take-up Lever, complete, Nos. 52022 to 52024	...	...	...	...	...
52394	2039	Thread Take-up Spring	...	...	...	...	...
52083	2032	" " " Regulator with 50305c	...	...	...	...	...
448c	1324	" " " " " Set Screw	...	...	...	...	...
12438	7699	Throat Plate, large oblong needle hole, for 12436	...	...	...	...	...
20192	—	" " small " " " " 12436	...	...	...	...	...
691f	1324	" " " Screw (2)	...	...	...	...	...

NOTE: Throat Plate No. 12438 is sent with this machine unless otherwise specified on order.

*15404	—	Trade Mark	...	...	...	...	...
15405	—	" " Rivet	...	...	...	...	...
139622	—	Drip Pan with four $\frac{3}{4}$" wire nails	...	...	...	...	...

PARTS COMPLETE

FOR

No. 96K44 MACHINE

For Overalls, Heavy Overcoats, Khaki and other heavy materials. Maximum Stitch 5 to the inch. Reversible Feed. Lift of Presser Foot $\frac{5}{16}$ ". Knee Lifter.

No.	Plate						
*127329	—	Arm with two 56015	...	...	...	...	...

NOTE: Due to the accuracy required for gear alignment, Arm cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.

16532	2032	Arm Dowel Pin (2)	...	...	...	...	...
52182	2066	" Oil Tube, with 52184, for oiling 52205	...	...	...	...	...
52183	2064	" " " " 52184, " " 52024	...	...	...	...	...
52180	2066	" " " (long), with 52184, for oiling 52022	...	...	...	...	...
52185	2066	" " " (short), " 42367, " " 52022	...	...	...	...	...
142087	—	" " " with Hole Cover and Holder	...	...	...	...	...
142069	2545	" " " 142087, with 52150, for oiling 127072 and 127074	...	...	...	...	...
56015	2033	" " " for oiling 127058 (2)	...	...	...	...	...
52150	2039	" " " Packing (braided cotton) for 142069	...	...	...	...	...
42367	2064	" " " " (" ") " 52185	...	...	...	...	...
52184	2064	" " " " (cotton wick) for 52180, 52182, 52183, and 127191	...	...	...	...	...
116e	1324	" Screw (back) (2)	...	...	...	...	...
854e	2035	" " (front) (2)	...	...	...	...	...
52382	2372	Arm Shaft (horizontal)	...	...	...	...	...
88618	—	" " (") 52382 with 127222	...	...	...	...	...
127072	2039	" " (") Bevel Gear with two 1036c	...	...	...	...	...
127070	2029	" " (") " " Case (two pieces) with 121e	...	...	...	...	...
121e	1324	" " (") " " " Screw	...	...	...	...	...
1036c	2035	" " (") " " " Set Screw	...	...	...	...	...
52191	2040	" " (") Flanged Bushing (back)	...	...	...	...	...
52192	—	" " (") " " (") 52191 with 52193 and 52194	...	...	...	...	...
52193	2040	" " (") " " (") Oil Pad (braided cotton)	...	...	...	...	...
52194	2064	" " (") " " (") Oil Pad (felt)	...	...	...	...	...
446c	1324	" " (") " " (") Set Screw	...	...	...	...	...
52195	2040	" " (") " " (front)	...	...	...	...	...

No.	Plate	
52196	—	Arm Shaft (horizontal) Flanged Bushing (front) 52195 with 52193 and 52194
52193	2040	" " (") " " (") Oil Pad (braided cotton)
52194	2064	" " (") " " (") Oil Pad (left)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bearing Oil Cup (spring lid) ...
141d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " " (") Set Screw ...
52493	2039	" " (") " " (upper) ...
435c	1324	" " (") " " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " " Screw ...
127079	2028	" " Cover ...
50053d	2035	" " " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " " Washer (cloth) ...
127192	2064	Arm Top Cover ...
127193	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
12367	2064	" " " " " Packing (braided cotton) ...
127255	2378	" " " " " Positioning Disc ...
158j	1324	" " " " " Screw ...
150459	2064	" " " " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " " " Packing (cotton wick) ...
127187	2040	" " " " " " " (bent) with 42367 ...
42367	2064	" " " " " " " Packing (braided cotton) ...
158j	1324	" " " " " " " Screw ...
52239	2064	" " " " " " " Spool Pin ...
8879	1316	" " " " " " " Washer (cloth) ...
2455	1688	" " " " " " " Disc ...
41593	1316	" " " " " " " Spring ...
41594	1316	" " " " " " " Stud ...
460c	1324	" " " " " " " Set Screw ...
41595	1316	" " " " " " " Thread Guide ...

No.	Plate	
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455
NOTE. No. 150460 is supplied with this machine unless No. 127193 ¹⁵⁰⁴⁶⁰ is specified on order.		
1420 ^{1420, 33} 52187	2065	Balance Wheel (power, disc) 2 $\frac{3}{16}$ " pulley, with two 418c ...
52081	"	" " (stand, heavy rim), 2 $\frac{11}{16}$ " pulley, with two 418c ...
52083	2029	" " " Oil Cover ...
2404	1324	" " " " " Screw ...
448	1324	" " " " " Set Screw ...
NOTE. No. 52187 is supplied with this machine unless otherwise specified on order.		
*52383		Bed ...
NOTE. Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled.		
12431		Bed Slide ...
12432	2028	" " complete, Nos. 4307, 12431 and two 725c ...
4307	2028	" " Spring ...
725c	1324	" " " " " Screw ...
52051		Face Plate ...
176d	559	" " " Screw ...
52053	2030	" " " Thread Guard (lower) ...
226d	1324	" " " " " (") Screw ...
52170		" " " " " (upper) ...
226d	1324	" " " " " (") Screw ...
50190d	2035	" " " " " Thumb Screw ...
52052	2028	Face Plate , complete, Nos. 52051, 52053, 52170 and two 226d ...
52452	2028	Feed Bar ...
313c	1324	" " " Screw Centre (2) ...
1519c	2034	" " " " " Nut (2) ...
52165	2066	" " " " " Connecting Link ...
375c	1324	" " " " " Hinge Screw ...
1518c	2034	" " " " " " " Nut ...
52073	2032	" " " " " " " Stud ...
50083c	2035	" " " " " " " Set Screw ...
121416	2376	Feed Dog (spiked teeth) ...
50117c	2035	" " " " " Screw (2) ...
127324	2373	Feed and Feed Lifting Eccentric with 52210, 52211 and two 418al
127325		" " " " " " " 127324 with 127152 ...
52210	1503	" " " " " " " Lubricating Pad (wood, long) ...
52211	1503	" " " " " " " " " (" " short) ...
448al	1324	" " " " " " " Set Screw ...
127152	2066	" " " " " " " Sleeve ...

No.	Plate				
127095	2039	Rotating Hook with three 1253c	...	...	...
127096	144829	"	"	127095 with 127102 and four 1053c	...
*127239	144830	"	"	127096 with 40274, 127242 and three 1367d	...
127097	144831	"	"	127096 with 40274 and three 1367d (for agents only)	...
127240	144830	"	"	127239 with 52237	...
40264	2032	"	"	Bobbin	...
52235	...	"	"	" Case	...
52236	...	"	"	" 52235 with 591f, 1380d and 40394	...
40393	...	"	"	" Hinge, Nos. 2974, 40392 and 125320	...
143346	2378	"	"	" Holder	...
52018	2032	"	"	" Position Bracket	...
704j	1324	"	"	" " " Screw	...
40392	2032	"	"	" Latch	...
125320	2066	"	"	" Lever	...
2974	2032	"	"	" Fulcrum Pin	...
2975	2032	"	"	" Spring	...
592e	1324	"	"	" Stop Screw	...
591f	1324	"	"	" Tension Regulating Screw	...
40394	2032	"	"	" Spring	...
1380d	2035	"	"	" " Screw	...
52237	2032	"	"	" complete, Nos. 592e, 2975, 40393 and 52236	...
143445	...	"	"	" 52237 with 127242 (for agents only)	...
127241	...	"	"	"	...
40274	2032	"	"	" Section	...
1367d	2035	"	"	" Screw	...
1253c	2035	"	"	" Set Screw	...
127059	2065	"	"	" Shaft	...
127073	2039	"	"	" Bevel Gear with two 1259c	...
127007	2029	"	"	" Case (two pieces) with 121e and 50234d	...
50234d	2035	"	"	" Plug Screw	...
121e	1324	"	"	" Screw	...
1259c	2035	"	"	" Set Screw	...
127004	2039	"	"	" Bushing (back)	...
127043	...	"	"	" (") 127004 with 52045	...
52045	2032	"	"	" (") Packing (cotton)	...
1143c	2035	"	"	" (") Set Screw	...
127005	2039	"	"	" (front)	...
127044	...	"	"	" (") 127005 with 52045	...
142008	2373	"	"	" (") Oil Cup	...
52045	2032	"	"	" (") Packing (cotton)	...
1148c	2039	"	"	" (") Set Screw	...
144828	—	Rotating Hook with three 1253c	...	...	...
144829	—	Rotating Hook 144828 with 270083 and four 1053c	...	...	...
144830	—	Rotating Hook 144829 with 40274, 143346 and three 1367e	...	...	...
144832	—	Rotating Hook 144830 with 52237	...	...	...
144831	—	Rotating Hook 144829 with 40274 and three 1367e (for agents only)	...	...	...

No.	Plate				
52337	1316	Slack Thread Regulator	...	...	...
223c	1316	" " " Set Screw	...	...	...
2102	2032	Tension Disc	...	...	...
1560c	2034	" Regulating Thumb Nut	...	...	...
32572	2032	" Releasing Disc	...	...	...
52145	1503	" " Lever	...	...	...
12398	1316	" " " Hinge Pin	...	...	...
12329	1316	" " " Spring	...	...	...
32574	2032	" " Pin	...	...	...
2103	2032	" Spring	...	...	...
*50304c	2034	" Stud	...	...	...
52098	...	" 50304c with 1560c	...	...	...
50305c	2035	" Set Screw	...	...	...
52397	...	Tension, complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102	...	...	...
52027	2032	Thread Guard (side of arm)	...	...	...
52454	2030	" Retainer	...	...	...
624c	2035	" Set Screw	...	...	...
127289	...	Thread Take-up, complete, Nos. 11204, 52025 and 127291	...	...	...
127290	2373	Thread Take-up Crank	...	...	...
127291	...	" " " 127290 with 775c and 52206	...	...	...
1037al	2035	" " " Position Screw	...	...	...
1036al	2035	" " " Set Screw	...	...	...
52022	1503	Thread Take-up Lever with 52130	...	...	...
52023	2039	" " " Hinge Pin	...	...	...
52024	2039	" " " Link	...	...	...
11204	2033	" " " Hinge Pin	...	...	...
435c	1324	" " " Set Screw	...	...	...
52130	...	" " " Thread Eyelet Bushing	...	...	...
52025	...	Thread Take-up Lever, complete, Nos. 52022 to 52024	...	...	...
52394	2039	Thread Take-up Spring	...	...	...
52083	2032	" " " Regulator with 50305c	...	...	...
448c	1324	" " " Set Screw	...	...	...
26605	1502	Throat Plate, large needle hole, for 121446	...	...	...
26606	...	" " small " " 121446	...	...	...
691f	1324	" " Screw (2)	...	...	...
NOTE No. 26605 is sent with this machine unless otherwise specified on order					
139622	...	Drip Pan with four 3/4" wire nails	...	...	...

No. Plate

PARTS COMPLETE

FOR

No. 96K45 MACHINE

For Light, Medium and Heavy Clothing and other work in Cloth. Maximum
Stitch 5½ to the inch. Drop Feed. Vertical Trimmer. Knee Lifter.

No. Plate

*127331 ~~Arm with two 50015~~

NOTE — Due to the accuracy required for gear alignment, Arm cannot be supplied
separately and can only be sent out as a unit, Arm and Bed assembled

16532	2032	Arm Dowel Pin (2)	...	...	...	...
52182	2066	" Oil Tube, with 52184, for oiling 52205	...	...	...	...
52183	2064	" " " " 52184, " " 52024	...	...	...	...
52180	2066	" " " (long) with 52184, for oiling 52022	...	...	...	...
52185	2066	" " " (short) " 42367, " " 52022	...	...	...	...
142087		" " " with Hole Cover and Holder	...	...	...	...
142069	2545	" " " 142087, with 52150, for oiling 127072 and 127074	...	...	...	...
50015	2033	" " " for oiling 127058 (2)	...	...	...	...
52150	2039	" " " Packing (braided cotton) for 142069	...	...	...	...
42367	2064	" " " " (" ") " 52185	...	...	...	...
52184	2064	" " " " (cotton wick) for 52180, 52182, 52183, and 127191	...	...	...	...

116e	1324	" Screw (back) (2)	...	...	...	...
854e	2035	" " (front) (2)	...	...	...	...

127024	2374	Arm Shaft (horizontal)	...	...	...	...
88619		" " (") 127024 with 127223	...	...	...	...
127072	2039	" " (") Bevel Gear with two 1036e	...	...	...	...
127070	2029	" " (") " " Case (two pieces) with 121e	...	...	...	...
121e	1324	" " (") " " " Screw	...	...	...	...
1036e	2035	" " (") " " " Set Screw	...	...	...	...
52191	2040	" " (") Flanged Bushing (back)	...	...	...	...
52192		" " (") " " (") 52191 with 52193 and 52194	...	...	...	...
52193	2040	" " (") " " (") Oil Pad (braided cotton)	...	...	...	...
52194	2064	" " (") " " (") Oil Pad (felt)	...	...	...	...
446e	1324	" " (") " " (") Set Screw	...	...	...	...

No.	Plate	
52195	2040	Arm Shaft (horizontal) Flanged Bushing (front) ...
52196	"	" " (") " " (") 52195 with
		52193 and 52194
52193	2040	" " (") " " (") Oil Pad
		(braided cotton)
52194	2064	" " (") " " (") Oil Pad (felt)
435c	1324	" " (") " " (") Set Screw ...
68350	2039	" " (") Front Bearing Oil Cup (spring lid) ...
144d	1324	" " (") Screw ...
127058	2028	" " (upright) ...
127073	2039	" " (") Bevel Gear (lower) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
127074	2039	" " (") " " (upper) with two 1259c ...
1259c	2035	" " (") " " (") Set Screw ...
52492	2039	" " (") Bushing (lower) ...
432c	1324	" " (") " " (") Set Screw ...
52493	2039	" " (") " " (upper) ...
435c	1324	" " (") " " (") Set Screw ...
127146	2066	" Side Cap ...
219d	1324	" " " Screw ...
127079	2028	" " Cover ...
50053d	2035	" " " Thumb Screw ...
52239	2064	" Spool Pin and Thread Eyelet ...
8879	1316	" " " Washer (cloth) ...
127192	2064	Arm Top Cover ...
127193	2064	" " " 127192 with 52183, 52239, 127187 and 127255
52183	2064	" " " Oil Tube with 52184 ...
52184	2064	" " " " " Packing (cotton wick) ...
127187	2040	" " " " " (bent) with 42367 ...
42367	2064	" " " " " Packing (braided cotton)
127255	2378	" " " " " Positioning Disc ...
158j	1324	" " " " " Screw ...
150459	2064	" " " " " Tension Bracket with 460c ...
52183	2064	" " " " " Oil Tube with 52184 ...
52184	2064	" " " " " " " Packing (cotton wick)
127187	2040	" " " " " " " (bent) with 42367
42367	2064	" " " " " " " Packing (braided cotton)
158j	1324	" " " " " " " Screw ...
52239	2064	" " " " " " " Spool Pin ...
8879	1316	" " " " " " " Washer (cloth) ...
2455	1688	" " " " " " " Disc ...
41593	1316	" " " " " " " Spring ...
41594	1316	" " " " " " " Stud ...
460c	1324	" " " " " " " Set Screw ...
41595	1316	" " " " " " " Thread Guide ...

No.	Plate	
150460	2064	Arm Top Cover Tension Bracket , complete, Nos. 41593 to 41595, 52183, 52239, 127187, 127255, 150459 and two 2455

NOTE No ~~150460~~ is supplied with this machine unless No. ~~127193~~ is specified on order ~~150460~~

142033	2065	Balance Wheel (power, disc) 2 3/4" pulley, with two 448c ...
52187	"	" " Oil Cover ...
52063	2024	" " " " " Screw ...
210d	1324	" " " " " Set Screw ...
448c	1324	" " " " " Set Screw ...

*52383		Bed ...
--------	--	----------------

NOTE Due to the accuracy required for gear alignment, Bed cannot be supplied separately and can only be sent out as a unit, Arm and Bed assembled

12431		Bed Slide ...
12432	2028	" " complete, Nos. 4307, 12431 and two 725c ...
4307	2028	" " Spring ...
725c	1324	" " " " " Screw ...

52102	2374	Face Plate ...
176d	559	" " " Screw (2) ...
52053	2030	" " " Thread Guard (lower) ...
226d	1324	" " " " " (") Screw ...
52170	"	" " " " " (upper) ...
226d	1324	" " " " " (") Screw ...
52103		Face Plate , complete, Nos. 52053, 52102, 52170 and two 226d ...

52452	2028	Feed Bar ...
313c	1324	" " " Screw Centre (2) ...
1519c	2034	" " " " " Nut (2) ...
52165	2066	" Connecting Link ...
375c	1324	" " " " " Hinge Screw ...
1518c	2034	" " " " " " " Nut ...
52073	2032	" " " " " " " Stud ...
50083c	2035	" " " " " " " Set Screw ...

127025	2376	Feed Dog , 9 teeth (12 teeth to the inch) ...
50117c	2035	" " " Screw (2) ...

127224		Feed and Feed Lifting Eccentric with 448c, 52210 and 52211
127226	"	" " " " " " 127224 with 127152 ...
52210	1503	" " " " " " " Lubricating Pad (wood, long)
52211	1503	" " " " " " " " " (" short)
448c	1324	" " " " " " " Set Screw ...
127152	2066	" " " " " " " Sleeve ...

No.	Plate						
20284	2029	Feed Forked Connection					
52393	—	"	"	"	"	20284 with 375c, 1518e and 52165	...
375c	1324	"	"	"	"	Hinge Screw	...
1518e	2034	"	"	"	"	" " Nut	...
52384	2029	Feed Lifting Rock Shaft					
127156	2065	"	"	"	"	Connecting Rod with 127157 and two 966e	...
*127157	—	"	"	"	"	" " Cap	...
966e	2035	"	"	"	"	" " Screw	...
375c	1324	"	"	"	"	" " Hinge Screw	...
1518e	2034	"	"	"	"	" " " " Nut	...
12376	2032	"	"	"	"	Crank with 157c and 1813	...
157c	1324	"	"	"	"	" Clamping Screw	...
1813	2034	"	"	"	"	" Roller and Stud	...
50191c	2034	"	"	"	"	Screw Centre (2)	...
1513j	1317	"	"	"	"	" " Nut (2)	...
52385	—	Feed Lifting Rock Shaft, complete, Nos. 12376 and 52384					
52074	2033	Feed Regulator with 50083c					
52118	—	"	"	"	"	52074 with 52073	...
52093	—	"	"	"	"	52118 with 818d	...
1128c	2035	"	"	"	"	Hinge Screw	...
818d	2035	"	"	"	"	Thumb Screw	...
52386	2029	Feed Rock Shaft					
29633	2032	"	"	"	"	Crank with 157c	...
157c	1324	"	"	"	"	Clamping Screw	...
50191c	2034	"	"	"	"	Screw Centre (2)	...
1513j	1317	"	"	"	"	" " Nut (2)	...
52387	—	Feed Rock Shaft, complete, Nos. 29633 and 52386					
127026	2377	Knife (narrow)					
127027	2377	"	(wide)	...	...	...	...
620c	2377	"	Adjusting Screw	...	...	...	...
52104	2374	"	Bar with 2301	...	...	...	...
24431	2377	"	"	Crank with 191c	...	...	...
1162c	2377	"	"	"	Coupling Pin	...	...
1564d	2377	"	"	"	" " Head	...	...
2297	2377	"	"	"	" " Spring	...	...
2022	2033	"	"	"	"	Pin	...
191c	—	"	"	"	"	Set Screw	...
24432	—	"	"	"	complete, Nos. 1162c, 1564d, 2297 and 24431	...	...
127028	2377	"	"	Driving Crank (forked)	...	...	...
16564	2377	"	"	"	Bracket	...	...

No.	Plate						
127029	—	Knife Bar Driving Crank Bracket, complete, Nos. 2022, 16564, 24432 and 127028					
647c	2377	"	"	"	"	" Screw (2)	...
24122	2377	"	"	Lifting Spring	...	...	...
24123	2377	"	"	"	"	Case	...
*24124	—	"	"	"	"	Guide	...
24906	2377	"	"	"	"	" 24124 with 2523 and 24125	...
*24125	—	"	"	"	"	Bracket	...
621j	2377	"	"	"	"	" " Screw	...
2523	2377	"	"	"	"	" Pin	...
2301	2377	"	"	Stop Pin	...	...	...
52107	—	Knife Bar, complete, Nos. 621j, 24109, 24906, 52104, 52108 and three 50117e					
52108	2377	"	"	Holder with 620c, 2291 and two 223j	...	...	...
24109	2377	"	"	Handle	...	...	...
50117c	2035	"	"	"	Screw	...	...
50117e	2035	"	"	"	Screw	...	...
223j	1316	"	"	Screw	...	...	...
2291	2377	"	"	Washer	...	...	...
127135	2373	Needle Bar (hollow) with 140239al					
127137	—	"	"	127135 with 127136	...	...	...
52200	2373	"	"	Bushing (lower)	...	...	...
1133c	2035	"	"	" (")	Set Screw	...	...
52111	2373	"	"	" (upper)	...	...	...
1133c	2035	"	"	" (")	Set Screw	...	...
52205	2066	"	"	Connecting Link with 52207	...	...	...
52206	—	"	"	"	52205 with 24041	...	...
775c	2035	"	"	"	Cap Screw	...	...
52207	—	"	"	"	" Lubricating Pad (wood)	...	...
24041	2066	"	"	"	Stud with 207qF	...	...
207qF	1688	"	"	"	" Clamping Screw	...	...
127223	2373	"	"	Crank (eccentric) with 1036al, 1037al and 1065al	...	...	...
127032	2373	"	"	" (")	Sleeve	...	...
1065al	2035	"	"	"	Position Screw	...	...
127136	2378	"	"	Thread Guide	...	...	...
140239al	2378	"	"	Set Screw	...	...	...
*52201	2064	Oil Absorbent Wick					
52202	2064	"	"	"	52201, with 52203, for lower cavity in head of arm	...	...
*52203	2040	"	"	"	Wire	...	...
142033	—	Machine Pulley (disc) "V" belt groove (outside diam. of belt groove 2-9"), with two 435al					
52063	2029	Machine Pulley Oil Cover					
210d	1324	"	"	"	"	" 1, for oiling 52165	...
435al	1324	"	"	"	Screw	...	9
		"	"	"	Set Screw	...	...

No.	Plate	
12391	2028	Presser Bar (hollow) ...
52338	1316	" " Guide Bracket with 223c and 453c ...
453c	1316	" " " " Set Screw ...
52016	1316	" " Lifter ...
689c	1316	" " " " Screw ...
1520r	1317	" " " " Nut ...
12327	1316	" " Lifting and Releasing Lever Bracket ...
127108	2029	" " Spring ...
11170	1316	" " " " Washer ...

127033	2376	Presser Foot for $\frac{1}{16}$ " to $\frac{11}{16}$ " gauges ...
127034	2376	" " " $\frac{3}{16}$ " gauge and above ...
190d	1324	" " Screw ...

NOTE:—No. 127033, $\frac{1}{16}$ " gauge and No. 127034, $\frac{3}{16}$ " gauge, are sent with machine unless other gauges are specified on order.

50373w	2378	Pressure Regulating Thumb Screw ...
--------	------	--

127095	2039	Rotating Hook with three 1253c ...
127096	2039	" " 127095 with 127102 and four 1053c ...
127239	2039	" " 127096 " 40274, 127242 and three 1367d ...
127097	2039	" " 127096 " 40274 and three 1367d (for agents only)
127240	2032	" " 127239 with 52237 ...
40264	2032	" " Bobbin ...
52235	—	" " " " Case ...
52236	—	" " " " 52235 with 5911, 1380d and 10394 ...
40393	2032	" " " " Hinge Nos. 2974, 10392 and 125320 ...
127242	2378	" " " " Holder ...
52018	2032	" " " " Position Bracket ...
704j	1324	" " " " " " " " Screw ...
40392	2032	" " " " " " " " Latch ...
125320	2066	" " " " " " " " Lever ...
2974	2032	" " " " " " " " Fulcrum Pin ...
2975	2032	" " " " " " " " Spring ...
592c	1324	" " " " " " " " Stop Screw ...
591f	1324	" " " " " " " " Tension Regulating Screw ...
40394	2032	" " " " " " " " Spring ...
1380d	2035	" " " " " " " " Screw ...
52237	2032	" " " " " " " " complete, Nos. 592c, 2975, 10393 and 52236 ...
127241	—	" " " " " " " " 52237 with 127242 (for agents only)
40274	2032	" " " " " " " " Section ...
1367d	2035	" " " " " " " " Screw ...
1253c	2035	" " " " " " " " Set Screw ...

144828	—	Rotating Hook with ...
144829	—	Rotating Hook 144 ...
144830	—	Rotating Hook 1448 ...
144832	—	Rotating Hook 1448 ...
144831	—	Rotating Hook 144 (for agents only)

No.	Plate	
127007	2029	Rotating Hook Shaft Bevel Gear Case (two pieces) with 121c and 50234d ...
50234d	2035	" " " " " " " " Plug Screw ...
121c	1324	" " " " " " " " Screw ...
1259c	2035	" " " " " " " " Set Screw ...
127004	2039	" " " " " " " " Bushing (back) ...
127043	—	" " " " " " " " (") 127004 with 52045 ...
52045	2032	" " " " " " " " (") Packing (cotton) ...
1143c	2035	" " " " " " " " (") Set Screw ...
127005	2039	" " " " " " " " (front) ...
127044	—	" " " " " " " " (") 127005 with 52045 ...
142008	2373	" " " " " " " " (") Oil Cup ...
52045	2032	" " " " " " " " (") Packing (cotton) ...
1148c	2035	" " " " " " " " (") Set Screw ...
127102	2039	" " " " " " " " Thread Guard ...
1053c	2035	" " " " " " " " Screw ...

52115	2378	Slack Thread Regulator ...
223c	1316	" " " " Set Screw ...

2102	2032	Tension Disc ...
1560c	2034	" " Regulating Thumb Nut ...
32572	2032	" " Releasing Disc ...
43944	1316	" " " " Lever ...
12398	1316	" " " " Hinge Pin ...
12329	1316	" " " " Spring ...
32574	2032	" " " " Pin ...
2103	2032	" " Spring ...
*50304c	2034	" " Stud ...
52098	—	" " " " 50304c with 1560c ...
50305c	2035	" " " " Set Screw ...
52397	—	Tension , complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102 ...

52027	2032	Thread Guard (side of arm) ...
52454	2030	" " Retainer ...
624c	2035	" " " " Set Screw ...
52208	—	Thread Take-up , complete, Nos. 11204, 52025 and 52209 ...

52021	—	Thread Take-up Crank ...
52209	—	" " " " 52021 with 775c and 52206 ...
1037ad	2035	" " " " Position Screw ...
1036ad	2035	" " " " Set Screw ...

No.	Plate									
52022	1503	Thread Take-up Lever with 52130			...	...	...	...	...	
52023	2039	"	"	"	Hinge Pin	...	...	...	...	
52024	2039	"	"	"	Link	...	...	...	...	
11204	2033	"	"	"	"	Hinge Pin	...	...	...	
435c	1324	"	"	"	"	"	"	Set Screw	...	
52130	-	"	"	"	Thread Eyelet Bushing	...	...	...	...	
52025	-	Thread Take-up Lever , complete, Nos. 52022 to 52024							...	
52394	2039	Thread Take-up Spring			...	...	...	...	...	
52083	2032	"	"	"	Regulator with 50305c	...	...	...	...	
448c	1324	"	"	"	"	Set Screw	...	...	...	
5729	---	Throat Plate Body			...	...	...	...	...	
†12032	2376	"	"	Cutting Bar for 127036		...	...	...	...	
†52131	2376	"	"	"	"	"	127040	...	...	
578d	2376	"	"	"	"	Screw	...	...	...	
127035	2376	"	"	Slide	...	...	...	...	...	
578d	2376	"	"	"	Adjusting Screw	...	...	...	...	
†127036	2376	Throat Plate (small needle hole), complete, Nos. 5729, 127035, 142032 and three 578d, for 127025							...	...
<i>NOTE -- No. 127036, $\frac{1}{8}$" gauge, is sent with this machine unless another gauge is specified on order and an additional Cutting Bar No. 142032, $\frac{3}{16}$" gauge is also sent with machine.</i>										
†127040	2376	Throat Plate (large needle hole), complete, Nos. 5729, 52131, 127035 and three 578d, for 127025							...	...
691f	1324	Throat Plate Screw			...	...	...	...	...	
139622	---	Drip Pan with four $\frac{3}{4}$ " wire nails			...	...	...	...	...	

†NOTE. When ordering state required distance of trimmed edge from seam.

Iron Base

No.	Plate								
19219	2033	Bed Frame Cushion (leather)	...	...	...	...	...	...	...
158c	1324	" " " Screw	...	...	...	...	...	...	...
19220	2033	" " " Spring	...	...	...	...	...	...	...
19226	2039	" " Hinge Connection	...	...	...	...	...	...	...
19398	"	" " " " 19226 with 211f and 19397	...	...	...	...	...	...	...
19397	2033	" " " " Cap	...	...	...	...	...	...	...
211f	2035	" " " " Screw	...	...	...	...	...	...	...
16555	2033	" " " Plate	...	...	...	...	...	...	...
14010	2033	" " " Rivet	...	...	...	...	...	...	...
20067	1513	Bed Frame with two each 16555, 19398, four each 19219, 19220, six each 14010, wood screws 1½" No. 12, and eight 158c							

Tape Holder

(8 IN. DISC)

FOR 96K43 MACHINE

No.	Plate								
26061	7708	Bracket Wire with disc	...	...	...	...	...	...	...
26062	7708	Disc (adjustable) with 35925 and 50053d	...	...	...	...	...	...	...
35925	"	Hub	...	...	...	...	...	...	...
50053d	2035	" Thumb Screw	...	...	...	...	...	...	...
26063	7708	Tape Holder (straight), 8" disc, complete, Nos. 26061 and 26062							
190d	1324	" " Set Screw	...	...	...	...	...	...	...

Accessories

No.	Plate								
40261	2032	Fobbin (2)	...	...	...	...	...	...	...
12361	2039	Machine Hinge Connection (2)	...	...	...	...	...	...	...
36569	2031	Oiler	...	...	...	...	...	...	...
25537	2031	Screw Driver (large)	...	...	...	...	...	...	...
120378	2031	" " (small)	...	...	...	...	...	...	...
8908		Wrench for 96K45 Machine	...	...	...	...	...	...	...
8909		" " 96K45 "	...	...	...	...	...	...	...
		Screw (wood), ½" No. 5, for 96K45 Machine (4)	...	...	...	...	...	...	...

Bobbin Winders

BOBBIN WINDER (swinging automatic, left hand) for 40264

No.	Plate							
41913	2007	Bracket with 457c	...	...	...	...	...	...
41583	2007	Frame with 457c	...	...	...	...	...	...
34105	2007	" Hinge Pin	...	...	...	...	...	...
457c	1324	" " " Set Screw	...	...	...	...	...	...
41914	2007	" Spring	...	...	...	...	...	...
41585	2007	Pulley with 171d	...	...	...	...	...	...
171d	1324	" Set Screw	...	...	...	...	...	...
41586	2007	Spindle	...	...	...	...	...	...
41587	2007	Stop Latch	...	...	...	...	...	...
42614	2007	" " Hinge Stud	...	...	...	...	...	...
457c	1324	" " " " Set Screw	...	...	...	...	...	...
7958	2032	" " Stop Pin	...	...	...	...	...	...
41588	2007	" " Tripping Arm with 185h	...	...	...	...	...	...
185h	1324	" " " " Clamping Screw	...	...	...	...	...	...
60845	2007	Bobbin Winder, Nos. 7958, 34105, 41583, 41585 to 41588, 41913, 41914 and 42614	...	...	...	...	...	...
41915	—	Bobbin Winder, complete, Nos. 880e, 25446 and 60845	...	...	...	...	...	...
880e	2035	" " Screw	...	...	...	...	...	...
25446	2033	" " Washer	...	...	...	...	...	...

This Bobbin Winder is sent with machine unless otherwise specified on order.

BOBBIN WINDER (swinging automatic, right hand) for use with Individual Motor.

Note 10-55
(Arm Top Cover Tension Bracket No. 127193 is supplied in place of No. 150160 when this Bobbin Winder is fitted to machine.)

No.	Plate							
41339	1687	Base	...	...	...	...	...	...
41340	1687	Frame	...	...	...	...	...	...
1429d	1688	" Hinge Screw	...	...	...	...	...	...
41341	1687	" Spring	...	...	...	...	...	...
207d	1688	" " Screw	...	...	...	...	...	...
41342	1687	Pulley with 200f	...	...	...	...	...	...
200f	1688	" Set Screw	...	...	...	...	...	...
41343	1688	Spindle	...	...	...	...	...	...
27306	1688	Spool Pin	...	...	...	...	...	...
27307	1687	" Stand	...	...	...	...	...	...
†27308	1687	" " complete, Nos. 418e, 1562j, 2106, 10141, 11241, 27306, 27307, two each 2455 and wood screws 1" No. 10	...	...	...	...	...	...
11241	1687	Spool Washer (cloth)	...	...	...	...	...	...
41344	1688	Stop Latch	...	...	...	...	...	...
41345	1688	" " Finger	...	...	...	...	...	...
152f	1688	" " " Screw	...	...	...	...	...	...
1430d	1688	" " Hinge Screw	...	...	...	...	...	...
1550h	1688	" " " " Nut	...	...	...	...	...	...
41346	1688	" " Lever	...	...	...	...	...	...
1430d	1688	" " " Hinge Screw	...	...	...	...	...	...
2455	1688	Tension Disc	...	...	...	...	...	...
1562j	1688	" Regulating Thumb Nut	...	...	...	...	...	...
418e	1688	" Screw Stud	...	...	...	...	...	...
10141	1688	" Spring	...	...	...	...	...	...
2106	1688	" Thread Guide	...	...	...	...	...	...
60456	—	Bobbin Winder, Nos. 152f, 207d, 1429d, 1550h, 41339 to 41346, and three 1430d	...	...	...	...	...	...
41347	1687	Bobbin Winder, 60456, with two each 9331 and wood screws 1" No. 10 R.H.B.	...	...	...	...	...	...
41348	—	Bobbin Winder (swinging automatic, right hand), complete, Nos. 27308 and 41347	...	...	...	...	...	...
—	—	Bobbin Winder Screw (wood) 1" No. 10 R.H.B.	...	...	...	...	...	...
9331	1688	" " " Washer	...	...	...	...	...	...

†As No. 27308 can be supplied either Plated or Japanned, it is necessary, when ordering, to state which is required.

BOBBIN WINDER (swinging automatic, right hand)

for machines when used on Power Table.

Note 10-55

(Arm Top Cover Tension Bracket No. 127193 is supplied in place of No. 150460 when this Bobbin Winder is fitted to machine.

No.	Plate								
225433	10885	Bobbin Winder and Tension Bracket Base	...	...	...	...	...	...	...
225453	10884	Frame with 202277 and 259660	...	...	...	...	...	...	...
225454	10884	" Hinge Pin	...	...	...	...	...	...	...
202277	"	" Oil Packing (wick)	...	...	...	...	...	...	...
259660	"	" " Well Washer	...	...	...	...	...	...	...
225455	10884	" Spring	...	...	...	...	...	...	...
225456	10884	" " Plunger	...	...	...	...	...	...	...
202473	10885	Pulley with 200380c	...	...	...	...	...	...	...
200380c	"	" Set Screw	...	...	...	...	...	...	...
225381	10884	Spindle	...	...	...	...	...	...	...
225444	10884	Stop Latch	...	...	...	...	...	...	...
200056e	10884	" " Screw	...	...	...	...	...	...	...
225458	10884	" " Thumb Lever	...	...	...	...	...	...	...
225459	10884	" " " " Hinge Stud	...	...	...	...	...	...	...
225459	10884	" " " " Joint Stud	...	...	...	...	...	...	...
202478	10884	" " Trip Lever	...	...	...	...	...	...	...
200299h	10884	" " " " Hinge Screw	...	...	...	...	...	...	...
225461	10881	Tension Bracket with 201499j	...	...	...	...	...	...	...
200082d	10881	" " Screw	...	...	...	...	...	...	...
228026	10884	" " " Washer	...	...	...	...	...	...	...
2102	2032	" Disc	...	...	...	...	...	...	...
13710	"	" Spring	...	...	...	...	...	...	...
201499j	10881	" Stud	...	...	...	...	...	...	...
201572j	10881	" " Thumb Nut	...	...	...	...	...	...	...
225462	10881	Tension Bracket, complete, Nos. 13710, 201572j, 225461 and two 2102	...	...	...	...	...	...	...
225382	10885	Bobbin Winder, complete, Nos. 200056e, 200082d, 200299h, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screw $\frac{3}{4}$ " No. 12 R.H.B.	...	...	...	...	...	...	...

Attachments

When ordering Binders send sample of the binding and of the material to be bound.

BINDER for Cap Peak Work

No.	Plate								
85678	559	Feed Dog	...	...	...	...	...	...	...
85459	559	Folder Base	...	...	...	...	...	...	...
85460	559	" (top)	...	...	...	...	...	...	...
207d	1688	" (") Binding Screw	...	...	...	...	...	...	...
85461	"	" (bottom)	...	...	...	...	...	...	...
SS50d	186	" (") Binding Screw	...	...	...	...	...	...	...
85462	559	" Roller Guide, Nos. 701d, 85463 and 85464	...	...	...	...	...	...	...
SS50d	186	" " " Binding Screw	...	...	...	...	...	...	...
85463	"	" " " Bracket	...	...	...	...	...	...	...
85464	"	" " " Roller	...	...	...	...	...	...	...
701d	1324	" " " " Screw	...	...	...	...	...	...	...
176d	559	" Screw (to fasten to machine)	...	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...	...
85458	559	Folder, complete, Nos. 85459 to 85462, two 207d and four SS50d	...	...	...	...	...	...	...
85679	559	Presser Foot	...	...	...	...	...	...	...
85680	559	Throat Plate	...	...	...	...	...	...	...
85681	559	Binder, complete, Nos. 85458, 85678 to 85680, two each 176d and 85325	...	...	...	...	...	...	...

BINDER for Cardigan Jackets

No.	Plate								
85682	558	Feed Dog	...	...	...	...	...	...	...
85336		Folder Base	...	...	...	...	...	...	...
85337	"	" Folding Plate (top)	...	...	...	...	...	...	...
85338	"	" " (bottom)	...	...	...	...	...	...	...
233d	1324	" " " Screw for 85337 and 85338	...	...	...	...	...	...	...
SS50d	186	" Screw	...	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...	...
85335	"	Folder, complete, Nos. 85336 to 85338 and four 233d	...	...	...	...	...	...	...

No.	Plate							
85683	558	Presser Foot	...	...	...	...	...	...
85324		Tape Tension Pin (bent)	...	...	...	...	...	...
85323		" " " (straight)	...	...	...	...	...	...
85340		" " Plate	...	...	...	...	...	...
85339	558	" " complete, Nos. 85324, 85340 and four 85323	...	...	...	...	...	...
207d	1688	" " Screw	...	...	...	...	...	...
85325	186	" " " Washer	...	...	...	...	...	...
85684	558	Throat Plate	...	...	...	...	...	...
85685	558	Binder , complete, Nos. SS50d, 207d, 85335, 85339, 85682 to 85684 and two 85325	...	...	...	...	...	...

BINDER, $\frac{1}{2}$ ", for General Work

No.	Plate							
85686	558	Feed Dog	...	...	...	...	...	...
85320	558	Folder	...	...	...	...	...	...
SS50d	186	" Screw	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...
85687		Presser Foot Bracket	...	...	...	...	...	...
85688		" " " Hinge Pin	...	...	...	...	...	...
85689		" " Sole	...	...	...	...	...	...
85690	558	" " (hinged), complete, Nos. 85687 to 85689	...	...	...	...	...	...
85324		Tape Tension Pin (bent)	...	...	...	...	...	...
85323		" " " (straight)	...	...	...	...	...	...
85322		" " Plate	...	...	...	...	...	...
85321	557	" " complete, Nos. 85322, 85324 and eight 85323	...	...	...	...	...	...
SS50d	186	" " Screw	...	...	...	...	...	...
85325	186	" " " Washer	...	...	...	...	...	...
85691	558	Throat Plate	...	...	...	...	...	...
85692	558	Binder , complete, Nos. 85320, 85321, 85686, 85690, 85691, two each SS50d and 85325	...	...	...	...	...	...

BINDER, $\frac{1}{2}$ ", for Stay Work

No.	Plate							
85693	557	Feed Dog	...	...	...	...	...	...
85614		Folder	...	...	...	...	...	...
SS65d	1324	" Screw	...	...	...	...	...	...
85694		Presser Foot Bracket	...	...	...	...	...	...
85616		" " " Hinge Pin	...	...	...	...	...	...
85695		" " Sole	...	...	...	...	...	...
85696	557	" " (hinged), complete, Nos. 85616, 85694 and 85695	...	...	...	...	...	...
85324		Tape Tension Pin (bent)	...	...	...	...	...	...
85323		" " " (straight)	...	...	...	...	...	...
85322		" " Plate	...	...	...	...	...	...
85321	557	" " complete, Nos. 85322, 85324 and eight 85323	...	...	...	...	...	...
SS50d	186	" " Screw	...	...	...	...	...	...
85325	186	" " " Washer	...	...	...	...	...	...
85697	557	Throat Plate	...	...	...	...	...	...
85698	557	Binder , complete, Nos. SS50d, SS65d, 85321, 85325, 85614, 85693, 85696 and 85697	...	...	...	...	...	...

BINDER, $\frac{1}{2}$ ", for Stay Work

No.	Plate							
85699	186	Base	...	...	...	...	...	...
85597	186	Binder	...	...	...	...	...	...
85324		Tape Tension Pin (bent)	...	...	...	...	...	...
85323		" " " (straight)	...	...	...	...	...	...
85700	186	Binder and Tension only, complete, Nos. 85324, 85597, 85699 and nine 85323	...	...	...	...	...	...
SS50d	186	" Screw	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...
85701	186	Feed Dog	...	...	...	...	...	...
85702		Presser Foot Bracket	...	...	...	...	...	...
85703		" " " Hinge Pin	...	...	...	...	...	...
85704		" " Sole	...	...	...	...	...	...
85705	186	" " (hinged), complete, Nos. 85702 to 85704	...	...	...	...	...	...
85706	186	Throat Plate	...	...	...	...	...	...
85707	186	Binder , complete, Nos. SS50d, 85325, 85700, 85701, 85705 and 85706	...	...	...	...	...	...

BINDER, $\frac{9}{16}$ ", for Stay Work

No.	Plate								
85711	187	Base	...	...	...	...	...	...	...
85603	187	Binder	...	...	...	...	...	...	...
85604	187	Folder	...	...	...	...	...	...	...
207d	1688	" Screw	...	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...	...
85605	187	Tape Guide	...	...	...	...	...	...	...
85606	187	" " Bracket	...	...	...	...	...	...	...
207d	1688	" " " Screw	...	...	...	...	...	...	...
85325	186	" " " Washer	...	...	...	...	...	...	...
207d	1688	" " " Screw	...	...	...	...	...	...	...
85325	186	" " " Washer	...	...	...	...	...	...	...
85607	"	" Tension Pin	...	...	...	...	...	...	...
85712	187	Binder, Folder and Tension only, complete, Nos. 85603 to 85606, 85711, three each 207d, 85325 and seven 85607							
SS50d	186	Binder Screw	...	...	...	...	...	...	...
85325	186	" " Washer	...	...	...	...	...	...	...
85701	186	Feed Dog	...	...	...	...	...	...	...
85702	"	Presser Foot Bracket	...	...	...	...	...	...	...
85703	"	" " " Hinge Pin	...	...	...	...	...	...	...
85704	"	" " Sole	...	...	...	...	...	...	...
85705	186	" " (hinged), complete, Nos. 85702 to 85704	...	...	...	...	...	...	...
85706	186	Throat Plate	...	...	...	...	...	...	...
85713	187	Binder, complete, Nos. SS50d, 85325, 85701, 85705, 85706 and 85712							

CORDER (bowl), for Top Cording

No.	Plate								
85868	201	Corder Bow	...	...	...	...	...	...	...
85869	201	Presser Foot	...	...	...	...	...	...	...
759d	1324	" " Thumb Screw	...	...	...	...	...	...	...
85870	201	Corder (bowl), complete, Nos. 759d, 85868 and 85869							

CORDER, for Top Cording

No.	Plate								
85783		Base	...	...	...	...	...	...	...
85871		Guide Finger with 85414, 85872 and two 85416							
SS28b	1324	" " Adjusting Screw	...	...	...	...	...	...	...
85414		" " Eyelet	...	...	...	...	...	...	...
85413		" " Hinge Pin	...	...	...	...	...	...	...
879d	2035	" " Locking Thumb Screw	...	...	...	...	...	...	...
85872		" " Tip	...	...	...	...	...	...	...
85416		" " " Rivet	...	...	...	...	...	...	...
85873	1320	Corder only, complete, Nos. SS28b, 879d, 85413, 85783 and 85871							
85874	1320	Presser Foot	...	...	...	...	...	...	...
85875	1320	Corder, complete, Nos. SS41d, 85412, 85873 and 85874							
SS41d	1320	" Screw (to fasten to machine)	...	...	...	...	...	...	...
85412	1320	" " Washer	...	...	...	...	...	...	...

CORDER GUIDE (Adjustable)

No.	Plate								
85382		Extension Guide	...	...	...	...	...	...	...
228d	1324	" " Screw	...	...	...	...	...	...	...
85876		Presser Foot	...	...	...	...	...	...	...
85877	562	Corder Guide, complete, Nos. 228d, 85382 and 85876							
85881	562	Cording and Hemming Foot							
86182	562	Cording Foot (grooved on right side)							

CRIMPING SET

No.	Plate								
85882	557	Feed Dog	...	...	...	...	...	...	...
85883		Presser Foot	...	...	...	...	...	...	...
85391		" " Spring	...	...	...	...	...	...	...
219d	1324	" " " Screw	...	...	...	...	...	...	...
85884	557	" " complete, Nos. 219d, 85391 and 85883	...	...	...	...	...	...	...
85885	557	Throat Plate	...	...	...	...	...	...	...
85886	557	Crimping Set, complete, Nos. 85882, 85884 and 85885							

FELLING FEET

No.	Plate						
85896	201	Felling Foot, $\frac{3}{16}$ " fell	...	...	...	...	...
85897	562	" " (steel), $\frac{3}{16}$ " fell	...	...	...	...	...

FINGER GUARD

No.	Plate						
86417	1510	Finger Guard	...	...	...	...	...
102d	1324	" " Binding Screw	...	...	...	...	...
86478	1510	" " Bracket with 207f	...	...	...	...	...
207f	1688	" " " Screw	...	...	...	...	...
86479	1510	Finger Guard, complete, Nos. 102d, 86417 and 86478	...	...	...	...	...

GATHERING FEET

No.	Plate						
85955	562	Gathering Foot	...	...	...	...	...
86193	2545	" " (slotted)	...	...	...	...	...

HEMMERS

When ordering Hemmers state width of hem in addition to the part number

No.	Plate						
86005	88	Hemmer ($\frac{3}{16}$ " to $\frac{7}{8}$ ", in grades of $\frac{1}{16}$ ")	...	...	...	...	...
86008	88	" (1" to 1 $\frac{1}{4}$ ", in grades of $\frac{1}{8}$ ")	...	...	...	...	...
86010	88	" (1 $\frac{3}{8}$ " and 1 $\frac{1}{2}$ ")	...	...	...	...	...
85447	88	" Base with SS54e	...	...	...	...	...
SS54e	1324	" " Stud Screw	...	...	...	...	...
NN40d	88	" " " " Thumb Nut	...	...	...	...	...
85448	88	" " " " " Washer	...	...	...	...	...
85446		Hemmer Base, complete, Nos. NN40d, 85447 and 85448	...	...	...	...	...

HEMMER FEET

No.	Plate						
86025	562	$\frac{1}{16}$ " to $\frac{9}{32}$ " hem, in grades of $\frac{1}{32}$ "	...	...	...	...	...
86537		$\frac{1}{16}$ " flat sole	...	...	...	...	...
86538		$\frac{3}{32}$ " " " "	...	...	...	...	...
86539	1931	$\frac{1}{8}$ " " " "	...	...	...	...	...
86540		$\frac{5}{32}$ " " " "	...	...	...	...	...
86541		$\frac{3}{16}$ " " " "	...	...	...	...	...
86542		$\frac{7}{32}$ " " " "	...	...	...	...	...
86543		$\frac{1}{2}$ " " " "	...	...	...	...	...

HEMMER FEET—Contd.

No.	Plate						
86544		$\frac{1}{16}$ " flat sole, with groove	...	...	...	...	...
86545		$\frac{3}{32}$ " " " " "	...	...	...	...	...
86546	1931	$\frac{1}{8}$ " " " " "	...	...	...	...	...
86547		$\frac{5}{32}$ " " " " "	...	...	...	...	...
86548		$\frac{3}{16}$ " " " " "	...	...	...	...	...
86549		$\frac{7}{32}$ " " " " "	...	...	...	...	...
86550		$\frac{1}{2}$ " " " " "	...	...	...	...	...

PRESSER FOOT

No.	Plate						
86488	958	Presser Foot (narrow) for narrow tucking	...	...	...	...	...

QUILTER

No.	Plate						
86041	958	Clamp with 207d	...	...	...	...	...
207d	1688	" Screw	...	...	...	...	...
86042	958	Rod	...	...	...	...	...
86043	958	Quilter, complete, Nos. 86041 and 86042	...	...	...	...	...

TUCKERS (long arm)

No.	Plate						
36387	1315	Space Guide	...	...	...	...	...
35510	1315	" " Base with 35512, 35514 and two 1426e	...	...	...	...	...
102d	1317	" " " Screw	...	...	...	...	...
35511	1317	" " Indicator	...	...	...	...	...
35512	1317	" " Pin	...	...	...	...	...
35513	1317	" " Stop (left)	...	...	...	...	...
35514	1317	" " " (") Guide Pin	...	...	...	...	...
1426e	1317	" " " (") Screw Stud	...	...	...	...	...
1657d	1317	" " " (") Thumb Nut	...	...	...	...	...
17748	1317	" " " " (") " " Washer	...	...	...	...	...
35515	1317	" " " (right)	...	...	...	...	...
1426e	1317	" " " (") Screw Stud	...	...	...	...	...
1657d	1317	" " " (") Thumb Nut	...	...	...	...	...
17748	1317	" " " " (") " " Washer	...	...	...	...	...
50053d	2035	" " Thumb Screw	...	...	...	...	...
36388		Space Guide, complete, Nos. 35510, 35511, 35513, 35515, 36387, 50053d, two each 1657d and 17748	...	...	...	...	...

Knee Lifter

1507e — Rock Shaft Knee Plate Arm Bracket Position Nut S

No.	Plate								
5596	2028	Bell Crank	...	...	...	...	...	...	...
5598	2028	" "	5596 with 5599, 5601 and 5735	...	...	...	...	...	...
5599	2028	" "	Bracket	...	...	...	...	...	...
178e	1324	" "	" Screw	...	...	...	...	...	...
5601	2032	" "	Hinge Pin	...	...	...	...	...	...
5735	2032	" "	Spring	...	...	...	...	...	...

12237	2379	Lifting Lever with 448e	...	...	...	...	...	...	...
52028	2029	" "	Connecting Rod	...	...	...	...	...	...
12416	1316	" "	" " Joint	...	...	...	...	...	...
76d	1324	" "	" " " Hinge Screw	...	...	...	...	...	...
1521e	2034	" "	" " Lock Nut	...	...	...	...	...	...
802d	2035	" "	Hinge Screw	...	...	...	...	...	...
12241	1316	" "	Link	...	...	...	...	...	...
766d	1324	" "	" Hinge Screw	...	...	...	...	...	...
12240	1316	" "	Pin	...	...	...	...	...	...
448e	1324	" "	" Set Screw	...	...	...	...	...	...

2763	2379	Rock Shaft	...	...	...	...	...	...	...
97502	1815	" "	Bracket	...	...	...	...	...	...
		" "	" Screw (wood) 1" No. 10	...	...	...	...	...	...
2765	2379	" "	Knee Arm	...	...	...	...	...	...
2768		" "	" " 2765 with 2766 and 2767	...	...	...	...	...	...
2766	2379	" "	" " Hub with 356e	...	...	...	...	...	...
356e	1324	" "	" " Set Screw	...	...	...	...	...	...
2767	2379	" "	" " Plate with 356e	...	...	...	...	...	...
356e	1324	" "	" " Set Screw	...	...	...	...	...	...
6337	2379	" "	Lifting Bracket with two 356e	...	...	...	...	...	...
2778	2379	" "	" " Hook	...	...	...	...	...	...
356e	1324	" "	" " Set Screw	...	...	...	...	...	...
356e	1324	" "	" " Set Screw	...	...	...	...	...	...
2770	2379	" "	Stop Dog with 356e	...	...	...	...	...	...
356e	1324	" "	" " Set Screw	...	...	...	...	...	...

84789 2379 **Rock Shaft**, complete, Nos. 2763, 2768, 2770, 2778, 6337, two 97502 and four wood screws 1" No. 10

85246 — **Knee Lifter**, complete, Nos. 76d, 766d, 802d, 1521e, 5598, 12237, 12240, 12241, 12416, 52028, 84789 and two 178e

No.	Plate								
35517	1309	Tuck Guide Arm	...	...	...	...	...	...	...
1177d	1317	" " " Screw	...	...	...	...	...	...	...
35518	1309	" " Base	...	...	...	...	...	...	...
50134e	1317	" " " Screw Stud	...	...	...	...	...	...	...
36389	1309	" " Bracket	...	...	...	...	...	...	...
307e	1317	" " " Screw Centre	...	...	...	...	...	...	...
1513j	1317	" " " " Nut	...	...	...	...	...	...	...
36390	1317	" " " Spring	...	...	...	...	...	...	...
36391	1315	" " " " Plate	...	...	...	...	...	...	...
9d	1317	" " " " Screw	...	...	...	...	...	...	...
423e	1317	" " " Stop Screw	...	...	...	...	...	...	...
1520r	1317	" " " " Nut	...	...	...	...	...	...	...
36392	1309	" " Frame	...	...	...	...	...	...	...
36393	1317	" " " Spring	...	...	...	...	...	...	...
1510e	1317	" " " " Nut	...	...	...	...	...	...	...
35524	1317	" " " " Washer	...	...	...	...	...	...	...
803e	1317	" " " Stop Screw	...	...	...	...	...	...	...
1520r	1317	" " " " Nut	...	...	...	...	...	...	...
35511	1317	" " Indicator	...	...	...	...	...	...	...
35525	1309	" " Plate	...	...	...	...	...	...	...
1115f	1317	" " Screw	...	...	...	...	...	...	...

36394 Tuck Guide, complete, Nos. 9d, 423e, 803e, 1510e, 35511, 35517, 35518, 35524, 35525, 36389 to 36393, 50134e, two each 307e, 1115f, 1177d, 1513j, 1520r and three wood screws 1 1/4" No. 10

36395 **Tucker** (long arm), complete, 35528, 36388, 36394 and two 402d

52031 967 Feed Dog for shirt work

35528 1510 Presser Foot (wide) for 36395

40322 1510 " " (narrow) for 36395

36654 1510 " " for tucking shirt bosoms, for 36670

52032 Throat Plate, large needle hole, for 52031

52033 967 " " small " " " 52031

36670 **Tucker** (long arm), complete, for tango tucking, Nos. 36388, 36391, 36654 and two 402d

Knife Grinder

FOR 96K45 MACHINE

for Nos. 127026 and 127027

No.	Plate							
27565	2380	Emery Wheel, 2" diam.	...	...	...	...	...	...
1508j	22214	" " Clamping Nut	...	...	...	...	...	...
27822	22214	" " " " Washer	...	...	...	...	...	...
27567	22214	" " Shaft	...	...	...	...	...	...
60934	"	" " 27567 with 1508j, 27565, 27569 and 27822	...	...	...	...	...	...
27568	22214	" " " Oil Hole Cover (rubber)	...	...	...	...	...	...
27569	22214	" " " Pulley	...	...	...	...	...	...
310k	22214	" " " Screw Centre	...	...	...	...	...	...
1516j	22214	" " " " " Nut	...	...	...	...	...	...
27564	2380	Frame with 27574	...	...	...	...	...	...
899j	2214	Knife Clamping Screw	...	...	...	...	...	...
126304	—	" Holder Body	...	...	...	...	...	...
126305	22214	Knife Holder, complete, Nos. 899j, 27660 and 126304	...	...	...	...	...	...
27323	22214	" " Guide Bar	...	...	...	...	...	...
27572	2380	" " " " Bracket with 27574	...	...	...	...	...	...
310k	22214	" " " " " " Screw Centre	...	...	...	...	...	...
1516j	22214	" " " " " " " " Nut	...	...	...	...	...	...
27573	22214	" " " " " " Spring	...	...	...	...	...	...
27574	22214	" " " " " " Hook	...	...	...	...	...	...
27659	22214	" " Stop Collar with 237k	...	...	...	...	...	...
237k	22214	" " " " Set Screw	...	...	...	...	...	...
27660	"	" Position Pin	...	...	...	...	...	...
261j	22214	" Regulating Thumb Screw	...	...	...	...	...	...
27662	2380	Wrench for 1508 and 1516	...	...	...	...	...	...
60583		Knife Grinder, Nos. 261j, 27323, 27564, 27572, 27573, 27659, 60934, two 27568, four each 310k and 1516j	...	...	...	...	...	...
126306		Knife Grinder, complete, Nos. 27662, 60583, 126305 and three wood screws 1" No. 10	...	...	...	...	...	...

Knee Lifter

FOR 96K45 MACHINE

1507e

Rock Shaft Knee Plate Arm Bracket Position Nut

No.	Plate							
5596	2028	Bell Crank	...	...	...	...	...	...
62919	"	" " 5596 with 5601 and 62920	...	...	...	...	...	...
62920	2648	" " Bracket	...	...	...	...	...	...
178e	1324	" " " Screw	...	...	...	...	...	...
5601	2032	" " Hinge Pin	...	...	...	...	...	...
5735	2032	" " Spring	...	...	...	...	...	...
62921	"	" " complete, Nos. 5735 and 62919	...	...	...	...	...	...
20340	2648	Lifting Lever with 448e	...	...	...	...	...	...
12415	2648	" " Connecting Rod	...	...	...	...	...	...
12416	1316	" " " " " Joint	...	...	...	...	...	...
76d	1324	" " " " " Hinge Screw	...	...	...	...	...	...
1521e	2034	" " " " " Lock Nut	...	...	...	...	...	...
802d	2035	" " Hinge Screw	...	...	...	...	...	...
12241	1316	" " Link	...	...	...	...	...	...
766d	1324	" " " Hinge Screw	...	...	...	...	...	...
16586	2648	" " Pin	...	...	...	...	...	...
448e	1324	" " " Set Screw	...	...	...	...	...	...
2763	2379	Rock Shaft	...	...	...	...	...	...
139633	"	" " 2763 with 2770, 6337 and 139623	...	...	...	...	...	...
97502	1815	" " Bracket	...	...	...	...	...	...
2765	2379	" " " Screw (wood) 1" No. 10	...	...	...	...	...	...
2768	"	" " Knee Arm	...	...	...	...	...	...
2766	"	" " " " 2765 with 2766 and 2767	...	...	...	...	...	...
356e	1324	" " " Hub with 356	...	...	...	...	...	...
2767	2379	" " " " Set Screw	...	...	...	...	...	...
356e	1324	" " " Plate with 356e	...	...	...	...	...	...
6337	2379	" " " Set Screw	...	...	...	...	...	...
139623	2648	" " Lifting Bracket with two 356e	...	...	...	...	...	...
356e	1324	" " " Hook	...	...	...	...	...	...
356e	1324	" " " " Set Screw	...	...	...	...	...	...
2770	2379	" " " " Set Screw	...	...	...	...	...	...
356e	1324	" " " " Set Screw	...	...	...	...	...	...
93815	"	" " Stop Dog with 356	...	...	...	...	...	...
88620	"	" " " Set Screw	...	...	...	...	...	...
		" " complete, Nos. 2768, 139633, two 97502 and four wood screws 1" No. 10	...	...	...	...	...	...
		Knee Lifter, complete, Nos. 76d, 766d, 802d, 1521e, 12241, 12415, 12416, 16586, 20340, 62921, 93815 and two 478e	...	...	...	...	...	...

Thread Unwinder

FOR TWO SPOOLS OF THREAD

No.	Plate								
228692	1503	Spool Pin	...	...	...	...	...	...	...
201528h	1503	" " Nut	...	...	...	...	...	...	...
82538	1503	" " Washer	...	...	...	...	...	...	...
225257	1621	" Rest with 201018c, two each 82538, 201528h and 228692							
150203		" " Cushion (felt)	...	...	...	...	...	...	...
225388	1621	" " Rod	...	...	...	...	...	...	...
200383c	2034	" " " Set Screw	...	...	...	...	...	...	...
201018c	2034	" " Set Screw	...	...	...	...	...	...	...
202490	1621	" Stand with 200383c	...	...	...	...	...	...	...
225391	1621	Thread Guide	...	...	...	...	...	...	...
201696j	2034	" " Lock Nut	...	...	...	...	...	...	...
225326		" " Position Cup	...	...	...	...	...	...	...
225324	1621	" " Rod with 208c and 225322	...	...	...	...	...	...	...
208c	2035	" " " Screw	...	...	...	...	...	...	...
225322		" " " Washer	...	...	...	...	...	...	...
225258	1621	Thread Unwinder, complete, Nos. 201696j, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws $\frac{7}{8}$ " No. 12	...	...	...	...	...	...	...
27739		Thread Cone (wood) for large cones	...	...	...	...	...	...	...
225390		" " Holder for inverted cones	...	...	...	...	...	...	...

NOTE: - Nos. 27739 and 225390 are used with, but not included in 225258.