SECOND EDITION





CATALOG NO. 83L

STYLES 61200 61300

LIST OF PARTS
LOCK STITCH MACHINES

PROPERTY OF DEVELOPMENT/CATALOG DEFT.

Pieass return to the Catalog Dept.

Date received to file: DEC 08 199

Catalog No. 83 L Second Edition

LIST OF PARTS

Styles in Classes

61200 61300

The Lockstitch Machine

The parts listed in this catalog are furnished at list prices for repairs only

Second Edition

Copyright 1939
By
Union Special Machine Co.
Rights Reserved In All Countries

Union Special Machine Company Chicago U.S.A.

Printed in U.S.A.

OFFICES, SERVICE STATIONS. FOREIGN DISTRIBUTORS

★ CHICAGO, ILL. Union Special Machine Co., 404 N. Franklin St. Main Office and Factory. T. S. Whitsel, Gen. Sales Mgr. J. W. McLain, Asst. Gen. Sales Mgr. L. C. Morris, Foreign Sales Mgr. A. E. Brauch, District Sales Mgr. T. C. Wiebers, Office

Mgr. Tel. Superior 6920.
ALLENTOWN, PA. 1749 Turner St.
P. O. Box 1253. W. L. Johnson. Tel.

* ATLANTA, GA. 155 Spring St. P. T. McLendon, Mgr. Tel. Main 3377.

BALTIMORE, MD. 34 S. Eutaw St. H. A. McGwier. Tel-Plaza 8499.

**BOSTON, MASS. 210 Lincoln St. C. E.

Stevens, Mgr. Tel. Liberty 0148.

★ CINCINNATI, O. 422 Temple Bar Bldg. W. E. LeRoy, Mgr. Tel. Parkway 2521.
CLEVELAND, O. 1276 W. Third St. K.
D. Bear. Tel. Main 9657.
DETROIT, MICH. 2725 Boston Blvd. W.
J. F. Livingston. Tel. Tyler 6-4118.
FT. WORTH, TEX. 912 Morningside
Drive. H. M. Petershagen. Tel. 4-7776.

GREENSBORO, N. C. 402 S. Mendenhall St. L. F. McGwier, Tel. 6301.
GREENVILLE, S. C. 207 Cleveland St.
F. E. Hodtum. Tel. 2581-W.
JOHNSON CITY, N. Y. 49 Cherry St.

Wm. Browne, Tel. 7-3179.

KANSAS CITY, MO. 5014 College Ave.
T. O. Biggers. Tel. Wabash 6966.

LOS ANGELES, CAL. 1303 So. Main
St. C. E. Downs. Tel. Proceed 5636.

MINNEAPOLIS, MINN. 3608 27th Ave. So., R. W. Bredahl. Tel. Drexel 3331.

MONTREAL, QUE. Blvd. St. Laurent at Prince Arthur. S. J. Storey. Tel. LA 7944.

NASHVILLE, TENN. Observatory Drive. W. J. Brauch. Tel. 7-3984.

NEWARK, N. J. 60 Park Place. H. K. Lanning. Tel. Market 3-3123. NEW ORLEANS, LA. 202 Godchaux

Bldg. M. O. Moulton. Tel. Raymond 8137

*NEW YORK, N. Y. 116 E. 27th St. Wm. Bleicher. Mgr. Tel. Murray Hill 4-4665 or 4-4666.

★ PHILADELPHIA, PA. 401 N. Broad St. T. M. Murphey, Mgr. Tel. (Bell) Walnut 3131, (Key.) Race 1078.
PITTSBURGH, PA. 3217 Pinehurst Ave.

R. G. Timm. Tel. Locust 1086.

POTTSVILLE, PA. 20 South Center St.
L. J. Perrin. Tel. 2508-J.

*ST. LOUIS, MO. 1127 Pine St. E. E.
Gratsch, Mgr. Tel. Main 1776.

★SAN FRANCISCO, CAL. 371 4th St. J. M. Biddle, Mgr. Tel. Garfield 7999. SEATTLE, WASH. 107 Cherry St., R. M.

Seay. Tel. Seneca 2420-2421. *TORONTO, ONT. 137 Wellington St. W. G. A. Rundle, Mgr. Tel. Adelaide

UTICA, N. Y. 329 Jay St. P. J. Steeper, Tel. 4-6422

WATERFORD, N. Y. 22 Fourth St. A. J.

Brown. Tel. 467. WINNIPEG, MAN. 1065 Dominion St. Walter Baldwin. Tel. 24244.

YORK, PA. 837 Florida Ave. Wm. Denholm. Tel. 64196.

OVERSEAS

AFRICA—Capetown, Durban, Johannes-burg, Port Elizabeth, South Africa. Port Louis, Mauritius.

ASIA-Hong Kong, Shanghai, and Tientsin, China. Bombay and Calcutta, India. Osaka and Tokyo, Japan. Manila, P. I.

AUSTRALIA — Brisbane, Melbourne,

Perth, Sydney. EUROPE—Vienna, Austria. Brussels, Belgium. Copenhagen, Denmark. Leicester and London, England. Helsingfors, Finland. Paris and Lyons, France. Berlin, Chemnitz, Ebingen, Erfurt, Frankfurt am Main, Koln, Stuttgart, Germany. Milan, Italy. Oslo, Norway. Oporto, Portugal. Dundee and Glasgow, Scotland. Barcelona, Spain. Boras and Stockholm, Sweden. Zurich, Switzerland. NEW ZEALAND — Auckland, Christ-

church, Dunedin, Wellington.

NORTH AMERICA — Havana, Cuba.

Mexico City and Monterey, Mexico. Jamaica, B. W. I. San Juan, P. R.

PACIFIC ISLANDS — Honolulu, Hawaii.

Sourabaya, Java. SOUTH AMERICA—Buenos Aires, Argentina. Porto Alegre, Sao Paulo, Recife, Brazil. Santiago, Chile. Barranquilla, Bogota, Medellin, Colombia. Guayaquil, Ecuador. Lima, Peru. Montevideo, Uruguay. Caracas, Venezuela.

IDENTIFICATION OF MACHINES

Each Union Special carries a style number which is stamped in the name plate on the machine. Style numbers are classified as standard and special. Those which are standard have one or more letters suffixed, but never contain the letter "Z". Example: 61200 C. Style numbers which contain the letter "Z" are special.

Styles of machines similar in construction are grouped under a class number which differs from the style number in that it contains no letters. Example: 61200.

APPLICATION OF CATALOG

This catalog applies only to the standard styles of machines as listed herein. It can also be applied with discretion to the special machines in these classes.

STYLES OF MACHINES IN CLASS 61200

Short Arm Lockstitch

- 61200 C Short Arm Lockstitch, 5/16 inch sewing capacity, equipped with oil cup for hook unit and air pump.
- 61200 F Same as 61200 C except oil cup for hook unit and air pump are omitted.

STYLES OF MACHINES IN CLASS 61300

Long Arm Lockstitch

- 61300 C Long Arm Lockstitch, 5/16 inch sewing capacity, equipped with oil cup for hook unit and air pump.
- 61300 E Same as 61300 C except it is high throw with 7/16 inch sewing capacity and oil cup for hook unit and air pump omitted.
- 61300 F Same as 61300 C except oil cup for hook unit and air pump are omitted.

NEEDLES

TYPE NUMBERS AND SIZES

Each needle has a type number and size number. The former denotes the kind of shank, point, length of groove, finish, and other details. The latter denotes the largest diameter of the blade, measured in thousandths of an inch across the eye, and is stamped in the needle shank. Collectively, the type number and the size number is the complete symbol.

NEEDLES (Cont'd)

TYPE NUMBERS AND SIZES (Continued)

To have orders promptly and accurately filled, the empty package, a sample needle, or the type and size number should be given. See marks on packages. An intelligent order would read as follows: "1000 Needles Type 180 Size 040".

The following types and sizes are available.

Type No.

Description and Sizes

- Round shank, round point, lock stitch, short length, standard length blade, single groove, ball eye, spotted, nickel plated-sizes 028, 032, 036, 040, 044, 048, 054, 060
- 180 A Round shank, round point, lock stitch, short length, short blade, single groove, ball eye, spotted, nickel plated-sizes 032, 036, 038, 040, 044
- Round shank, round point, lock stitch, short length, standard length blade, single groove, ball eye spotted, chromium plated- sizes 032, 036, 040, 044, 048, 054, 060
- 181 A Round shank, round point, lock stitch, short length, short blade, single groove, uniform blade, spotted, nickel plated- sizes O22, O24, O26, O28, O30

USES

Types 180 and 180 G are designed for the general run of work, Types 180 A and 181 A for the lighter grades of work. All four types have the same overall length and the same distance from the butt to the top of the eye, consequently, they will interchange without readjusting the height of the needle bar.

ORDERING REPAIR PARTS

PLATES

Grouped, according to scale, will be found illustrations of parts similar in appearance, and, to some extent, component parts that go in the same subdivision of the mechanism.

When a given design of part is made in two or more sizes, only one illustration is usually shown. In ordering these pieces, it is necessary that the additional information be furnished as requested under these illustrations.

ORDERING REPAIR PARTS (Continued)

LIST OF PARTS

Turning from the plates to the list of parts, the description of each part and its principal uses will be found. Always check the symbol against its description before ordering. It is not necessary to furnish the plate number.

When a part is used, or can be used, in all machines covered by this catalog, no specific use is mentioned in the description.

For convenience in ordering, minor parts such as screws, nuts, and similar articles are repeated after each major part.

(-) A dash in the "plate number" column of the list of parts denotes the absence of an illustration.

(1) A double dagger in the "symbol to order by" column denotes that the component parts cannot be furnished separately.

IDENTIFYING PARTS

Where the construction permits, each part is stamped with its part number. Some of the smaller parts are stamped with an identification letter to distinguish them from parts similar in appearance.

All part numbers represent the same part, regardless of the catalog in which they appear.

SUPPLIES

All supplies, including taps, reamers, belting, belt hooks, belt fasteners, belt pliers, screw drivers, wrenches and powdered oil stone will be promptly furnished.

USE GENUINE NEEDLES AND REPAIR PARTS


Success in the operation of these machines can be secured only by the use of genuine Union Special Needles and Repair Parts as furnished by the Union Special Machine Company, its subsidiaries and authorized distributors. Gb-viously, it is to our interest to maintain the reputation of Union Specials by furnishing the very best goods obtainable. They are designed according to the most approved scientific principles, and are made with the utmost precision. The maximum efficiency and durability are assured.

Genuine needles are put up in packages marked at the top "Trade 'UNION SPECIAL' mark". Genuine repair parts are stamped with a reproduction of the well known two padlocks with a link connecting the shackles. Both trade marks are symbolic of superlative excellence. All other needles and parts are bogus.

ORDERING REPAIR PARTS (Cont'd)

TERMS

Prices are strictly "net cash" and are subject to change without notice. Express and freight shipments are forwarded at the buyer's risk, f.o.b. shipping point. Parcel post shipments are insured unless otherwise directed. A charge is made to cover the postage and insurance.

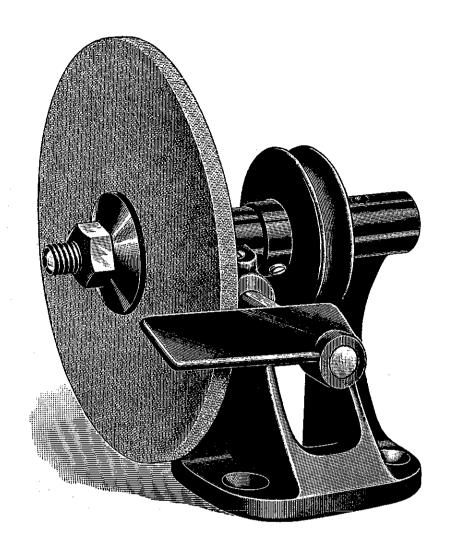

21394 Utility Grinder

Plate 1- Full Size

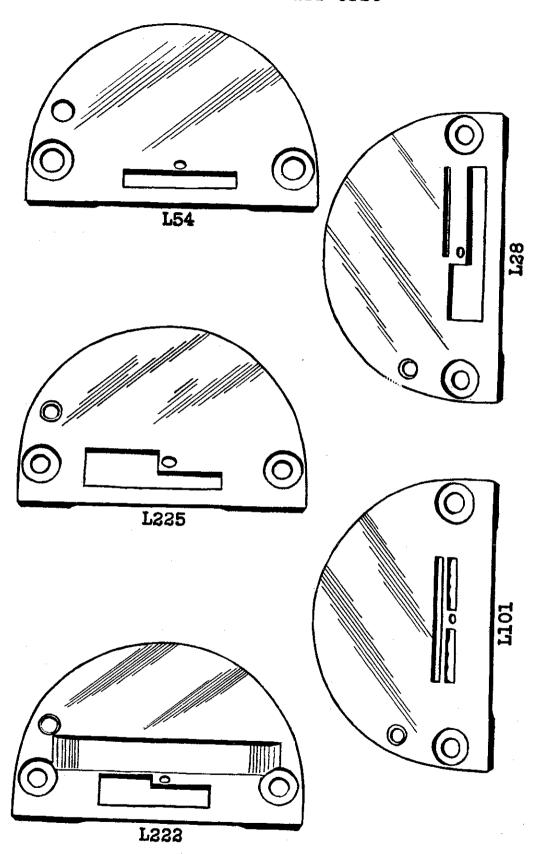


Plate 2- Full Size

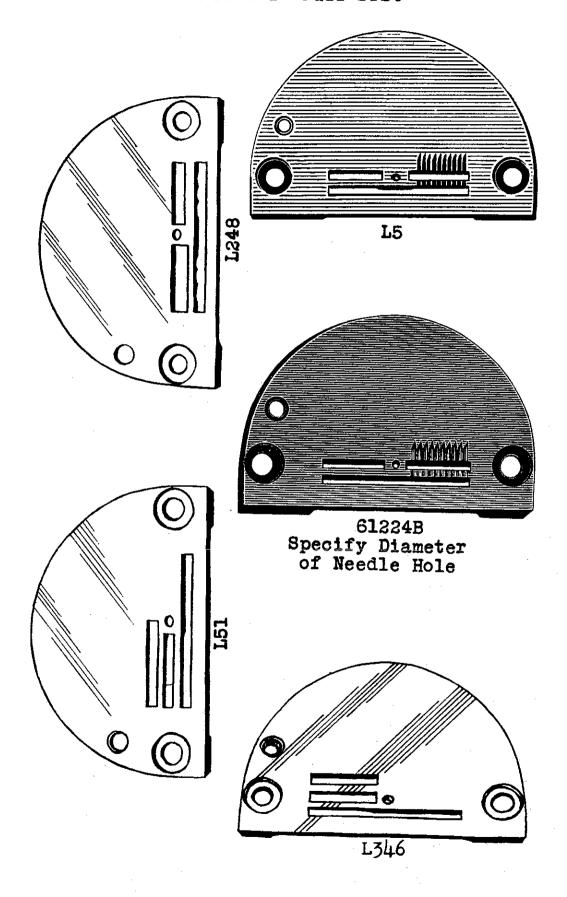


Plate 3- Full Size

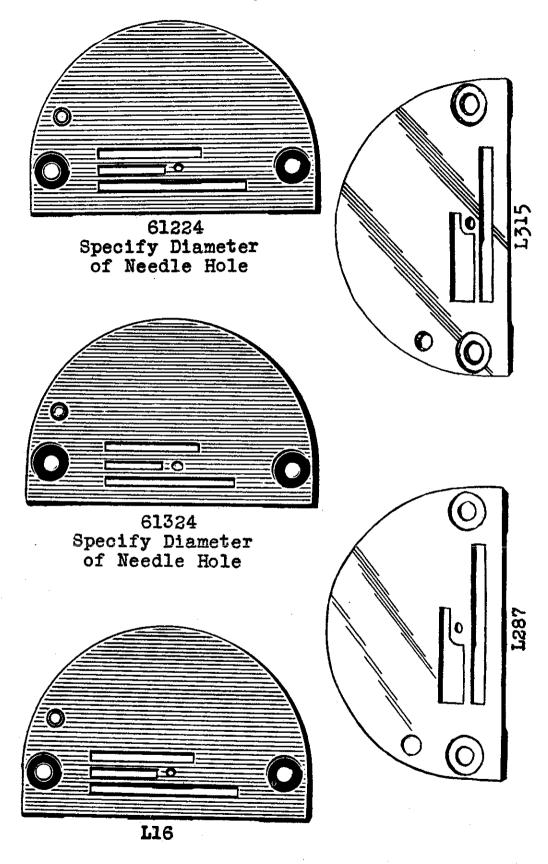


Plate 4- Full Size

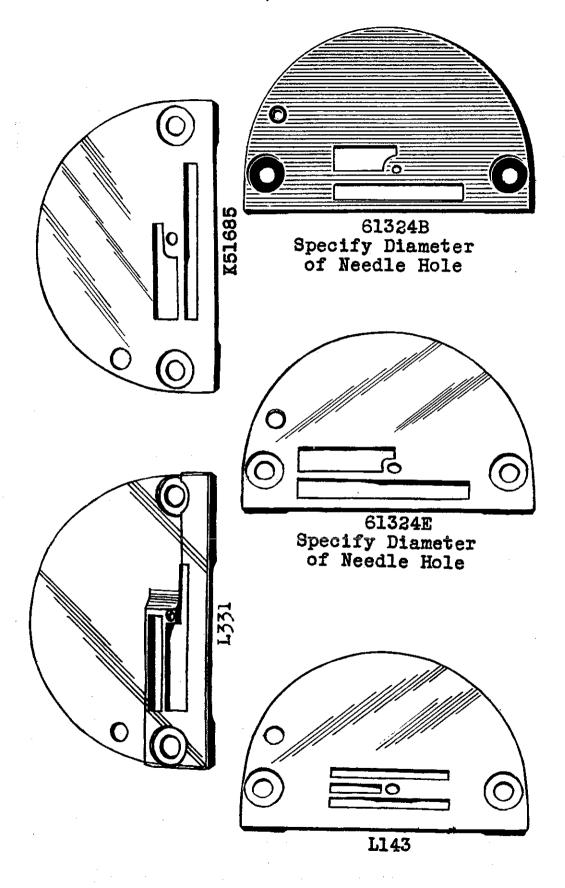


Plate 5- Full Size

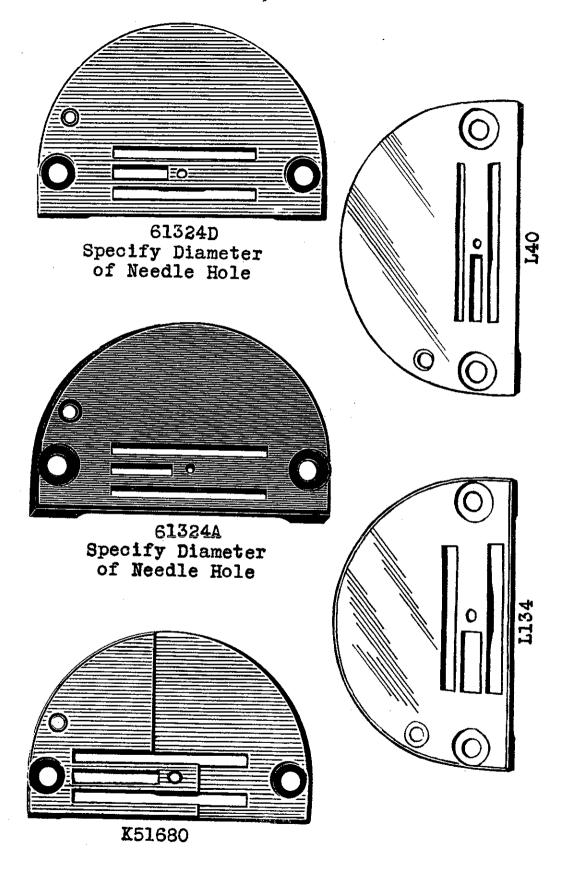
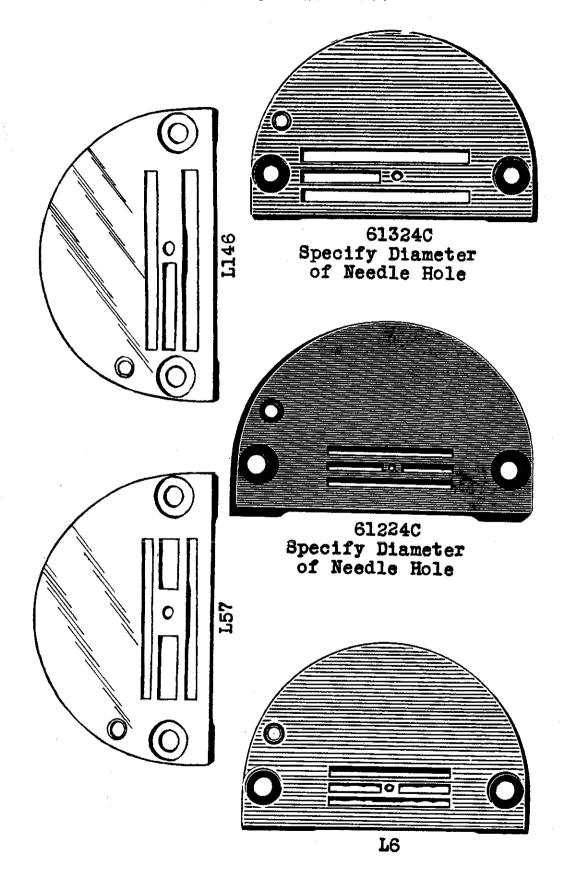


Plate 6- Full Size






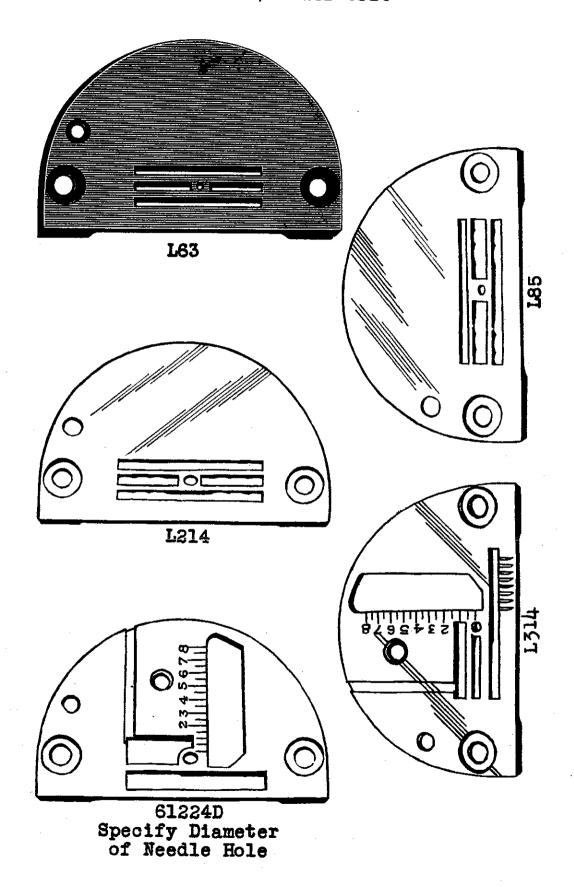


Plate 8- Full Size

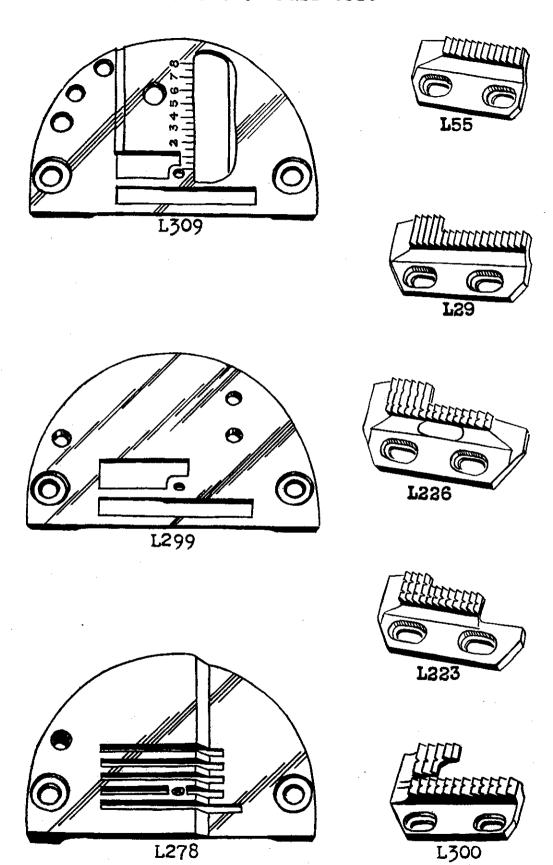

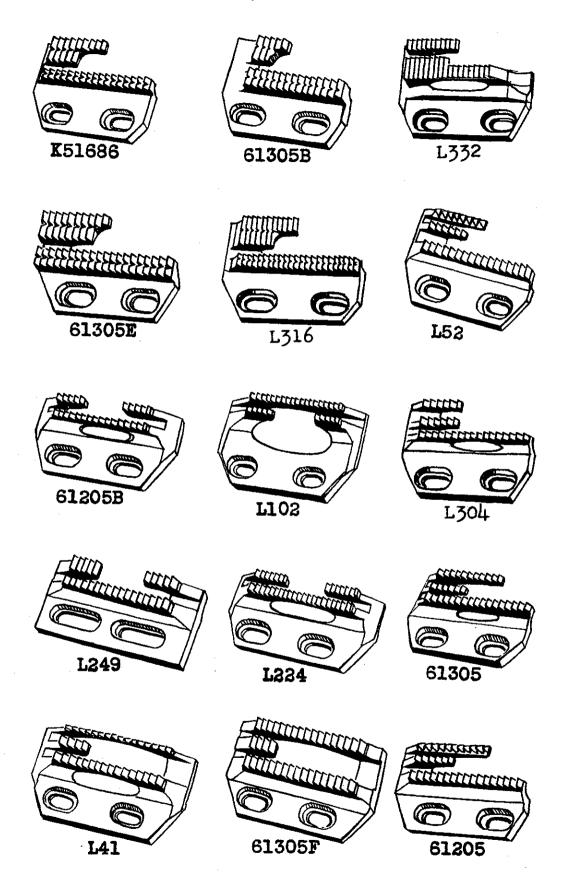

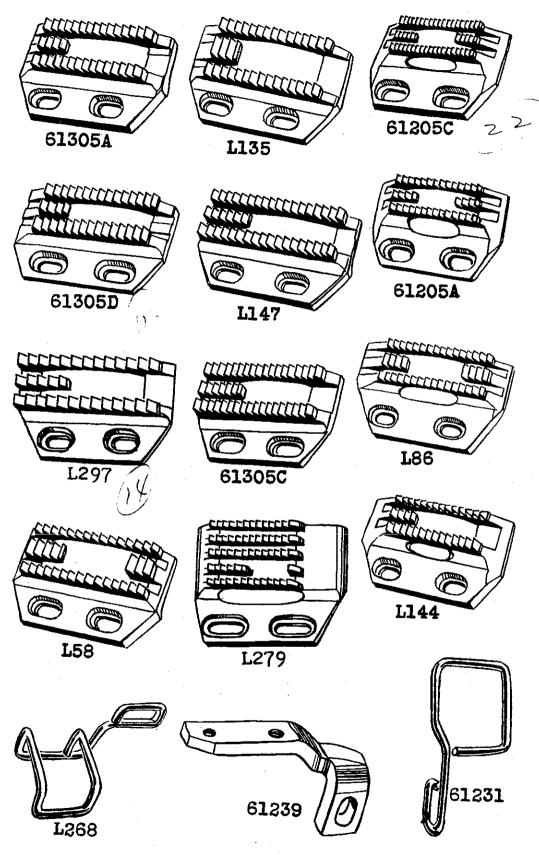

16

Plate 11- Full Size

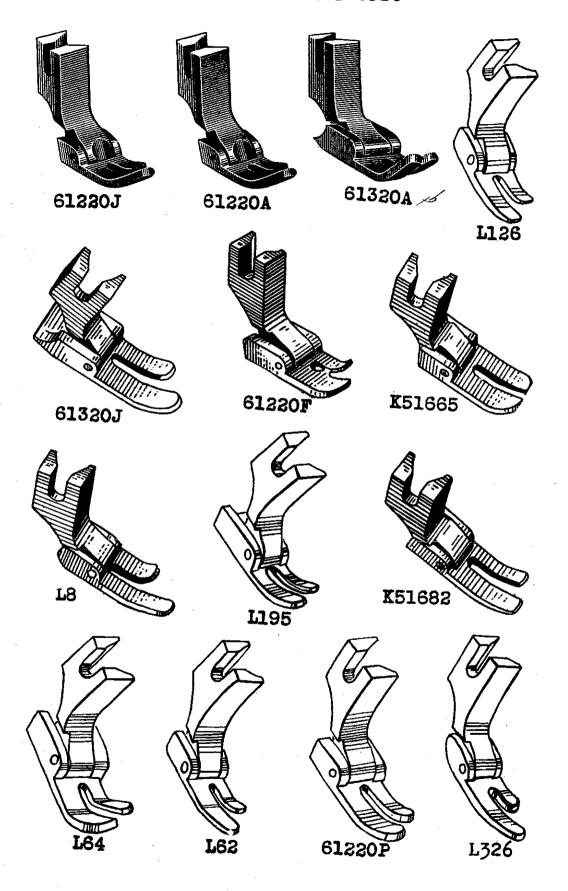
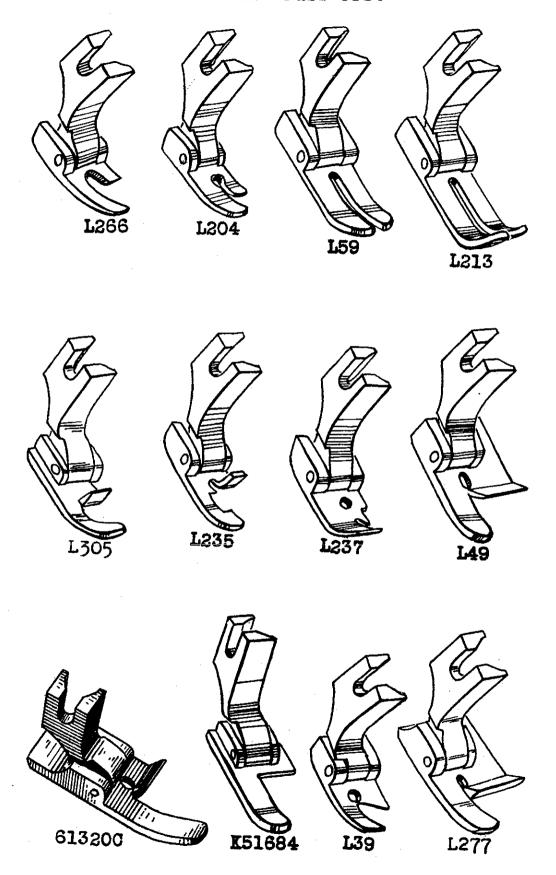


Plate 12- Full Size



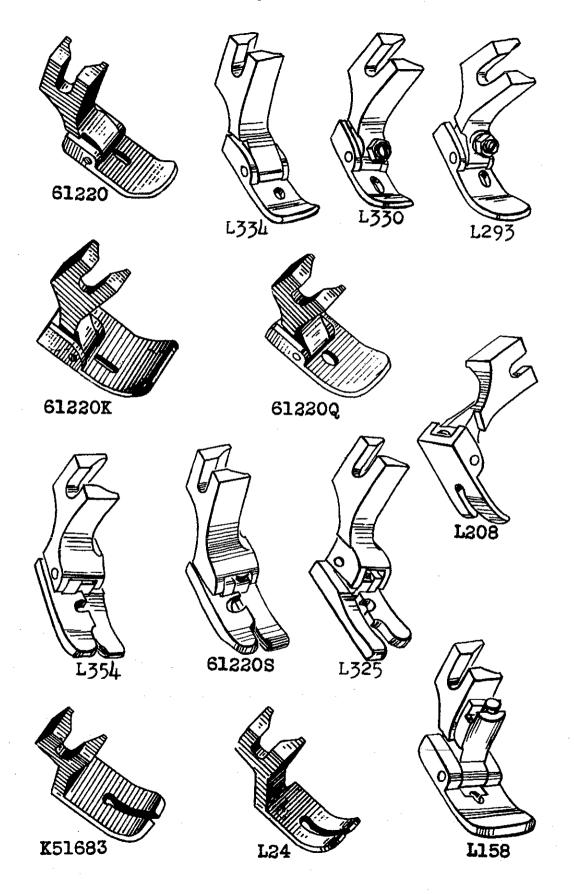


Plate 14- Full Size

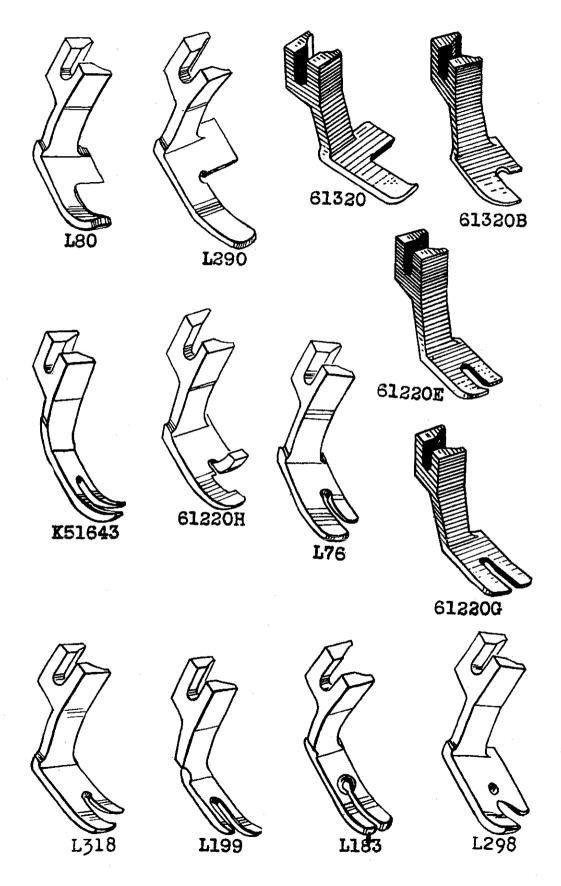


Plate 15- Full Size

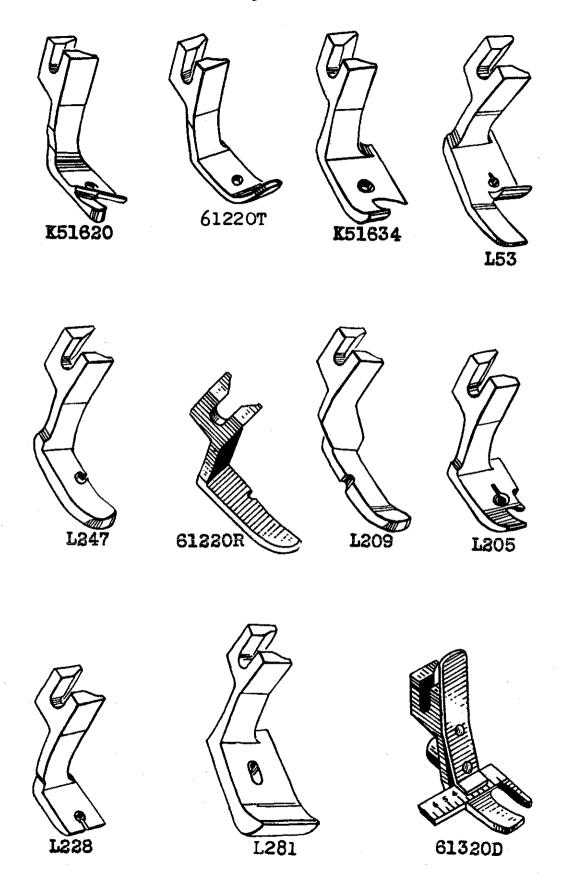


Plate 16- Full Size

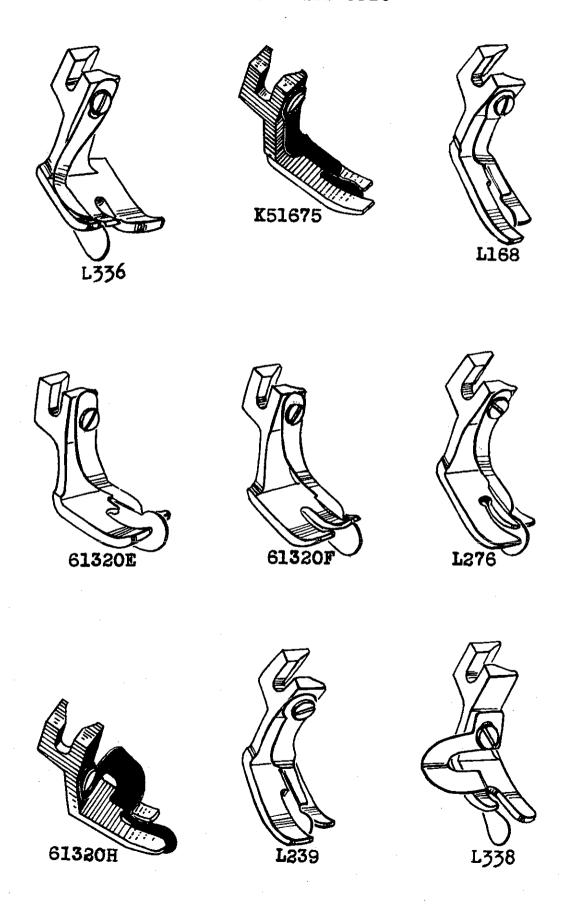
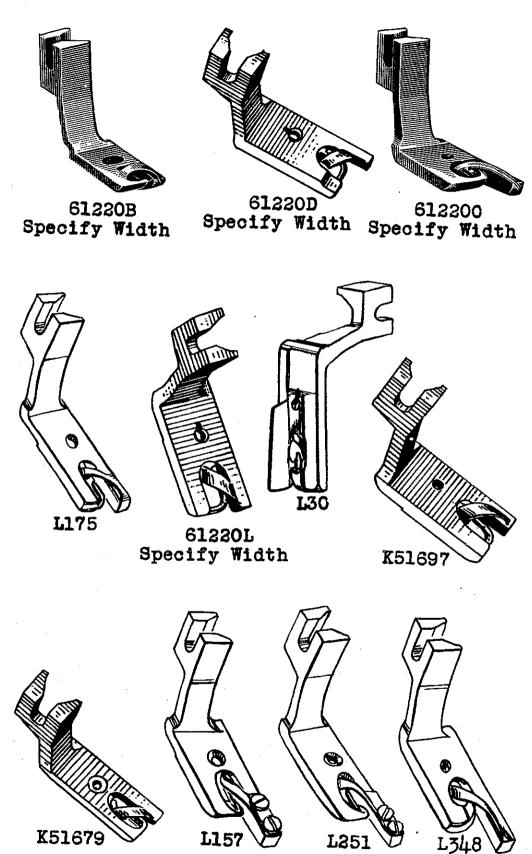


Plate 17- Full Size



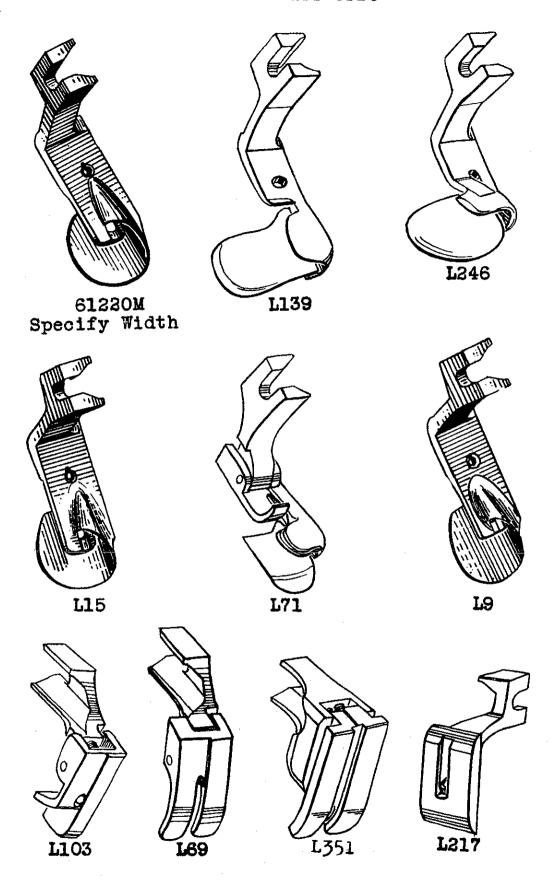


Plate 19- Full Size

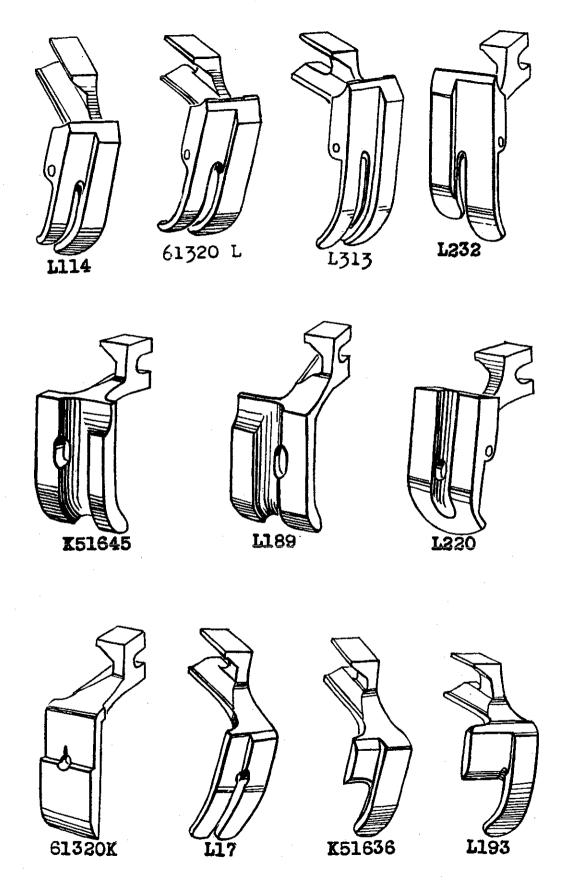


Plate 20- Full Size

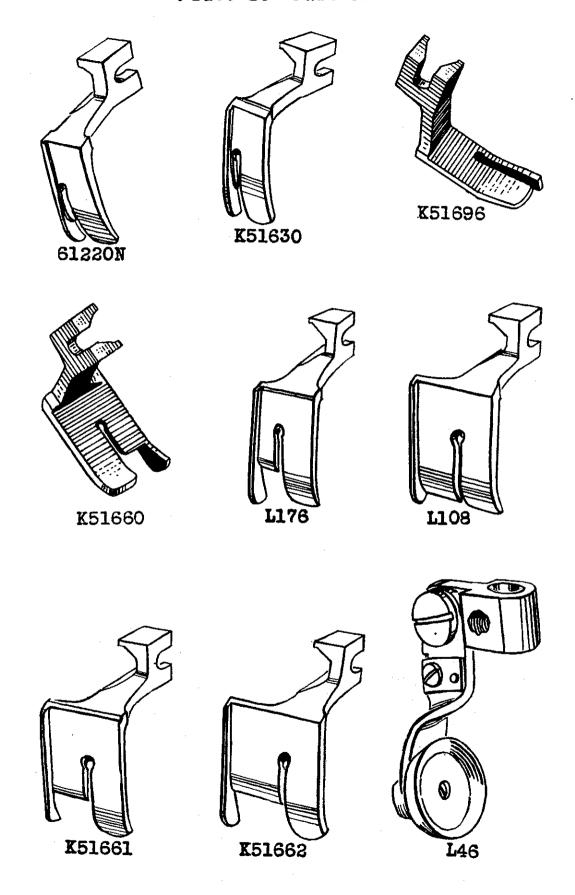
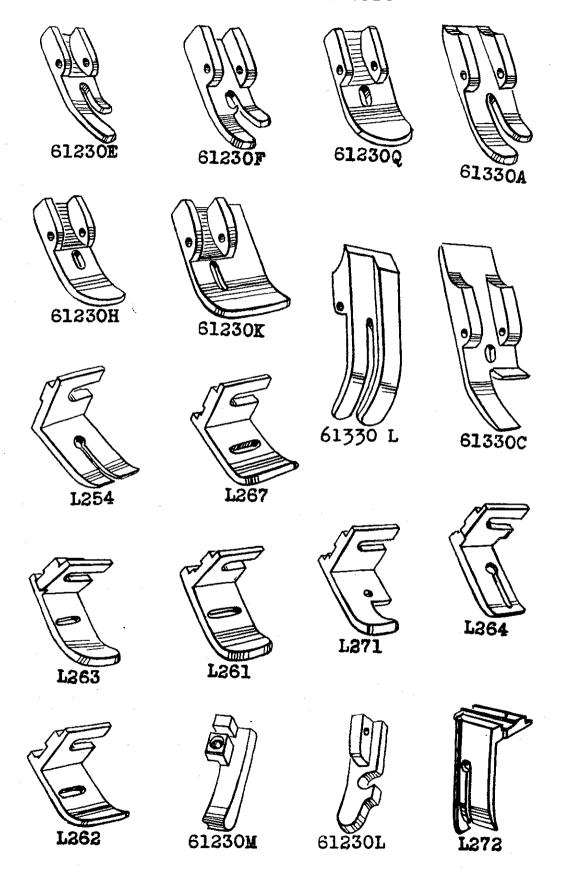
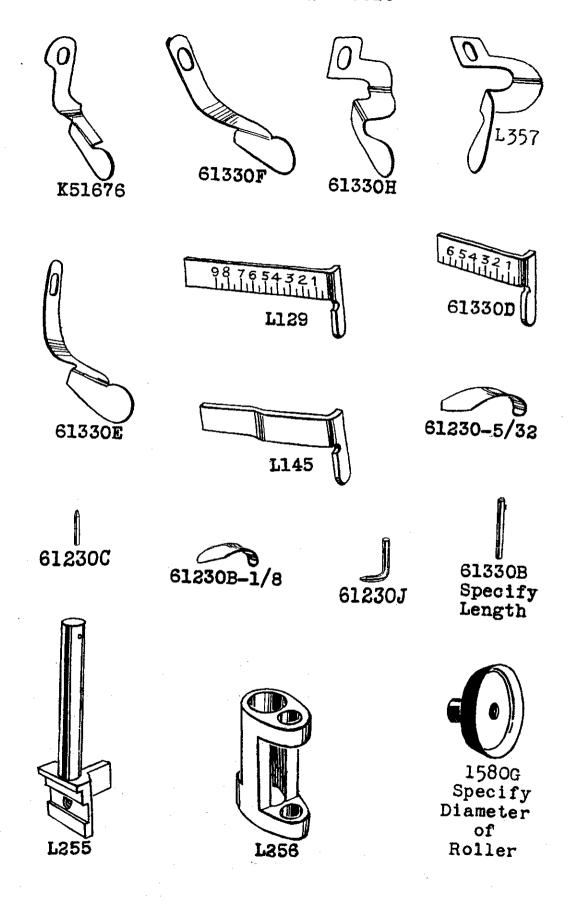


Plate 21- Full Size







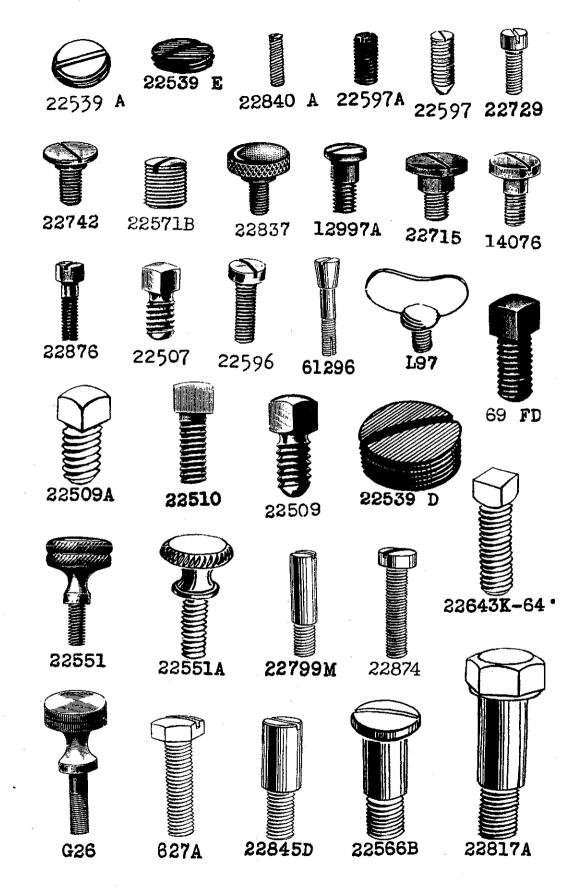
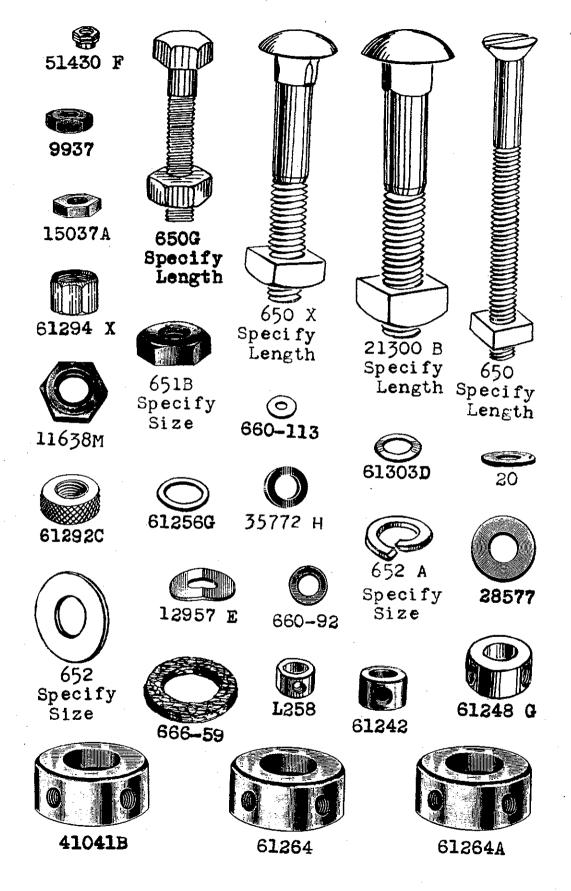
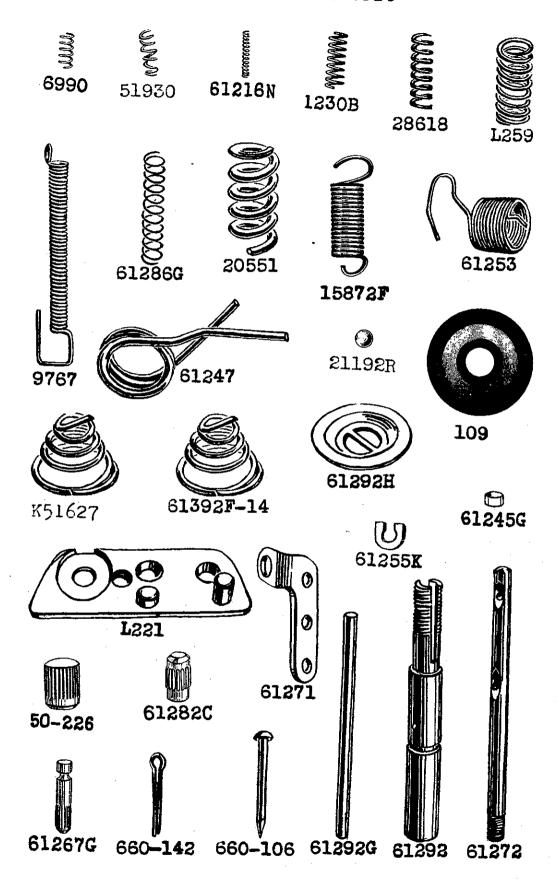


Plate 25- Full Size





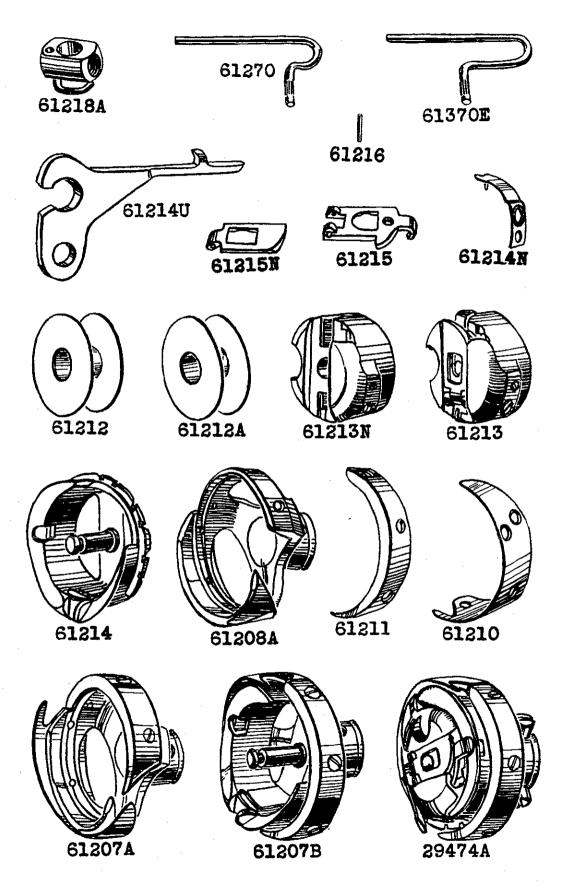


Plate 28- Full Size

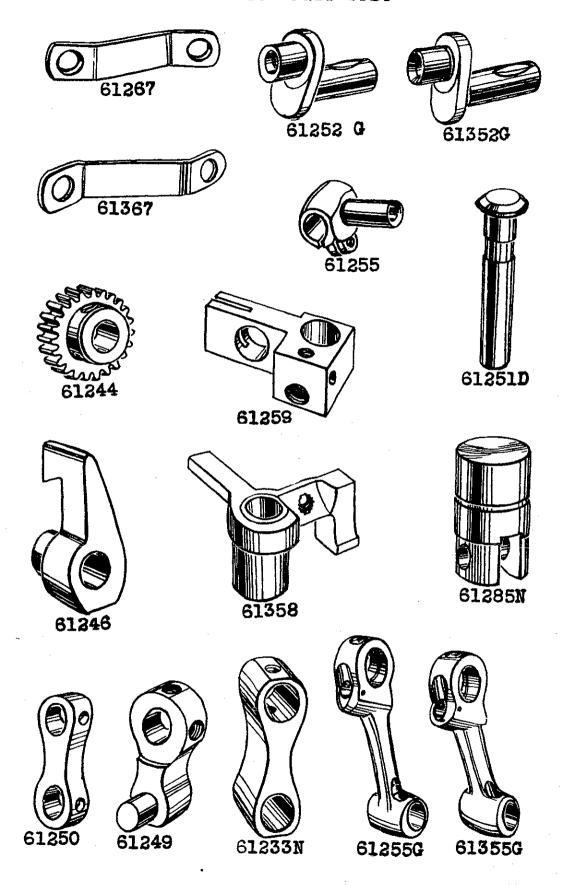


Plate 29- Full Size

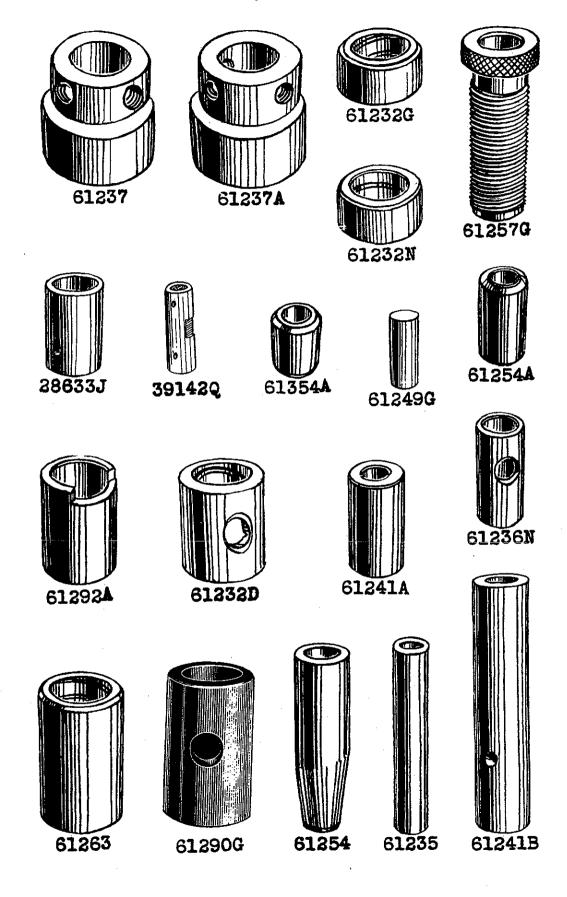


Plate 30- Full Size

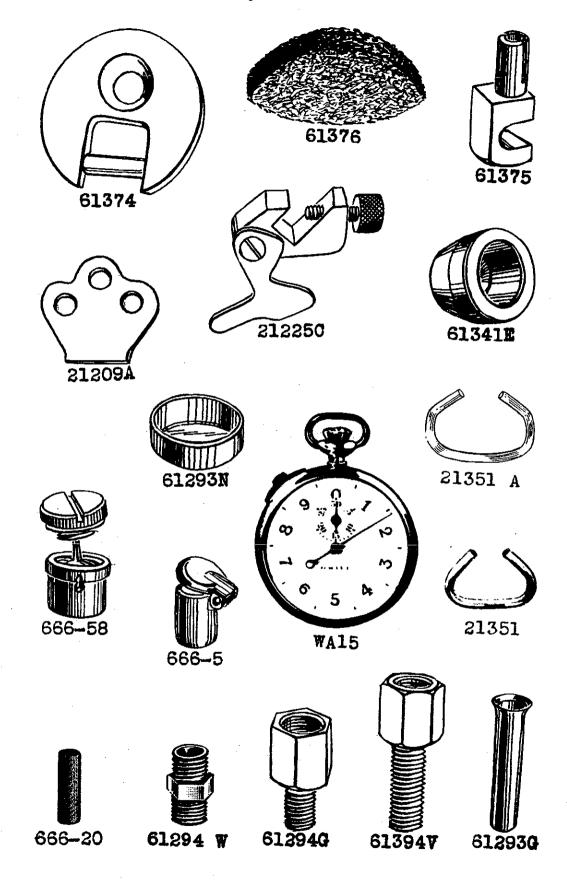


Plate 31- One-half Size

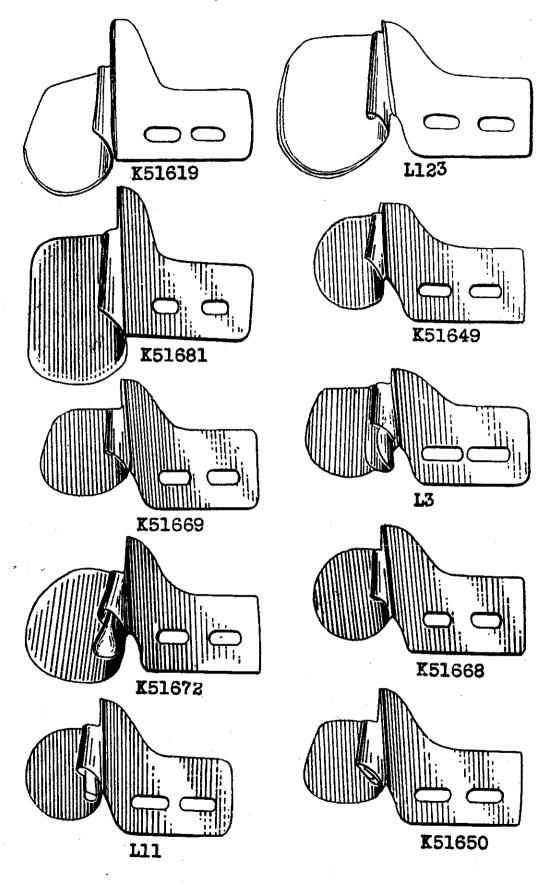
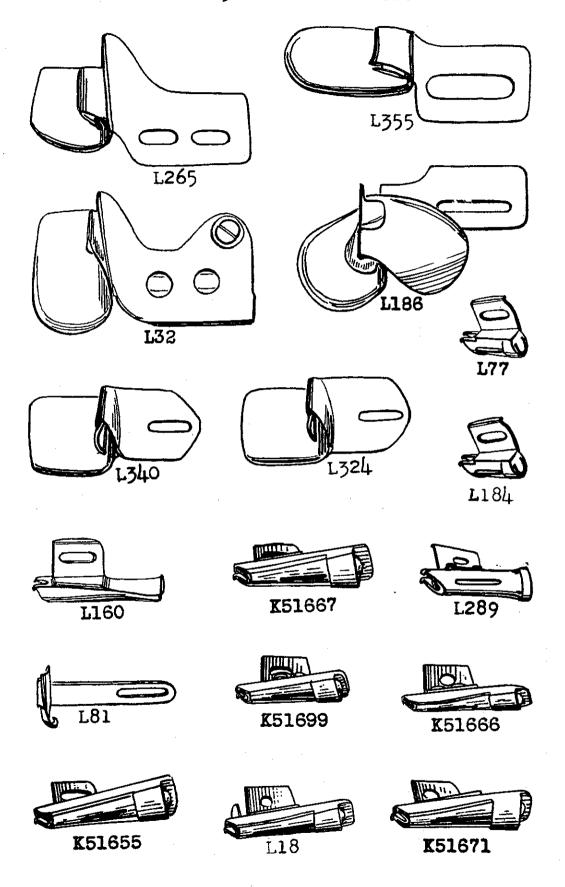


Plate 32- One-half Size



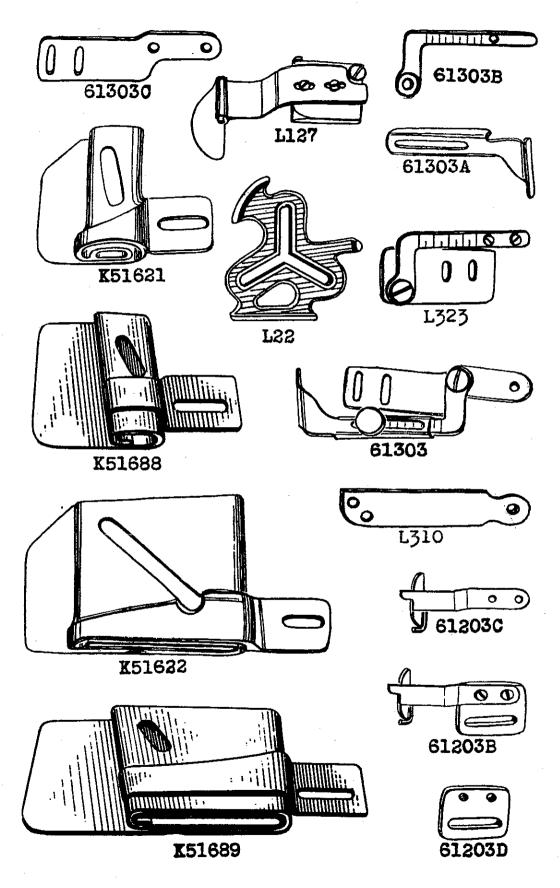


Plate 34- One-half Size

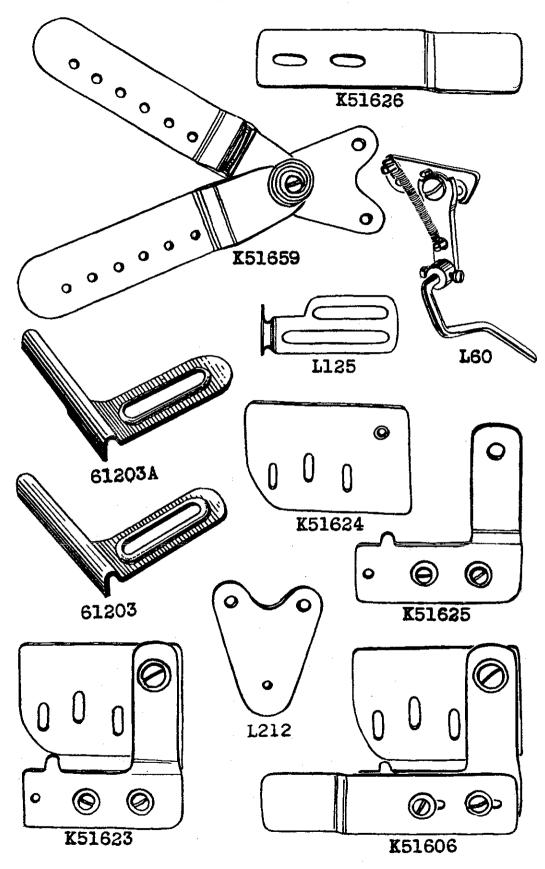


Plate 35- One-half Size

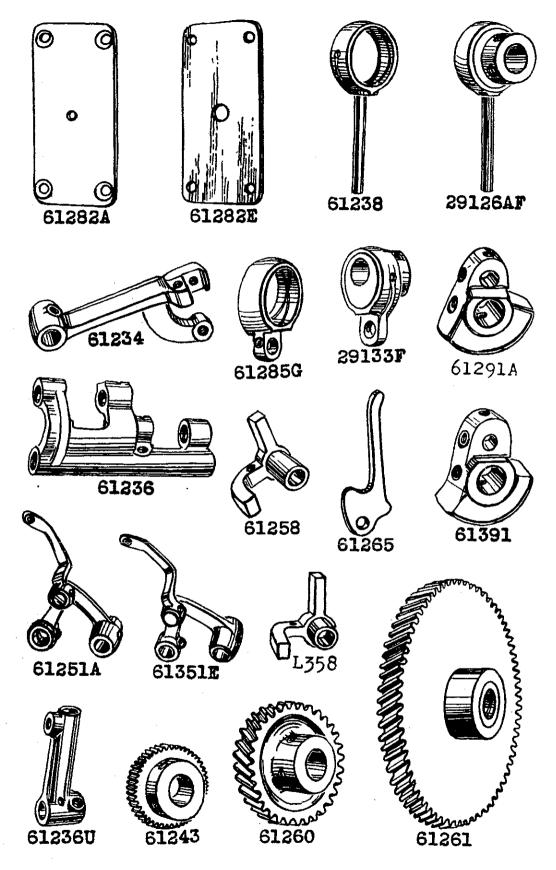
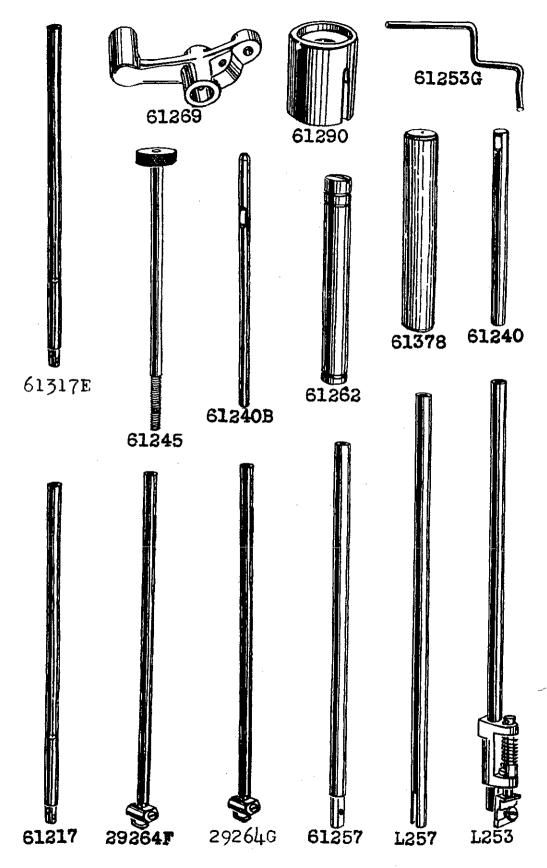


Plate 36- One-half Size



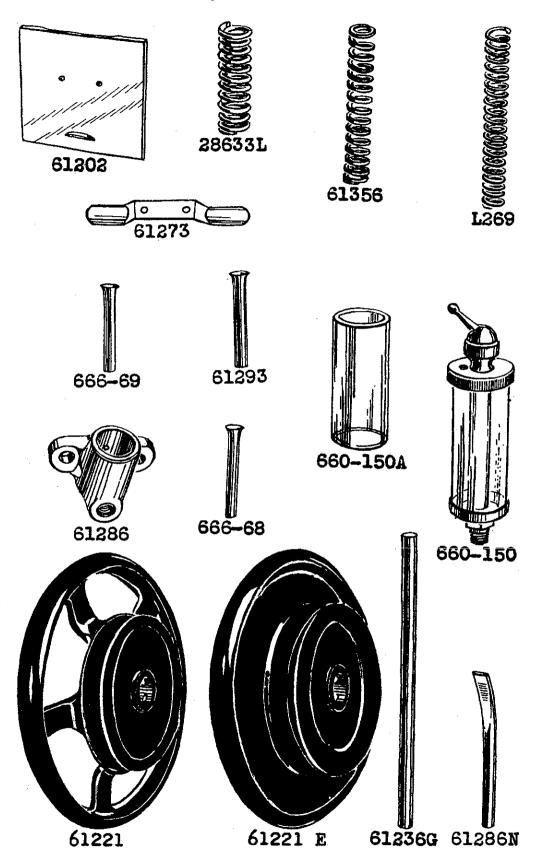


Plate 38- One-half Size



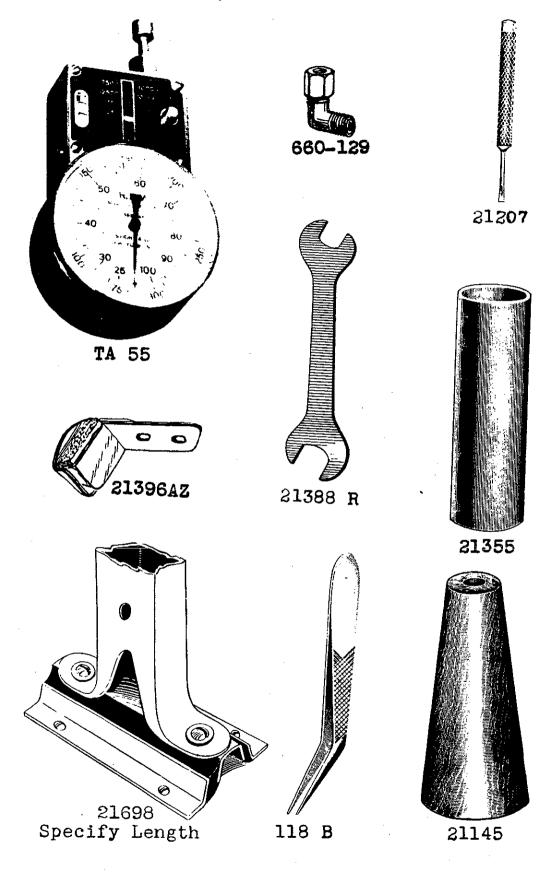


Plate 39- One-half Size

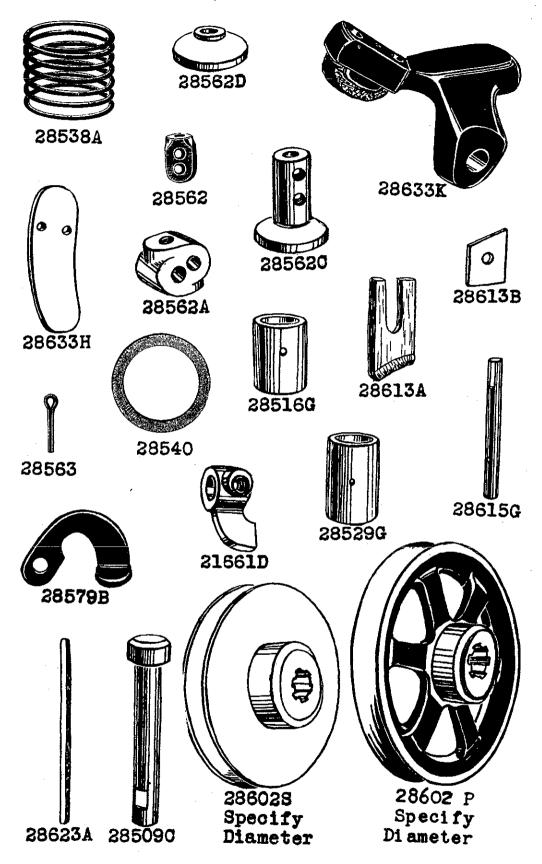

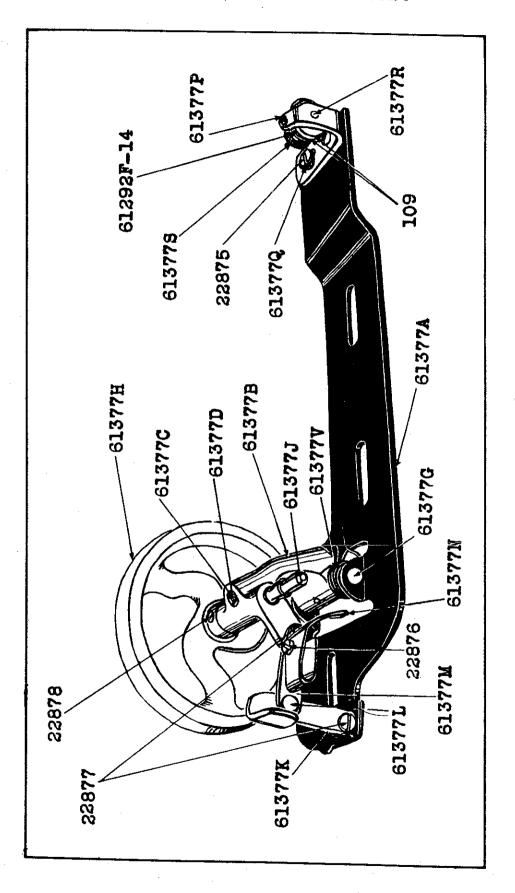

V.

ASSEMBLY NO. 61377AB

Plate 41- One-fourth Size

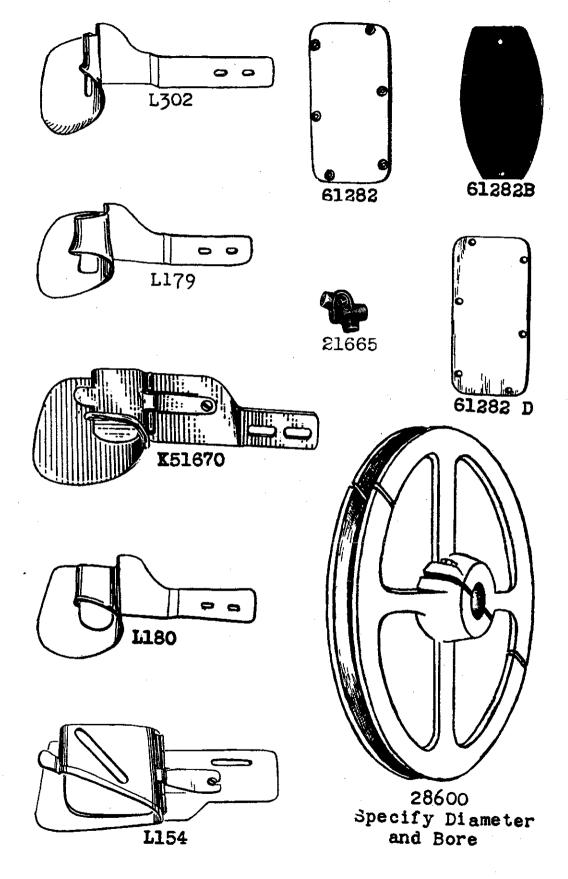


Plate 42- One-fourth Size

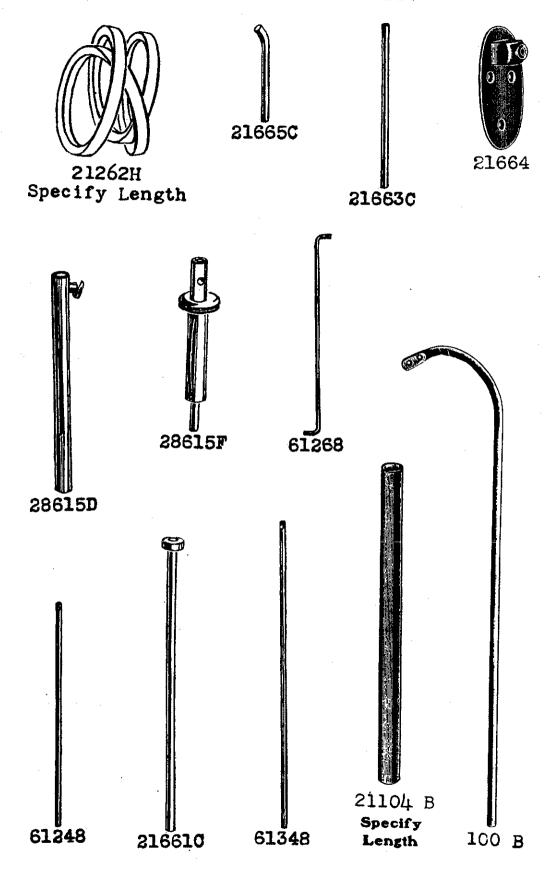


Plate 43- One-fourth Size

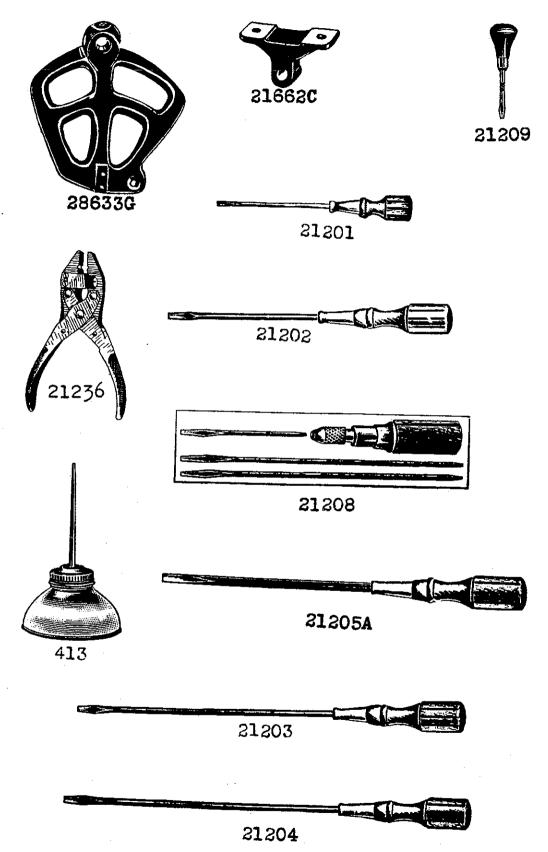


Plate 44- One-eighth Size

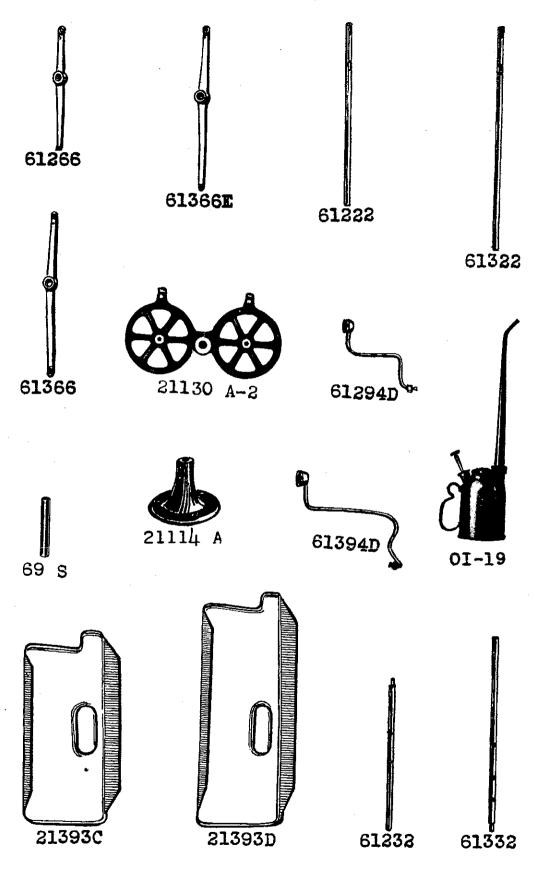


Plate 45- One-eighth Size



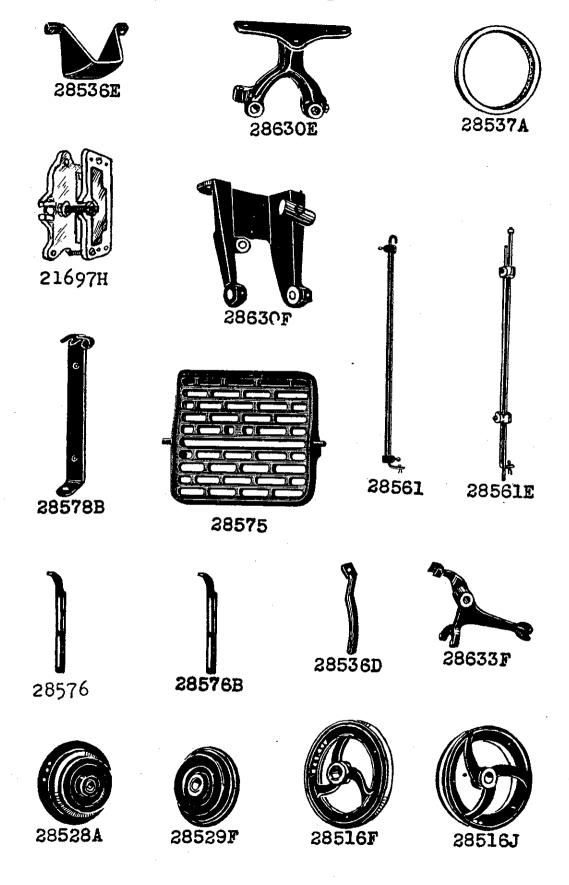


Plate 46- One-eighth Size

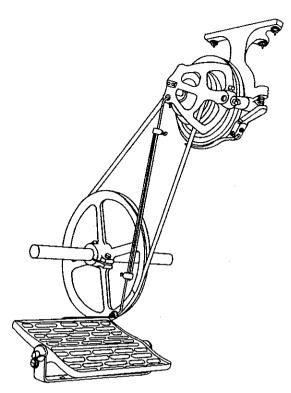

TRANSMITTER NO. 28636Y

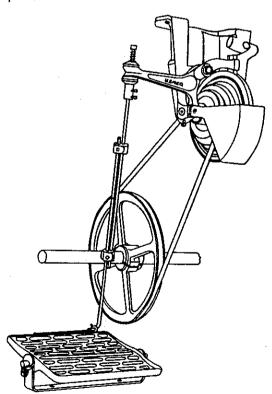

TRANSMITTER NO. 28636 Z

Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order by	used in ordering. Refer to pink insert for prices.	No.
	p. 2000.	
L3	Plate Hemmer for making a 5/1/ :	~ -
	Plate Hemmer, for making a 5/16 inch hem on	
	overall straps; used with feed dog No.	
	61305 C, presser foot No. 61320 C, throat	
	plate No. 61324 C-093 (attaching screw	
	No. 25 C)	31
L5	Throat Plate, diameter of needle hole .051) <u>+</u>
	inch, thickness .083 inch, for hemming dress	
	shirts; used with feed dog No. 61205 B,	
	presser foot No. 61220 B (many v. 774)	_
L6	presser foot No. 61220 B (screw No. 376)	2
20	Throat Plate, diameter of needle hole .051	
	inch, thickness .083 inch, for hemming work	
	SHIPUS; Used with feed dog No. 61205 c	
- 0	presser 100t No. 61220 C (screw No. 376) _	6
L8	rresser root, ninged bottom, distance from	Ü
	center of needle hole to right edge 1/4	1
	inch, for miscellaneous house dress opera-	
	tions; used with feed dog No. 61205 A,	
	throat plate No. 61224 C-093 (shank No.	
Ì	61230 D hings air No. (1770 D an	
	61230 D, hinge pin No. 61330 B-29, attaching	
L9	screw No. 22775)	11
7.9	Presser Foot Hemmer, for 1/16 inch hem on	
ļ	dresses; used with feed dog No. 61205 A,	
	throat plate No. 61224 C-063 (screw No.	
	22(())	18
L11	Plate Hemmer, for making a 5/16 inch hem on	-0
· .	rayon garments; used with feed dog No.	
<u> </u>	61205 A, presser foot No. 61220 A, throat	
	plate No. 61224 C-063 (attaching screw No.	
ļ	25 C)	~-
L15		31
22)	Presser Foot Hemmer, for 3/16 inch hem on	
	rayon garments; used with feed dog No.	
	61205 A, throat plate No. 61224 C-063	
37436	(screw No. 22775)	18
WA15	Stop Watch	30
L16	Throat Piate, diameter of needle hole (05)	
ł	inch, thickness .083 inch, for miscellaneous	
	house dress operations; used with feed dog	
1	No. 61205, presser foot No. 61220 (attach-	
l	ing screw No. 376)	7
L17	Presser Foot, rigid bottom, split front, both	3
	proper of equal langth last size as a	٠.
	prongs of equal length, left side of bottom	
1	.030 inch lower than right side, ledge is	
Į.	located in line with left edge of slot, for	
1	eage stitching collars of work shirts (screw)	
	No. 22775)	19
L18	Cut Edge Binder, for use with 13/16 inch bias	- /
	binding, for garments made from heavy woolen	
	motomical washing made from meany wooten	
	- MALLETTRE: DREG WITH TAAA AAA NA 777AF A	
	material; used with feed dog No. 61305 B,	
	presser foot No. 61220 H, throat plate No. 61224 D-093 (attaching screw No. K51693)	

Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
0I-19 20	Pressure Pump Oil Can, 1 1/2 pints capacity Washer, for hemmer support on sub-assembly No. K51606; also for Nos. L157, L180	1
L22 L24	Presser Foot, toe abnormally high, for hemming work shirts with plate hemmer; used with feed dog No. 61205, throat plate No.	25 33
25 C	61224-093 (screw No. 22775)	13
G26 L28	Thumb Screw, for three-way edge guide No. L22 Throat Plate, diameter of needle hole .093 inch, thickness .083 inch, with feed surface to left and rear of needle hole, slot to right of needle for guide on bottom of presser foot; used with feed dog No. L20	23 24
L29	presser foot No. L30 (screw No. 376) Feed Dog, 16 teeth per inch, feed surface to left and rear of needle; used with presser foot No. L30, throat plate No. L28 (screw No. 22768)	1
L30	Presser Foot Hemmer, for 1/8 inch hem, with guide on bottom to right of needle, guide extends into slot in throat plate; used with feed dog No. L29, throat plate No. L28 (Screw No. 22775)	8
L32	Plate Hemmer, throw-out type, short scroll, for making a 3/16 inch hem on bottoms of heavy work shirts; used with feed dog No. 61205 A, presser foot No. 61220, throat plate No. 61224 C-093 (attaching screw No. 25 C)	17
L39	Presser Foot, hinged bottom, diagonal front, for miscellaneous hemming operations; used with feed dog No. 61305 A, throat plate No. 61324 A-093 (hinge pin No. 61330 B-35,	32
L40	and left of needle hole, left feed slot 3/32 inch wide, right feed slot 1/16 inch wide.	12
141	used with feed dog No. L41 (screw No. 376) Feed Dog, 16 teeth per inch, feed surface to right, rear and left of needle, right prong 1/32 inch narrower than left prong and teeth tapered on each side; used with throat plate No. 140 (screw No. 2007)	5
	plate No. L40 (screw No. 22768)	9

	LIST OF PARTS	
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L46	Rolling Presser Foot, 13/16 inch diameter roller, 3/16 inch face, coarse knurl (roller No. 1580 G-13, roller axle screw No. 22818, roller lock screw No. 22743, roller arm pivot screw No. 14076, roller arm locking spring screw No. 87 U, attaching screws No. 88)	
L49	Presser Foot, hinged bottom, 9/16 inch from center of needle to right edge, for use with 5/8 inch plate hemmers; used with feed dog No. 61205 A, throat plate No. 61224 C-093 (shank No. 61330, hinge pin No. 61330 B-35, attaching screw No. 22775)	20
50 - 226	Plug, .291 inch diameter, for feed driving shaft gear case-	12
L51	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for miscellaneous binding operations on rayon garments; used with feed dog No. 152, presser foot No. 152	26
L52	(screw No. 376)	2
L53	Presser Foot, rigid bottom, for miscellaneous binding operations on rayon garments; used with feed dog No. L52, throat plate No. L51	9
L54	(screw No. 22775)	15
TA54.	Hand Tally	1
L55	Feed Dog, 16 teeth per inch, single feed prong to left of needle; used with throat plate No. L54 (screw No. 22768)	•
TA 55	Hand Tachometer, 4 speed type, 90 to 12000	8
L57	Throat Plate, diameter of needle hole .093 inch, thickness .083 inch, for welt seaming trousers; used with feed dog No. L58.	38
L58	presser foot No. L59 (screw No. 376) Feed Dog, 12 teeth per inch, for welt seaming trousers; used with presser foot No. L59,	6
L59	Presser Foot, hinged bottom, split front, length overall 1 1/4 inches, for welt seaming trousers; used with feed dog No. L58, throat plate No. L57 (shank No. 61330, hinge pin No. 61330 B-35, atttaching screw	10
		12

-56-

_		
Symbol	The figures in the last column refer only to the	Plate
to Omdom her	plates illustrating the parts and are not to be	No.
Order by	used in ordering. Refer to pink insert for prices.	
L60	Swing-out Guide, for the second operation of	
	welting trousers; used with feed dog No. L57,	
	presser foot No. L59, throat plate No. 158	•
	i (Spring No. 9767, pivot screw No. 22775, ed.	
	Justable guide screws No. OR, hase No. 1991	
	accaching screw, iront. No. 22581, attaching	
HA61 D	screw, rear, No. 22848)	34
L62	Screw, for intermediate gear shaft collar	23
2002	Presser Foot, hinged bottom, similar to No. 61220 A except needle slot is .046 inch wide,	
	for miscellaneous operations on articles made	
	from rayon or silk; used with feed dog No.	
	01205 C. throat plate No. L63 (shank No.	
	01200 D, hinge pin No. 61330 B-29, attaching	
L63	screw No. 22775)	11
109	Throat Plate, diameter of needle hole .040 inch,	
	thickness .083 inch, for miscellaneous operations on articles made from rayon or silk;	
	used with feed dog No. 61205 C, presser foot	
<i>.</i> .	No. Loz (screw No. 3/6)	7
L64	Presser Foot, hinged bottom, split front for	•
	nemming high back overall suspenders: used	
	with feed dog No. L58, throat plate No. L57	
69 S	(shank No. 61330, attaching screw No. 22775) Spool Pin, 4 inches long, for thread stand	11
69 FD	Set Screw, square head, for knee lifter plate;	44
	also for Nos. 21130 A-2. 21661 D. 21663 C	
7.60	21004, 21665, 21665 C	24
L69	Presser Foot, hinged bottom, split front, 9/16	•
	inch wide, left side of bottom is .015 inch	
	lower than right side, edge is located in line with left side of slot (shank No. 61330,	
		18
L71	Folder Presser Foot, hinged bottom, with folder	10
	attached to front of foot for turning down 1/1.	
	inch material, material enters from the left	
	(shank No. 61230 D, hinge pin No. 61330 B-29,	
73 A	attaching screw No. 22775)	18
		23
L76	Presser Foot, rigid bottom, split front 3/16	-)
	inch from center of needle slot to right edge	
77	(screw No. 227(5)	14
77	Set Screw, for air pump piston on Styles	
L77	61200 C, 61300 C Selvage Edge Binder, for use with 5/8 inch bind-	23
· ' ·	ing, for binding mattress ticks; used with	
ļ	ieed dog No. 61305 B, presser foot No.	
ļ	01220 H, throat plate No. 61224 D-003	
	(Attaching comow No. 1/5)(07)	3 2
	57	<i></i>

-57-

Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering Refer to pink insert for prices.	Plate No.
L80	Presser Foot, rigid bottom, width of bottom 9/16 inch, for edge stitching on heavy weight	
L81	garments	14
L85	binding (attaching screw No. 22585 A) Throat Plate, diameter of needle hole	32
L86	.063 inch, thickness .083 inch, for seaming trousers; used with feed dog No. L86, presser foot No. 61220 A (screw No. 376)	7
	sers; used with presser foot No. 61220 A, throat plate No. L85 (screw No. 22768)	10
87 U	Screw, for roller arm locking spring on presser foot No. 146	23
88	Screw, headless, for hook shaft collar, also for Nos. L46, L258	
89	Set Screw, for feed bar, also for Nos. 61236 U, 61244, 61248 G	23
90	Set Screw, for adjustable guide on swing-out	23
91 A	guide No. L60; also for No. L340	23 23
93	Screw, for feed dog holder, also for No. 61214 U	23
93 A	Screw, for stitch regulator thumb screw lever; also for No. 61247	23
94	Screw, for attachments mounted on bed in air pump holes; also plug screw for spool pin hole	23
95	Set Screw, for main shaft crank; also for Nos. 61237, 61237 A, 61259, 61260, 61292 A	23
96	Spot Screw, for feed eccentric; also for No.	
96 A L97	Spot Screw, for main shaft gear	23 23
98	Thumbscrew, for binders mounted on throat plate Screw, for hook shaft driving gear	24 23
100 B	Thread Stand Wire, 16 inches long (set screw No. 22632 F-24)	42
LlOl	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for attaching yokes to shirts; used with feed dog No. L102,	_
L102	presser foot No. L103 (screw No. 376) Feed Dog, 22 teeth per inch, for attaching yokes to shirts; used with throat plate No.	1
L103	L101, presser foot No. L103 (screw No.22768) Presser Foot, hinged bottom, with guide on left side, guide extends .015 inch below main section and 1/4 inch to front and is located 1/32 inch to left of needle (hinge pin No.	9.
	61330 B-29, attaching screw No. 22775)	18

Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
1108	Presser Foot, rigid bottom, with guide on right side, guide extends 3/64 inch below main section and is located 3/8 inch to right of center of needle, for edge stitching on work garments (screw No. 22775)	20
109 L114	Tension Disc, for needle thread and bobbin winder Presser Foot, hinged bottom, with guide on left side, guide extends 3/64 inch below main section and is located in line with left edge of needle slot (shank No. 61330, hinge pin No.	20 26
118 B L123	61330 B-35, attaching screw No. 22775) Thread Tweezers Plate Hemmer, for making a 1/8 inch hem on muslin	19 38
L125	garments (attaching screw No. 25 C) Edge Guide, sheet metal, guide surface 7/8 inch	31
L126	long (screw No. 22585 A)	34
L127	Plate Hemmer, swing-out type, for making a 1/4 inch hem on bottoms of shirts; used with feed dog No. 61205 C, presser foot No. 1126 throat	11
L129	Adjustable Guide, with shank 1 3/8 inches long, guiding surface 1/8 inch high, for use with	33
134 L134	presser foot No. 61320 D	2 2 23
L135	dog No. L135 (screw No. 376)	5
L139	Folder Presser Foot, rigid bottom, with folder attached to front of foot, for turning down 3/16 inch material, material enters from the	10
L143	left (screw No. 22775)	18
		

		T:
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L144	Feed Dog, 16 teeth per inch, feed surface to right, rear and left of needle, width of feed surface 11/32 inch, length 7/8 inch, teeth on right section tapered on both sides; used with throat plate No. 1117 (constant)	
L145	throat plate No. L143 (screw No. 22768) Adjustable Guide, with shank 1 3/8 inches long, guiding surface 5/32 inch high, for use with	10
L146	Throat Plate, diameter of needle hole .093 inch, thickness .083 inch, for hemming high back overall suspenders; used with feed dog No. L1/17.	22
L147	presser foot No. 61320 C (screw No. 376) Feed Dog, 14 teeth per inch, for hemming high back overall suspenders on machines equipped with throat plate .083 inch thick; used with presser foot No. 61320 C, throat plate No. Ll46 (screw	
L154	No. 22768)	10
L157	No. 22570, washer No. 20)	41
L158	screw No. 73 A, attaching screw No. 22775) Presser Foot, hinged bottom, with yielding section back of needle hole (yielding section spring No.	17
L160	1230 B, attaching screw No. 22775) Selvage Edge Binder, for use with 11/16 inch ornamental binding, 1/16 inch binding capacity, for binding studio couch covers; used with feed dog No. 61305 B, presser foot No. 61220 H, throat plate No. 61224 D-093 (attaching screw No.	13
L168	Presser Foot, rigid bottom, with yielding spring guide located 1/32 inch to right of needle, for miscellaneous edge stitching; used with feed dog No. 61205 A, throat plate No. 61224 C-093 (spring guide No. K51676, spring guide screw No.	32
L175	Presser Foot Hemmer, with round wire tongue, for 1/8 inch hem on work shirts, scroll No. 61230-5/32; used with feed dog No. 61205 C.	16
L176	throat plate No. 61224 C-093 (screw No. 22775) - Presser Foot, rigid bottom, with guide on right side, guide extends 3/64 inch below main section and is located 3/16 inch to right of center of needle, for miscellaneous edge stitching (screw	17
	No. 22775)	20

	EIS: OF PARIS	
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L179	Hemmer, for making a 1 inch turned up hem, 7/16	
L180	inch underlap, on drapery material; used with throat plate No. 61224 C, presser foot No. 61220 T, feed dog No. 61205 A, throw-out adapter No. K51623 (attaching screw No. 22570)	41
	K51623 (attaching screw No. 22570, washer	1
	! No. 20)	41
L183	Presser Foct, rigid bottom, split front, both prongs of equal length, width of bottom 11/32	
7 1 O.L.	inch (screw No. 22775)	14
L184	Binder, 1/32 inch capacity for strip, for use with 1/2 inch selvage edge binding (attaching	
L186	screw No. K51693)	32
	from left (attaching screw No. 25 C)	70
187 A	Screw, for presser foot yielding spring guide on presser feet Nos. L168, L239, L276, L336.	32
L189	K51675, 61320 E, 61320 F	23
L193	No. 22775)	19
L195	prong (screw No. 22775)	19
L199	attaching screw No. 22775)	11
L204	zippers to miscellaneous garments (screw No. 22775)	14
	of bottom 7/16 inch, length 1 inch, with spring to raise toe (shank No. 61230 D.	
L205	spring No. 51930, attaching screw No. 22775) Presser Foot, rigid bottom, for use with 3/16	12
	inch plate hemmers (screw No. 22775)	15

	BIDI OF TARES	1
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L208	Presser Foot, hinged bottom, split front, width of bottom 7/16 inch, length 1 inch, with spring to raise toe, lip on front of toe 3/64 inch to	
L209	right of needle (shank No. 61230 D, spring No. 51930, attaching screw No. 22775)	13
1209	Presser Foot, rigid bottom, 5/16 inch wide, with all bearing surface to right of needle (sorew No. 22775)	15
L212	Base, for swinging bracket No. K51659 (screw No.	34
L213	Presser Foot, hinged bottom, split front, length overall 1 3/8 inches, for welt seaming trousers (shank No. 61330, hinge pin No. 61330 B-35,	
L214	attaching screw No. 22775)	12
L217	(screw No. 376)	7
L220	No. 22775)	18
	22775)	19
L221	Base, for swing-out guide No. L60	26
L222	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, with feed surface to left and rear of needle, groove milled 1/16 inch to right of center of needle, groove 5/16 inch wide, 2 1/16 inches long; used with feed dog No. L223 (screw No. 376)	,
L223	Feed Dog, 16 teeth per inch, feed surface to left and rear of needle; used with throat plate No. L222 (screw No. 22768)	1
L224	Feed Dog, 22 teeth per inch, for hemming dress shirts; used with presser foot No. 61220 B, throat plate No. 61224 B-063 (screw No. 22768)	9
L225	Throat Plate, diameter of needle hole .093 inch, thickness .083 inch, for seaming canton flannel gloves; used with feed dog No. L226 (screw No. 376)	1
L226	Feed Dog, 16 teeth per inch, for seaming canton flannel gloves; used with throat plate No. L225 (screw No. 22768)	
L228	Presser Foot, rigid bottom, split front, length of bottom 1/2 inch, width 7/16 inch (screw No.	8
	22775)	15

	LIST OF PARTS	
Symbol to Order by	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L232	Presser Foot, hinged bottom, with guide on right	
-	side extending full length of bottom, guide pro-	
	jects 1/16 inch below main section and is lo-	
	cated 1/16 inch to right of needle (screw No.	
	22775)	, ,
L235	Presser Foot, hinged bottom, for miscellaneous	19
	binding operations with English binder depressed	
	below surface of the throat plate; used with	
•	feed dog No. 61305 B, throat plate No.	
	61224 D-093 (shank No. 61330, hinge pin No.	
	01000 B-00, attaching screw No. 22775)	12
L237	Presser Foot, hinged bottom, closed needle hole	12
	IOF USE With 5/16 inch plate hemmers: used with	
	leed dog No. 51305 A. throat plate No.	
	61324 A-093 (shank No. 61330) hinge nin No	
	61330 B-35, attaching screw No. 22775)	12
L239	Presser Foot, rigid bottom, with yielding spring	
	guide located 1/16 inch to right of needle; for	
	edge stitching on overalls and similar articles	
	(spring guide No. K51676, spring guide screw No.	- 4
L246	187 A, attaching screw No. 22775) Folder Presser Foot, rigid bottom, with folder	16
	attached to front of foot for turning down 3/16	
	inch width of material, material enters from	
	left (screw No. 22775)	18
L247	Presser Foot, rigid bottom, width 3/8 inch. dis-	
	tance from center of needle to right edge 1/16	
	inch, for miscellaneous edge stitching (screw No. 22775)	
L248	Throat Plate diemeter of modic hale of	15
2540	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for hemming shirts made	
i	from heavy weight fabrics; used with feed dog	
	No. L249 (screw No. 376)	2
L249	Feed Dog, 16 teeth per inch, for hemming shirts	_
-	made from heavy weight fabrics: used with threat	
	plate no. L248 (screw No. 22768)	9
L251	Presser Foot, with detachable hem scroll, for 1/8	-
	inch hem on dress shirts; used with feed dog No.	
	61205 B, throat plate No. 61224 B-063 (scroll	
Į	pin No. 61230 C, hem scroll screw No. 22738, attaching screw No. 22775)	
L253	Compound Presser Bar Assembly, for sewing collars	17
//	and cuffs to shirts; one each Nos. L255, L256,	
		36
L254	Presser Foot Bottom, 17/32 inch wide, open front,	<i>)</i> 0
•	for use with compound presser bar assembly No.	
l	1253 (attaching screw No. L260)	21
L255	Compound Presser Bar Auxiliary Bar, for use with	
, , , ,	sub-assembly No. L253	22
L256	Compound Presser Bar Auxiliary Bar Bracket, for	
<u> </u>	IISO WITH CIP COMMANDIA II TACH	22
	<u> </u>	

-63-

		
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L257	Compound Presser Bar, 7 5/8 inches long, for use	
L258	Compound Presser Bar Collar, for use with sub-	36
L259	assembly No. L253 (screw No. 88)	2 5
L260	with sub-assembly No. L253 Attaching Screw, for presser foot bottom on com-	26
L261	pound presser bar assembly No. L253 Presser Foot Bottom, 1/2 inch wide, turned up toe, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat	23
L262	plate No. L248 (attaching screw No. L260) Presser Foot Bottom, 17/32 inch wide, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat plate No. L248 (attaching screw No. L249, throat plate No. L248)	21
L263	L248 (attaching screw No. L260) Presser Foot Bottom, 7/16 inch wide, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat plate No. L248	21
L264	Presser Foot Bottom, 3/8 inch wide, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat plate No. L248	21
L265	(attaching screw No. L260)	21
L266	shorts (attaching screw No. 25 C)	32
L267	Presser Foot Bottom, 9/16 inch wide, turned up toe, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat	12
L268	Finger Guard	21
	Presser Spring, for use with compound presser bar	10
L271	Presser Foot Bottom, right hand portion in front of needle hole cut away, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat plate No. L248 (attaching	3 7 21
L272	Presser Foot Bottom, with guide and keel on right side, guide projects 1/64 inch below bottom, for use with compound presser bar assembly No. L253; used with feed dog No. L249, throat plate	
		21

Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L276	Presser Foot, rigid bottom, with yielding spring guide located 1/8 inch to right of needle, for miscellaneous edge stitching; used with feed dog No. 61305 A, throat plate No. 61324 A-093 (spring guide No. 61330 E, spring guide screw No. 187 A streeting some Wood No. 187 A streeting some No. 187 A streetin	
L277	No. 187 A, attaching screw No. 22775) Presser Foot, hinged bottom, distance from center of needle hole to right edge 9/16 inch, front of	16
L278	toe bent up 1/4 inch (attaching screw No. 22775) Throat Plate, raised, diameter of needle hole .093 inch, feed surface on all four sides of needle, one feed slot to left of needle and three feed slots to right, for use with feed dog No. L279 (screw No. 376)	
L279	Feed Dog, teeth cut 16 to the inch, with five feed prongs, for use with throat plate No. L278 (screw No. 22768)	8
L281	Presser Foot, flat bottom, width of bottom 19/32 inch, distance from center of needle hole to right edge 11/32 inch, thickness of bottom 5/32	10
L287	inch (attaching screw No. 22775)	15
L289	Binder, for use with 11/16 inch selvage edge bind- ing, made to attach to throat plate No.	3
L290	inch, for edge stitching on costs (attaching	32
L293	Presser Foot, hinged bottom, with controllable hinge, for miscellaneous house dress operations; used with feed dog No. 61205, throat plate No. 61224-093 (hinge adjusting screw No. 22840 A, adjusting screw lock nut No. 51430 F, attaching	14
L297	Feed Dog, 10 teeth per inch, for hemming high back overall suspenders; used with presser foot No. 61320 C, throat plate No. 61324 C-093	13
L298	Presser Foot, rigid bottom, width of bottom 19/32 inch, for binding and seaming quilted pads; used with feed dog No. L300, throat plate No. L299	10
L299	thickness .083 inch, with "L" shaped feed slot to rear of needle; for use with feed dog No	14
<u>_</u>	L300, presser foot No. L298 (screw No. 376)	8

-65-

	LIST OF PARTS	
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L300	Feed Dog, 12 teeth per inch, for use with throat plate No. L299, presser foot No. L298	
L302	(screw No. 22768)	8
	drapery materials, 5/16 inch underlap; used with throat plate No. 61224 C, presser foot No. 61220 T, feed dog No. 61205 A (throw-out adapter	
L304	No. K51623, attaching screw No. 22570) Feed Dog, 16 teeth per inch, with feed surface	41
·	inches long, two rear prongs 3/8 inch long.	
L305	Presser Foot, hinged bottom, distance from center	9
:	of needle hole to right edge 3/32 inch, for miscellaneous binding operations (shank No.	
	61230 D, hinge pin No. 61330 B-35, attaching screw. No. 22775)	12
L309	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, with two holes drilled in	
	upper right hand corner for attaching special binders; used with feed dog No. 61305 B	
L310	(screw No. 376)	8
L313	Presser Foot, length of bottom 1 1/2 inches, with	33
	below main section and is located 3/32 inch to left of needle (shank No. 61330, hinge nin No.	
L314	Throat Plate, diameter of needle hole .063 inch.	19
	back of needle hole, for miscellaneous binding	
	operations with English binder depressed below the surface of the throat plate; used with feed	
7 71 6	No. 376)	7
L315	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for miscellaneous edge	
T 771 6	stitching operations; used with feed dog No. L316, presser foot No. 61220 (screw No. 376)	3
L316	Feed Dog, 22 teeth per inch, for use with throat plate No. L315, presser foot No. 61220	
L318	(screw No. 22768)	9
	3/16 inch, with open needle hole and right toe made shorter than left toe; used with feed dog	
	No. 61305 B, throat plate No. 61324 B screw No. 22775)	14
	,	

Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
L323	Hemmer Bracket, throw-out type, for mounting small plate hemmers (attaching screw No.22585 A, pivot screw No. 22726, pivot screw spring washer No. 35772 H	33
L324	Hemmer, for 1/4 inch hem, 5/64 inch capacity, for finishing button stays on work shirts, for use with throw-out hemmer bracket No. L323(attach-	
L325	ing screw No. 22585 A)	32
L326	Presser Foot, hinged bottom, split front, 5/16 inch bearing surface at rear of needle; used with feed dog No. 61305 B, throat plate No. 61324 B-093 (shank No. 61230 D. hinge pin No.	13
L330	61330 B-29 (attaching screw No. 22775) Presser Foot, hinged bottom, with controllable hinge, for binding and seaming Pliofilm; used with feed dog No. L332, throat plate No. L331 (hinge adjusting screw No. 22840 A, adjusting screw lock nut No. 51430 F, attaching screw	11
L331	No. 22775)	13
L332	Feed Dog, 22 teeth per inch, for binding and seaming Pliofilm; used with throat plate No. L331 (screw No. 22768)	4
L334	Presser Foot, hi-nged bottom, front well rounded, length of bottom 7/8 inch, width of bottom 7/16 inch (shank No. 61230 D, hinge pin No. 61330 B-29, attaching screw No. 22775)	9
L336	Presser Foot, rigid bottom, with yielding spring guide located 1/4 inch to left of the needle, for miscellaneous edge stitching (attaching	
L338	screw No. 22775, spring guide screw No. 187 A) Presser Foot, rigid bottom, with yielding spring guide located 1/16 inch to left of needle (spring guide No. L357, spring guide screw No.	16
L340	22561, attaching screw No. 22775) Plate Hemmer, for making a 1/8 inch hem; used with feed dog No. 61205 A, presser foot No. L325, throat plate No. 61224 C-063 (attaching	16
L346	screw No. 90)	32

_		77. 77. 77. 77. 77. 77. 77. 77. 77. 77.	
	Symbol	The figures in the last column refer only to the	77.04-
	to	plates illustrating the parts and are not to be	Plate No.
	Order By	used in ordering. Refer to pink insert for prices.	1.0.
			İ
	L348	Hemmer Presser Foot, with integral tongue,	
	-	Ior 5/32 inch hem on bottoms of shirts	•
		(attaching screw No. 22775)	17
	L351	Presser Foot, hinged bottom, with groove in	* '
		1 DOLLOW 3/64 Inch deep and 7/6/2 inch wide	
		groove located in center of foot (attaching	
	L354	screw No. 22775)	18
	2774	Presser Foot, hinged bottom, with yielding	
		right side, spring in rear to tilt toe up- wardly, for miscellaneous edge stitching	
		(attaching screw No. 22775)	
	L355	Plate Hemmer, for making a 11/16 inch hem on	13
		medium weight chambray material and with	
		leed dog No. 61205 A. throat plate No.	i
		01424 U-U65 (attaching screw No. 25 C)	32
	L357	I sturns opring Guide. for presser foot No) <u> </u>
	TZEQ	L) D) (screw No. 22561)	22
	L358	Presser Bar Connection, for use with compound	
	376	presser bar assembly No. L253	35 23
	413	Screw, for throat plate	23
	531	Set Screw, for take-up lever crank pin; also	43
		for No. 41041 B	0.7
	627 A	Screw, for brake shoe on transmitter No.	23
		40000 2	24
	650 - 24	Flat Head Stove Bolt, 1/4 x 3 inches, for	-4
	(FO O 30	attaching transmitter No. 28636 y to table	25
	650 G-12	indonine bort, nexagon nead. 5/16 x 1 1/2	
		inches, for attaching "Electro Drive" to	
	650 X-18	Carriage Bolt, 5/16 x 2 1/4 inches, for	25
			O.F.
	650 X~22	Carriage Bolt, 5/16 x 2 3/4 inches, for	25
		attaching "Electro Drive"	2 5
	651 B - 24	Nut, 3/8 inch hexagon, thin pattern, for helt	-)
	(50.36	take-up nanger assembly No. 21697 H	25
	652-16	Stove Bolt Washer, 1/4 inch, for attaching	
	652-24	transmitter No. 28636 Y to table	25
	0)224	Stove Bolt Washer, 3/8 inch, for attaching transmitter No. 28636 Z to table; also for	
	652 A-20	Lock Washer, 5/16 inch, for belt take-up	25
		honoon cocallia st. os (en es	25
	660-92	Plug Screw Washer, for hook shaft gear case	25
		cover	2 5
	660-106	Escurence Pin for attaching clutch ring to	-)
	//0	transmitter brake pulley	26
	660-113	Escutcheon Pin Washer	25
	660-129 660-142	Air Pump Tube Coupling	38
	000-142	Lifter Lever Connecting Rod Cotter Pin	26

	LIST OF PARTS	-
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
660-150	Oil Cup, with signal stop, for hook raceway	37
660-150 A	Glass Cylinder, for oil cup No. 660-150	37
666- 5	Oil Cup, for transmitter shaft on trans-	''
	mitter No. 28636 Z	30
666 - 20	Felt Wick, for needle bar link oil tube,	100
	take-up lever oil tube, and take-up lever	1
	link oil tube	
666-58	Screw Cover, for hook shaft oil reservoir	30
666-59	Cork Washer, for hook raceway oil pipe	30
666 - 68	Oil Tube, for take-up loron on Circle (270-	25
666-69	Oil Tube, for take-up lever on Style 61300 E Oil Tube, for needle bar link on Style	37
	61300 E	
719		37
123Ó B	Set Screw, for feed rocker shaft	23
, ,	Yielding Section Spring, for presser foot No.	
1580 G-13		26
	Roller, 13/16 inch diameter, 3/16 inch face, for rolling presser foot No.L46 (axle screw	
	No. 22818, lock screw No. 22743)	
6990	Presser Foot Bottom Tilting Courts	22
	Presser Foot Bottom Tilting Spring, for presser foot No. K51665	- 1
9767	Tension Spring for stine and and a second	26
9937	Tension Spring, for swing-out guide No. L60	26
11638 M	Lifter Lever Bell Crank Stop Screw Lock Nut	25
	Hook Raceway Oil Cup Lock Nut, for Styles 61200 C, 61300 C-	
12957 E	Spring Washer for swinging and	25
// -	Spring Washer, for swinging arm on sub- assemblies Nos. K51606, K51623	
12997 A	Screw, for air pump cylinder on Styles	2 5
,,, ==	61200 C, 61300 C	-1
14076	Pivot Stud, for roller arm on rolling presser	24
, - , -	foot No. L46	_1
15037 A	Feed Bar Stud Nut	24
15872 F	l Tiftom Tomom Games	25
20551	Pitman Spring, for pitman on transmitter No.	26
		26
21104 B-9	Rod, 9 inches long, for thread stand (set	26
		ka
21114 A	Thrond Ctard Disc.	42 1.1.
21130 A-2	Thread Stand Seat, two spools (set screw	44
	NO.09 ID)= +	1. 1.
21145	Cono wood Parations	<u>lili</u> 20
21192 R	Air Pump Valve Ball, for Styles 61200 C.	38
		26
21201	Screw Driver, 9/64 inch round blade, length	20
		l. 7
21202	Screw Driver, 7/32 inch round blade, length	43 ·
		I. z
21203	Screw Driver, 13/64 inch round blade, length	43
-		I. z
21204	Screw Driver, 1/4 inch round blade, length	43
		l. z
		+3

Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order By	used in ordering. Refer to pink insert for prices.	
21205 A	Screw Driver, 3/8 inch round blade,	
	length overall 14 inches	43
21207	Screw Driver, 7/64 inch round blade,	77
	length overall 2 1/2 inches	38
21208	Screw Driver Set, three detachable blades	1,3
21209	Screw Driver, 5/32 inch round blade,	47
•	length overall 3 1/2 inches	43
21209 A	Key, for hook shaft oil reservoir screw	47
	cover	30
21225 C	Hook Timing Gauge	30
21233 N	Connector, with BX cable, for D. C.)0
	"Electro Drives"	Ī
21233 P	Connector, with BX cable, for single and	
,// -	three phase "Electro Drives"	ļ
21233 U	Light Fixture Assembly, including blue	_
	lens, machine mounting, for machines	
	driven by "Electro Drive"	
21233 V	light Fixture Accombly including along	_ _
212)) Y	Light Fixture Assembly, including clear	
	lens, machine mounting, for machines	
21233 [.] W	driven by "Electro Drive"	
212)) W	Light Fixture Assembly, without lens,	
	machine mounting, for machines driven	
21274	by "Electro Drive	
21236	Belt Plier, for 3/8 inch and smaller	
21260	round belting	43
21200	Emery Cord, 3/64 inch diameter, grade No.	
21260 A	120, fifty yard spool	_
21200 B	Emery Cord, 3/64 inch diameter, grade No.	
21260 В	150, fifty yard spool	_
. 21200 B	Emery Cord, 1/32 inch diameter, grade No.	
21260 C	180, fifty yard spool	_
21200 0	Emery Cord, .025 inch diameter, grade No.	
21 26 0 D	200, fifty yard spool	_
21200 D	Emery Tape, 3/32 inch wide, grade No.	
21260 E	180, fifty yard spool	
21200 15	Emery Cord, .018 inch diameter, grade No.	
21262 н-410	200, fifty yard spool	_
21202 11-410	"V" Belt, No. 2 size oil resistant, 41	1.0
21262 н-420	inches outside circumference	42
21262 H-430	"V" Belt, 42 inches outside circumference	42
21262 н-440	"V" Belt, 43 inches outside circumference	42
• • • •	"V" Belt, 44 inches outside circumference	42
21300 B-2 1/2	Carriage Bolt, 3/8 x 2 1/2 inches, for	
·	attaching transmitter No. 28636 Z to	l
01700 5 (table (washer No. 652-24)	25
21300 B - 6	Carriage Bolt, 3/8 x 6 inches, for	
I	attaching transmitter No. 28636 Z to	
	table (washer No. 652-24)	25
21351	Belt Hook, wire, for 9/32 inch round belt	3 0
21351 A	Belt Hook, wire, for 9/32 inch round belt Belt Hook, wire, for 3/8 inch round belt	30
	7.	

LIST OF PARTS	LI	ST	OF	PARTS
---------------	----	----	----	-------

	LIST_OF PARTS
S2 - 3	
Symbol	The figures in the last column refer only to the Plate
to	ULAGES
Order By	used in ordering. Refer to pink insert for prices.
•	ordering there's to plak insert for prices.
01.755	
21355	Chair Leg Extension, 4 inches long 38
21371 Q	Table Drawer
21371 CJ-48	Table Top, 48 inches long, prepared for
	set-in installation with transmitter No.
	28636 V for stales of transmitter No.
21371 CJ-54	28636 Y, for styles in Class 61200
21371 07 (0	
21371 CJ-60	" 60 inches long
21371 CK-48	
	set-in installation with transmitter No.
	1 40000 to for styles in Class (1700 t
21371 CK-54	Table Top, 54 inches long
21371 CK-60	
21388 R	When the state of
>00 10	Wrench, double end, 3/8 and 1/2 inch
21707 0	openings
21393 C	Oil Drip Pan, for styles in Class 61200 44
21393 D	1
21394	Utility Grinder, including emery wheel, 5
	inches diameter, 1/4 inch face, round
	belt drive recommended Total
21394 G	belt drive, recommended speed 3000 R.P.M.
	J "MOVES J INCHES GIBRATAR /// inch
21394 н	face, 3/8 inch hole, grade "M" emery 60
	Dimery wifeer, 7 inches diameter 1/2 inch
01701. **	1 - 400) JO INCH HOLE GRADE WAR AMARK (A 1
21394 к	Outling Gringer, including emery wheel 5
	inches diameter, 1/2 inch face round
	belt drive, recommended speed 3000 R.P.M.
21396 AZ	Needle Thread Lubricator, attaches to face
21660 C	
	Knee Lifter Assembly; one each Nos.
	21661 C, 21661 D, 21663 C, 21664,21665 C;
	1 000 each Nos. 21662 C. 21665 (specify 1
21661 C	component parts in ordering) = = = = -
	Knee Lifter Rock Shaft
21661 D	mile Litter Rock Shait Stor (screw No.
21662 C	Knee Lifter Hanger, 1 1/2 inch drop 43
21663 C	" Plate Rod (come No (come)
21664	# # 1 Tave Not (screa No. 69 FD) = -142
21665	" " (screw No. 69 FD) 42
	nock busic Connection (screw
21//5 0	No. 69 FD) 41
21665 C	" HOCK Shaft Connection Arm
4.	(screw No. 69 FD) 1/12
21697 н	Belt Take-up and Hanger Assembly 1 7/8
	inch drop, for "V" belt "Electro Drive"
	installations; one each Nos. 652-24,
	21697 J 21697 V 21697 T 21697 T
	21697 J, 21697 K, 21697 L, 21697 M,
	21697 N; two No. 651 B-24; three each Nos.
21602 +	0)0 G-12, 052 A-20 11.5
21697 J	Belt Take-up Hanger, lower section 4)
21697 K	" upper section
21697 L	" " Pivot Rod
	-71-
	i *

Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
21697 M	Belt Take-up Hanger Adjusting Screw	
21697 N 21698 - 2	With Pivot Shaft, 2 inches long	
2+070-2	Vibration Insulator, two inches long, for tables	7 0
21698-4	four inches long	38 38
21698-5	" five inches long	38
21698-6	" six inches long	38
	Note: Special lengths will be furnished on re-	
	quest. Part of the table leg is shown in the	
22507	illustration for clarity.	
22501	Screw, for pitman connection on transmitter Nos. 28636 Y, 28636 Z; also for No.28562 C	~ 1
22509	Set Screw, square head, for thread stand base;	24
,-,	also for No. 21104 B-9	24
22509 A	Set Screw, for brake lever on transmitter No.	-4
	28636 Y; also for Nos. 28630 E. 28633 G	24
22510	Screw, for treadle pitman bracket on trans-	
22539 A	mitters Nos. 28636 Y, 28636 Z	24
24)); A	Plug Screw, for transmitter shaft on trans- mitter No. 28636 Z	O.L
22539 D	Plug Screw, .869 inch diameter, for feed driv-	24
	ing shaft gear case	24
22539 E	Plug Screw, .548 inch diameter, for inter-	-
2251.9 4	mediate gear shaft	24
22548 A	Screw, fillister head, 5/16 inch long, for belt guard on transmitter No. 28636 Y	0.7
22551	Thumb Screw, .146 inch diameter, for adjust-	23
	able edge guide No. 61303 A	24
22551 A	Thumb Screw, .240 inch diameter, for attach-	
005(0.7)	ments mounted on bed	24
22560 В 22561	Set Screw, for stitch regulator shaft arm	23
22,01	No. 61203 B; also for Nos. L357, 61330 H	0.7
22562	Screw, for needle bar connection	23 23
22563	Set Screw, fillister head, for take-up spring	
	thread wire	23
22564 E	Stop Screw, 5/64 inch long, for bobbin case	
*	latch; also attaching screw for bobbin case tension spring	0.7
22565 A	Screw, headless, for take-up spring thread	23
	Wire	23
22566 B	Lifter Lever Stud	23 24
22569 A	Set Screw, for hook	23
22570	Screw, for hemmer support on sub-assembly No. K51606; also for Nos. L157, L179, L180,	
	L302, K51670;	23
22570 A	Screw, for frame needle thread eyelet; also	- /
	for Nos. 61282, 61282 A	23
22571 B	Pipe Plug, for sealing oil cup hole on Styles	
	61200 C, 61300 C	24

	DIST OF FARIS	
		1
Symbol	The figures in the last column refer only to the	1
to	plates illustration the next and	Plate
= = =	plates illustrating the parts and are not to be	No.
Order By	used in ordering Refer to pink insert for prices.	
	, , , , , , , , , , , , , , , , , , , ,	
22591		
22581	Attaching Screw, front, for swing-out guide	1
	No. L60	23
22585 A	Attaching Screw, for special attachments	
22586 D	Set Screw headless 1/4 and at at	23
,00 2	Set Screw, headless, 1/4 inch diameter, 24	
	threads, 3/8 inch long, for brake on	1
	transmitter No. 28636 Y	23
22591	Set Screw, headless, for thread stand rod -	
22596	Screw, for belt guard on transmitter No.	23
	28636 Z	
22597		24
22771	Spot Screw, for hand wheel; also for Nos.	•
	01491 A, 01391	24
22597 A	Set Screw, for hand wheel; also for Nos.	124
	61245, 61262	İ
22632 F-24	Set Corow for the	24
	Set Screw, for thread stand wire	23
22643 к-64	Set Screw, for operating lever shaft on	_
_	transmitter No. 28636 Z	24
22706 A	Plug Screw, for oil line to hook raceway on	24
	Style 61200 C	
22711	Compar for -44	23
22111	Screw, for attachments mounted on swinging	_
	Dracket No. K51659	23
22715	Screw, for treadle locking plate on two-	رے
	mitters Nos. 28636 Y, 28636 Z	-1
22716 A	Screw 7/64 inch 3	24
,	Screw, 7/64 inch long, for hook thread de-	
0071 (p	flector; also for No. 61211	23
22716 B	Screw, 5/64 inch long overall, for regulat-	
	ing bobbin thread tension	27
22726	Pivot Screw, for hemmer bracket swinging arm	23
22729	Clamp Screw for moddle ham lend	
22730	Clamp Screw, for needle bar link	24
	Plug Screw, for hook shaft gear case cover	23
22735	Pivot Screw, for swinging arm on sub-	
	assemblies Nos. L60, K51606, K51623	27
22738	Screw, for detachable scroll on presser foot	23
	No. L251	
22742		23
	Screw, right, for bobbin case holder finger	24
22743	Locking Screw, for roller on presser foot	•
	No. 140	23
22752	Set Screw, for needle	ーノ つマ
22757 A	Pivot Screw, for needle bar link	23
22758 B	Screw for lifton land.	23
22764	Screw, for lifter lever link	23
	Spot Screw, for tension post socket	23
22764 A	" for take-up lever crank pin;	-
	also for No. 61237 A	22
22768	Screw, for feed dogs also go ve and	23
,_,	Screw, for feed dog; also for Nos. 39142 Q,	
22225	61285 G	23
22775	Screw, for presser foot; also stop screw for	-
	feed dog	22
22799 M	Uand Tiet O	23
22817 A	Ctud for life	24
	Stud, for lifter lever bell crank	24
22818	Axie Screw, for roller on presser foot No.	-
		23
		ر ــ
		

		
Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order By	used in ordering. Refer to pink insert for prices.	
	,	ļ
00070		
22837	Thumb Screw, for face plate	24
22839 A	Screw, for feed driving shaft gear	23
22840 A	Presser Foot Hinge Adjusting Screw, for	_
	presser feet Nos. L293, L330	24
22845 C	Stud, for stitch regulator shaft arm link	
228 45 D	Feed Bar Stud (nut No. 15037 A)	23 24
22846 Q- 16	Flat Head Wood Screw, No. 14 x 1 inch, for	'
	hinge plate	·
22848	Attaching Screw, rear, for swing out guide	
	No. L60	23
22874	Stop Screw, for lifter lever bell crank	24
22875	Screw, for bobbin winder tension bracket	23
22876	Adjusting Screw, for bobbin winder trip latch	24
22877	Hinge Stud, for bobbin winder engaging	£4
• •	lever; also for No. 61377 M	07
22878	Set Screw, for bobbin winder pulley	23
28509 C	Operating Lever Shaft, for transmitter No.	23
	28636 Z (set screw No. 22643 K-64)	70
‡ 28516 F	Brake Pulley for the next the No. 22047 K-047 C	39 45
28516 G	Brake Pulley, for transmitter No. 28636 Z Brake Pulley Bushing, for transmitter No.	45
=0,10 0	28636 Z	7.0
28516 Ј	Brake Pulley, for transmitter No. 28636 Y-	39 45
\$28528 A	Loose Pulley, for transmitter No. 28636 Y-	
128529 F	for transmitter No. 28636 Z-	45
28529 G	" " Bushing, for transmitter No.	45
	28636 Z	7 0
28536 D	Belt Guard, for transmitter No. 28636 Y	39
	(screw No. 22548 A)	45
28536 E	Belt Guard, for transmitter No. 28636 Z	47
·	(screw No. 22596)	45
28537 A	Friction Ring, for transmitters Nos.	77
	28636 Y, 28636 Z (escutcheon pin No.	
•	660-106, escutcheon pin washer No.660-113)	45
28538 A	Hub Spring, for transmitters Nos. 28636 Y,	47
	28636 Z	39
28540	Hub Spring Fibre Washer, for transmitters	-
	Nos. 28636 Y, 28636 Z	39
28561	Treadle Pitman Assembly, for transmitter No.	
	28636 Y	45
28561 E	Treadle Pitman Assembly, for transmitter No.	.,
	28636 Z	45
28562	Treadle Pitman Connection, for transmitter	77
_	No. 28636 Y (screw No. 22507)	39
28562 A	Treadle Pitman Connection, for transmitter	,
	No. 28636 Z (screw No. 22507)	39
28562 C	Treadle Pitman Rod Stop Collar, lower, for	,,
	transmitter No. 28636 Z (screw No. 22507)	39
28562 D	Treadle Pitman Rod Stop Collar, upper, for	<i>)</i> ,
	transmitter No. 28636 Z	39
28563	Treadle Pitman Cotter Pin, for transmitters	J7
	Nos. 28636 Y, 28636 Z	30
ISee Page 5		39
tocc rage 2	-74-	

=		LIST OF PARTS	
	Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
	28575 28576	Treadle, for transmitters Nos.28636 Y, 28636 Z	45
	•	mitter No. 28636 Y (screw No. 22510, washer No. 28577)	45
	28576 В	Treadle Pitman Bracket, for trans- mitter No. 28636 Z (screw No. 22510, washer No. 28577)	
	28577	Treadle Pitman Bracket Washer, for transmitters Nos. 28636 Y, 28636 Z	45
	28578 В	Treadle Base, includes locking plate, for transmitters Nos. 28636 Y,28636Z	25
	28579 В	rreadle Locking Plate, for trans- mitters Nos. 28636 Y, 28636 Z (screw	45
	28585	No. 22715) Treadle Assembly, for transmitter No. 28636 Y; one each Nos. 22510, 28575,	39
	28585 в	28576, 28577	_
	28600-6-1 3/16	28576 B, 28577	
	28600-8-1 3/16	diameter, 1 3/16 inch bore Pulley, 8 inches diameter	41 41
	28600-9-1 3/16	9 inches diameter	41
	28600-10-1 3/16	" 10 inches diameter	41
	28600-11-1 3/16 28600-12-1 3/16	" ll inches diameter	41
	28600-12-1 3/16	* 12 inches diameter	41
	28600-13-1 3/16	" 13 inches diameter	41
	28600-14-1 3/16	" 14 inches diameter	41
	28600-15-1 3/16	" 15 inches diameter	41
	28602 P-22	"Electro Drive" Pulley, round belt,	,
	28602 P - 24	2 3/4 inches working diameter "Electro Drive" Pulley, 3 inches work	39
	28602 P-26	"Electro Drive" Pulley, 3 1/4 inches	39
	28602 P-28	working diameter	39
	28602 P-30	"Electro Drive" Pulley, 3 3/4 inches	39
	28602 P-32	working diameter "Electro Drive" Pulley, 4 inches	39
•	28602 P-34	"Electro Drive" Pulley, 4 1/4 inches	39
	28602 P-36	working diameter	39
	28602 S-23	working diameter "Electro Drive" Pulley, grooved for No. 2 "V" belt, 2 7/8 inches work-	39
		ing diameter	30
			39

0 . 3 . 3		:
Symbol	The figures in the last column refer only to the	Plate
to Order By	plates illustrating the parts and are not to be	No.
order by	used in ordering.Refer to pink insert for prices.	
28602 S-24	"Electro Drive" Pulley, 3 inches working	
-	diameter	39
28602 S - 25	"Electro Drive" Pulley, 3 1/8 inches work-	
00/00 0 0/	ing diameter	39
28602 S - 26	"Electro Drive" Pulley, 3 1/4 inches work-	_
28602 S-27	ing diameter	39
20002 0-21	"Electro Drive" Pulley, 3 3/8 inches work- ing diameter	70
28602 S-28	"Electro Drive" Pulley, 3 1/2 inches work-	3 9
	ing diameter	39
28602 S -2 9	"Electro Drive" Pulley, 3 5/8 inches work-	
00/0/ 2/0	ing diameter	39
28606-1/2	Powdered Oil Stone, 1/2 lb. package	
28606-1 28613 A	" " 1 lb. package	_
28613 B	Brake Shoe, for transmitter No. 28636 Z Brake Shoe Washer, for transmitter No. 28636 Z	39
28615 D	Transmitter Pulley Shaft, for transmitter No.	39
,	28636 Z (leather wiper No. 28623 A, oiler	
	No. 666-5, plug screw No. 22539 A)	42
28615 F	Transmitter Fulley Shaft, for transmitter No.	- -
00/15 0	28636 Y	42
28615 G 28618	Brake Lever Shaft, for transmitter No. 28636 Y	39
20010	Presser Foot Edge Guide Locking Spring, for	-/
28623 A	presser foot No. 61320 D	26
	shaft on transmitter No. 28636 Z	39
28630 E	Frame, for transmitter No. 28636 Y (screw No.	<i>)</i>
20/	22509 A)	45 45
28630 F	Frame, for transmitter No. 28636 Z	45
28633 F 28633 G	Operating Lever, for transmitter No. 28636 Z	45
20099 0	Operating Lever and Dress Guard, for trans- mitter No. 28636 Y (screw No. 22509 A	1. 🕶
28633 н	Operating Lever Thrust Flate, for trans-	43
	mitter No. 28636 Y	39
28633 Ј	Operating Lever Thrust Cap, for transmitter	,,
00/77 11	No. 28636 Y	29
28633 к	Brake Lever, for transmitter No. 28636 Y (set	7.0
28633 L	screw No. 22509 A, brake screw No. 22586 D) Brake Lever Spring, for transmitter No.	<i>5</i> 9
	28636 Y	37
28635 Y	Round Belt Transmitter, offset mounting,)
	without accessories	_
28635 Z	Round Belt Transmitter, center mounting,	
28/7/ 4	without accessories	-
28636 Y	Round Belt Transmitter, offset mounting, with	
28636 Z	Round Relt Transmitter contemporation with	46
200,00 2	Round Belt Transmitter, center mounting, with accessories	1. 2
28705	"Electro Drive", round belt, 1/2 H.P., A.C.,	46
	1 phase, 60 cycles, 105-115 volts.	
	3400 R.P.M	_
·		

Symbol	The figures in the last series	1
to	The figures in the last column refer only to the plates illustrating the parts and are not to be	Plate
Order By	used in ordering Refer to pink insert for prices.	No.
· -	by the control of principles of principles of prices.	
28705 D	"Electro Drive", round belt, 1/2 H.P., A.C.,	
	l phase, 60 cycles, 220 volts, 350 R.P.M.	
28705 V	"Electro Drive", "V" belt, 1/2 HP ac 1	
	i phase, ou cycles, 105-115 volts, 7/100 R.p.M.	
28705 DV	"Electro Drive", "V" belt. 1/2 H.P., A.C., 1	
20202 B	phase, 60 cycles, 220 volts, 3450 R.P.M	
28707 В	"Electro Drive", round belt, 1/2 H.P., A.C.,	
	3 phase, 60 cycles, 210-230 volts, 3500 R.P.M.	
28707 D	"Electro Drive", round belt, 1/2 H.P., A.C.,	-
, ,	3 phase, 60 cycles, 440 volts, 3500 R.P.M.	
28707 BV	["Electro Drive", "V" belt, 1/2 H.P. A.C. ス	
00505	phase, 60 cycles, 210-230 volts, 3500 R.P.M.	
28707 DV	phase, 60 cycles, 210-230 volts, 3500 R.P.M. "Electro Drive", "V" belt, 1/2 H.P., A.C., 3	
28708	phase, ou cycles, 440 volts, 3500 R.P.M	
20100	"Electro Drive", round belt, 1/2 H.P., D.C., 105-115 volts, 3000 R.P.M	
28708 A	"Electro Drive", round belt, 1/2 H.P., D.C.,	_
•	210-230 volts, 3000 R.P.M	_
28708 V	210-230 volts, 3000 R.P.M	
	+UD-110 VOLUS, 5000 R.P.M. = = = = = = = = =	
28708 AV	"Electro Drive", "V" belt, 1/2 H.P., D.C.,	
29126 AF	210-230 volts, 3000 R.P.M	
27120 RI	Feed Eccentric Assembly; one each Nos. 61237, 61238 lapped together	7.5
29133 F	Air Pump Eccentric Assembly, for Styles	35
-	61200 C, 61300 C; one each Nos. 61237 A,	
	olao) G lapped together	35
29264 F	Needle Bar Assembly, for Styles 61200 C,	
	61200 F, 61300 C, 61300 F; one each Nos.	
29264 G	61217, 22752, 61218 A+	36
-/	Needle Bar Assembly, for Style 61300 E; one each Nos. 61317 E, 22752, 61218 A	36
29474 A	Hook Assembly; one each Nos. 22716 B, 61208 A,	20
	61210, 61211, 61212 A, 61213 N, 6121/ ₁	
	61214 N, 61215, 61215 N, 61216, 61216 N: two	
	No. 22564 E; three No. 22569 A; ten No.	
29480 W	Thread Stand Assemblations and Assemblations	27
2,400 #	Thread Stand Assembly; one each Nos.21104 B-9, 21114 A, 21130 A-2; two each Nos. 69 S,100 B	
29480 X	Accessories, for Class 61200 machines; one	_
	each Nos. 21393 C, 21661 C, 21661 D,21663 C.	
	21664, 21665 C. 61377 AB. 61378: two each	
	Nos. 21002 C, 21065, 22846 Q-16. 61374: four	
201.90 7	No. 61376; twelve No. NA12	-
29480 Y	Accessories, for Class 61300 machines; one	
	each Nos. 21393 D, 21661 C, 21661 D, 21663C, 21664, 21665 C, 61377 AB, 61378; two each	
	Nos. 21662 C, 21665, 22846 Q-16, 61374;	
İ	four No. 61376; twelve No. NA12	

Symbol	The figures in the last column refer only to the	Dinto
to	plates illustrating the parts and are not to be	Plate
Order By	used in ordering. Refer to pink insert for prices.	No.
Order pl	used in ordering. Refer to pink insert for prices.	
35772 н	Spring Washer, for hemmer bracket swinging arm	25
39142 Q	Air Pump Piston Pin, for Styles 61200 C,61300 C	
J/-4- 4	(screw No. 22768)	29
41041 B	Feed Driving Shaft Collar (screw No. 531)	
51430 F	Presser Foot Adjusting Screw Lock Nut, for	25
71470 1	presser foot No. L293	25
к51606		25
K)1000	Throw-out Adapter Assembly, for mounting plate	
	hemmers, with short bases, ranging from 1/2	
	to 3 inch width of hem; one each Nos.	
	12957 E, 22735, K51624, K51625, K51626; two	_1
	each Nos. 20, 22570 (attaching screw No. 94)	34
K51619	Plate Hemmer, for making a 1/4 inch hem on	
	towels; used with feed dog No. 61205 A,	
	presser foot No. 61220 T, throat plate No.	
	61224 C-093 (attaching screw No. 25 C)	31
K51620	Presser Foot, for hemming sheets and pillow	_
	cases, all widths of hem up to 3 inches; used	
	with feed dog No. 61205 A, throat plate No.	
	61224 C-093 (screw No. 22775)	15
K51621	Plate Hemmer, 1 inch hem, for sheets; used with	
/	feed dog No. 61205 A, presser foot No.K51620,	
	throat plate No.61224 C-093, swinging bracket	İ
	No.K51659 (attaching screw No. 22711)	33
K51622	Plate Hemmer, 3 inch hem, for sheets; used with	
,	feed dog No. 61205 A, presser foot No.K51620,	
	throat plate No. 61224 C-093, swinging	
	bracket No. K51659 (attaching screw No.22711)	33
K51623	Throw-out Adapter Assembly, for mounting plate))
//	hemmers, with long bases, ranging from 1/2 to	1
	3 inch width of hem; one each Nos. 12957 E,	1
•	22735, K51624, K51625; two each Nos. 20,	
	22570 (attaching screw No. 94)	34
к51624	Base, for sub-assemblies Nos. K51606, K51623	74
11,1024	(attaching screw No. 94)	34
VE1425	Swinging Arm, for sub-assemblies Nos. K51606,	124
к51625	VELLOZ (nivet conom Ne. 22775 weeken Ne.	1
	K51623 (pivot screw No. 22735, washer No.	7 1.
WE3/0/	12957 E)	34
к51626	Hemmer Support, for sub-assembly No. K51606	1_1
	(attaching screw No. 22570, washer No. 20)	34
к51627	Tension Spring, .059 inch diameter wire, for	
	needle thread	26
к51630	Presser Foot, with guide on right side and ex-	
	tending full length of bottom, for edge	
	stitching pants flies, guide projects 3/64	
	inch below bottom and is located 1/16 inch to	Ì
	right of needle; used with feed dog No.61205,	1
	throat plate No. 61224-093 (screw No.22775)	20
к51634	Presser Foot, diagonal front, for miscellaneous	1
/ 0 /	hemming operations; used with feed dog No.	1
	61305 A, throat plate No. 61324 A-093	1.6
	(screw No. 22775)	15

	LIST OF FARIS	
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
к51636	Presser Foot, with 1/16 inch off-set in line	
K51643	with feed, for edge stitching heavy overcoats; used with feed dog No. 61305 B, throat plate No. 61324 B-093 (screw No. 22775) Presser Foot, 1/4 inch wide, for attaching hook and eye strips to corsets; used with feed dog No. 61205 A, throat plate No. 61224 A-093	19
	(screw No. 22775)	14
к51645	Presser Foot, with 9/32 inch groove to left of needle, for cording work on upholstery; used with feed dog No. 61305 A, throat plate No.	
к51649	61324 A-093 (screw No. 22775)	19
к51650	61224 C-093 (attaching screw No. 25 C) Plate Hemmer, for making a 3/8 inch hem on shorts; used with feed dog No. 61205 C, presser foot No. 61220, throat plate No.	31
	61224 C-093 (attaching screw No. 25 C)	31
к51655	Cut Edge Binder, for use with 1 inch bias bind- ing; used with feed dog No. 61305 B, presser foot No. 61220 H, throat plate No. 61221 D-093	<i></i>
к51659	(attaching screw No. K51693) Swinging Bracket, for dual plate hemmers on sheets; used with feed dog No. 61205 A, presser foot No. K51620, throat plate No. 61224 C-093, hemmers Nos. K51621, K51622	32
к51660	(attaching screw No. 94)	34
к51661	ing (screw No. 22775)	20
к51662	ing (screw No. 22775)	20
	side, guide extends 3/64 inch below main section and is located 1/2 inch to right of center of needle, for miscellaneous edge stitching (screw No. 22775)	20
• .		
•		

	LISI OF FARIS	,
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
к51665	Presser Foot, hinged bottom, 1/2 inch wide, left side of bottom is .015 inch lower than right side, ledge is located in line with left side of slot, for miscellaneous edge stitching; used with feed dog No. 61205 A, throat plate No. 61224 C-093 (bottom tilting spring No.	
к51666	6990, hinge pin No. 61330 B-29, attaching screw No. 22775)	11
	strip; used with feed dog No. 61305 B, presser foot No. 61220 H, throat plate No. 61224 D-093 (attaching screw No. K51693)	32
к51667	Cut Edge Binder, for use with 7/8 inch bias strip; used with feed dog No. 61305 B, presser foot No. 61220 H, throat plate No. 61224 D-093 (attaching screw No. K51693)	32
к51668	Plate Hemmer, for making a 3/16 inch hem on mus- lin; used with feed dog No. 61205 A, presser foot No. 61220 T, throat plate No. 61224 C-093 (attaching screw No. 25 C)	
к51669	Plate Hemmer, for making a 1/4 inch hem on shorts; used with feed dog No. 61205 C, presser foot No. 61220, throat plate No.	31
к51670	61224 C-093 (attaching screw No. 25 C) Plate Hemmer, for making a 1 1/2 inch hem on house dresses; used with feed dog No. 61205, presser foot No. 61220, throat plate No. 61224-063, throw-out adapter No. K51623	31
к51671	(attaching screw No. 22570)	41
к51672	K51693)	32
K51675	Presser Foot, rigid bottom, with yielding spring guide located 1/16 inch to right of needle, for attaching collar bands to shirts; used with feed dog No. 61205 A, throat plate No. 61224 C-093 (spring guide No. K51676, spring guide screw No. 187 A, attaching screw No. 22775)	31 16
K51676 K51679	Presser Foot Hemmer, for 3/32 inch hem, flat	22
	plate No. 6122/ C-003 (conom)(17

	LIST OF PARTS	
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
к51680	Throat Plate, diameter of needle hole .093 inch, .125 inch thickness, with front cut away flush	_
	with bed; otherwise same as 61324 C-093; used with feed dog No. 61305 C, presser foot No. 61320 C (attaching screw No. 376)	5
к51681	towels; used with feed dog No. 61205 A, presser foot No. 61220 T. throat plate No.	
к51682	61224 C-093 (attaching screw No. 25 C) Presser Foot, hinged bottom, split front, with long right section; used with feed dog No. 61205 A, throat plate No. 61224 C-093 (shank No. 61230 D, hinge pin No. 61330 B-29,	31
K51683	attaching screw No. 22775)	11
к51684	on coats and vests, used with feed dog No. 61305 B, throat plate No. 61324 B-093 (shank No. 61230 D, hinge pin No. 61330 B-29.	13
к51685		12
к51686	Feed Dog, 16 teeth per inch, for edge stitching on ordinary quality coats and vests; used with presser foot No. 61320, throat plate No.	4
K51688	K51685 (screw No. 22768)	9
к51689	Plate Hemmer, for making a 3 inch hem with 3/8 inch underlap on sheets; used with feed dog No. 61205 A, presser foot No. K51620, throat plate No. 61224 C-093, dual swinging bracket	33
K51693	Attaching Screw, for binders mounted on throat	33 23
к51696	Presser Foot, rigid bottom, with guide on right side; guide extends 1/32 inch below main section and is located 1/32 inch to right of center of needle; used with feed dog No. 61205, throat plate No. 61224-063 (screw No.	-,
	2277E 1	20

	3131 01 11111.3	
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
к51697	Presser Foot Hemmer, with round wire tongue, for 3/16 inch hem on work shirts; used with feed dog No. 61205 C, throat plate No. 61224 C-093 (scroll No. 61230-5/32, screw No. 22775)	17
к51699	Cut Edge Binder, for use with 5/8 inch straight cut strip; used with feed dog No. 61305 B, presser foot No. 61220 H, throat plate No. 61224 D-093 (attaching screw No. K51693)	32
51930	Presser Foot Bottom Tilting Spring, for presser feet Nos. L204, L208, 61220 J, 61220 K, 61220 P, 61220 Q, 61220 S, 61320 J	26
61202 61203	Bed Slide	37 34
61203 A	Edge Guide, for machines equipped with throat plates which project above the bed (attaching screw No. 22551 A)	34
61203 В	Flexible Guide Assembly, for edge stitching collars and cuffs on dress shirts; used with feed dog No. 61205 A, presser foot No. 61220 A, throat plate No. 61224 C-093; one each Nos. 61203 C, 61203 D; two No. 22561	
61203 C	(attaching screw No. 22585 A) Flexible Edge Guide, for sub-assembly No. 61203 B (screw No. 22561)	33 33
61203 D	Base, for sub-assembly No. 61203 B (screw No. 22585 A)	33
61205	Feed Dog, 16 teeth per inch, for miscellaneous house dress operations; used with presser foot No. 61220, throat plate No. 61224-093	9
61205 A	Feed Dog, 16 teeth per inch, for miscellaneous operations on articles made from light weight woven cloth; used with presser foot No. 61220 A, throat plate No. 61224 C-093-	10
61205 B	Feed Dog, 16 teeth per inch, for hemming dress shirts; used with presser foot No. 61220 B, throat plate No. 61224 B-093	
61205 C	Feed Dog, 22 teeth per inch, 3 rows of teeth, for hemming work shirts; used with presser foot No. 61220 C, throat plate No.	9
61207 A	61224 C-093	10
61207 В	61208 A, 61210, 61211; three No. 22569 A; seven No. 22716 A)	27
	Nos. 61207 A, 61214	27

Symbol	The figures in the last column refer only to the	Plate
to Order By	plates illustrating the parts and are not to be used in ordering Refer to pink insert for prices.	No.
61208 A	Hook (screw No. 22569 A)	000
61210	Hook Thread Deflector (screw No. 22716 A)	27
61211	" Retainer (corew No. 22/16 A)	27
61212	revalue (Screw No. 22/16 A) = = 1	27
61212 A	Bobbin, steel, for Style 61300 E	27
OTETE A	aluminum, for Styles 61200 C, 61200 F, 61300 C, 61300 F	07
61213	Bobbin Case Assembly: one each Nos.	27
•	22716 B, 61213 N, 61214 N, 61215, 61215N	
61213 N	61216, 61216 N; two No. 22564 E	27
61214	Bobbin Case	27
	Bobbin Case Holder	27
61214 N	Bobbin Case Tension Spring (attaching screw	
41011. 11	No. 22564 E, regulating screw No.22716 B)	27
61214 U	Bobbin Case Holder Finger (screw, right,	
61215	No. 22742, screw, left, No. 93)	27
61215 N		27
61216	Level	27
61216 N	H Hinge Pin	27
_	Spring	26
61217 61218 a	Needle Bar (clamp screw No. 22729)	36
61220 A	" Clamp Collar (screw No. 22752)	27
01220	Presser Foot Assembly, hinged bottom, for	
	miscellaneous house dress operations;	
	used with feed dog No. 61205, throat	
	plate No. 61224-093; one each Nos.	
61220 A	61230 H, 61230 D, 61330 B-29 Presser Foot Assembly, hinged bottom,	13
	length of bottom 1 1/8 inches, for mis-	
	cellaneous operations on articles made	
	from light weight woven cloth; used with	
	feed dog No. 61205 A, throat plate No.	
	61224 C-093; one each Nos. 61230 E,	
		11
61220 B - 1/8	Presser Foot Hemmer, for 1/8 inch hem on	7.7
·	dress shirts; used with feed dog No.	
	61205 B, throat plate No. 61224 B-093	
	(scroll No. 61230 B-1/8, scroll pin No.	
	61230 C)	17
61220 B - 5/32	Presser Foot Hemmer, for 5/32 inch hem on	- •
	dress shirts; used with feed dog No.	
	61205 B, throat plate No. 61224 B-093	
	(scroll No. 61230 B-1/8, scroll pin No.	
(1000 - 140	61230 C)	17
61220 C-1/8	Presser Foot Hemmer, for 1/8 inch hem on	
	work shirts; used with feed dog No.	
1	61205 C, throat plate No. 61224 C-093	
(1000	(scroll No. 61230-5/32)	17
61220 C-5/32	Presser Foot Hemmer, for 5/32 inch hem	17
61220 C-3/16	" " for 3/16 inch hem	17
61220 C-1/4		ιγ

	3. 12.110	
Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
61220 D-1/8	Presser Foot Hemmer, large capacity, without ribs on bottom, for making a 1/8 inch hem on dress shirts; used with feed dog No. 61205 A, throat plate No. 61224 C-093	
61220 E	Presser Foot, for miscellaneous operations on articles made from light weight woven cloth	17
61220 F	Presser Foot, for edge stitching collars and cuffs on work shirts; used with feed dog No. 61305 B, throat plate No. 61324 B-093; formerly No. K51637	14
61220 G	Presser Foot, for hemming work shirts with plate hemmer; used with feed dog No. 61205, throat plate No. 61224-093; formerly No. K51644-	11
61220 н	Presser Foot, solid bottom, for miscellan- eous binding operations with English binder depressed below the surface of the throat plate; used with feed dog No. 61305 B, throat plate No. 61224 D-093;	14
61220 J	Presser Foot Assembly, hinged bottom, with spring for raising toe; for miscellaneous operations on articles made from light weight woven cloth; used with feed dog No. 61205 A, throat plate No. 61224 C-093; one each Nos. 61230 D, 61230 E, 61330 B-29, 51930; formerly No.	14
61220 K	Presser Foot Assembly, hinged flat bottom, plain well rounded front, with spring for raising toe, distance from center of needle hole to right edge 17/32 inch; used with feed dog No. 61205 A, throat plate No. 61224 C-093; one each Nos. 61230 K, 51930, 61230 D, 61330 B-29;	11
61220 L-5/32	tongue, for 5/32 inch hem on work shirts; used with feed dog No. 61205 C, throat plate No. 61224 C-093; formerly No. L14 (scroll No. 61230-5/32, scroll	13
61220 M-1/8	Presser Foot Hemmer, for 1/8 inch hem on dresses; used with feed dog No. 61205 A, throat plate No. 61224 C-093; formerly	17

	- DEST OF TARTO	
0-1.3	77. Al.,	l
Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	
Order By	used in ordering. Refer to pink insert for prices.	No.
•	Bereater to bitte impere for Stife88.	1
		1
61220 N	Presser Foot, rigid bottom, with guide on	
	right side, guide extends .015 inch below	
	right state guide extends .OI) inch below	1
	main section and is located 1/16 inch to	1
	right of center of needle, for attaching	ľ
	labels; used with feed dog No. 61205 B.	
	throat plate No. 61224 B-063; formerly No.	
	L27	l
61220 P		20
01220 P	Presser Foot Assembly, hinged bottom, same as	
•	No.01220 A, except with spring to raise	ĺ
	toe, front is longer and bent up higher;	1
	used with feed dog No. 61205 A, throat	İ
	ploto No. 6300h G cor ()	ļ
	plate No. 61224 C-093 (shank No. 61330,	ļ
	tilting spring No. 51930, hinge pin No.	
_	. 61330 B-35; formerly No. L38	11
61220 Q	Presser Foot Assembly, distance from center	
-	of needle hole to right side 5/16 inch, for	
	non with 7/9 dark might side 5/16 inch, for	
	use with 3/8 inch plate hemmers; used with	
	feed dog No. 61205 C, throat plate No.	
•	61224 C-093; one each Nos. 61230 0. 51930.	
	61230 D, 61330 B-29	13
61220 R	Presser Foot, rigid bottom, 5/16 inch wide,	±0
4	with old booting purchase of the state	
	with all bearing surface of bottom to left	
(3.000.0	of center of needle; formerly No. L26	15
61220 s	Presser Foot Assembly, hinged bottom, with	
	yleiding right side, for miscellaneous edge	
	stitching; one each Nos. 51930, 61230 L,	
	61230 M, 61230 S, 61330 B-35	17
61220 т	Presser Foot plain wall mounded found so	13
02220 1	Presser Foot, plain well rounded front, for	
	hemming towels, 1/4 inch hem; used with	
	feed dog No. 61205 A, throat plate No.	
	61224 C-093, hemmer No. K51619; formerly	
	No. K51618	15
	Presser Foot Screw No. 22775	15
61221	Word Theel and the	
01441	Hand Wheel, grooved for round belt (set screw	
 .	No. 22597 A, spot screw No. 22597)	37
61221 E	Hand Wheel, solid, grooved for No. 2 mym	•
	belt, working diameter 2 1/2 inches (spot	
	screw No. 22597, set screw No. 22597 A)	**
61222	Main Chaft for atrian in (2) (2000	3 7
	Main Shaft, for styles in Class 61200	44
61224-063	Throat Plate, diameter of needle hole .063	
	inch, thickness .083 inch, for miscellan-	
	eous house dress operations; used with feed	
	dog No. 61205, presser foot No. 61220	-
61224-093	Threat Distance of the property of the propert	3
01224-095	Throat Plate, diameter of needle hole .093	
(200)	inch	3.
61224 B-063	Throat Plate, diameter of needle hole .063	-
-1	inch, thickness .083 inch, for hemming	
	dress shirts, used with feed dog No.	
	6130E B species 4:-4 % (NO.	_
: I	61205 B, presser foot No. 61220 B	2
·		

-		
Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
	used in ordering Refer to pink insert for prices.	HO.
Order By	anous in order ing smerer so bring research for birdes?	
	<u> </u>	
61224 B-093	Throat Plate, diameter of needle hole	
	.093 inch	2
61224 C-063	Throat Plate, diameter of needle hole .063	_
	inch, thickness .083 inch, for hemming	
	work chiefes wood with food de ly	
	work shirts; used with feed dog No.	
(200)	61205 C, presser foot No. 61220 C	6
61224 C - 073	Throat Plate, diameter of needle hole .073	
	inch	6
61224 C-093	" " diameter of needle hole .093	
	inch; formerly No. L25	6
61224 D-063	Throat Plate, diameter of needle hole .063	Ŭ
02224 2 007	inch, thickness .083 inch, for miscell-	
	anoma kinding angulating att n 31	
	aneous binding operations with English	
	binder depressed below the surface of	
	the throat plate; used with feed dog No.	
	61305 B, presser foot No. 61220 H	7
61224 D-073	Throat Plate, diameter of needle hole .073	
-	inch	7
61224 D-093	" " diameter of needle hole .093	
	inch; formerly No. K51600	7
	Throat Plate Screw No. 376	
61930-5/39	Conell for process foot No. 1375	
61230-5/32	Scroll, for presser feet Nos. L175,	
	61220 C-1/8, 61220 C-5/32, 61220 C-3/16, 61220 C-1/4, 61220 D-1/8, 61220 L-5/32	
	61220 C-1/4, 61220 D-1/8, 61220 L-5/32 -	22
61230 B - 1/8	Scroll, for presser feet Nos. 61220 B-1/8,	,
_	61220 B-5/32	22
61230 C	Scroll Pin, for presser feet Nos. L251, 61220 B-1/8, 61220 B-5/32	
	61220 B-1/8, 61220 B-5/32	22
61230 D	Shank, for presser feet Nos. L8, L62, L71,	
_	1.195 1.200 1.208 1.251 1.266 1.305 1.334	
	L195, L204, L208, L251, L266, L305, L334, K51682, K51684, 61220, 61220 A,61220 J,	
	61220 K, 61220 Q	
61220 P	Dotton manifed #43220 All for manage foot	_
61230 E	Bottom, marked "61220 A", for presser foot	
ė	No. 61220 A	21
61230 F	Bottom, marked "61220 F", for presser foot	
_	No. 61220 F	21
61230 Н	Bottom, marked "61220" for presser foot	
·	No. 61220	21
61230 J	Scroll Pin, for presser feet Nos.	
222,00	61220 D-1/8, 61220 L-5/32	22
61230 к	Bottom, marked "61220 K", for presser foot	E- C-
012)0 K		
(2076 -	No. 61220 K	21
61230 L	marked "61220 S" for presser foot	
	No. 61220 S	21
61230 M	Yielding Section, for presser foot No.	
-	61220 S	21
61230 Q	Bottom, marked "61220 Q", for presser foot	
	No. 61220 Q	21
61230 9		
61230 S	Shank, for presser foot No. 61220 S	10
61231	Finger Guard	10
		L

Symbol	The figures in the last religion - for the]
· .	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order By	used in ordering. Refer to pink insert for prices.	
		j
61232	Feed Driving Shaft, for Styles 61200 C,61200 F	. ,
61232 D	the Chaft Ducking Joseph Discharge D	44
61232 G	onaro Dusning, leit	29
01272 G	Feed Driving Shaft Oil Retaining Bushing,	
	right, has left spiral oil groove and must be	
4	assembled to right of hook driving gear	29
61232 N	Feed Driving Shaft Oil Retaining Bushing, left.	
	has right spiral oil groove and must be	i
	assembled to left of hook driving gear	29
61233 N	Feed Lift Link	
61234	Feed Bar (set screw No. 89)	28
61235	" Shaft	35
61236	" Rocker	29
	W N Shaft (set corew No. 730)	35
61236 G	Didio (see scien MO. (Ta) =	37
61236 N	· propring	29
61236 U	" " Connection Link (screw No. 89)	35
61237	" Eccentric (set screw No. 95, spot screw	
	No. 96)	29
61237 A	Air Pump Eccentric, for Styles 61200 C, 61300 C	
	(set screw No. 95, spot screw No. 22764 A)	29
61238	Feed Eccentric Strap	スに
61239	" Dog Holder (screw No. 93)	35 10
6124ó	Hook Shaft, solid, for Style 61300 E	
61240 B	Hook Sheft tubular for was with males assess	36
01240 B	Hook Shaft, tubular, for use with valve screw	
	No. 61296 on Styles 61200 C, 61200 F,	_ ^
(2012.4	61300 C, 61300 F	36
61241 A	Hook Shaft Bushing, right	29
61241 В	" " " left	29
61242	" " Collar (screw No. 88)	25
61243	" " Driving Gear (set screw No. 98, spot	•
	screw No. 96)	35
61244	" Pinion (screw No. 89)	35 28
61245	Stitch Regulator Thumbscrew (lock screw No.	
'	22597 A)	76
61245 G	Stitch Regulator Thumbscrew Binding Insert	36
61246	" " Lever (screw No.	26
		20
61247	93 A)	28
01241	" Lever Spring (screw	
61248	No. 93 A)	26
01240	Stitch Regulator Shaft, 7 31/32 inches long,	
(1610 -	for Styles 61200 C, 61200 F	42
61248 G	Stitch Regulator Shaft Collar (screw No. 89)	25
61249	" " Arm (screw No. 22560 B)	28
61249 G	" " " Pin	29
61250	" " " Link (stud No.	
	22845 C)	28
\$61251 A	Take-up Lever Assembly, for Styles 61200 C,	
T/- "	61200 F, 61300 C, 61300 F	70
61251 D	Take-un Terem Din	35
	Take-up Lever Pin	28
61252 G	Take-up Lever Crank Pin, for Styles 61200 C,	
	61200 F, 61300 C, 61300 F (set screw No. 531,	
	spot screw No. 22764 A)	28
tsee Page		

		
0		
Symbol	The figures in the last column refer only to the	Plate
to	plates illustrating the parts and are not to be	No.
Order By	used in ordering Refer to pink insert for prices.	
61253	Take-up Spring	26
61253 G	" Thread Wire (screw No. 22565 A)	
61254		36
	Needle Bar Bushing, upper	29
61254 A	" " lower	29
61255	" " Connection Stud (screw No. 22562)	28
61255 G	Needle Bar Link, for Styles 61200 C, 61200 F,	
	61300 C, 61300 F (clamp screw No. 22729,	
	pivot screw No. 22757 A)	28
61255 K	Needle Bar Link Spacing Shim	26
61256 G	Presser Spring Washer	25
61257	* Bar	36
61257 G	" Bushing, upper, and presser spring)0
042)1 0	regulator	20
£10E0	regulator	29
61258	" Connection, for Styles 61200 C,	
(1054	61200 F, 61300 C, 61300 F	35
61259	" Guide (screw No. 95)	28
61260	Main Shaft and Feed Driving Shaft Gear (set	
	screw No. 95, spot screw No. 96 A, for main	
	shaft gear; set screw No. 22839 A for feed	
	driving shaft gear)	35
61261	Feed Driving Shaft Intermediate Gear	35
61262	Intermediate Gear Shaft, 3 3/4 inches long	<i>)</i>
	(set screw No. 22597 A)	36
61263	Intermediate Gear Bushing	29
61264	* Shaft Collar, right (screw	-7
01204	No. HA61 D)	0.5
61961. 4		25
61264 A	" Shaft Collar, left (screw	25
(20/F	No. HA61 D)	25
61265	Hand Lifter (screw pin No. 22799 M)	35
61266	Lifter Lever, for Styles 61200 C, 61200 F	
	(stud No. 22566 B, spring No. 15872 F)	44.
61267	Lifter Lever-Link, for Styles 61200 C,61200 F,	
	Lifter Lever-Link, for Styles 61200 C,61200 F, 61300 C,61300 F (screw No. 22758 B)	28
61267 G	Lifter Lever Spring Pin	26
61268	" " Connecting Rod (cotter pin No.	[
	660-142)	42
61269	" Bell Crank (stud No. 22817 A,	l
- •	stop screw No. 22874, lock nut	l
	No. 9937)	36
61270	Frame Thread Guide Wire, for Styles 61200 C,	
022,0	61200 F, 61300 C, 61300 F	27
61271	Frame Needle Thread Eyelet (screw No. 22570 A)	
61271	The state of the s	
61272	Spool Pin	26
61273	Bed Slide Spring (screw No. 91 A)	37
61282	Cover, for feed driving shaft gear case (screw	
•	No. 22570 A)	41
61282 A	Cover, for hook shaft gear case (screw No.	ļ
	22570 A)	35
61282 B	Face Plate (thumbscrew No. 22837)	41
61282 C	" Pin	
- 01202 0	I control of the cont	26
	9.0	

	210: 01 TAR10	
Symbol	The flavore in the last of	
to	The figures in the last column refer only to the	Plate
Order By	plates illustrating the parts and are not to be	No.
Cidel by	used in ordering. Refer to pink insert for prices.	1
		1
61282 D	Gasket, for feed driving short	
	Gasket, for feed driving shaft gear case	1.
61282 E		41
	Gasket, for hook shaft gear case cover	35
61285 G	Air Pump Eccentric Strap, for Styles 612000,	1
(01300 G (screw No. 22768)	35
61285 N	Air Pump Piston, for Styles 61200 C.61300 C	28
61286	Air Pump Cylinder, for Styles 61200 C.	120
	61300 C (screw No. 12997 A)	77
61286 G	Air Pump Cylinder Valve Spring, for Styles	37
32230 2	61200 C, 61300 C	
61286 N	AS Down multiple 6	26
	Air Pump Tube, for Styles 61200 C, 61300 C	37
61290	Main Shaft Bushing, right	36
61290 G	" left; also for No. 61232	29
61291 A	Main Shaft Crank, for Styles 61200 C,	-/
	61200 F, 61300 C, 61300 F (set screw No.	
	95, spot screw No. 22597)	
61292	Tension Post	35
61292 A		26
01292 A	" Socket (set screw No. 95, spot	
(1000 0	screw No. 22764)	29
61292 C	" Regulating Nut	25
61292 F-14	Spring, .047 inch diameter wire, for	
	bobbin winder	40
61292 G	* Release Pin	
61292 н	" Washer	26
61293		26
012//	Oil Tube, 1 11/16 inches long, serving	
	needle bar link and take-up lever on	
	Styles 61200 C, 61200 F, 61300 C,61300 F (felt wick No. 666-20)	
(2007 0	(Telt wick No. 666-20)	37
612 <u>9</u> 3 G	Oil Tube, 1 3/16 inches long, serving left	
_	main shaft bearing and take-up lever link	30
61293 N	Plug, .814 inch diameter, for left section	, ,
*	of arm	30
61294 D		44
61294 G	Adapter, for oil cup on Style 61200 C	
61294 W	Bress Union for oil lime to hear warm	30
012/4 "	Brass Union, for oil line to hook raceway	_
Canol v	on Style 61200 C	30
61294 X	Coupling, for hook raceway oil pipe on	
4	Styles 61200 C, 61300 C	25
61296	Valve Screw, for hook shaft on Styles	
1		24
61303	Edge Guide Assembly, adjustable, swing-out	
	type, for edge stitching on coats and	
	Tests wood with food don No Chars and	
	vests; used with feed dog No. 61305 B,	
1	presser foot No. 61320 B, throad plate	
	No. 61324 B-093; one each Nos. 61303 A.	
[134, 22551, 61303 B, 61303 C, 61303 D;	
	formanis Na 1751/AA	33
61303 A	Edge Guide, for sub-assembly No. 61303	33
	(~~~~~);	77
61303 B	Fidge Colde Unland	33
	Edge Guide Holder, for sub-assembly No.	
		33

Symbol to	The figures in the last column refer only to the plates illustrating the parts and are not to be	Plate
Order By	used in ordering. Refer to pink insert for prices.	
61303 C	Edge Guide Holder Base, for sub-assembly No. 61303	33
61303 D	Washer, for sub-assembly No. 61303; formerly No. K51678	25
61305	Feed Dog, 16 teeth per inch, for miscellaneous operations on cotton and woolen trousers; used with presser foot No. 61320 B, throat plate No. 61324-093	9
61305 A	Feed Dog, 14 teeth per inch, for miscellaneous operations on articles made from heavy weight woven cloth; used with presser foot No. 61320 A, throat plate No. 61324 A-093-	
61305 В	Feed Dog, 16 teeth per inch, for edge stitching on coats and vests; used with presser foot No. 61320, throat plate No. 61324 B-093	
61305 C	Feed Dog, 14 teeth per inch, for hemming high back overall suspenders; used with presser foot No. 61320 C, throat plate No. 61324 C-093	10
61305 D	Feed Dog, 14 teeth per inch, for miscellaneous operations on articles made from heavy weight woven cloth; used with presser foot	10
61305 E	Feed Dog, 16 teeth per inch, for miscellaneous edge stitching on work garments; used with throat plate No. 61324 E-093	9
61305 F	Feed Dog, 16 teeth per inch, for miscellaneous operations on articles made from heavy weight woven cloth; used with presser foot No. 61320 A, throat plate No. 61324 A7093; formerly No. L37	D 11 428
61317 E 61320	Feed Dog Screw No. 22768 Needle Bar, for Style 61300 E Presser Foot, for edge stitching on coats and vests; used with feed dog No. 61305 B,	36
61320 A	throat plate No. 61324 B-093 Presser Foot Assembly, hinged bottom, for miscellaneous operations on articles made from heavy weight woven cloth; used with feed dog No. 61305 A, throat plate No. 61324 A-093;	
61320 в	one each Nos. 61330 A, 61330, 61330 B-35 Presser Foot, for miscellaneous operations on cotton and woolen trousers; used with feed	
61320 C	dog No. 61305, throat plate No.61324 B-093 Presser Foot, for hemming high back overall suspenders; used with feed dog No. 61305 C, throat plate No. 61324 C-093	14 12
		* -
		L


Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
61320 D	Presser Foot, with adjustable guide on right	
61320 E	inch, for miscellaneous edge stitching on tailoring work; used with feed dog No. 61305 B, throat plate No. 61324 B-093 Presser Foot, rigid bottom, with yielding spring guide located 3/32 inch to right of needle, for miscellaneous edge stitching; used with feed dog No. 61305 A throat	15
61320 F	plate No. 61324 A-093; formerly No. K51631 (spring guide No. 61330 E. spring guide screw No. 187 A)	16
61320 н	used with feed dog No. 61305 A, throat plate No. 61324 A-093; formerly No. K51642 (spring guide No. 61330 F, spring guide screw No. 187 A)	16
01)20 11	Presser Foot, rigid bottom, with yielding spring guide located 1/16 inch to right of needle, for stitching pants flies (spring guide No. 61330 H, spring guide screw No. 22561)	16
61320 Ј	Presser Foot Assembly, with spring for raising toe, for miscellaneous operations on articles made from heavy weight woven cloth; used with feed dog No. 61305 A, throat plate No. 61324 A-093; one each Nos. 51930, 61330, 61330 A, 61330 B-35; formerly No. L23	16
61320 к	Presser Foot, rigid bottom, 1/2 inch wide, with the front section of bettom 3/64 inch lower than the rear, offset extends back to center of needle hole, for miscellan-	11
61320 I.	with guide on left side, guide extends 1/16 inch below main section and is located in line with left edge of needle slot (shank No. 61330, hinge pin No. 61330 B-35, attaching screw No. 22775)	19
61322 61324 - 063	Presser Foot Screw No. 22775	19 44
	eous operations on cotton and woolen trousers; used with feed dog No. 61305, presser foot No. 61320 B	3

-91-


Symbol to Order By	The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices.	Plate No.
61324-073	Throat Plate, diameter of needle hole .073	7
61324-093	Throat Plate, diameter of needle hole .093	3
61324 A-093	Throat Plate, diameter of needle hole .093 inch, thickness .125 inch, for miscellaneous operations on articles made from	<i>)</i>
61324 B-063	heavy weight woven cloth; used with feed dog No. 61305 A, presser foot No. 61320 A Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for edge stitching on coats and vests; used with feed dog No. 61305 B, presser foot No.	5
61324 B-093	61320	4
61324 C-083	inch	4
61324 C-093	Throat Plate, diameter of needle hole .093	6
61324 D - 063	Throat Plate, diameter of needle hole .063 inch, thickness .083 inch, for miscellaneous operations on articles made from heavy weight woven cloth; used with feed	6
61324 D-093	dog No. 61305 F, presser foot No. 61320 A Throat Plate, diameter of needle hole .093	5
61324 E-063	inch; formerly No. L36	5
61324 E-073	used with feed dog No. 61305 E Throat Plate, diameter of needle hole .073	4
61324 E-093	Throat Plate, diameter of needle hole .093 inch; formerly No. L78	4 և
61330	Throat Plate Screw No. 376 Shank, for presser feet Nos. L49, L59, L64, L69, L114, L115, L213, L220, L235, L237, L313, 61220 F, 61220 P, 61320 A, 61320 C	4
61330 A	Bottom, marked "61320 A" for presser foot	-
61330 B - 29	Hinge Pin, 29/64 inch long, for presser feet Nos. L8, L62, L71, L103, L114, L115, L195, L326, L334, K51665, K51682, K51684,	21

	STOT OF TRAILS	
Symbol	The figures in the last column refer only to the	
to	plates illustrating the parts and are not to be	Plate
Order By	used in ordering. Refer to pink insert for prices.	No.
Oldel Dj	about in ordering therer. to print theert for prices.	
61330 B-35	Hinne Din 75 //l t a l	
01770 6-55	Hinge Pin, 35/64 inch long, for presser feet	İ
	Nos. L39, L49, L59, L114, L115, L213, L235,	
	L237, L266, L305, L313, 61220 F, 61220 P,	1
(1770 D 70	1 01220 5, 01020 A, 61020 G, 61320 J = = = = =	22
61330 B - 39	Hinge Pin, 39/64 inch long, for presser foot	
(1770 0	NO. 01920 U	22
61330 C	Bottom, for presser foot No. 61320 C	21
61330 D	Adjustable Guide, for presser foot No. 613200	22
61330 E	literaing Spring Guide, for presser feet Nos	
(2.700.00	LZ(6, 61320 E (screw No. 187 A)	22
61330 F		
(2777	01020 F (screw No. 187 A)	22
61330 H	Yielding Spring Guide, for presser foot No.	
(1770 +	01020 H (SCrew No. 22561)	2 2
61330 L	Bottom, for presser foot No. 61320 L	21
61332	Feed Driving Shaft, for styles in Class 61300	44
61341 E	Hook Shart Bushing Oil Cap. for Styles	
43 ZJ. O	61200 F, 61300 E, 61300 F	30
61348	Stitch Regulator Shaft, 11 1/32 inches long,	
‡ 61351 E	for styles in Class 61300	42
	Take-up Lever Assembly, for Style 61300 E	35 28
61352 G 61354 A	Take-up Lever Crank Pin, for Style 61300 E-	28
61355 G	Needle Bar Bushing, lower, for Style 61300 E	29
01))) 4	Needle Bar Link, for Style 61300 E (clamp	_
61356	screw No. 22729, pivot screw No. 22757 A)	28
61358	Presser Spring, square wire	37
61366	Bar Connection, for Style 61300 E	28
. 02,000	Lifter Lever, for Styles 61300 C, 61300 F	
61366 E	(stud No. 22566 B, spring No. 15872 F)	44
01,00 2	Lifter Lever, for Style 61300 E (stud No. 22566 B, spring No. 15872 F)	
61367	Lifter Lever Link, for Style 61300 E (screw	44
	No. 22758 B)	00
61370 E	Thread Guide Wire, for Style 61300 E	28
61374	Hinge Plate (screw No. 22846 Q-16)	27
61375	Hinge Stud	30
61376	im	30 30
61377 A	Bobbin Winder and Tension Bracket Base	30 40
61377 B	Bobbin Winder Frame; one each Nos. 61377 C,	40
•	61377 D	40
61377 C	Dalban trans. w	40 40
61377 D	• # # #	40 40
61377 G		40 40
61377 н	# # The 3.2 are / T = 0.0 are 4.2 are	
61377 J		40 40
61377 к	" Engaging Lever, (rivet No.	40
_	61777 T 1	li o
61377 L	" Engaging Lever Rivet; also for	40
	No. 61377 M 1	40
61377 M	Engaging Lever Link (hinge stud	40
	NA 22977 1 1	_
ISee Page 5	-93-	40
- ,	7 J ⁻	

Symbol .	The figures in the last column refer only to the plates illustrating the parts and are not to be	Plate
to Order By	used in ordering. Refer to pink insert for prices.	No.
61377 N	Bobbin Winder Trip Latch, (adjusting screw No. 22876)	40
61377 P	Bobbin Winder Tension Bracket (attaching screw No. 22875)	40
61377 Q 61377 R	Bobbin Winder Tension Bracket Washer	40 40
61377 S 61377 V	" " " Nut " " Release Spring	40
61377 AB	Bobbin Winder, complete, for machines equipped with round or "V" belt pulley; one each Nos. 22875, 22876, 22878, 61292 F-14, 61377 A, 61377 B, 61377 C, 61377 D, 61377 G, 61377 H, 61377 J.	40
	61377 K, 61377 L, 61377 M, 61377 N, 61377 P, 61377 Q, 61377 R, 61377 S.	
61378	61377 V; two each Nos. 109, 22877 Machine Rest Pin	40 36
61391	" Shaft Crank, for Style 61300 E (set screw No. 95, spot screw No.22597)	3 5
61392 F-14 61394 D	Tension Spring, .047 inch diameter wire Oil Pipe, for hook raceway on Style 61300 C	26
61394 V	Adapter, for oil cup on Style 61300 C	30
,		
·		•
·	· .	
·		
	· ··· - · · · · · · · · · · · · · · · ·	

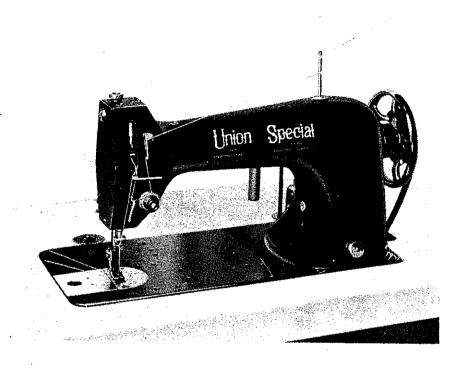

Short Arm Machine Style 61200 C and Typical of Style 61200 F

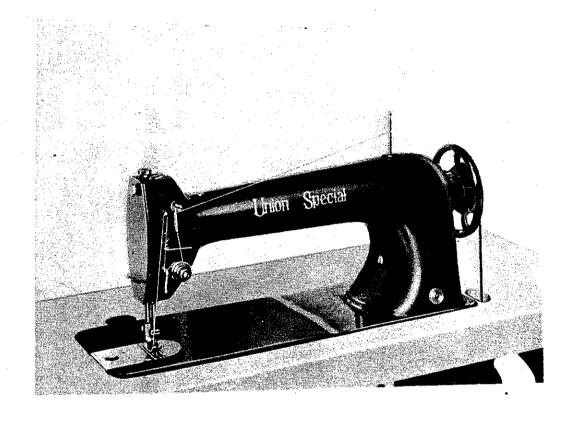

Long Arm Machine Style 61300 C and Typical of Styles 61300 E and 61300 F



