



1、机壳部件 ARM BED AND IT'S ACCESSORIES

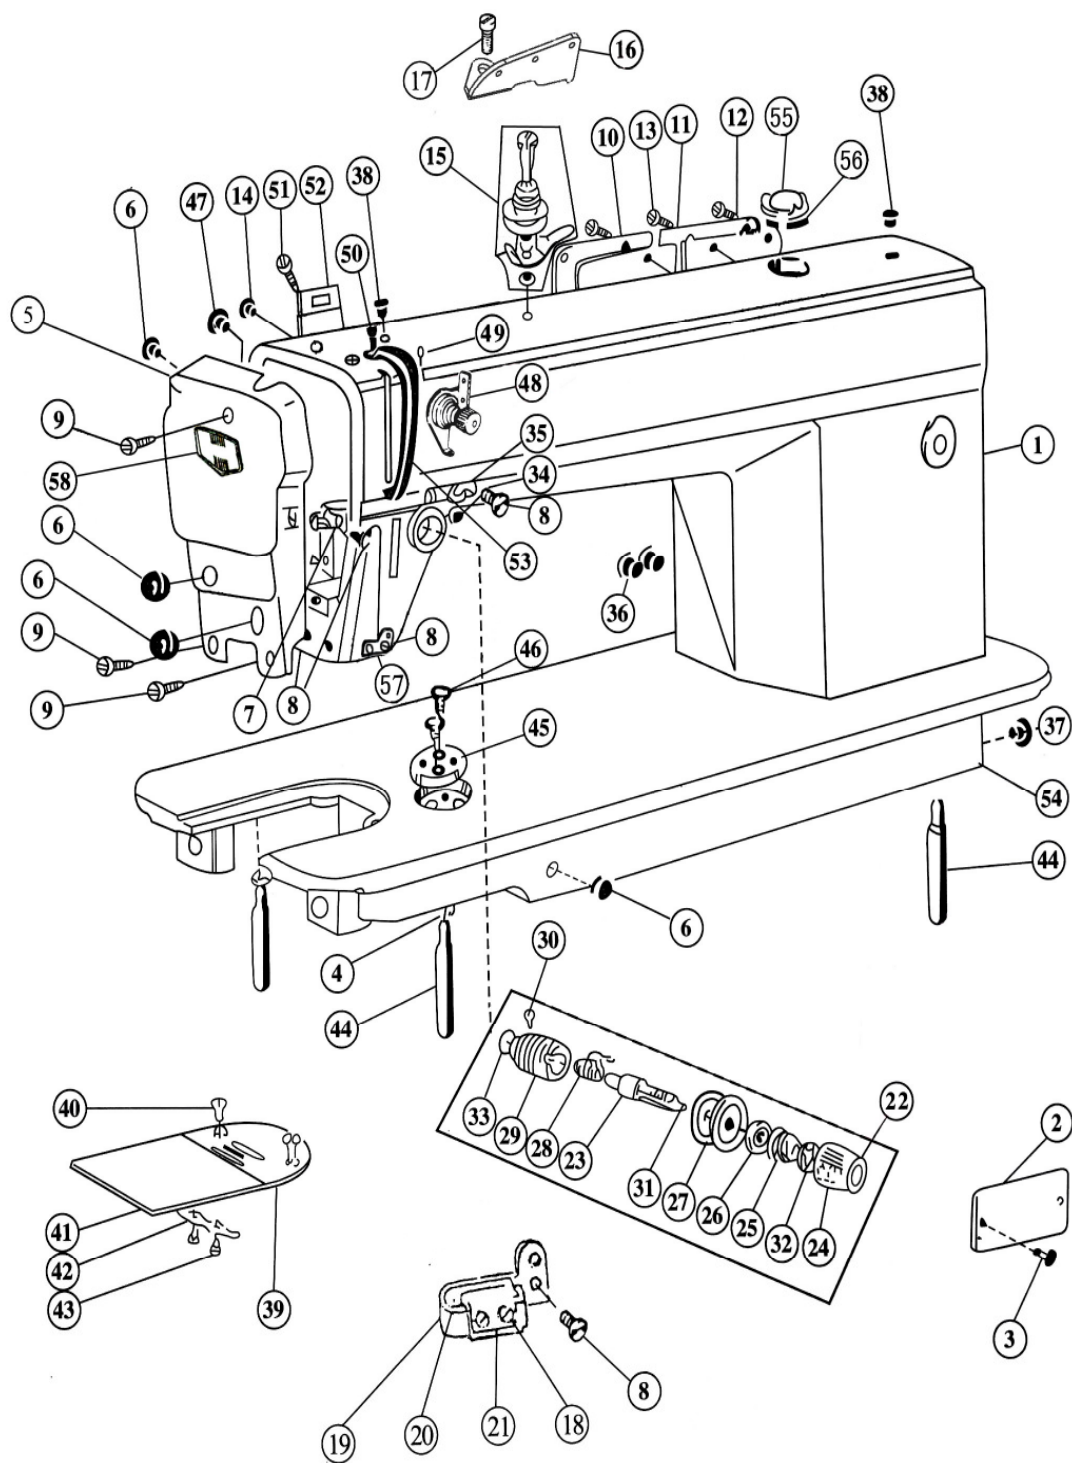

1、机壳部件ARM BED AND IT'S ACCESSORIES

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
1/1	1	120.01-01	机壳	ARM	1	1	
1/1		193.01-01	机壳	ARM			1
1/2	2	120.01-02	型号牌	TRADE MARK PLATE	1		
1/2		122.01-02	型号牌	TRADE MARK PLATE		1	
1/2		193.01-02	型号牌	TRADE MARK PLATE			1
1/3	3	120.01-03	铭牌铆钉	TRADE MARK PLATE RIVET	2	2	2
1/4	4	22-06000000-08	弹簧垫圈 $\phi 6$	SPRING WASHER $\phi 6$	2	2	
1/5	5	120.01-05	面板	FACE PLATE	1	1	
1/5		193.01-05	面板	FACE PLATE			1
1/6	6	120.01-06	橡皮塞	RUBBER BLUG $\phi 11.8$	4	5	5
1/7	7	120.01-07	面板线勾	THREAD GUIDE ON FACE PLATE	1	1	1
1/8	8	11-00090620-02	线勾螺钉	SET SCREW SM9/64"×40 L=6	3	3	3
1/9	9	11-60112020-01	面板螺钉	FACE PLATE SCREW SM11/64"×40 L=20	3	3	3
1/10	10	120.01-10	后盖板(左)	ARM SIDE COVER (LEFT)	1	1	
1/10		193.01-10	后盖板(左)	ARM SIDE COVER (LEFT)			1
1/11	11	120.01-11	后盖板(右)	ARM SIDE COVER (RIGHT)	1	1	
1/11		193.01-11	后盖板(右)	ARM SIDE COVER (RIGHT)			1
1/12	12	120.01-12	后盖板垫片	GASKET FOR ARM SIDE COVER	1	1	
1/12		193.01-12	后盖板垫片	GASKET FOR ARM SIDE COVER			1
1/13	13	120.01-13	后盖板螺钉组件	SET SCREW ASM SM11/64"×40 L=9	9	9	10
1/14	14	120.02-16	橡皮塞	RUBBER PLUG	1	1	1
1/15	15	120.01-15	小夹线器组件	SMALL THREAD TENSION ARM.	1	1	
1/16	16	193.01-15	三眼过线板	THREE-HOLE THREAD GUIDE			1
1/17	17	11-60110820-01	三眼过线板固定螺钉	SCREW SM11/64"×40 L=8			1
1/18	18	11-60060220-01	导线板螺钉	SCREW SM3/32"×56 L=2			2
1/19	19	193.01-41	导线杆架	PLATE OF GUIDE THREAD BRACKET			1
1/20	20	193.01-42	毛毡	OIL FELT			1
1/21	21	193.01-43	导线板	PLATE OF GUIDE THREAD			1
1/22	22	120.01-16	夹线器组件	THREAD TENSION ARM.	1	1	
1/22		193.01-16	夹线器组件	THREAD TENSION ARM.			1
1/23	23	120.01-16-01	夹线螺钉	THREAD TENSION SCREW	(1)	(1)	(1)
1/24	24	120.01-16-02	夹线螺母小组件	TENSION NUT	(1)	(1)	
1/24		193.01-16-02	夹线螺母	TENSION STUD NUT			(1)
1/25	25	120.01-16-03	夹线弹簧	SPRING FOR TENSION	(1)	(1)	(1)
1/26	26	120.01-16-04	松线板	THREAD TENSION RELEASING DISC	(1)	(1)	(1)
1/27	27	120.01-16-05	夹线板	THREAD TENSION DISC	(2)	(2)	(2)
1/28	28	120.01-16-06	挑线簧	THREAD TAKE-UP SPRING	(1)	(1)	(1)
1/29	29	120.01-16-07	夹线调节座	THREAD TENSION REGULATING BASE	(1)	(1)	(1)
1/30	30	11-80090610-01	夹线调节座螺钉	SET SCREW SM9/64"×40 L=6	(1)	(1)	(1)
1/31	31	120.01-16-09	松线钉	THREAD TENSION RELEASING PIN	(1)	(1)	(1)
1/32	32	120.01-16-10	夹线螺母止动板	STOP DISC	(1)	(1)	(1)
1/33	33	31-14515000-09	O型圈	RUBBER RING	(1)	(1)	(1)
1/34	34	11-80150730-01	夹线调节座固定螺钉	SET SCREW SM15/64"×28 L=6.8	1	1	1
1/35	35	120.01-18	线勾	THREAD GUIDE	1	1	1
1/36	36	120.01-19	橡皮塞	RUBBER PLUG	2	2	1
1/37	37	120.01-20	橡皮塞	RUBBER PLUG	1	1	1
1/38	38	120.01-21	橡皮塞	RUBBER PLUG	2	2	2
1/39	39	120.01-22	针板	NEEDLE PLATE	1		1
1/39		122.01-22	针板	NEEDLE PLATE		1	
1/40	40	11-20110850-02	针板螺钉	NEEDLE PLATE SCREW SM11/64"×40 L=8	2	2	2
1/44	44	120.01-27	底板撑杆	LEG	3	3	2
1/44		193.01-38	底板撑杆(短)	BED LEG (SHORT)			2
1/45	45	120.01-28	夹边座	CLOTH GUIDE PLATE	1	1	1
1/46	46	11-60110520-02	夹边座螺钉	SET SCREW SM11/64"×40 L=5	2	2	2
1/47	47	120.01-30	回油观察孔橡皮塞	RUBBER PLUG	1	1	1
1/48	48	409.11-01	小夹线器组件	THREE-HOLE THREAD GUIDE	1	1	
1/48		193.01-31	小夹线器组件	SMALL THREAD TENSION ARM.			1
1/49	49	11-80110610-01	三眼线勾螺钉	SET SCREW SM11/64"×40 L=5.5	1	1	1
1/50	50	11-40110825-01	挑线杆防护罩螺钉	SCREW TYPE TENSION STUD SM11/64"×40 L=8	1	1	1
1/51	51	11-60110620-01	挡油板油板螺钉	SCREW SM11/64"×40 L=6	1	1	1


1、机壳部件 ARM BED AND IT'S ACCESSORIES

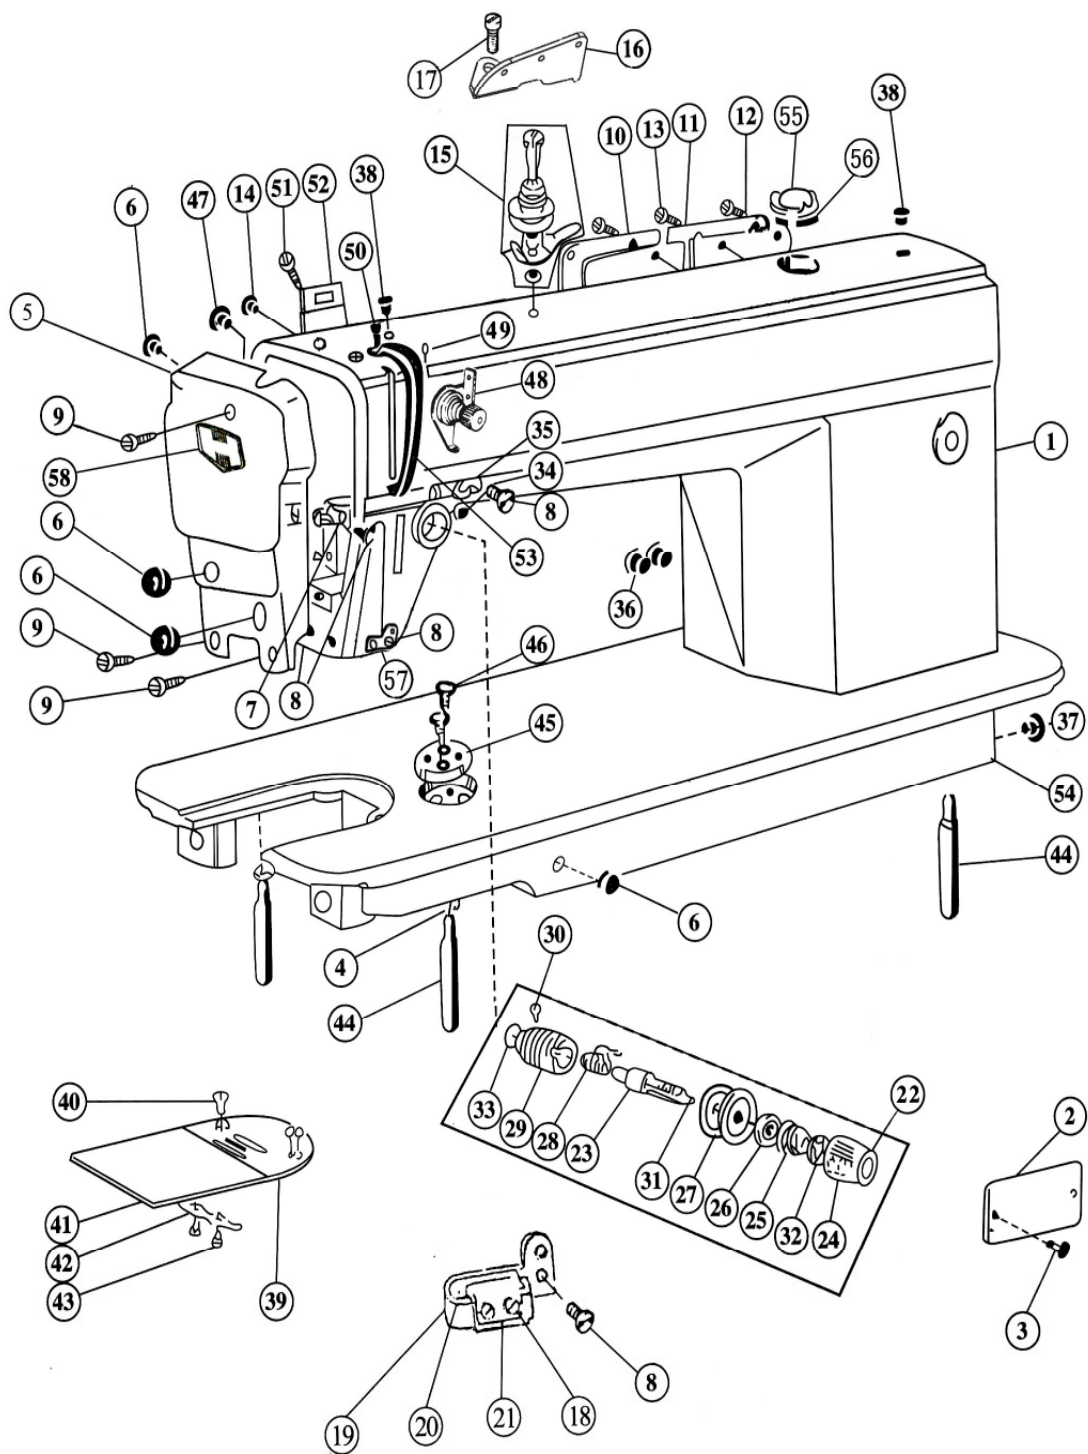

1、机壳部件ARM BED AND IT'S ACCESSORIES

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
1/52	52	120.01-35	偏心凸轮挡油板	OIL SHIELD PLATE	1	1	
1/52		193.01-35	偏心凸轮挡油板	OIL SHIELD PLATE			1
1/53	53	120.01-36	挑线杆防护罩	THREAD TAKE-UP LEVER COVER	1	1	1
1/54	54	120.01-37	底板	BED	1	1	
1/54		193.01-37	底板	BED			1
1/55	55	101.08-25	油窗	OIL CHECK WINDOW	1	1	1
1/56	56	31-20024000-09	O型圈	RUBBER RING	1	1	1
1/57	57	114.01-13	面板线勾	THREAD GUIDE ON FACE PLATE	1	1	
1/58	58	120.01-38	商标牌	BRAND PLATE	1	1	


2、针杆挑线、上轴竖轴部件 NEEDLE BAR AND TAKE-UP. ARM SHAFT AND VERTICAL
SHAFT MECHANISM

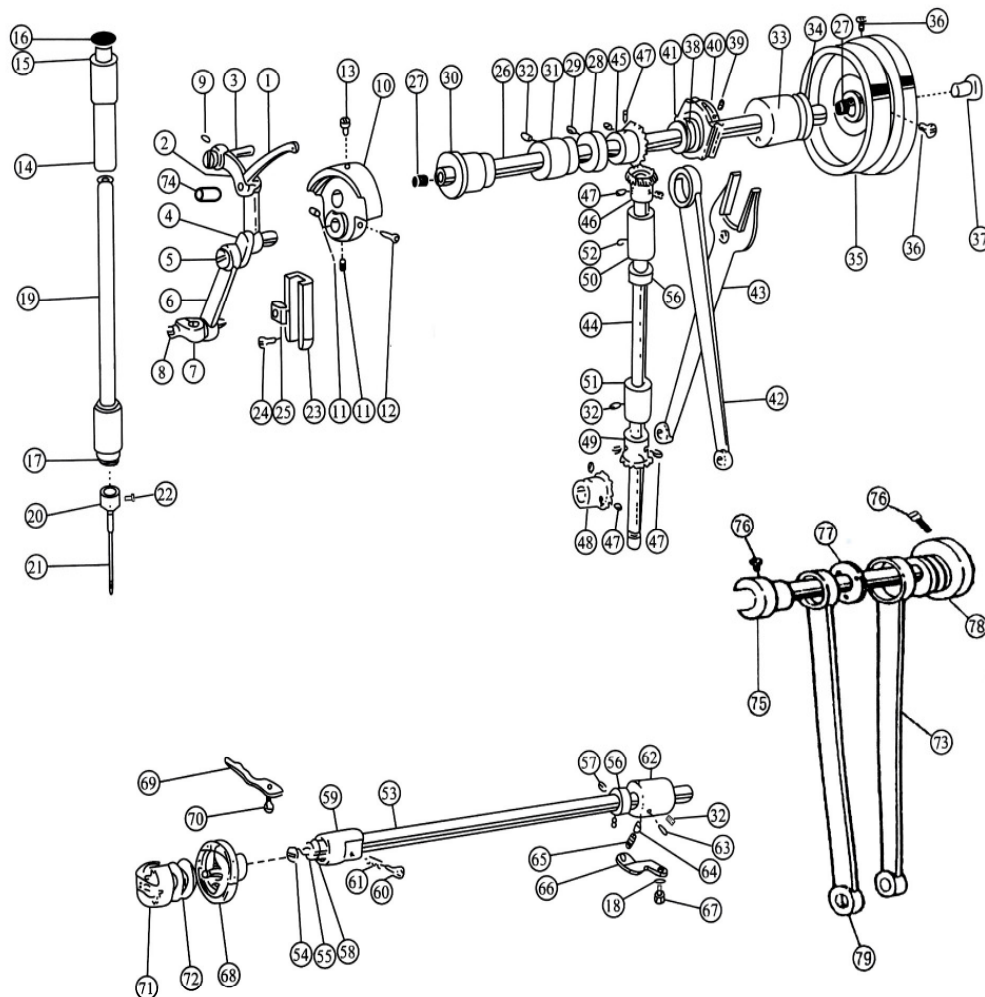

2、针杆挑线、上轴竖轴部件 NEEDLE BAR AND TAKE-UP .ARM SHAFT AND VERTICAL SHAFT MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量(AMT.)		
					0718	0818	0302
2/1	1	120.02-01-01	挑线杆	THREAD TAKE-UP LEVER	1	1	
2/1		193.02-01	挑线杆	THREAD TAKE-UP LEVER			1
2/2	2	120.02-02	挑线连杆	THREAD TAKE-UP LEVER LINK	1	1	
2/2		193.02-02	挑线连杆	THREAD TAKE-UP LEVER LINK			1
2/3	3	120.02-03	挑线连杆铰链轴	HINGE PIN	1	1	
2/3		193.02-03	挑线连杆铰链轴	HINGE PIN			1
2/4	4	120.02-04	挑线曲柄	THREAD TAKE-UP CRANK	1	1	1
2/5	5	120.02-05	挑线曲柄螺钉(左旋)	SET SCREW (LEFT HANDED) SM9/64"×40 L=6	1	1	1
2/6	6	120.02-06	针杆连杆	NEEDLE BAR LINK	1	1	1
2/7	7	120.02-07	针杆接头	NEEDLE BAR TIE-IN	1	1	1
2/8	8	11-00090820-01	针杆接头螺钉	SET SCREW SM9/64"×40 L=8	1	1	1
2/9	9	11-80151150-01	挑线连杆铰链轴螺钉	SET SCREW SM15/64"×28 L=11	1	1	1
2/10	10	120.02-10	针杆曲柄	NEEDLE BAR CRANK	1	1	
2/10		193.02-10	针杆曲柄	NEEDLE BAR CRANK			1
2/11	11	11-80160610-01	挑线曲柄定位螺钉	SET SCREW SM1/4"×40 L=6	2	2	2
2/12	12	11-60181320-01	针杆曲柄螺钉	SET SCREW SM9/32"×28 L=13	1	1	
2/12		11-90161020-01	针杆曲柄螺钉	SET SCREW SM1/4"×40 L=6			1
2/13	13	11-60181430-01	针杆曲柄定位螺钉	SET SCREW SM9/32"×28 L=14	1	1	1
2/14	14	120.02-14	针杆轴套(上)	NEEDLE BAR BUSHING (UPPER)	1		
2/14		193.02-14	针杆套	NEEDLE BAR BUSHING (UPPER)			1
2/15	15	120.02-15	针杆轴套(上)毡塞	FELT PLUG	1		1
2/16	16	120.02-16	橡皮塞	RUBBER PLUG	1		1
2/16		120.01-06	橡皮塞	RUBBER PLUG		1	
2/17	17	120.02-17	针杆轴套(下)	NEEDLE CLAMP	1		
2/17		193.02-17	针杆下套	NEEDLE CLAMP			1
2/18	18	22-06000000-08	弹簧垫圈 φ6	SPRING WASHER φ6	1	1	1
2/19	19	120.02-19	针杆	NEEDLE BAR	1	1	1
2/20	20	120.02-20	机针过线环	THREAD GUIDE FOR NEEDLE BAR	1	1	1
2/21	21	120.02-21	机针	NEEDLE	1	1	1
2/22	22	11-60080520-01	夹针螺钉	NEEDLE CLAMP SCREW SM1/8"×44 L=4.5	1	1	1
2/23	23	120.02-23	针杆接头滑块导轨	GUIDE FOR SLIDE BLOCK	1		1
2/24	24	11-60110820-01	导轨螺钉	SET SCREW SM11/64"×40 L=8	2		2
2/25	25	120.02-25	针杆接头滑块	SLIDE BLOCK	1		1
2/26	26	120.02-26	上轴	ARM SHAFT	1	1	
2/26		193.02-26	上轴	ARM SHAFT			1
2/27	27	120.02-27	上轴橡皮塞	RUBBER PLUG	2	2	2
2/28	28	120.02-28	上轴紧圈	COLLAR FOR ARM SHAFT	1	1	1
2/29	29	11-80160410-01	上轴紧圈螺钉	SET SCREW SM1/4"×40 L=4	2	2	2
2/30	30	120.02-30	上轴轴套(左)	ARM SHAFT BUSHING (LEFT)	1	1	1
2/31	31	120.02-31	上轴轴套(中)	ARM SHAFT BUSHING(MIDDLE)	1	1	1
2/32	32	11-80151010-01	上轴轴套(中)螺钉	SET SCREW SM15/64"×28 L=10	3	3	3
2/33	33	120.02-33	上轴轴套(右)	ARM SHAFT BUSHING (RIGHT)	1	1	
2/33		193.02-33	上轴轴套(右)	ARM SHAFT BUSHING (RIGHT)			1
2/34	34	32-14170300-09	上轴轴套(右)油封	OIL SEAL	1	1	1
2/35	35	120.02-35	主动轮	BALANCE WHEEL	1	1	
2/35		124.03-25	主动轮	BALANCE WHEEL			1
2/36	36	11-80151550-01	主动轮螺钉	SET SCREW SM15/64"X28 L=12	2	2	2
2/37	37	11-70221020-01	上轴油封螺钉	SET SCREW SM11/32"×28 L=10	1	1	1
2/38	38	120.02-38	送布凸轮	FEED LIFTING CAM	1	1	
2/39	39	11-80150710-01	送布凸轮螺钉	SET SCREW SM15/64"×28 L=7	2	2	
2/40	40	120.02-40	牙叉滑块	FEED FORK SLIDE	1	1	
2/41	41	25-20000000-08	抬牙连杆挡圈	RETAINING RING	1	1	
2/42	42	120.02-42	抬牙连杆	FEED LIFTING ROD	1	1	
2/43	43	120.02-43	牙叉	FEED FORK CONNECTION	1	1	
2/44	44	120.02-44	竖轴	VERTICAL SHAFT	1	1	1
2/45	45	120.02-45	上轴伞齿轮z=27	BEVEL GEAR FOR ARM SHAFT	1	1	1
2/46	46	120.02-46	竖轴伞齿轮下z=18	BEVEL GEAR FOR VERTICAL SHAFT	1	1	1
2/47	47	11-80160610-01	伞齿轮螺钉	GEAR SCREW SM1/4"×40 L=6	8	8	8
2/48	48	120.02-48	下轴伞齿轮z=21	BEVEL GEAR FOR HOOK SHAFT	1	1	1
2/49	49	120.02-49	竖轴伞齿轮下z=28	BEVEL GEAR FOR VERTICAL SHAFT	1	1	1
2/50	50	120.02-50	竖轴轴套(上)	VERTICAL SHAFT BUSHING (UPPER)	1	1	1
2/51	51	120.02-51	竖轴轴套(下)	VERTICAL SHAFT BUSHING (LOWER)	1	1	1


2、针杆挑线、上轴竖轴部件 NEEDLE BAR AND TAKE-UP. ARM SHAFT AND VERTICAL SHAFT MECHANISM

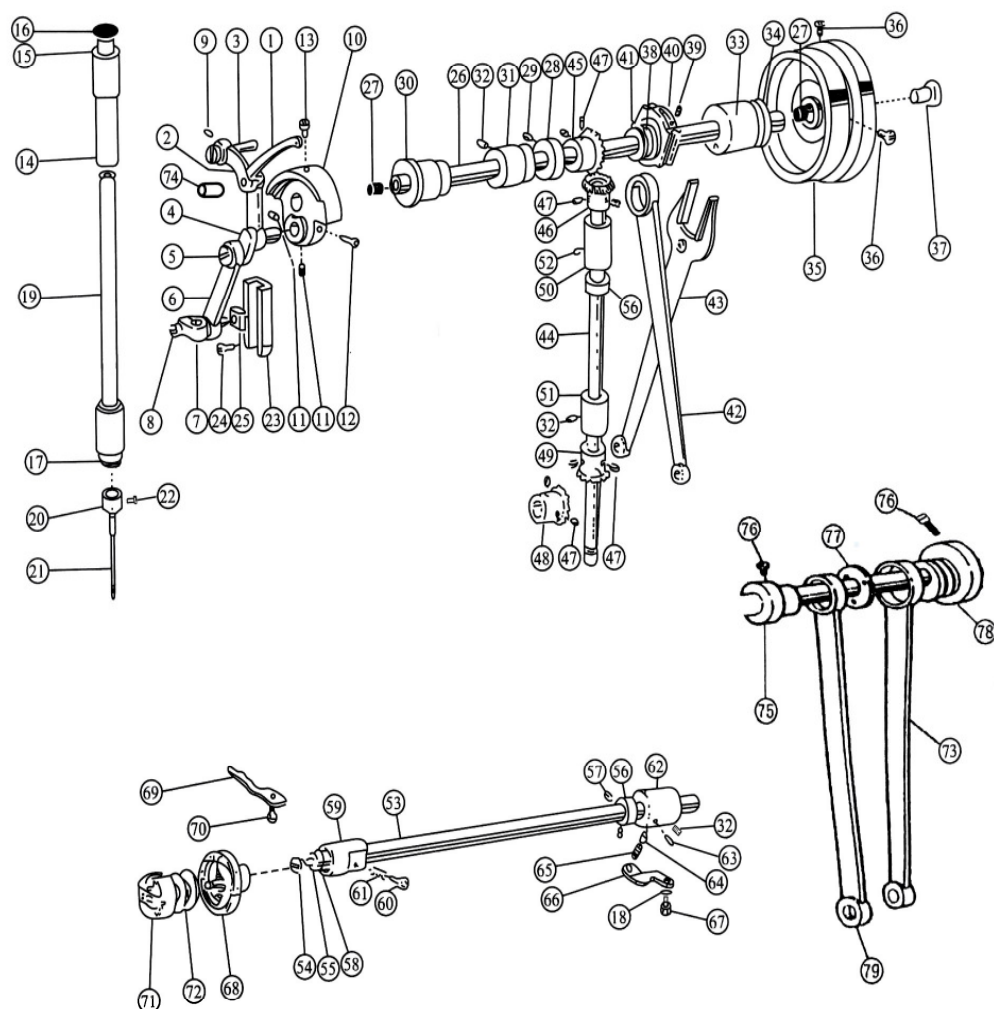

2、针杆挑线、上轴竖轴部件 NEEDLE BAR AND TAKE-UP .ARM SHAFT AND VERTICAL SHAFT MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
2/52	52	11-80150710-01	竖轴轴套螺钉	SET SCREW SM15/64"×28 L=7	1	1	1
2/53	53	120.02-53	下轴	HOOK SHAFT	1	1	1
2/54	54	120.02-54	下轴滤油塞螺钉	FILTER SCREW	1	1	1
2/55	55	120.02-55	下轴滤油塞	FILTER	1	1	1
2/56	56	101.05-16	下轴紧圈	COLLAR FOR HOOK SHAFT	2	2	1
2/57	57	11-00110520-01	下轴紧圈螺钉	SET SCREW SM11/64"×40 L=4.5	2	2	2
2/58	58	32-07340180-09	下轴油封	OIL SEAL FOR HOOK SHAFT	1	1	1
2/59	59	120.02-59	下轴轴套(左)	HOOK SHAFT BUSHING (LEFT)	1	1	1
2/60	60	120.02-60	油量调节螺钉	OIL ADJUSTING SCREW	1	1	1
2/61	61	120.02-61	油量调节弹簧	SPRING FOR OIL ADJUSTER	1	1	1
2/62	62	120.02-62	下轴轴套(右)	HOOK SHAFT BUSHING (RIGHT)	1	1	1
2/63	63	120.02-63	下轴轴套油管	OIL PIPIT FOR HOOK SHAFT BUSHING	1	1	1
2/64	64	120.02-64	柱塞	PLUNGER	1	1	1
2/65	65	120.02-65	柱塞弹簧	PLUNGER SPRING	1	1	1
2/66	66	120.02-66	挡板	GUIDE PLATE	1	1	1
2/67	67	11-60151020-01	挡板螺钉	SCREW SM15/64"×28 L=10	1	1	1
2/68	68	120.02-68	旋梭组件	ROTATING HOOK COMPLETE	1		1
2/68		122.02-68	旋梭组件	ROTATING HOOK COMPLETE		1	
2/69	69	120.02-69	旋梭定位勾	ROTATING HOOK POSITIONAL	1	1	
2/69		193.02-69	旋梭定位勾	ROTATING HOOK POSITIONAL			1
2/70	70	11-70111020-01	旋梭定位勾螺钉	SET SCREW SM11/64"×40 L=10	1	1	1
2/71	71	120.02-71	梭芯套	BOBBIN CASE	1		1
2/71		122.02-71	梭芯套	BOBBIN CASE		1	
2/72	72	120.02-72	梭芯	BOBBIN	1	1	1
2/73	73	193.02-80	送布连杆	FEED ROCKER SHAFT CAM			1
2/74	74	120.02-74	滚针轴承	NEEDLE BEARING	2	2	2
2/75	75	193.02-75	抬牙凸轮	REAR SHAFT CAM			1
2/76	76	193.02-76	抬牙送布凸轮螺钉	REAR CAM SCREW			6
2/77	77	193.02-77	凸轮隔离板	CAM STOPPER BOARD			1
2/78	78	193.02-78	送布凸轮	FEED ROCKER SHAFT CAM			1
2/79	79	120.02-42	抬牙连杆	REAR SHAFT LINK			1


3、针距调节部件 STITCH LENGTH REGULATING MECHANISM

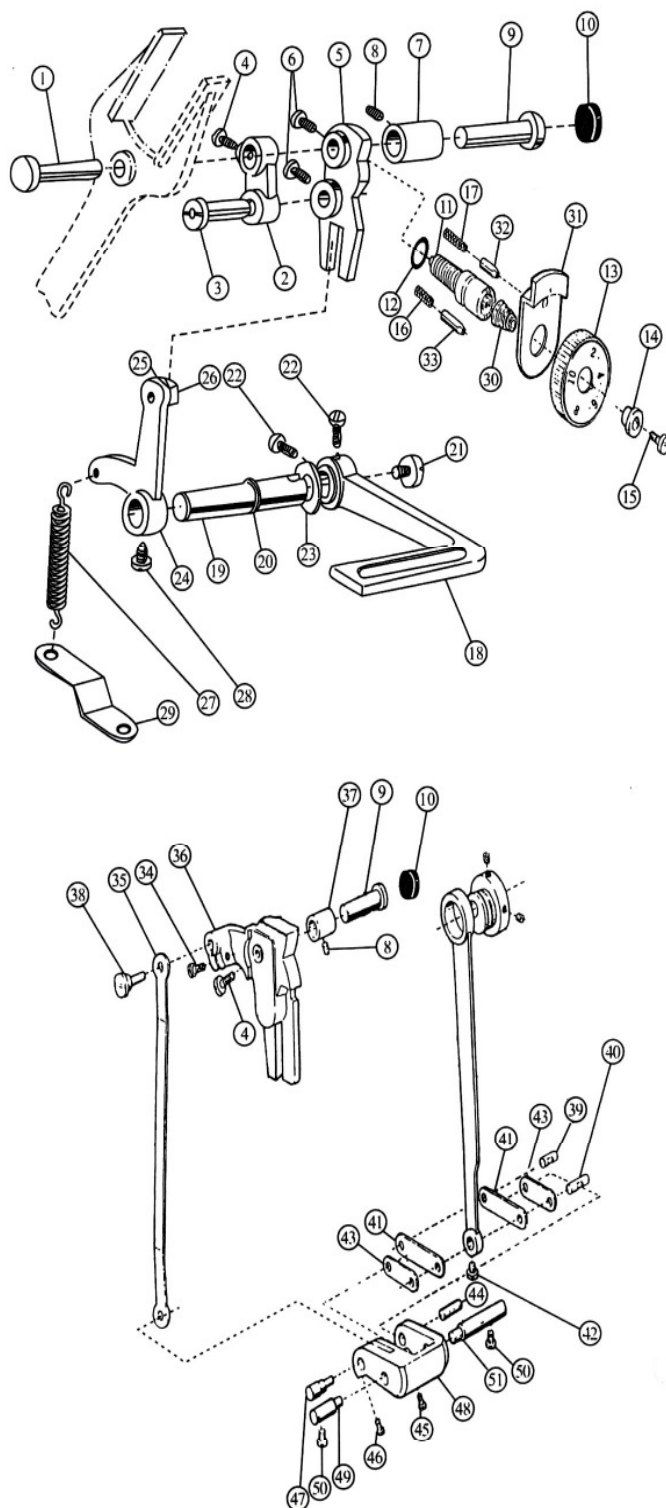

3.针距调节部件STITCH LENGTH REGULATING MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量(AMT.)		
					0718	0818	0302
3/1	1	120.03-01	牙叉铰链轴	HINGE PIN	1	1	
3/2	2	115.05-02	针距连杆	FEED CONNECTING LINK	1	1	
3/3	3	115.05-03	针距连杆铰链轴	HINGE PIN FOR FEED CONNECTING LINK	1	1	
3/4	4	11-60151020-01	牙叉铰链轴螺钉	SCREW SM15/64"X28 L=10	1	1	1
3/5	5	120.03-05	针距调节摆杆	FEED REGULATOR DRIVING BAR	1	1	
3/6	6	11-60151020-01	针距调节摆杆螺钉	SCREW SM15/64"X28 L=10	2	2	
3/7	7	120.03-07	针距调节摆杆轴套	FEED REGULATOR SHAFT BUSHING	1	1	
3/8	8	11-80151010-01	针距调节摆杆轴套螺钉	SCREW SM15/64"X28 L=10	1	1	1
3/9	9	120.03-09	针距调节摆杆铰链轴	HINGE PIN FOR REGULATOR	1	1	1
3/10	10	120.03-10	橡皮塞	RUBBER PLUG	1	1	
3/10		193.03-10	橡皮塞	RUBBER PLUG			1
3/11	11	120.03-11	针距调节螺杆	FEED REGULATOR SCREW BAR	1	1	
3/11		193.03-11	针距调节螺杆	FEED REGULATOR SCREW BAR			1
3/12	12	31-09624000-09	针距调节螺杆O型圈	RUBBER RING	1	1	1
3/13	13	120.03-13	针距标盘	DIAL	1	1	
3/13		193.03-13	针距标盘组件	DIAL			1
3/13		120.03-34	针距标牌	SCUTCHEON			1
3/14	14	193.03-14	针距标盘垫圈	WASHER			1
3/15	15	11-00121520-01	针距标盘螺钉	SCREW SM3/16"X28 L=15	1	1	1
3/16	16	120.02-65	止动销弹簧(短)	STOPPER PIN	1	1	
3/17	17	120.03-17	止动销弹簧	STOPPER PIN SPRING	1	1	2
3/18	18	120.03-18	倒缝操纵杆	REVERSE FEED LEVER	1	1	1
3/19	19	120.03-19	倒缝操纵杆短轴	REVERSE FEED LEVER SHAFT	1	1	1
3/20	20	31-04424000-09	倒缝操纵杆短轴O型圈	RUBBER RING	1	1	1
3/21	21	120.03-21	倒缝操纵杆吊紧螺钉	SCREW SM3/16"X28 L=6.5	1	1	1
3/22	22	11-60151020-01	倒缝操纵杆螺钉	SCREW SM15/64"X28 L=10	2	2	2
3/23	23	23-10205150-09	倒缝操纵杆垫圈	WASHER	1	1	1
3/24	24	120.03-24	倒缝操纵杆曲柄	REVERSE FEED CRANK	1	1	
3/24		193.03-24	倒缝操纵杆曲柄	REVERSE FEED CRANK			1
3/25	25	120.03-25	倒缝操纵杆曲柄滑块轴	SLIDE BLOCK PIN	1	1	
3/25		193.03-25	倒缝操纵杆曲柄滑块轴	SLIDE BLOCK PIN			1
3/26	26	120.03-26	倒缝操纵杆曲柄滑块	SLIDE BLOCK	1	1	
3/26		193.03-26	倒缝操纵杆曲柄滑块	SLIDE BLOCK			1
3/27	27	120.03-27	倒缝操纵杆曲柄弹簧	SPRING FOR REVERSE FEED CRANK	1	1	
3/27		193.03-27	倒缝操纵杆曲柄弹簧	SPRING FOR REVERSE FEED CRANK			1
3/28	28	11-60151530-01	倒缝操纵杆曲柄螺钉	SCREW SM15/64"X28 L=14.5	1	1	1
3/29	29	120.03-29	弹簧架	BRACKET FOR SPRING	1	1	
3/30	30	120.03-30	针距调节旋钮弹簧	SPRING	1	1	1
3/31	31	120.03-31	针距调节旋钮复位板	GUIDE PLATE	1	1	1
3/32	32	120.03-32	针距调节旋钮限位销(短)	PIN	1	1	1
3/33	33	120.03-33	针距调节旋钮限位销(长)	PIN	1	1	1
3/34	34	11-60110820-01	针距座长螺钉	SCREW SM11/64"×40 L=10			1
3/35	35	193.03-32	针距调节连杆	FEED REGULATOR LINK			1
3/36	36	193.03-33	针距座	FEED REGULATOR			1
3/37	37	193.03-34	针距调节摆杆套	FEED REGULATOR BUSHING			1
3/38	38	193.03-35	针距调节连杆销	FEED REGULATOR LINK PIN			1
3/39	39	193.03-49	曲柄连杆短销	CRANK SHORT LINK PIN			1
3/40	40	193.03-37	曲柄连杆长销	CRANK LINK LONG PIN			1
3/41	41	193.03-38	曲柄长连杆	CRANK LONG LINK			2
3/42	42	11-80110610-01	长连杆销螺钉	SCREW SM11/64"×40 L=6			1
3/43	43	193.03-40	曲柄短连杆	CRANK SHORT LINK			2
3/44	44	193.03-41	曲柄短连杆销	CRANK SHORT LINK PIN			1
3/45	45	11-60090820-01	短连杆销螺钉	SCREW SM9/64"×40 L=8			1
3/46	46	11-60090820-01	连杆偏心轴螺钉	SCREW SM9/64"×40 L=8			1
3/47	47	193.03-44	连杆偏心轴	LINK ECCENTRICITY SHAFT			1
3/48	48	193.03-45	针距调节曲柄	FEED REGULATOR CRANK			1
3/49	49	193.03-46	针距调节曲柄定位销(左)	CRANK POSITION PIN (LEFT)			1
3/50	50	11-60111220-01	针距调节曲柄定位销螺钉	POSITION PIN SCREW SM11/64"×40 L=12			2
3/51	51	193.03-48	针距调节曲柄定位销(右)	CRANK POSITION PIN (RIGHT)			1


4、送布部件 FEEDING AND FEED LIFTING MECHANISM

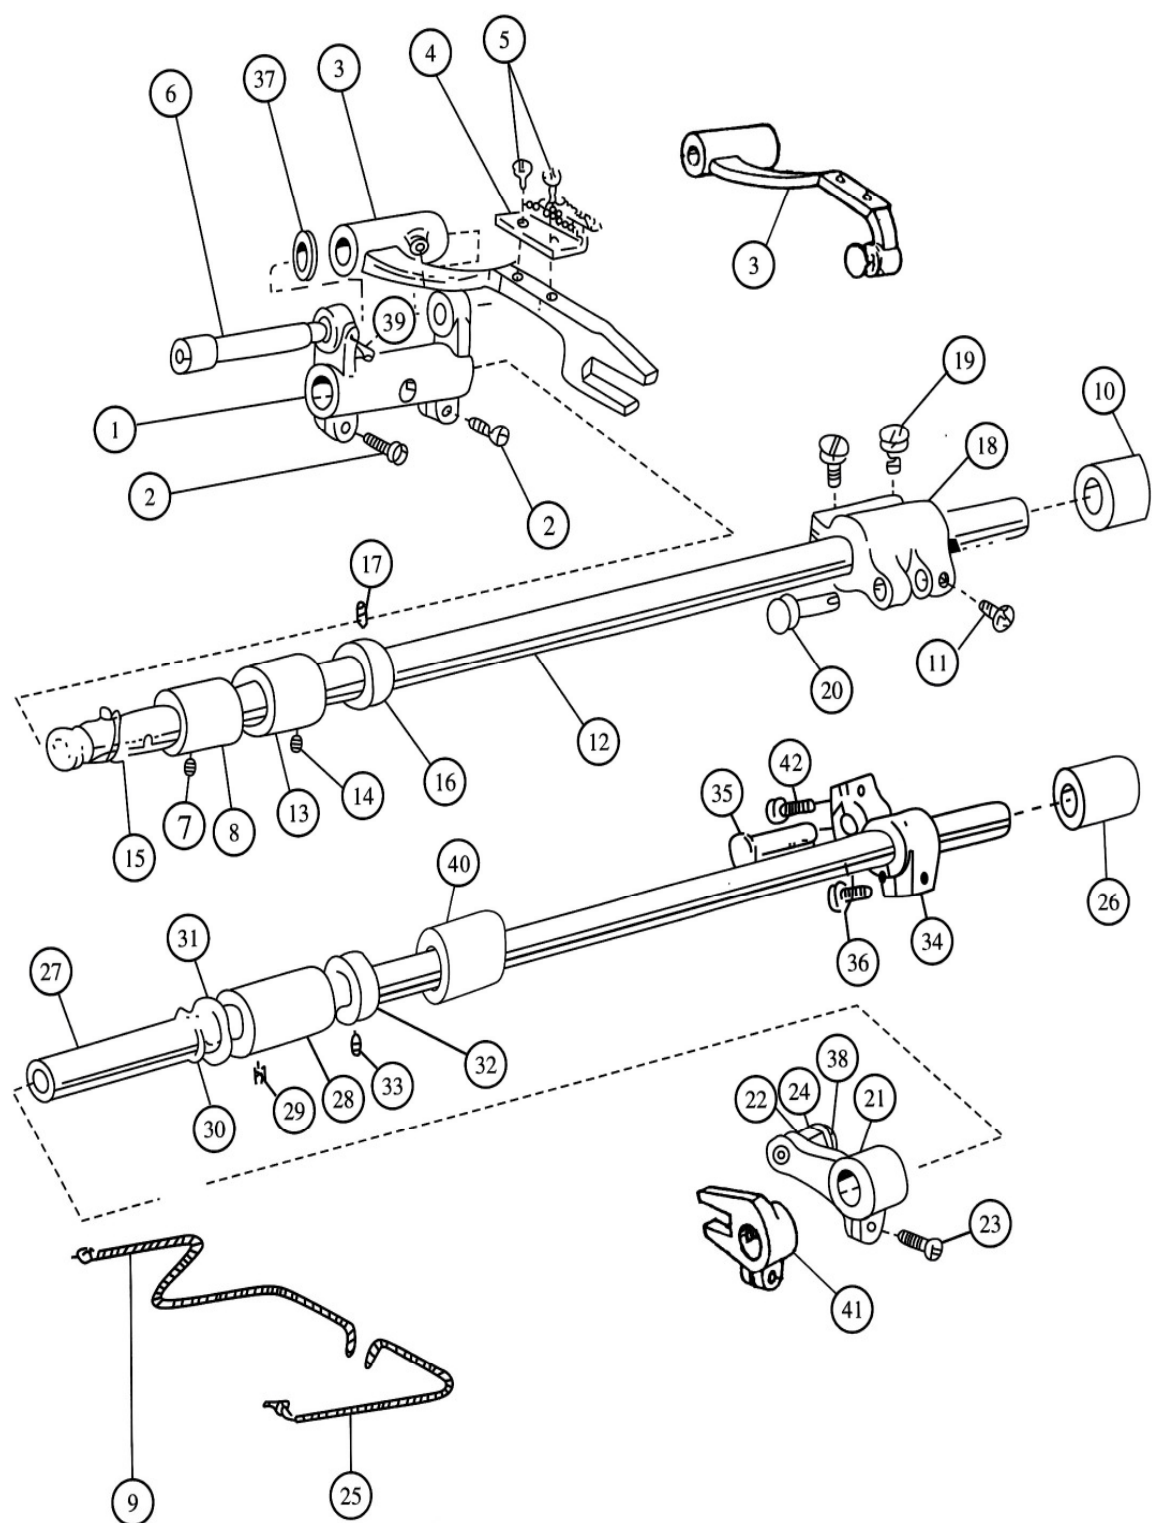

4.送布部件FEEDING AND FEED LIFTING MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
4/1	1	120.04-01	牙架曲柄	FEED ROCK SHAFT CRANK	1	1	
4/1		193.04-01	牙架曲柄	FEED ROCK SHAFT CRANK			1
4/2	2	11-00121220-01	牙架曲柄螺钉	SCREW SM3/16"X28X12	2	2	2
4/3	3	120.04-03	牙架	FEED BRACKET	1	1	
4/3		193.04-03	牙架	FEED BRACKET			1
4/4	4	120.04-04	送布牙	FEED DOG	1		1
4/4		122.04-04	送布牙	FEED DOG		1	
4/5	5	11-60080620-02	送布牙螺钉	SCREW SM1/8"X44X6	2	2	2
4/6	6	120.04-06	牙架偏心轴	ECCENTRICITY SHAFT FOR FEED BAR	1	1	1
4/7	7	11-80150710-01	牙架螺钉	SCREW SM11/64X40X8	1	1	1
4/8	8	120.04-08	送布轴轴套(左)	FEED ROCK SHAFT BUSHING(LEFT)	1	1	
4/8		193.04-08	送布轴轴套(左)	FEED ROCK SHAFT BUSHING(LEFT)			1
4/9	9	43-10250000-00	油线	OIL WICK ϕ 2.5×300	0.3	0.3	0.3
4/10	10	120.04-10	送布轴轴套(右)	FEED ROCK SHAFT BUSHING(RIGHT)	1	1	
4/11	11	11-60151020-01	送布轴曲柄铰链轴螺钉	SCREW SM15/64"×28 L=10	1	1	1
4/12	12	120.04-12	送布轴	FEED ROCK SHAFT	1	1	
4/12		193.04-12	送布轴	FEED ROCK SHAFT			1
4/13	13	120.04-13	送布轴轴套	FEED ROCK SHAFT BUSHING	1	1	
4/13		193.04-13	送布轴轴套(中)	FEED ROCK SHAFT BUSHING			1
4/14	14	11-80150510-01	送布轴轴套螺钉	SCREW SM15/64"×28 L=5	1	1	1
4/15	15	25-15000000-08	轴用弹性挡圈	SNAP RING	1	1	1
4/16	16	120.04-16	紧圈	COLLAR	1	1	1
4/17	17	11-80160410-01	送布轴紧圈螺钉	SCREW SM1/4"X40 L=8	2	2	2
4/18	18	120.04-18	送布轴曲柄	FEED ROCK SHAFT CRANK	1	1	
4/18		193.04-18	送布轴曲柄	FEED ROCK SHAFT CRANK			1
4/19	19	11-00121520-01	送布轴曲柄螺钉	SCREW SM3/16"X28 L=15	2	2	2
4/20	20	120.04-20	送布轴曲柄铰链轴	HINGE PIN	1	1	
4/21	21	120.04-21	拾牙轴曲柄(左)	FEED LIFTING ROCK SHAFT CRANK(LEFT)	1	1	
4/22	22	120.04-22	拾牙叉滑块轴	SLIDE BLOCK PIN	1	1	
4/22		193.04-22	拾牙叉滑块轴	SLIDE BLOCK PIN			1
4/23	23	11-60111220-01	拾牙轴曲柄(左)螺钉	SCREW SM11/64"X40 L=12	1	1	1
4/24	24	120.04-24	拾牙叉滑块	FEED LIFTING CONNECTING SLIDE	1	1	
4/24		193.04-24	拾牙叉滑块	FEED LIFTING CONNECTING SLIDE			1
4/25	25	43-10250000-00	油线	OIL WICK ϕ 2.5×300	0.3	0.3	0.3
4/26	26	120.04-26	拾牙轴轴套(右)	FEED LIFTING ROCK SHAFT BUSHING (RIGHT)	1	1	
4/27	27	114.06-29	拾牙轴	FEED LIFTING ROCK SHAFT	1	1	
4/27		193.04-27	拾牙轴	FEED LIFTING ROCK SHAFT			1
4/28	28	120.04-28	拾牙轴轴套	FEED LIFTING ROCK SHAFT BUSHING	1	1	
4/28		193.04-08	拾牙轴轴套	FEED LIFTING ROCK SHAFT BUSHING			1
4/29	29	11-80151010-01	拾牙轴轴套螺钉	SCREW SM15/64X28 L=10	1	1	1
4/30	30	25-15000000-08	轴用弹性挡圈	SNAP RING	1	1	1
4/31	31	21-15020212-03	拾牙轴轴套垫圈	WASHER	1	1	1
4/32	32	120.04-16	紧圈	COLLAR FOR FEED LIFTING ROCK SHAFT	1	1	1
4/33	33	11-80160410-01	拾牙轴紧圈螺钉	SCREW SM1/4"X40 L=4	2	2	2
4/34	34	120.04-34	拾牙曲柄 (右)	FEED LIFTING ROCK SHAFT CRANK(RIGHT)	1	1	
4/34		193.04-34	拾牙轴曲柄 (右)	FEED LIFTING ROCK SHAFT CRANK(RIGHT)			1
4/35	35	120.04-35	拾牙曲柄铰链轴	HINGE PIN	1	1	1
4/36	36	11-00121520-01	拾牙轴曲柄螺钉	SCREW SM3/16"X28 L=15	1	1	1
4/37	37	21-06113102-03	牙架垫圈	WASHER	1	1	1
4/38	38	21-06115131-03	拾牙叉滑块垫片	WASHER	1	1	
4/38		193.04-38	拾牙叉滑块垫片	WASHER			1
4/39	39	11-60110820-01	牙架偏心轴螺钉	SCREW	1	1	1
4/40	40	193.04-13	拾牙轴套	FEED LIFTING ROCK SHAFT BUSHING			1
4/41	41	193.04-41	拾牙叉	FORK CRANK			1
4/42	42	11-00121220-01	拾牙轴曲柄螺钉	SCREW SM3/16"X28 L=12	1	1	1


5、压脚部件 PRESSER LIFTING MECHANISM

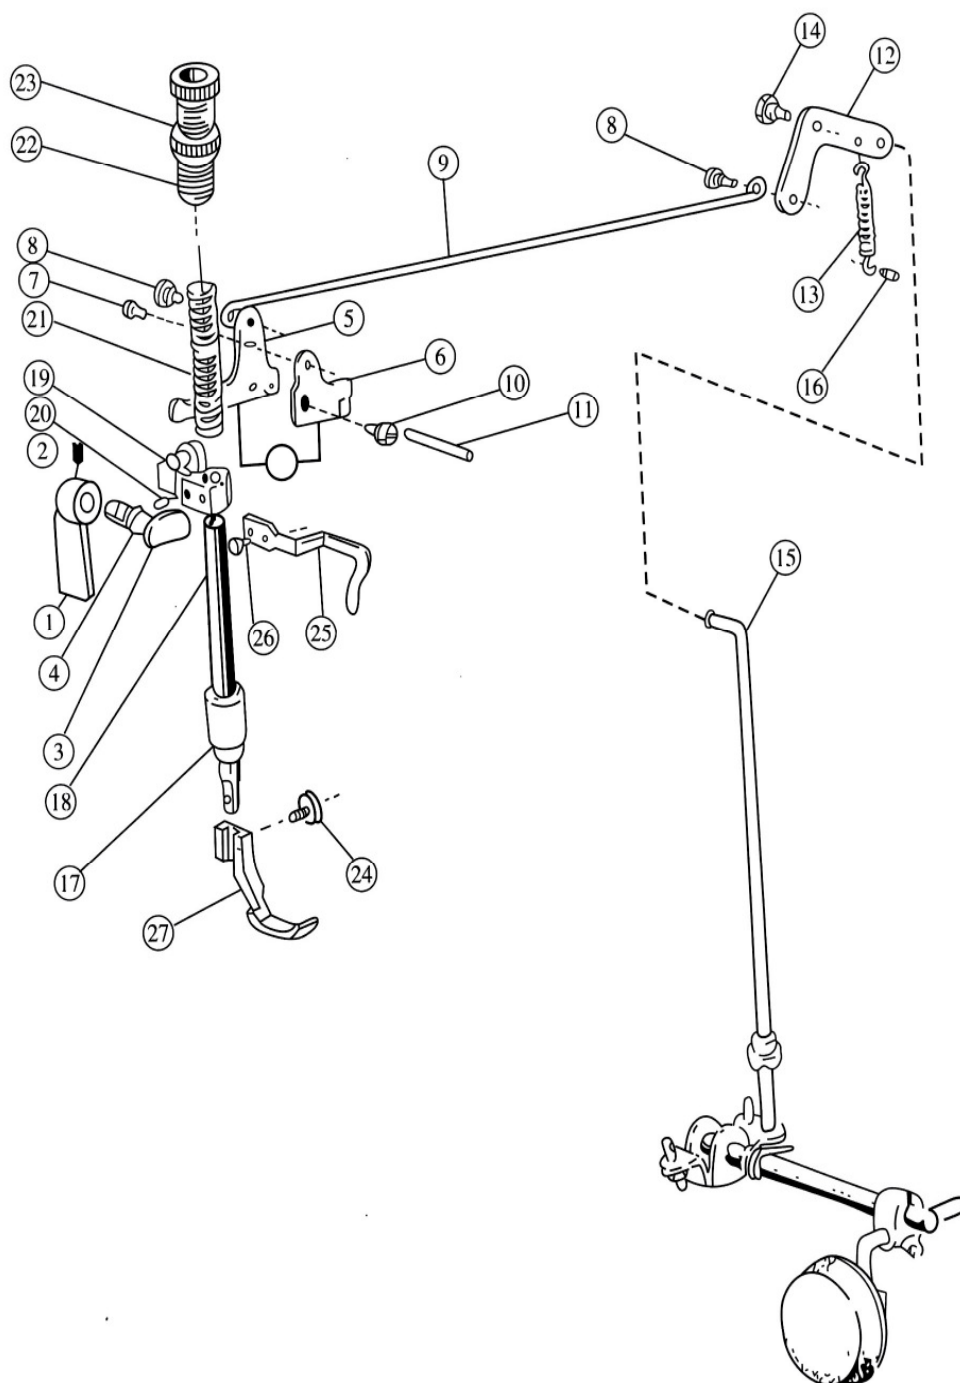

5.压脚部件PRESSER LIFTING MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
5/1	1	120.05-01	压脚扳手	PRESSER BAR LIFTER	1	1	1
5/2	2	11-80110610-01	压脚扳手螺钉	SCREW SM11/64"X40 L=5.5	1	1	1
5/3	3	120.05-03	压紧杆提升凸轮	PRESSER BAR LIFTING CAM	1	1	1
5/4	4	31-04018000-09	压紧杆提升O型圈	O RING	1	1	1
5/5	5	120.05-05	膝控提升杠杆(左)	KNEE LIFTER LEVER(LEFT)	1	1	1
5/6	6	120.05-06	松线凸轮	TENSION RELEASING	1	1	1
5/7	7	11-70110620-01	膝控提升杠杆(左)螺钉	SCREW SM11/64"X40 L=6	1	1	1
5/8	8	120.05-08	铰链螺钉	HINGE SCREW	2	2	2
5/9	9	120.05-09	膝控提升拉杆	KNEE LIFTER ROD	1	1	1
5/10	10	120.05-10	松线凸轮螺钉	BOLT	1	1	1
5/11	11	120.05-11	松线杆	TENSION RELEASING MANDRIL	1	1	1
5/12	12	120.05-12	膝控提升杠杆(右)	KNEE LIFTER LEVER(RIGHT)	1	1	1
5/13	13	120.05-13	膝控提升杠杆(右)弹簧	SPRING OF KNEE LIFTER LEVER	1	1	1
5/14	14	120.05-14	膝控提升杠杆(右)螺钉	BOLT OF KNEE LIFTER LEVER	1	1	1
5/15	15	120.05-15	膝控提升连杆	KNEE LIFTER CONNECTING ROD	1	1	1
5/16	16	120.05-16	弹簧销	SPRING OF PIN	1	1	1
5/17	17	120.05-17	压紧杆轴套	PRESSER BAR BUSHING	1	1	1
5/18	18	120.05-18	压紧杆	PRESSER BAR	1	1	1
5/19	19	120.05-19	压紧杆导架	PRESSER BAR LIFTING BRACKET	1	1	
5/19		193.05-19	压紧杆导架	PRESSER BAR LIFTING BRACKET			1
5/20	20	11-80150710-01	压紧杆导架螺钉	SCREW SM15/64"X28X7	1	1	1
5/21	21	120.05-21	压紧杆弹簧	PRESSER BAR SPRING	1	1	1
5/22	22	120.05-22	调压螺钉	PRESSURE REGULATING THUMB SCREW	1	1	1
5/23	23	120.05-23	调压螺钉锁紧螺母	LOCK NUT	1	1	1
5/24	24	11-60090820-02	压脚螺钉	SCREW SM9/64"X40 L=10	1	1	1
5/25	25	120.05-25	大线勾	UPPER THREAD GUIDE	1	1	1
5/26	26	11-60110820-01	大线勾螺钉	SCREW SM11/64"X40 L=8	1	1	1
5/27	27	120.05-27	内压脚	INNER PRESSER	1		1
5/27		122.05-27	内压脚	INNER PRESSER		1	


6、压脚提升、送料部件 PRESSER LIFTING FEEDING MECHANISM

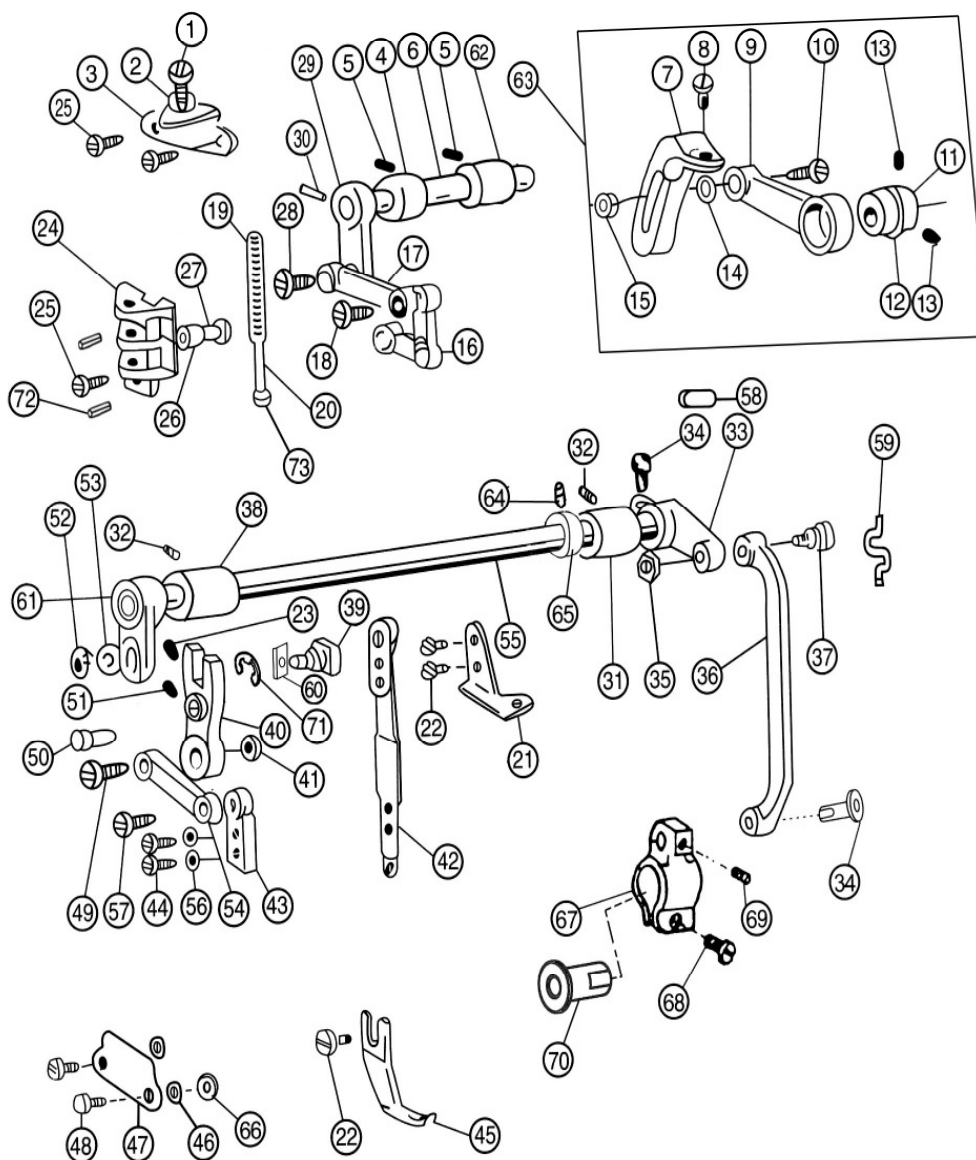

6.压脚提升.送料部件PRESSER LIFTING FEEDING MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
6/1	1	120.06-01	提升压脚调节螺钉	LIFTING PRESSER ADJUSTING SCREW	1	1	1
6/2	2	13-60183620-01	提升压脚调节螺母	LIFTING PRESSER ADJUSTING NUT SM9/32X28	1	1	1
6/3	3	120.06-03	提升压脚弹簧架	LIFTING PRESSER BRACKET FOR SPRING	1	1	1
6/4	4	120.06-04	压脚提升轴轴套	PRESSER LIFTING SHAFT BUSHING	1	1	2
6/5	5	11-80110610-01	压脚摆动轴套螺钉	SCREW SM11/64"X40 L=5.5	2	2	2
6/6	6	120.06-06	压脚提升轴	PRESSER LIFTING SHAFT	1	1	
6/6		193.06-06	压脚提升轴	PRESSER LIFTING SHAFT			1
6/7	7	120.06-07	偏心连杆调节曲柄	ADJUSTING CRANK FOR ECCENTRICITY ROD	(1)	(1)	(1)
6/8	8	11-70461620-01	偏心连杆调节曲柄螺钉	SCREW SM1/4"X24 L=16	(1)	(1)	(1)
6/9	9	120.06-09	偏心轮连杆	ECCENTRICITY WHEEL ROD	(1)	(1)	(1)
6/10	10	120.06-10	偏心连杆螺钉	SET SCREW	(1)	(1)	(1)
6/11	11	120.06-11	偏心轮	ECCENTRICITY WHEEL	(1)	(1)	(1)
6/12	12	25-25000000-08	轴用C型挡圈	SNAP RING	(1)	(1)	(1)
6/13	13	11-80160610-01	偏心轮螺钉	SCREW SM1/4"X40 L=6	(2)	(2)	(2)
6/14	14	21-06510130-02	偏心轮连杆垫圈	WASHER	(1)	(1)	(1)
6/15	15	14-65605020-01	偏心连杆曲柄螺母	NUT M6X0.75	(1)	(1)	(1)
6/16	16	120.06-16	压脚送料曲柄	PRESSER FEED CRANK	1		
6/16		122.06-16	压脚送料曲柄	PRESSER FEED CRANK		1	
6/16		193.06-16	压脚送料曲柄	PRESSER FEED CRANK			1
6/17	17	120.06-17	压脚送料曲柄连杆	PRESSER FEED CRANK LINK	1	1	1
6/18	18	120.06-18	压脚送料曲柄螺钉	SCREW	2	2	2
6/19	19	120.06-19	提升压脚簧	LIFTING PRESSER SPRING	1	1	1
6/20	20	120.06-20	压脚簧导柱	PRESSER SPRING GUIDE	1	1	1
6/21	21	120.06-21	提升压脚导柱定位板	LIFTING PRESSER GUIDE PLATE	1	1	1
6/22	22	11-60090820-02	压脚螺钉 (定位板螺钉)	SCREW SM9/64"X40 L=8	3	3	3
6/23	23	41-30402500-00	圆锥销	PIN $\phi 4 \times 25$	1	1	1
6/24	24	120.06-24	提升压脚导位板	LIFTING PRESSER PLATE	1	1	1
6/25	25	11-40110825-01	提升压脚导位板螺钉	SCREW SM11/64"X40 L=8	2	2	2
6/26	26	120.06-26	提升压脚簧导柱轴滚柱	LIFTING PRESSER SPRING GUIDE PIN	1	1	1
6/27	27	120.06-27	送料曲柄导柱轴	FEED CRANK GUIDE SHAFT	1	1	1
6/28	28	120.06-28	压脚送料曲柄连杆螺钉	SET SCREW	1	1	1
6/29	29	120.06-29	压脚提升曲柄	PRESSER LIFTING CRANK	1	1	1
6/30	30	41-30401700-00	圆锥销 $\phi 4 \times 17$	PIN	1	1	1
6/31	31	120.06-31	压脚摆动轴轴套(右)	PRESSER SWING SHAFT BUSHING (RIGHT)	1	1	
6/32	32	11-80110610-01	压脚摆动轴轴套螺钉	SCREW SM11/64"X40 L=5.5	2	2	2
6/33	33	120.06-33	压脚摆动曲柄(右)	PRESSER SWING SHAFT BUSHING (LEFT)	1	1	
6/33		193.06-33	压脚摆动曲柄(右)	PRESSER SWING SHAFT BUSHING (LEFT)			1
6/34	34	11-70461620-01	压脚摆动轴曲柄(右)螺钉	SCREW SM1/4"X24 L=16	1	1	1
6/35	35	13-60183620-01	提升压脚调节螺母	LIFTING PRESSER ADJUSTING NUT SM9/32X28	1	1	1
6/36	36	120.06-36	压脚摆动曲柄(右)连杆	PRESSER SWING CRANK (RIGHT) ROD	1	1	
6/36		193.06-36	压脚摆动曲柄(右)连杆	PRESSER SWING CRANK (RIGHT) ROD			1
6/37	37	120.06-37	压脚摆动曲柄(右)连杆螺钉	SET SCREW	1	1	1
6/38	38	120.06-38	压脚摆动轴轴套(左)	PRESSER SWING SHAFT BUSHING (LEFT)	1	1	2
6/39	39	120.06-39	提升压脚变动曲柄轴	LIFTING PRESSER SWAY CRANK SHAFT COM.	1	1	1
6/40	40	120.06-40	提升压脚变动曲柄	LIFTING PRESSER SWAY CRANK	1	1	1
6/41	41	13-60165010-01	压脚送料变动连接螺母	LOCK NUT SM1/4X40	1	1	1
6/42	42	120.06-42	压脚连杆	PRESSER ROD	1		1
6/42		122.06-42	压脚连杆	PRESSER ROD		1	
6/43	43	120.06-43	摆动连杆座	PRESSER ROD GUIDE	1	1	1
6/44	44	11-00090720-01	摆动连杆座螺钉	SCREW SM9/64"X40 L=7	2	2	2
6/45	45	120.06-45	外压脚	OUT PRESSER	1		1
6/45		122.06-45	外压脚	OUT PRESSER		1	
6/46	46	120.06-46	压脚连杆压板垫块	SPACE FOR PRESSER ROD PLATE	2	2	2
6/47	47	120.06-47	提升压脚连杆压板	LIFTING PRESSER ROD PLATE	1	1	1
6/48	48	11-60111220-01	提升压脚连杆压板螺钉	SCREW SM11/64"X40 L=12	2	2	2
6/49	49	120.06-49	压脚送料变动连接螺钉	SET SCREW	1	1	1
6/50	50	120.06-50	提升压脚变动曲柄导柱	LIFTING PRESSER SWAY CRANK GUIDE PIN	1	1	1
6/51	51	11-40120925-01	提升压脚变动曲柄导柱螺钉	SCREW SM3/16"X28 L=9	1	1	1
6/52	52	13-60465510-01	压脚曲柄连接螺母	PRESSER CRANK CONNECTING NUT SM1/4"X24	1	1	1
6/53	53	21-06510130-02	压脚曲柄连接垫圈	WASHER	1	1	1
6/54	54	120.06-54	提升压脚变动曲柄连杆	PRESSER SWING CRANK (LEFT)	1	1	1
6/55	55	120.06-55	压脚摆动轴	PRESSER SWING CRANK	1	1	
6/55		193.06-55	压脚摆动轴	PRESSER SWING CRANK			1


6、压脚提升、送料部件 PRESSER LIFTING FEEDING MECHANISM

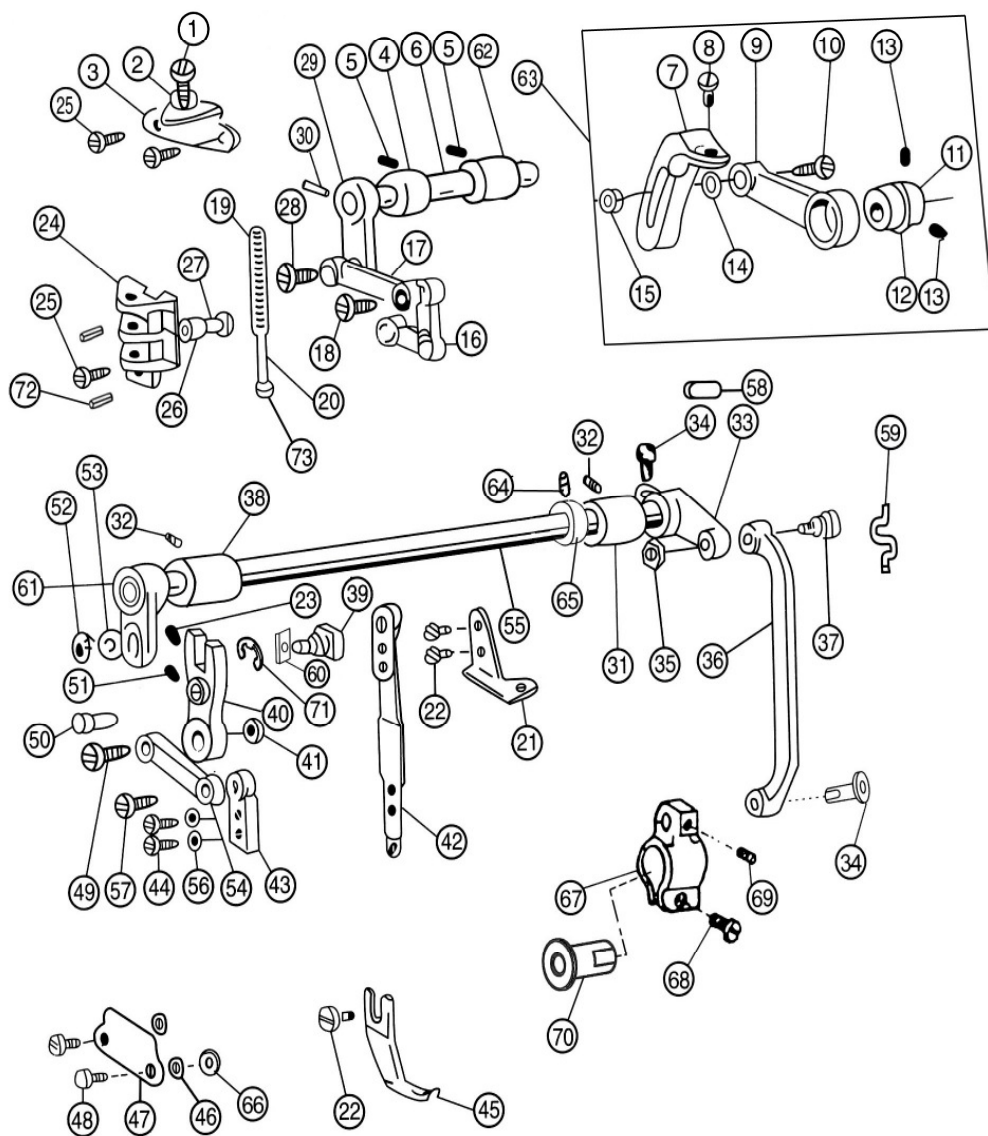

6.压脚提升.送料部件PRESSER LIFTING FEEDING MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
6/56	56	22-04000000-08	摆动连杆座螺钉垫圈	WASHER	2	2	2
6/57	57	120.06-28	压脚送料曲柄连杆螺钉	SET SCREW	1	1	1
6/58	58	120.06-58	偏心轮连杆羊毛毡	FELT	1	1	1
6/59	59	120.06-59	偏心轮连杆羊毛毡夹	FELT NIP	1	1	1
6/60	60	120.06-60	提升压脚变动曲柄滑块	LIFTING PRESSER SWAY CRANK SLIDE	1	1	1
6/61	61	120.06-61	压脚摆动曲柄(左)	PRESSER SWING CRANK(LEFT)	1	1	1
6/62	62	120.06-62	压脚提升轴轴套	PRESSER LIFTING SHAFT BUSHING	1	1	
6/63	63	120.06-63	偏心轮调节曲柄组件	ADJUSTING CRANK FOR ECCENTRICITY ROD	1	1	1
6/64	64	11-80160410-01	螺钉	SET SCREW SM1/4X40 L=4	2	2	2
6/65	65	120.04-16	紧圈	COLLAR	1	1	1
6/66	66	23-05003090-09	碗形垫片	WASHER	1	1	1
6/67	67	193.06-64	送布轴曲柄	FEED ROCK SHAFT CRANK (MIDDLE)			1
6/68	68	11-60111220-01	送布轴曲柄(中)螺钉	SCREW SM11/64"X40 L=12			1
6/69	69	11-60110820-01	送布轴曲柄螺钉	SCREW SM11/64"X40 L=8			1
6/70	70	193.04-35	送布轴曲柄铰链轴	HINGE PIN			1
6/71	71	24-04000000-08	卡簧 $\phi 4$	RETAINING RING $\phi 4$	1	1	1
6/72	72	41-20300800-00	弹性圆柱销	SPRING PIN $\phi 3 \times 8$	2	2	2
6/73	73	120.06-65	压脚簧导柱块	PRESSER SPRING GUIDE NUT	1	1	1


7、油泵部件 LUBRICATION MECHANISM

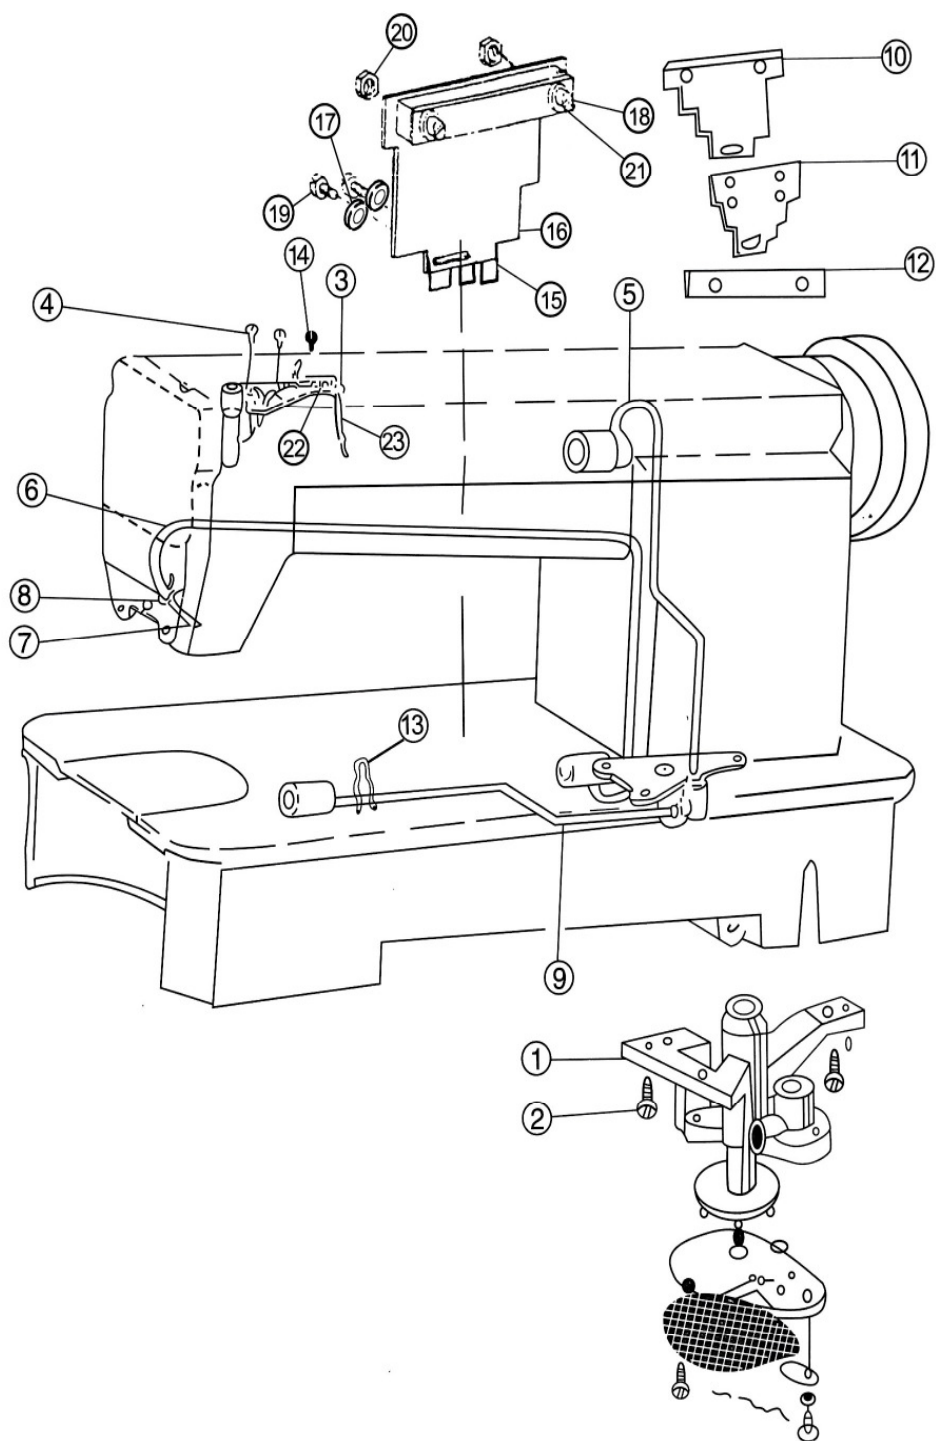

7.油泵部件LUBRICATION MECHANISM

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
7/1	1	120.07-01	油泵体组件	OIL PUMP BODY ASSY.	1	1	1
7/2	2	11-70111320-01	油泵体螺钉	SCREW SM11/64"X40 L=13	3	3	3
7/3	3	120.07-03	油线固定板	OIL BRAID FITTING PLATE	1	1	1
7/4	4	11-60091120-02	油线固定板螺钉	SCREW SM9/64"X40 L=11	2	2	2
7/5	5	114.08-13	上轴油管组件	OIL PIPE FOR ARM SHAFT	1	1	1
7/6	6	42-05003000-00	回油管	OIL RETURN PIPE $\phi 5 \times \phi 3$ L=670	0.67	0.67	0.67
7/7	7	120.07-07	回油管滤油毡	FELT POUCH	1	1	1
7/8	8	120.07-08	回油管弹簧夹	PIPE HOLD	1	1	1
7/9	9	120.07-09	下轴油管组件	OIL PIPE FOR HOOK SHAFT	1	1	1
7/10	10	120.07-10	后盖板挡油板	KEEP OFF OIL PLATE	1	1	
7/11	11	120.07-11	后盖板挡油板毡	FELT	1	1	
7/12	12	120.07-12	压脚板挡油板压条	PRESS PLATE	1	1	
7/13	13	120.07-13	回油管夹	HOLDER	1	1	1
7/14	14	11-00090650-02	螺钉	SCREW SM9/64"X40 L=6	1	1	1
7/15	15	193.07-10	后盖板挡油板	KEEP OFF OIL PLATE			1
7/16	16	193.07-11	后盖板挡油板毡	FELT			1
7/17	17	21-03405070-01	挡油板螺钉垫圈	WASHER	2	2	2
7/18	18	12-00400825-02	压脚板挡油板压条螺钉	SCREW M4X8	2	2	2
7/19	19	11-60080520-01	后盖板挡油板螺钉	KEEP OFF OIL PLATE SM1/8X44 L=5	2	2	2
7/20	20	14-60403020-02	后盖板挡油板压条螺母	NUT M4	2	2	2
7/21	21	21-06115131-03	垫圈	WASHER			2
7/22	22	120.07-15	油线勾	DRAW	1	1	1
7/23	23	43-10250000-00	油线	OIL WICK $\phi 2.5 \times 1030$	1.03	1.03	1.03


8、油盘及附件 DIL RESERVIOR AND OTHER ACCESSDRIES

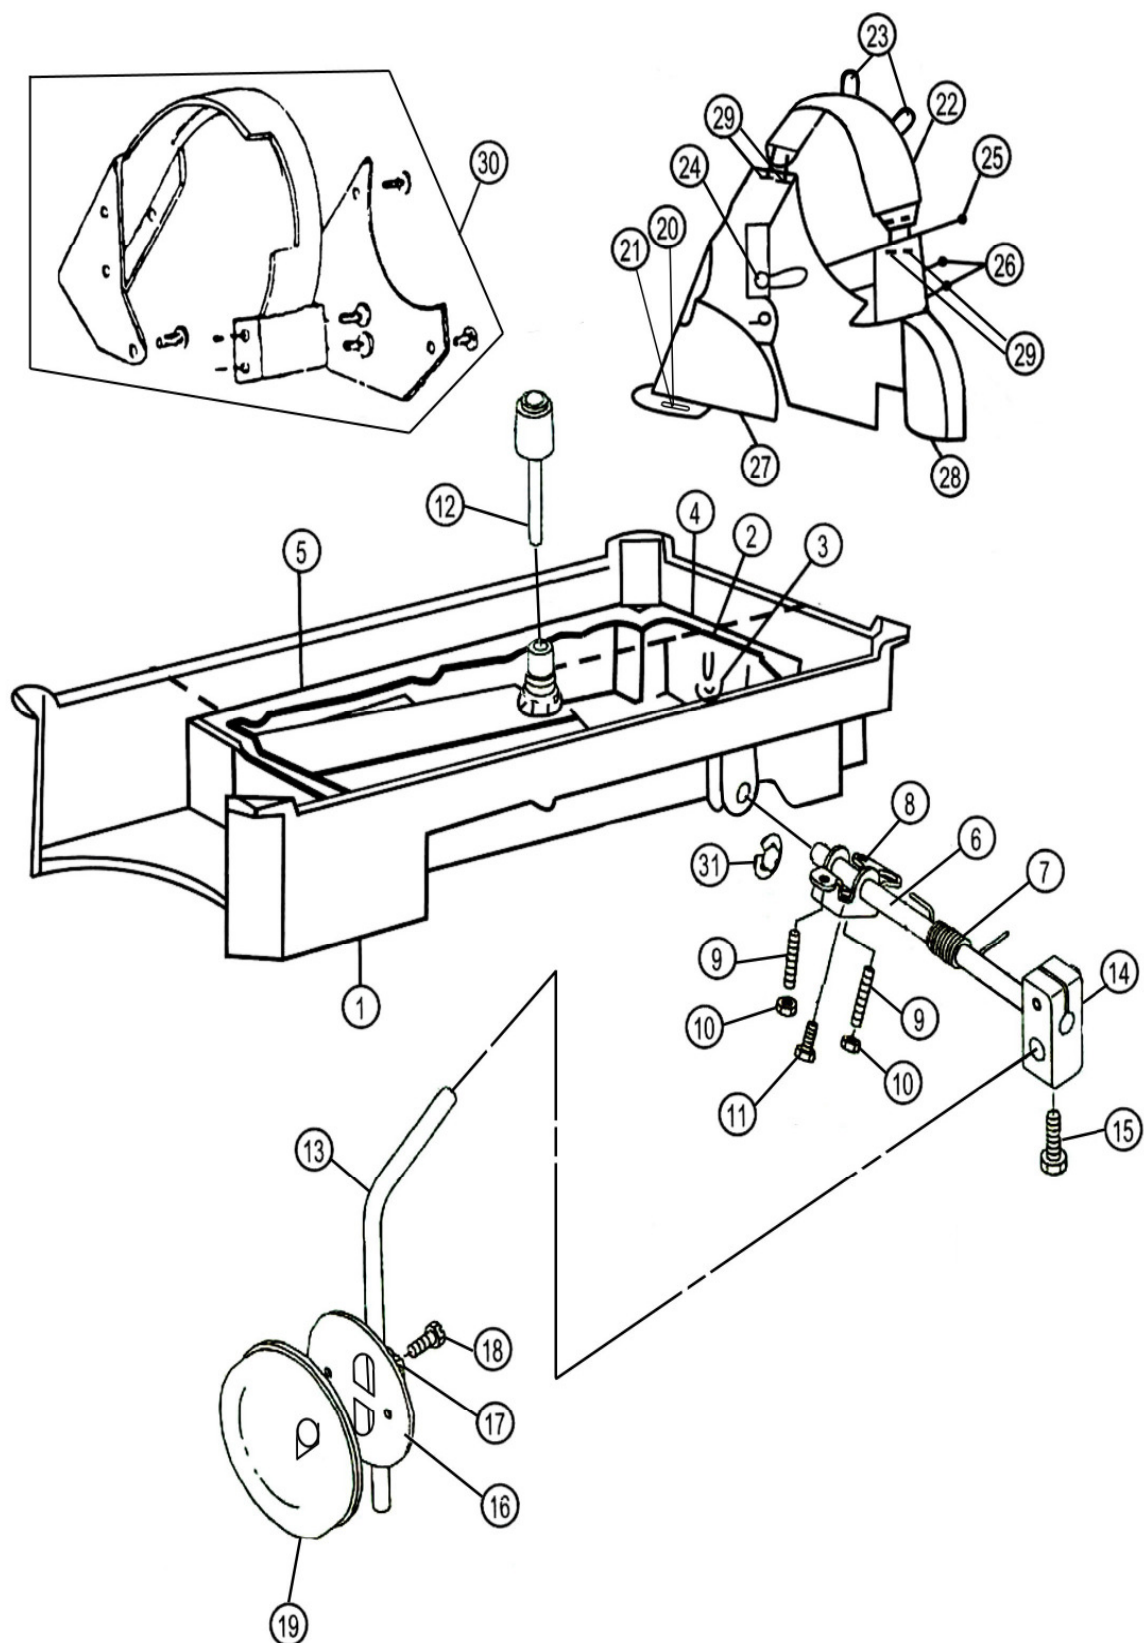

8.油盘及附件 RESERVOIR AND OTHER ACCESSORIES

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
8/1	1	120.08-01	油盘	OIL RESERVOIR	1	1	1
8/2	2	11-70701020-01	放油螺钉	OIL BRAIN SCREW SM5/16X28 L=10	1	1	1
8/3	3	120.08-03	放油螺钉垫圈	WASHER	1	1	1
8/4	4	120.08-04	油盘垫(小)	GASKET FOR OIL RESERVOIR (SMALL)	1	1	1
8/5	5	120.08-05	油盘垫(大)	GASKET FOR OIL RESERVOIR (BIG)	1	1	1
8/6	6	120.08-06	膝控铰链轴	HINGE PIN FOR KNEE LIFTER	1	1	1
8/7	7	120.08-07	膝控复位弹簧	RETURN SPRING FOR KNEE LIFTER	1	1	1
8/8	8	120.08-08	膝控限位架	KNEE LIFTER STOP BRACKET	1	1	1
8/9	9	11-80153050-02	膝控限位调节螺钉	ADJUSTING SCREW SM15/64X28 L=30	2	2	2
8/10	10	13-60153320-02	调节螺母	LOCK NUT SM15/64X28	2	2	2
8/11	11	11-90151633-02	膝控限位架螺钉	SCREW SM15/64X28 L=33	1	1	1
8/12	12	101.09-02	膝控提升顶杆	KNEE LIFTER STOP BRACKET	1	1	1
8/13	13	101.09-15-00	膝提操纵杆组件	KNEE LIFTER BELL CRANK	1	1	1
8/14	14	101.09-10	碰块弯杆接头	JOINT FOR KNEE LIFTER BELL CRANK	1	1	1
8/15	15	12-90801423-02	膝控碰块弯杆接头螺钉M8×14	SET SCREW M8X14	2	2	2
8/20	20	101.12-08	皮带罩木螺钉d=4 L=20	SCREW 4.5X20	2	2	
8/21	21	21-04212090-02	皮带罩木螺钉垫圈	WASHER	2	2	
8/22	22	120.08-22	皮带罩(上)	BELT (UPPER)	1	1	
8/23	23	120.01-13	皮带罩板螺钉SM11/64×40 L=1	SCREW SM11/64"X40X10	2	2	
8/24	24	14-60403020-02	皮带罩板螺母	NUT M4	1	1	
8/25	25	12-40800825-02	皮带罩板螺母螺钉	SCREW M8X8	1	1	
8/26	26	11-40150825-01	皮带罩板螺钉SM15/64×28 L=8	SCREW SM15/64"X28 L=8	2	2	
8/27	27	114.09-19-00	皮带罩(下)组件	BELT COVER RACK ASM.	1	1	
8/27/1		114.09-19	皮带罩(下)	BELT (LOWER)	(1)	(1)	
8/27/2		114.09-19-02	下皮带罩板	BELT COVER RACK PLATE	(1)	(1)	
8/28	28	120.08-28	皮带罩	BELT COMPLETE COVER	1	1	
8/29	29	12-40400525-01	皮带罩板螺钉	SCREW M4X4.5	4	4	
8/30	30	193.08-20	皮带罩组件	BELT COMPLETE			1
8/31	31	24-09000000-08	开口挡圈	RETAINING RING	1	1	1


9、附件 OTHER ACCESSORIES

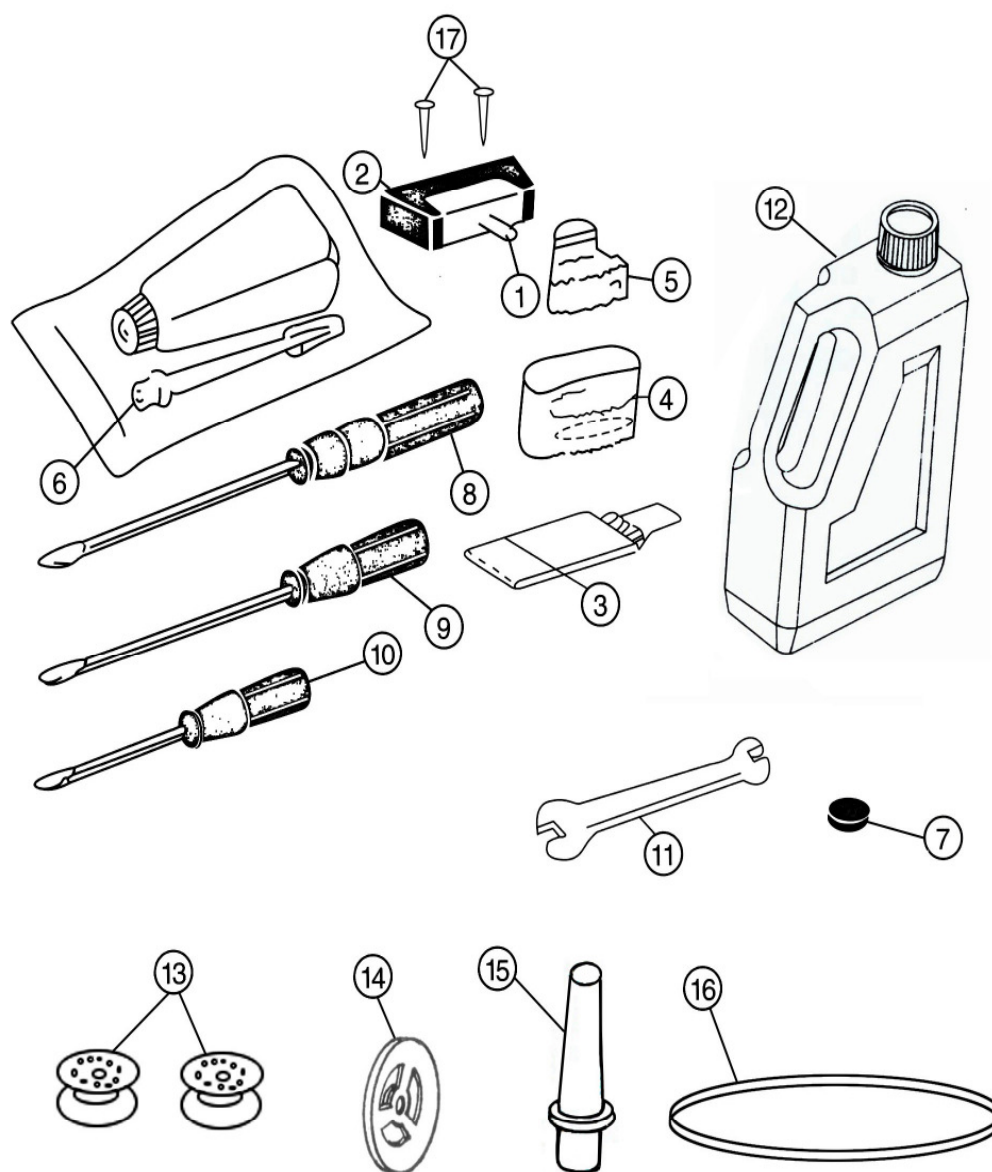

9.附件OTHER ACCESSORIES

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
9/1	1	101.12-01	机壳铰链	HINGE OF MACHINE HEAD	2	2	2
9/2	2	120.09-02	机壳铰链套	RUBBER SOCKET FOR HINGE	2	2	2
9/3	3	120.02-21	机针DP×17 22#	NEEDLE DPX17 22#	3	3	3
9/4	4	120.09-04	机头防振垫块(大)	RUBBER CUSHION (BIG)	2	2	2
9/5	5	120.09-05	机头防振垫块(小)	RUBBER CUSHION (SMALL)	2	2	2
9/6	6	120.09-06	小油壶	OILER	1	1	1
9/7	7	120.09-07	磁块	MAGNET	1	1	1
9/8	8	101.12-15	螺丝刀(大)	SCREW DRIVING (LONG)	1	1	1
9/9	9	101.12-16	螺丝刀(中)	SCREW DRIVING (MIDDLE)	1	1	1
9/10	10	101.12-17	螺丝刀(小)	SCREW DRIVING (SHORT)	1	1	1
9/11	11	120.09-11	双头扳手10-14	DOUBLE-HEAD WRENCH	1	1	1
9/12	12	101.12-21	油箱	OIL CONTAINER	1	1	1
9/13	13	120.02-72	梭芯	BOBBIN	2	2	2
9/14	14	120.09-14	电机皮带轮	MOTOR PULLEY	1	1	1
9/15	15	101.12-19	机头撑杆	HEAD REST	1	1	1
9/16	16	101.12-35	皮带M-41	BELT M-41	1	1	1
9/17		101.12-03	鞋钉	NAIL	4	4	4


10. 绕线器组件 BOBBIN WINDER MECHANISM

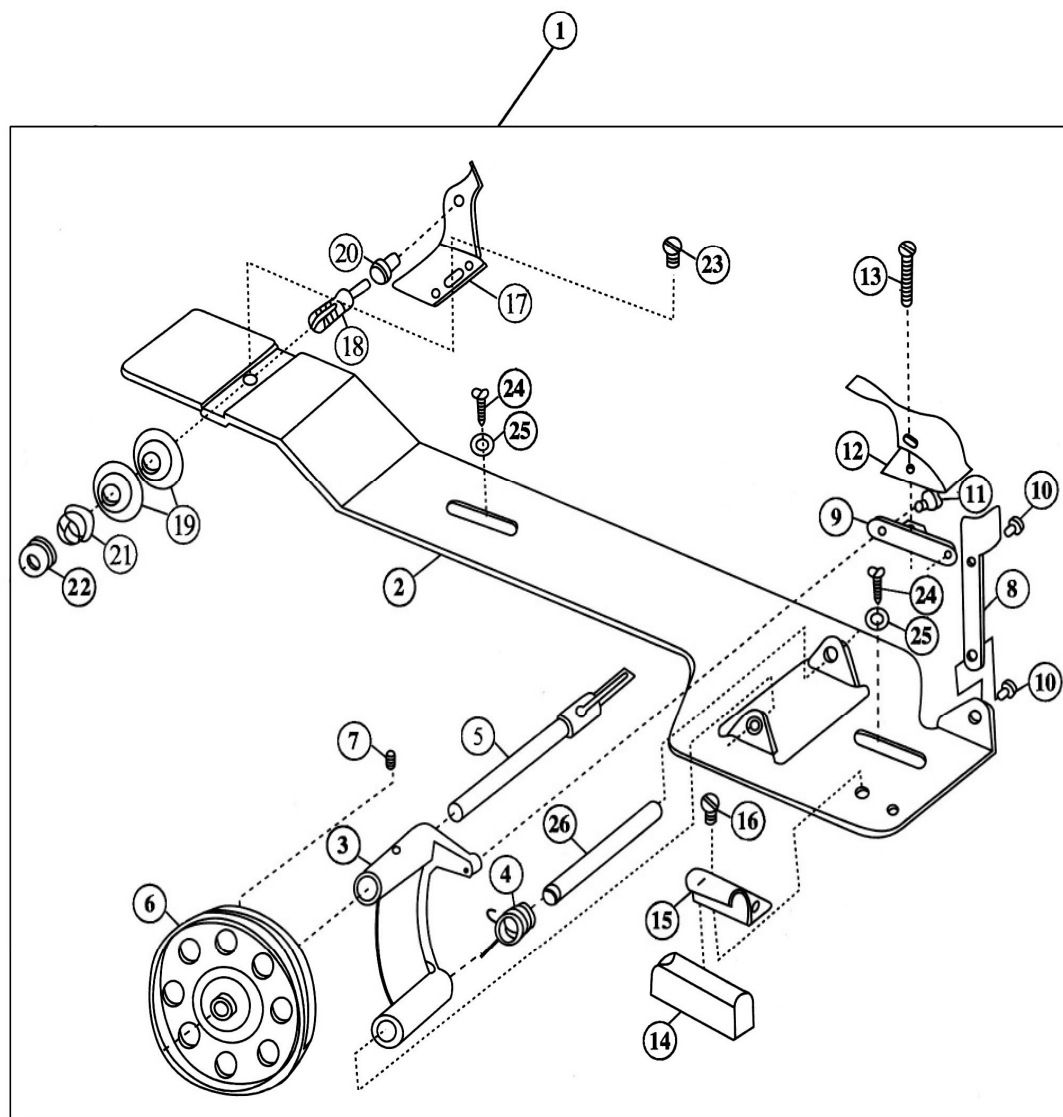

10.绕线器组件BOBBIN WINDER MECHANISM.

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
10/1	1	120.10-01	绕线器组件	BOBBIN WINDER ARM	1	1	1
10/2	2	120.10-01-01	绕线器底座	BOBBIN WINDER BASE	(1)	(1)	(1)
10/3	3	120.10-01-02	绕线架	BOBBIN WINDER	(1)	(1)	(1)
10/4	4	120.10-01-03	绕线架轴弹簧	SPRING	(1)	(1)	(1)
10/5	5	120.10-01-04	绕线轴	BOBBIN WINDER SPINDLE	(1)	(1)	(1)
10/6	6	120.10-01-05	绕线轮	BOBBIN WINDER PULLEY	(1)	(1)	(1)
10/7	7	120.10-01-06	绕线轮螺钉	SCREW	(1)	(1)	(1)
10/8	8	120.10-01-07	绕线摆杆	BOBBIN WINDER STOP LATCHLEVER	(1)	(1)	(1)
10/9	9	120.10-01-08	绕线连杆	BOBBIN WINDER CONNECTING BAR	(1)	(1)	(1)
10/10	10	120.10-01-09	铆钉	RIVET	(2)	(2)	(2)
10/11	11	120.10-01-10	绕线连杆螺钉	SCREW	(1)	(1)	(1)
10/12	12	120.10-01-11	满线跳板	BOBBIN WINDER STOP LATCH	(1)	(1)	(1)
10/13	13	120.10-01-12	满线度调节螺钉	ADJUSTING SCREW	(1)	(1)	(1)
10/14	14	120.10-01-13	制动块	STOPPER BLOCK	(1)	(1)	(1)
10/15	15	120.10-01-14	制动块固定勾	FIXTURE FOR STOPPER BLOCK	(1)	(1)	(1)
10/16	16	120.10-01-15	制动块固定勾螺钉	SCREW	(1)	(1)	(1)
10/17	17	120.10-01-16	过线架	BOBBIN WINDER TENSION BRACKET	(1)	(1)	(1)
10/18	18	120.10-01-17	过线架夹线螺钉	SCREW	(1)	(1)	(1)
10/19	19	120.10-01-18	过线架夹线板	BOBBIN WINDER TENSION DISC	(2)	(2)	(2)
10/20	20	120.10-01-19	夹线螺钉套	BUSHING FOR TENSION SCREW	(1)	(1)	(1)
10/21	21	120.10-01-20	夹线簧	BOBBIN WINDER TENSION SPRING	(1)	(1)	(1)
10/22	22	120.10-01-21	夹线螺母	TENSION STUD NUT	(1)	(1)	(1)
10/23	23	120.10-01-22	过线架螺钉	TENSION BRACKET SCREW	(1)	(1)	(1)
10/24	24	101.12-08	绕线架木螺钉	WOOD SCREW	(2)	(2)	(2)
10/25	25	21-04212090-02	绕线架木螺钉垫圈	WASHER	(2)	(2)	(2)
10/26	26	120.10-01-25	绕线架轴	SHAFT FOR BOBBIN WINDER ARM	(1)	(1)	(1)

11、线架组件 THREAD STAND COMPONENTS

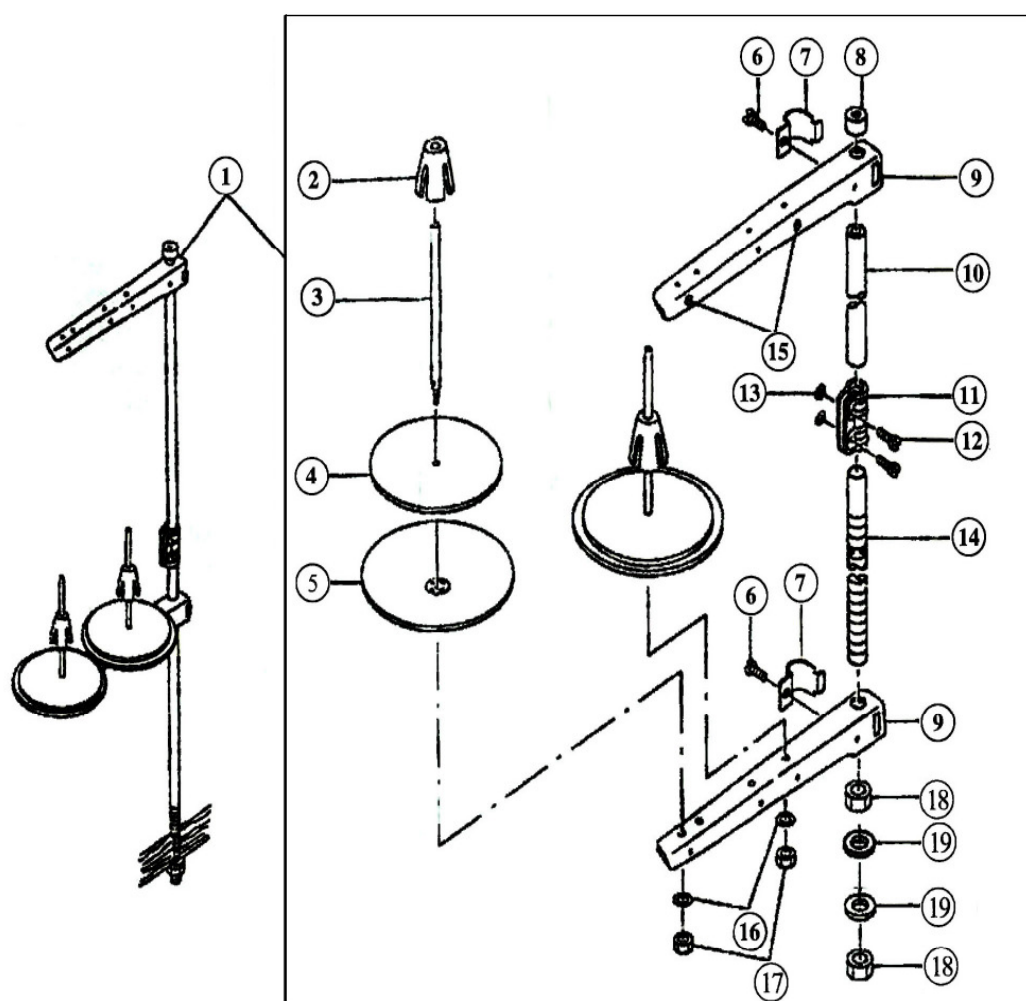

11.线架组件 THREAD STAND MECHANISM.

部件/ 序号NO.	序号 NO	图号 REF NO.	名称	DESIGNATION	数量 (AMT.)		
					0718	0818	0302
11/1	1	101.11-01	线架组件	THREAD STAND ASM	1	1	1
11/2	2	279.12-00-21	线盘芯	SPOOL RETAINER	(2)	(2)	(2)
11/3	3	279.12-00-23	线盘钉	SPOOL PIN	(2)	(2)	(2)
11/4	4	279.12-00-24	线盘垫	SPOOL REST CUSHION	(2)	(2)	(2)
11/5	5	279.12-00-25	线圈托盘	SPOOL REST	(2)	(2)	(2)
11/6	6	279.12-00-04	螺钉	SCREW M6 L=18	(2)	(2)	(2)
11/7	7	279.12-00-03	线臂抱攀	THREAD GUIDE ARM JOINT	(2)	(2)	(2)
11/8	8	279.12-00-01	上直管盖帽	SPOOL REST ROD RJBBER CAP	(1)	(1)	(1)
11/9	9	279.12-00-08	长固线臂	SPOOL REST ARM	(2)	(2)	(2)
11/10	10	279.12-00-02	线架上直管	SPOOL REST ROD ,UPPER	(1)	(1)	(1)
11/11	11	279.12-00-15	直管接头	SPOOL REST ROD JOINT	(1)	(1)	(1)
11/12	12	279.12-00-16	紧固螺钉	SCREW M5 L=16	(2)	(2)	(2)
11/13	13	279.12-00-14	紧固螺母	NUT M5	(2)	(2)	(2)
11/14	14	279.12-00-19	下直管	SPOOL REST ROD ,LOWER	(1)	(1)	(1)
11/15	15	279.12-00-07	引线圈	THREAD GUIDE	(2)	(2)	(2)
11/16	16	279.12-00-26	弹性垫圈	SPRING WASHER	(2)	(2)	(2)
11/17	17	279.12-00-27	螺帽	NUT M5	(2)	(2)	(2)
11/18	18	279.12-00-20	螺帽	NUTM16X1.5	(2)	(2)	(2)
11/19	19	279.12-00-21	防震垫	WASHER 16.1X30X2.6	(2)	(2)	(2)